

COMBINATION METER

BE2BK–03


CIRCUIT

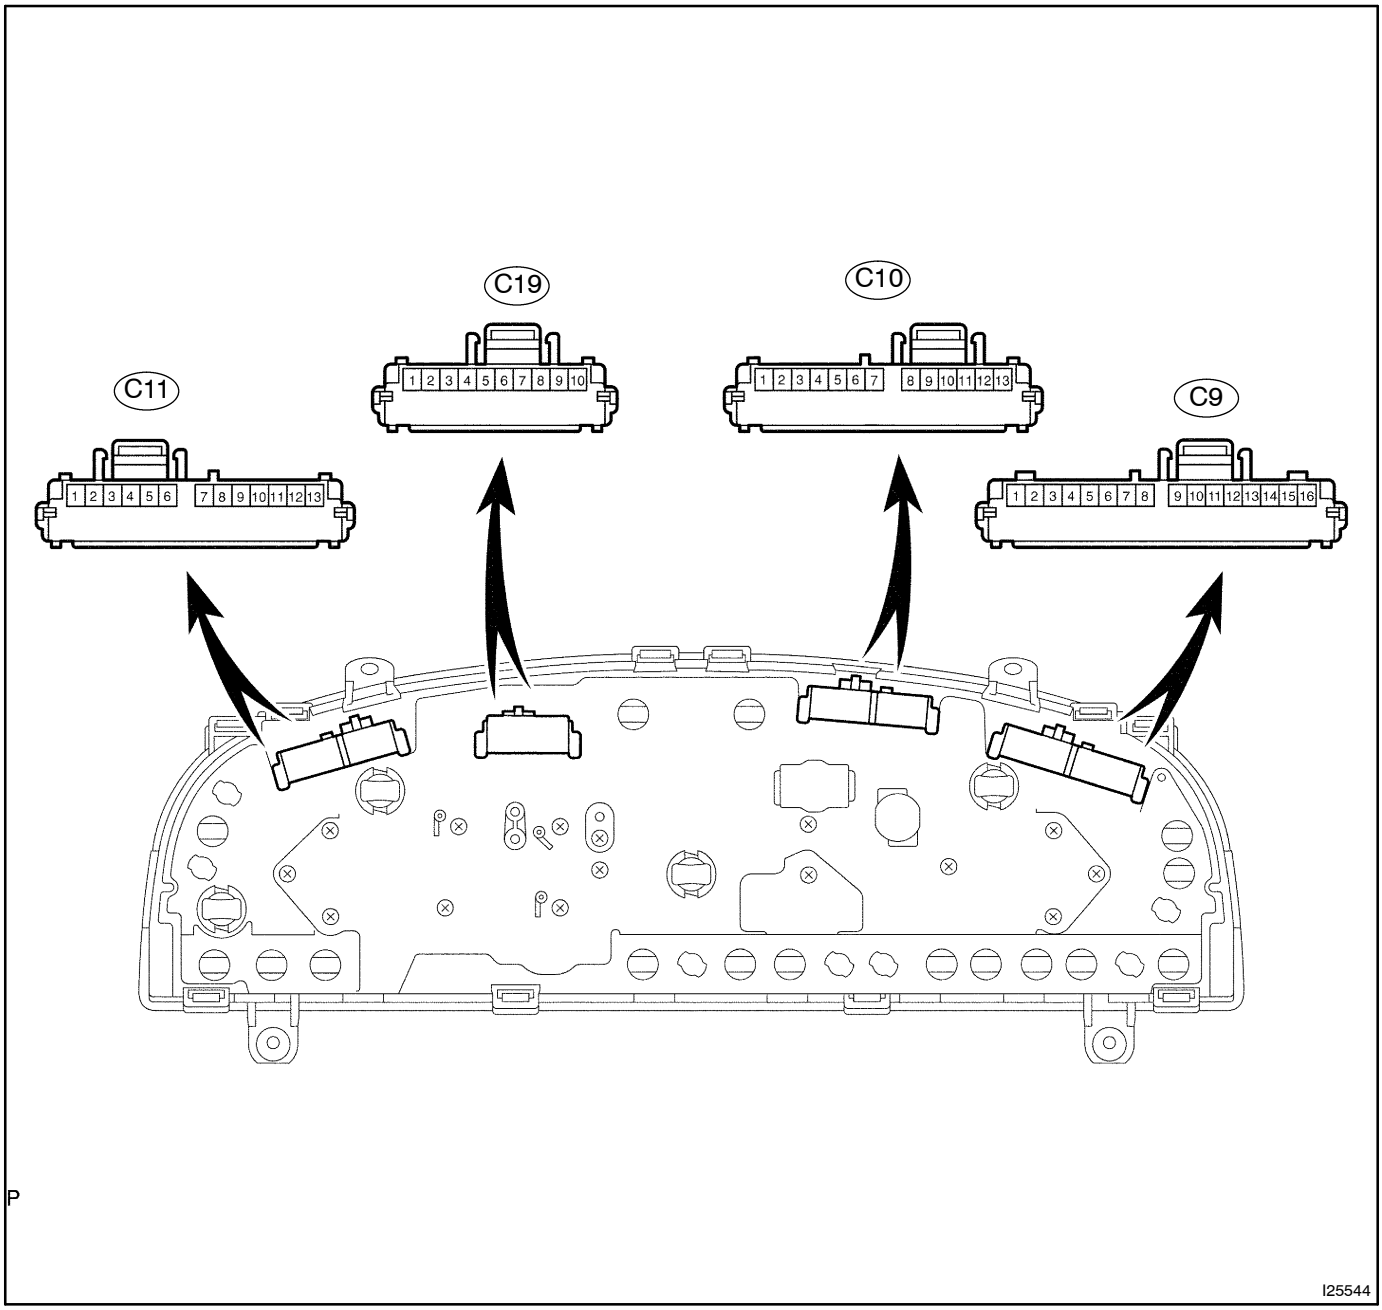

5 VZ–FE Engine:

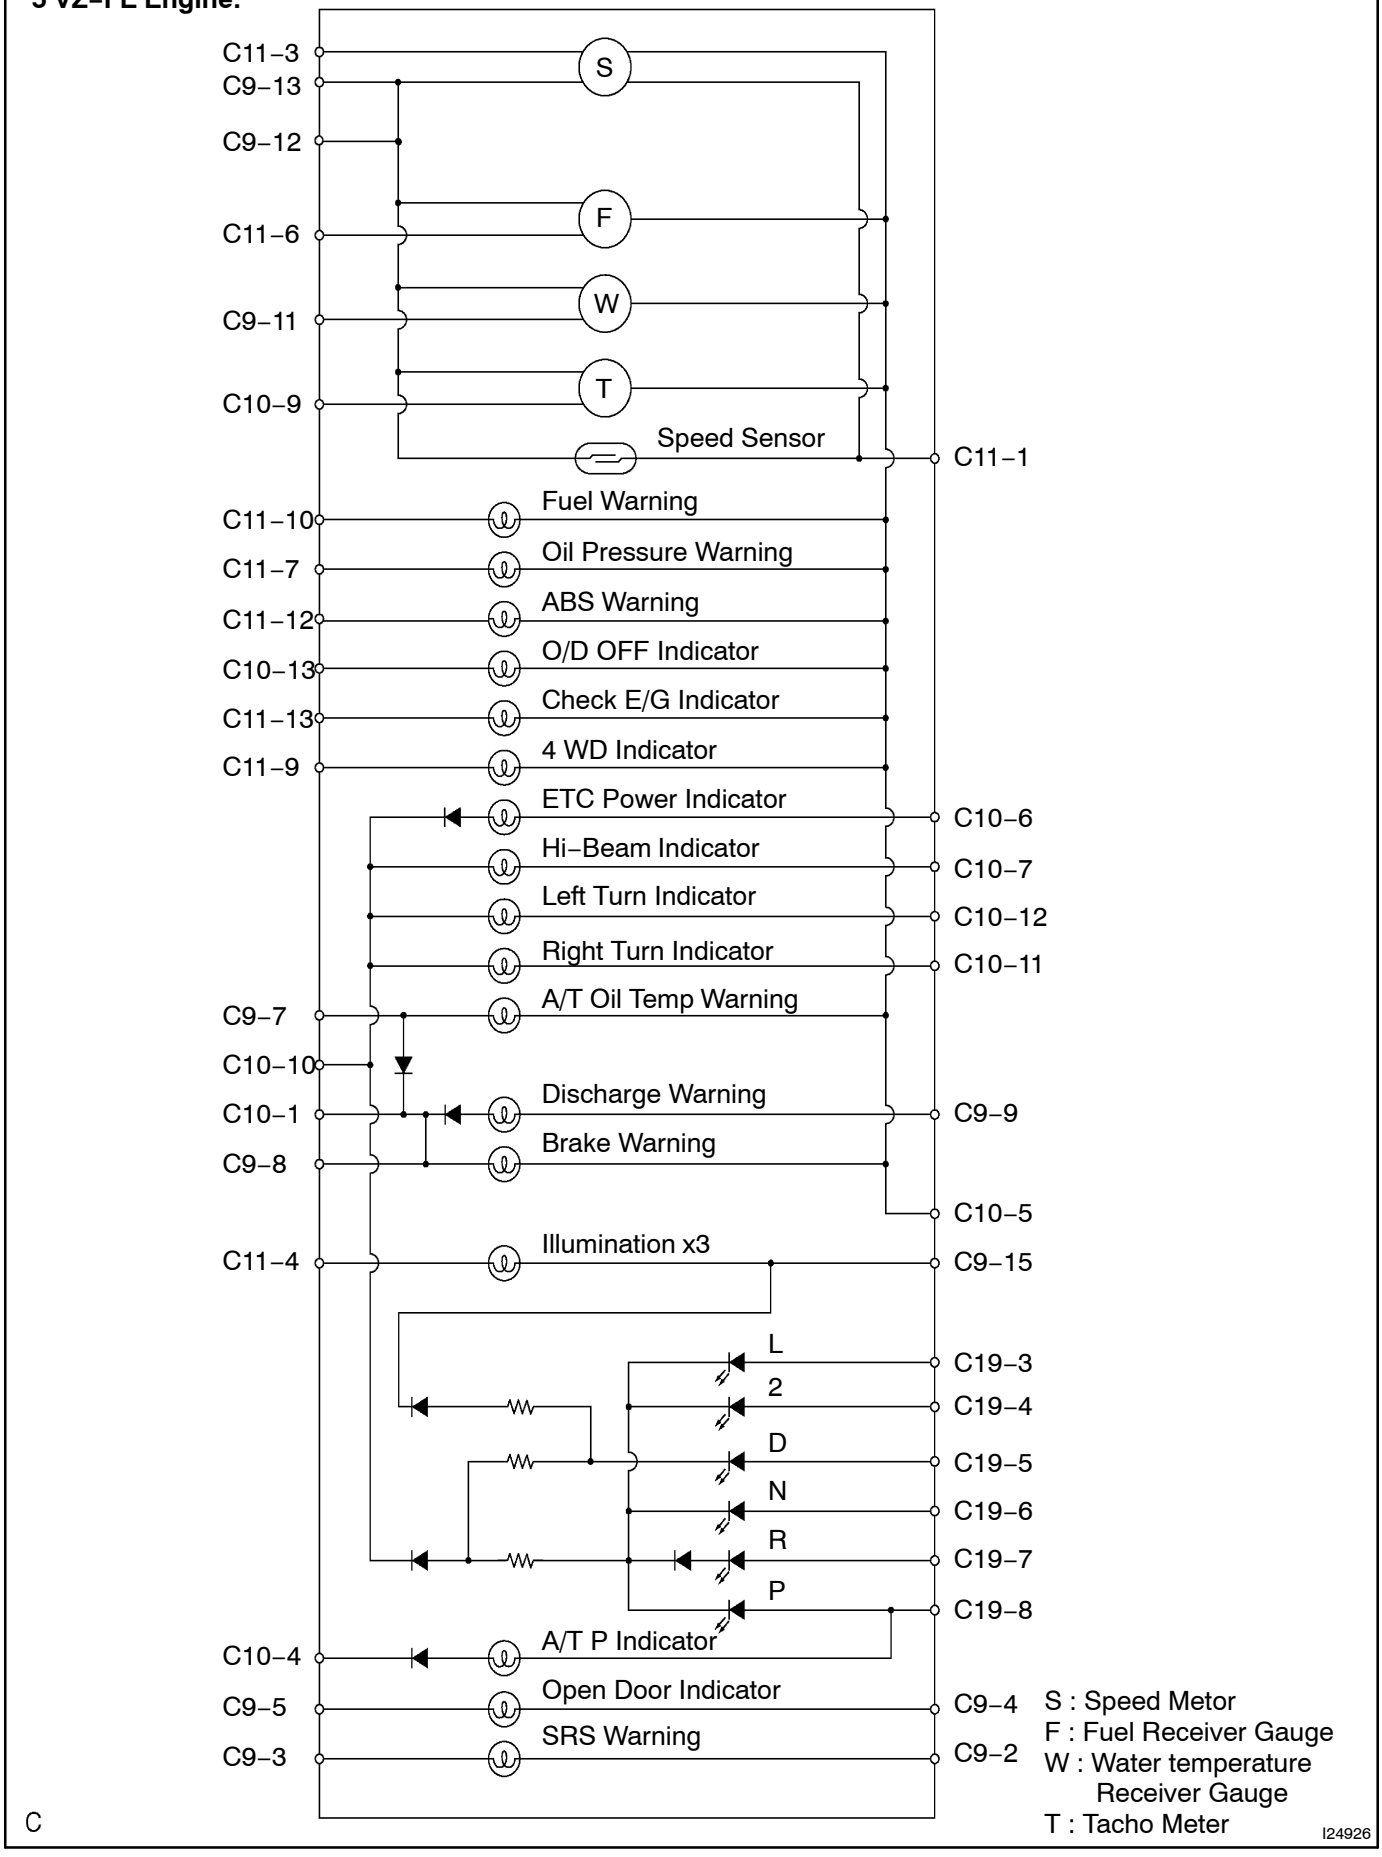

Diesel Engine:

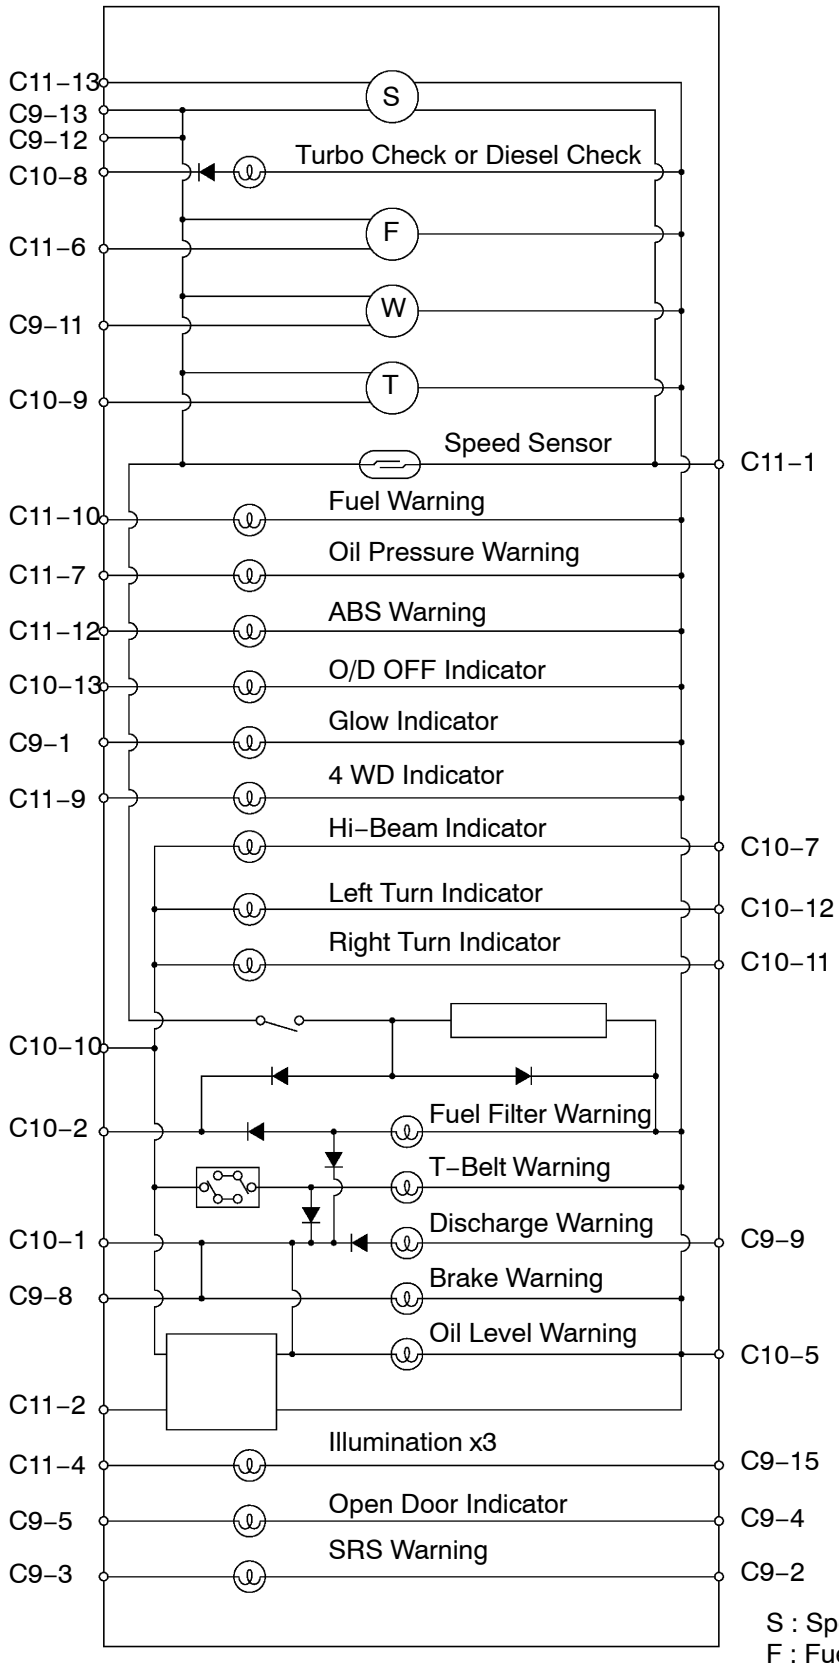

S : Speed Metor
F : Fuel Receiver Gauge
W : Water temperature Receiver Gauge
T : Tacho Meter

I24925

C

5 VZ–FE Engine:

No.		Wiring connector side
C9	1	–
	2	ECU–B Fuse
	3	Airbag Sensor Assembly
	4	DOME Fuse
	5	Door Courtesy Switch
	6	–
	7	Oil Monitor ECU
	8	Parking Brake Switch, Brake Fluid Leve Warning Switch
	9	IGN Fuse
	10	–
	11	Water Temparature Sender Gauge
	12	Ground
	13	Speedometer Sensor (+)
	14	–
	15	TAIL Fuse
	16	–
C10	1	Alternator L–Terminal
	2	–
	3	–
	4	Oil Monitor ECU
	5	GAUGE Fuse
	6	ETC Pattern Select Switch, Engine ECU
	7	Light Control Switch
	8	–
	9	TM.P
	10	Ground
	11	Turn Signal Switch (RH)
	12	Turn Signal Switch (LH)
	13	O/D OFF Switch (A/T)
C11	1	Speed Control Unit
	2	–
	3	Speedometer Sensor (–)
	4	Ground
	5	–
	6	Fuel Sender Gauge
	7	Low Oil Pressure Warning Switch
	8	–
	9	4WD Indicator Switch
	10	Fuel Sender Gauge
	11	–
	12	ABS ECU
	13	Engine ECU
C19	1	–
	2	–
	3	Neutral Start Switch (L range)
	4	Neutral Start Switch (2 range)
	5	Neutral Start Switch (D range)
	6	Neutral Start Switch (N range)
	7	Neutral Start Switch (R range)
	8	Neutral Start Switch (P range)
	9	–
	10	–

Diesel Engine:

No.		Wiring connector side
C9	1	Pre–Heating Timer
	2	ECU–B Fuse
	3	Airbag Sensor Assembly
	4	DOME Fuse
	5	Door Courtesy Switch
	6	–
	7	–
	8	Parking Brake Switch, Brake Fluid Leve Warning Switch
	9	IGN Fuse
	10	–
	11	Water Temparature Sender Gauge
	12	Ground
	13	Speedometer Sensor (+)
	14	–
	15	TAIL Fuse
	16	–
C10	1	Alternator L–Terminal
	2	Fuel Sedimentor
	3	–
	4	–
	5	GAUGE Fuse
	6	–
	7	Light Control Switch
	8	Engine ECU
	9	TM.P
	10	Ground
	11	Turn Signal Switch (RH)
	12	Turn Signal Switch (LH)
	13	O/D OFF Switch (A/T)
C11	1	Speed Control Unit
	2	Engine Oil Level Sensor
	3	Speedometer Sensor (–)
	4	Ground
	5	–
	6	Fuel Sender Gauge
	7	Low Oil Pressure Warning Switch
	8	–
	9	4WD Indicator Switch
	10	Fuel Sender Gauge
	11	–
	12	ABS ECU
	13	–