
Back Up Power Source Circuit

CIRCUIT DESCRIPTION


Battery positive voltage is supplied to terminal BATT of the engine (and ECT) ECU even when the ignition switch is OFF. This is for use by the DTC memory, air–fuel ratio adapting control value memory, etc.

WIRING DIAGRAM

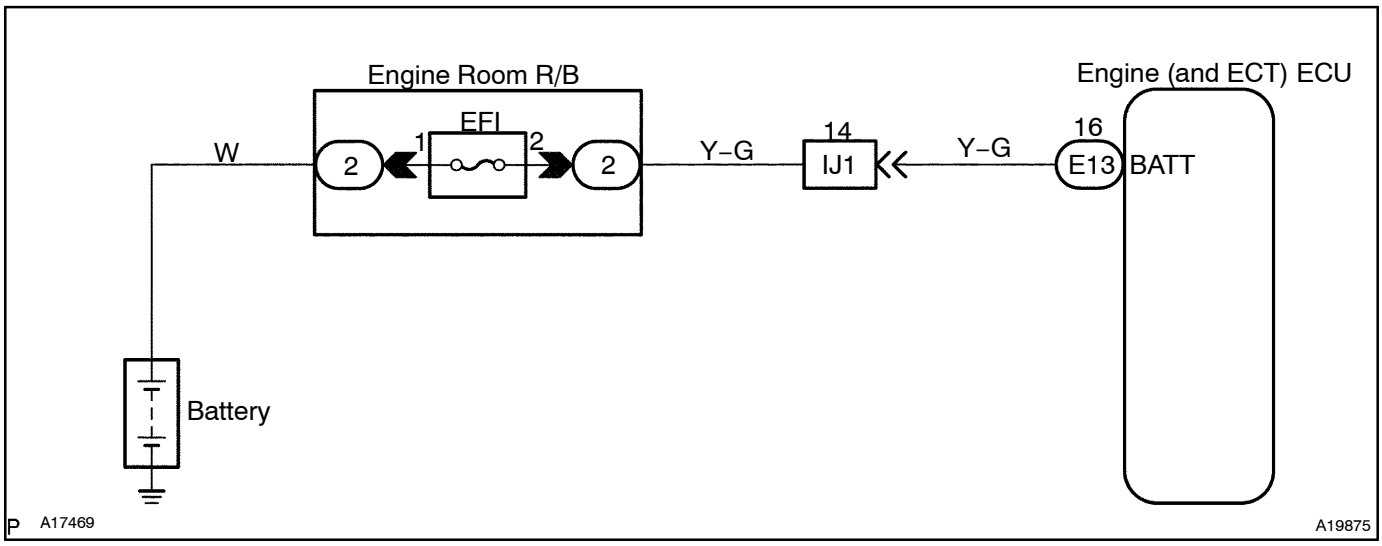

INSPECTION PROCEDURE

1	**Check voltage between terminal BATT of engine (and ECT) ECU connector and body ground.**

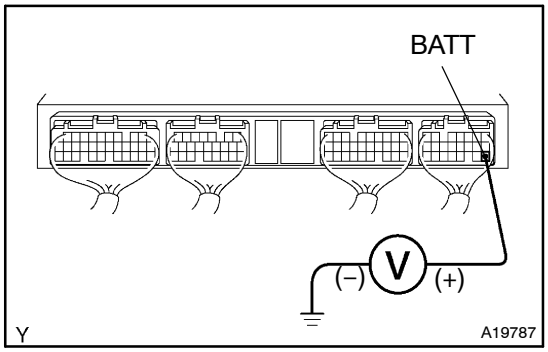

PREPARATION:

Remove the glove compartment door.

CHECK:

Measure the voltage between terminal BATT of the engine (and ECT) ECU connector and the body ground.

OK:

9 – 14 V

OK	**Check and replace engine (and ECT) ECU (See page IN–20).**

NG

2	**Check EFI fuse.**

NG → **Check for short in all the harness and components connected to EFI fuse.**

OK

Check and repair harness or connector between battery, EFI fuse and engine (and ECT) ECU.