SF04L–09

REMOVAL

1. REMOVE AIR CLEANER HOSE

2. REMOVE INTAKE AIR CONNECTOR ASSEMBLY (See Pub. No. RM519E on page EG–32)

3. REMOVE FUEL PRESSURE REGULATOR (See Pub. No. RM519E on page EG–138)


4. DISCONNECT FUEL INLET PIPE

CAUTION:

Catch leaking fuel in a container.

5. REMOVE FUEL PIPE

6. DISCONNECT INJECTOR CONNECTORS

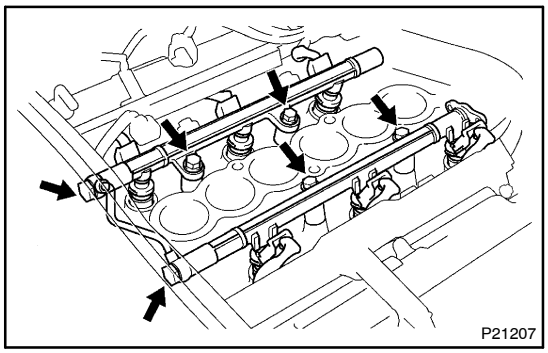

7. REMOVE DELIVERY PIPES AND INJECTORS

NOTICE:

- **Be careful not to drop the injectors when removing the delivery pipes.**
- **Pay attention to put any hung load on the injector to and from the side direction.**

(a) Remove the 4 bolts and delivery pipes together with the 6 injectors

(b) Remove the 4 spacers from the intake manifold.

(c) Pull out the 6 injectors from the delivery pipes.

(d) Remove the 2 O–rings and insulator from each injector.