
FI0OV–02

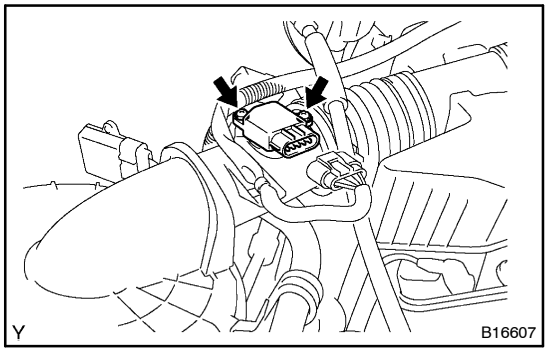

REMOVAL

1. DISCONNECT AIR FLOW METER CONNECTOR

2. REMOVE AIR FLOW METER

Remove the 2 screws and air flow meter.