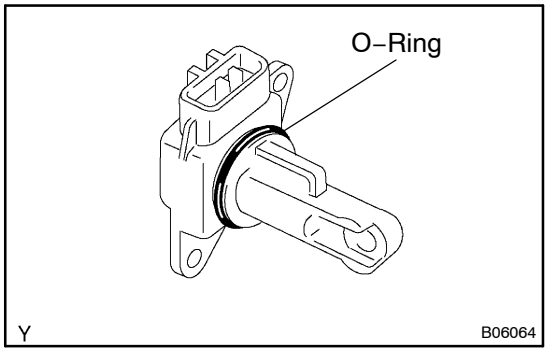


FI0OX–02

INSTALLATION

1. INSTALL AIR FLOW METER

(a) Replace a new O–ring.

(b) Install the air flow meter with the 2 screws.

2. RECONNECT AIR FLOW METER CONNECTOR