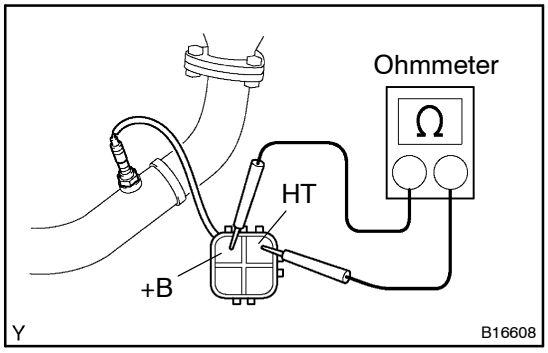


OXYGEN SENSOR

INSPECTION

FI0ZG–02

INSPECT HEATER RESISTANCE OF OXYGEN SENSOR

(a) Disconnect the oxygen sensor connector.

(b) Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance:

20°C (68°F)	11 – 16 Ω
800°C (1,472°F)	23 – 32 Ω

If the resistance is not as specified, replace the sensor.

Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)

(c) Reconnect the oxygen sensor connector.