AT113–01

REMOVAL

1. REMOVE RADIATOR GRILLE SUB–ASSY

(a) Remove the 3 screws.

(b) Release the 2 clips and remove the radiator grille sub–assy.

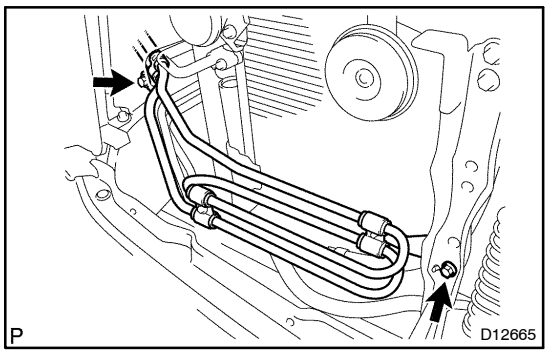

2. SEPARATE POWER STEERING OIL COOLER SUB–ASSY

Remove the 2 bolts and separate the power steering oil cooler sub–assy.

Torque: 7.5 N·m (76 kgf·cm, 66 in.·lbf)

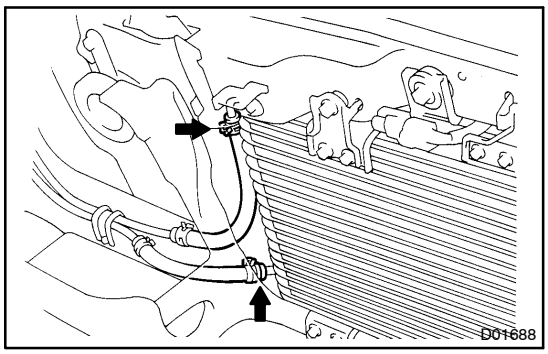

3. REMOVE OIL COOLER

(a) Loosen the 2 clips and disconnect the 2 hoses.

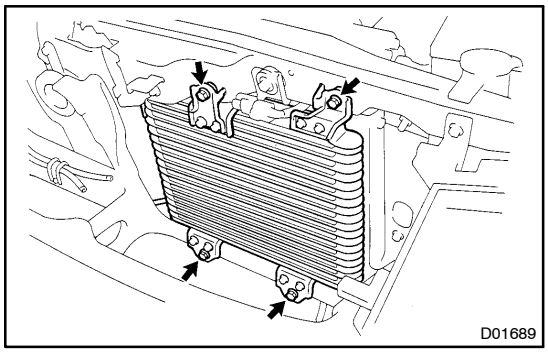

(b) Remove the 4 bolts and oil cooler.

Torque: 12 N·m (117 kgf·cm, 8 ft·lbf)

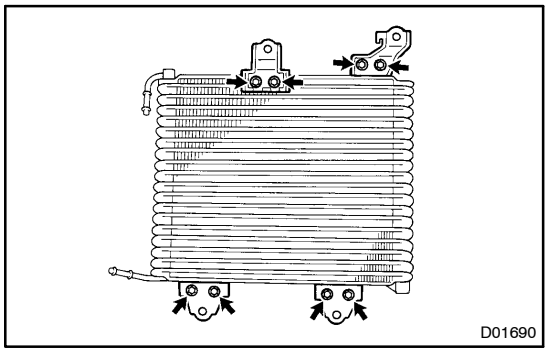

(c) Remove the 8 bolts, the 2 oil cooler brackets and the 2 stays.

Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

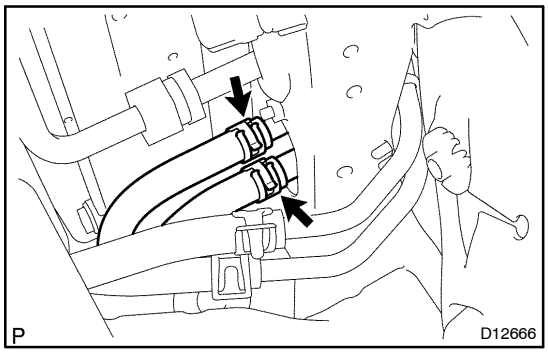

4. REMOVE OIL COOLER PIPE BRACKET

(a) Loosen the 2 clips and disconnect the 2 hoses.

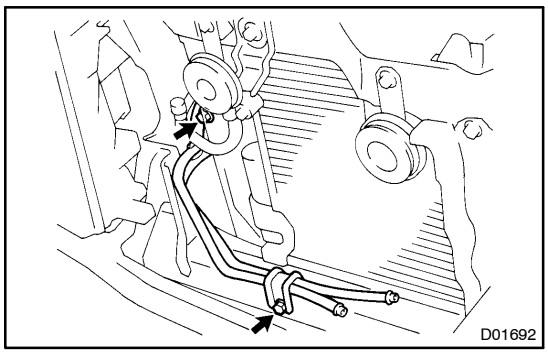

(b) Remove the 2 bolts and the oil cooler pipe bracket.
Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

(c) Loosen the 2 clips and disconnect the 2 hoses.