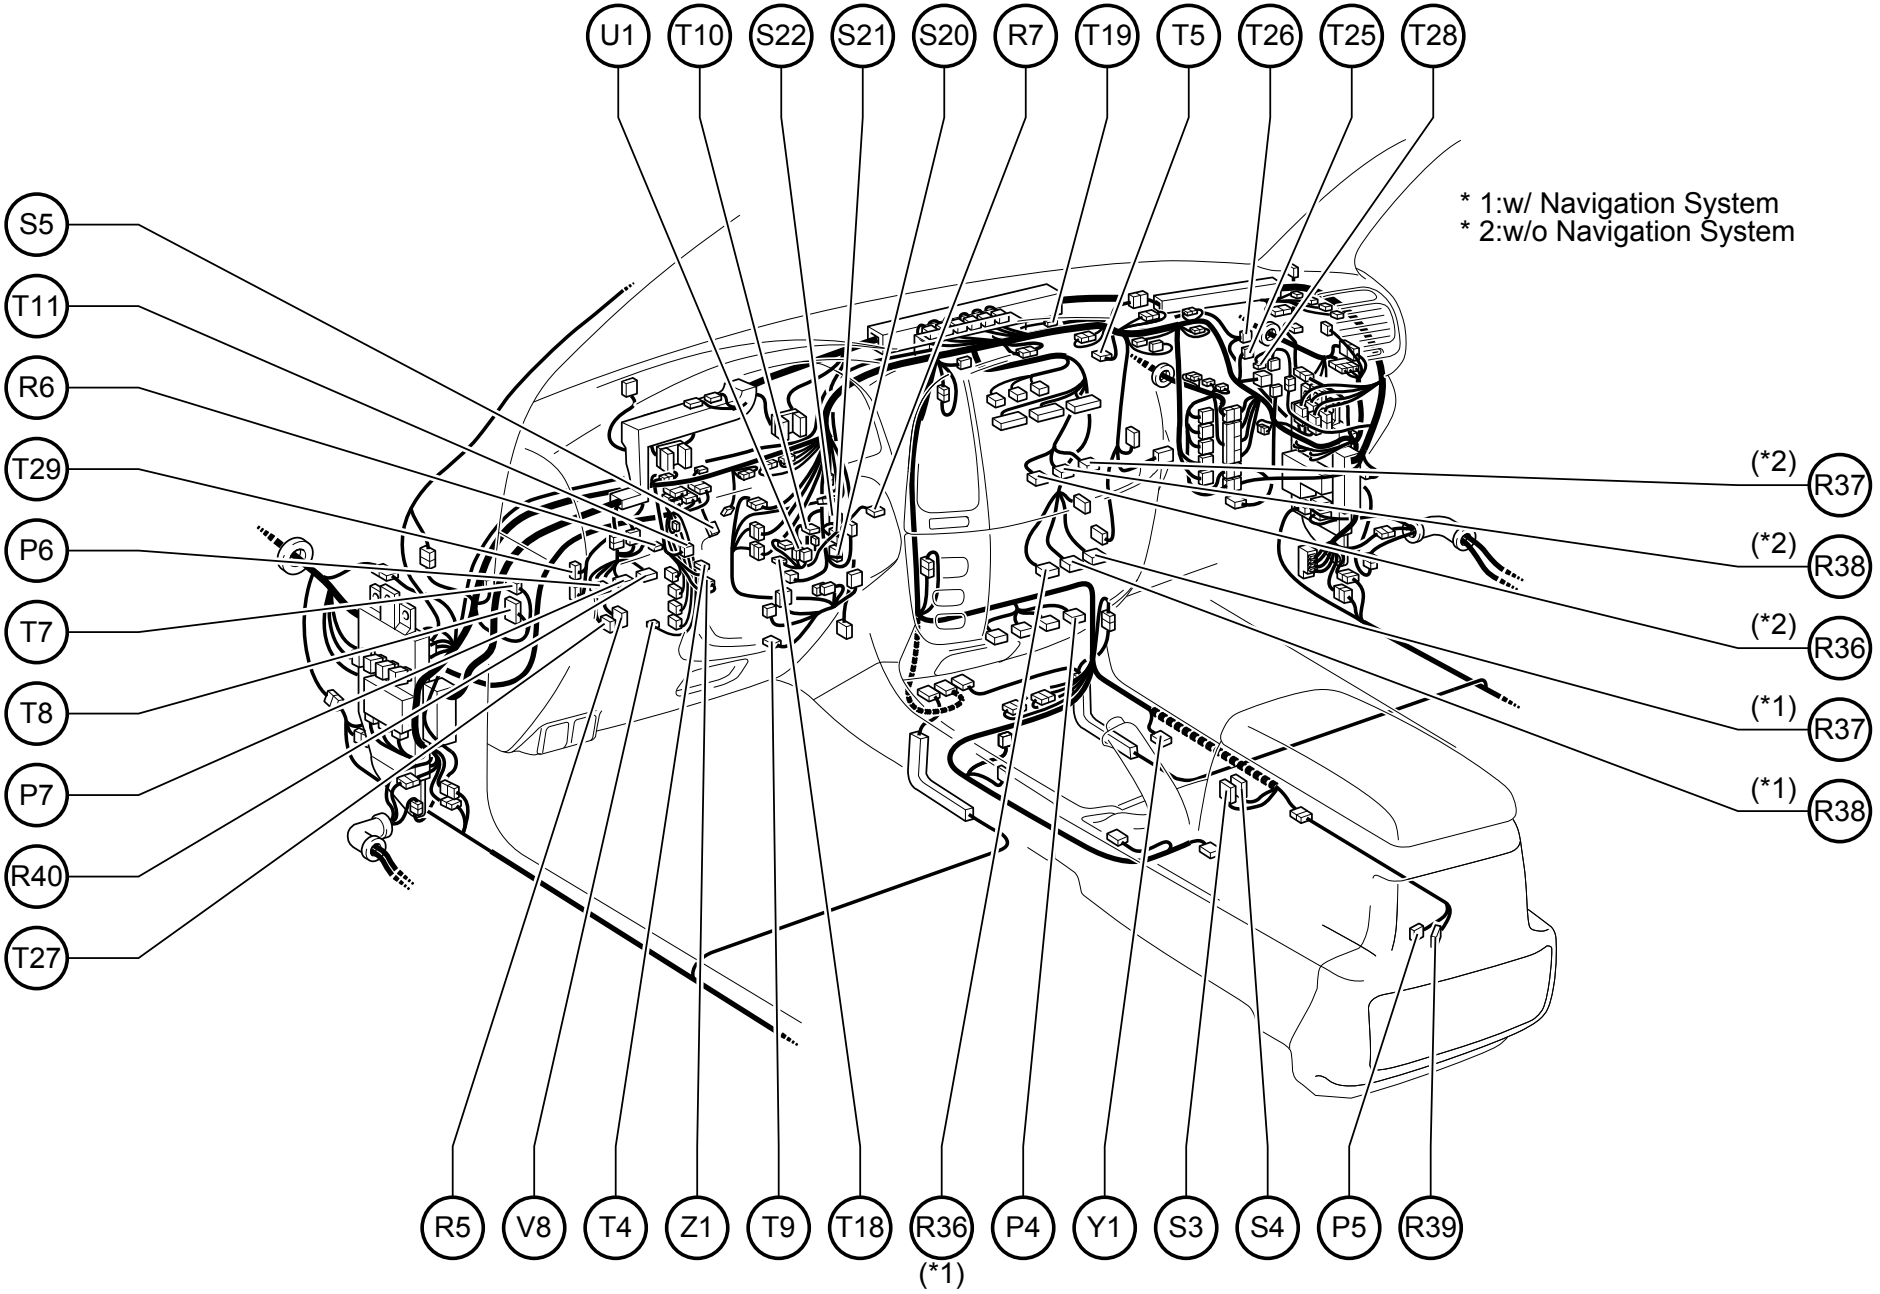
U1
T10
S22
S21
S20
R7
T19
T5
T26
T25
T28
* 1:w/ Navigation System
* 2:w/o Navigation System
S5
T11
R6
T29
P6
T7
T8
P7
R40
T27
(*2)
R37
(*2)
R38
(*2)
R36
(*1)
R37
(*1)
R38
R5
V8
T4
Z1
T9
T18
R36
(*1)
P4
Y1
S3
S4
P5
R39

P 4 Power Outlet (Front)
P 5 Power Outlet (Rear Console Box)
P 6 Power Quarter Window SW LH
P 7 Power Quarter Window SW RH

R 5 Remote Control Mirror SW
R 6 Rheostat
R 7 Room Temp. Sensor (Front)
R 36 Radio and Player
R 37 Radio and Player
R 38 Radio and Player
R 39 Rear Seat Audio Controller
R 40 Roll Sensing of Curtain Shield Airbags Cutoff SW

S 3 Seat Heater SW (Driver's Seat)
S 4 Seat Heater SW (Front Passenger's Seat)
S 5 Stop Light SW
S 20 Suspension Control ECU
S 21 Suspension Control ECU
S 22 Suspension Control ECU

T 4 Telescopic Motor
T 5 Theft Deterrent ECU
T 7 Tilt and Telescopic ECU
T 8 Tilt and Telescopic ECU
T 9 Tilt Motor
T 10 Ignition Key Cylinder Light , Transponder Key Amplifier
T 11 Turn Signal Flasher
T 18 Towing Brake Controller
T 19 Transponder Key Computer
T 25 Tire Pressure Warning ECU and Receiver
T 26 Tire Pressure Warning ECU and Receiver
T 27 Tire Pressure Warning Reset SW
T 28 Tire Pressure Warning Select SW
T 29 Translate ECU

U 1 Unlock Warning SW

V 8 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

Z 1 Option Connector (Glass Breakage Sensor)

P 4
White

P 5
White



P 6
Black

P 7
Black

R 5
Black

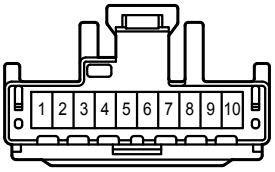

R 6
Black

R 7
Black



R 36
White

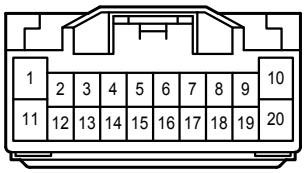

R 37
White

R 38
White

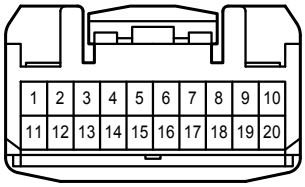

R 39
White

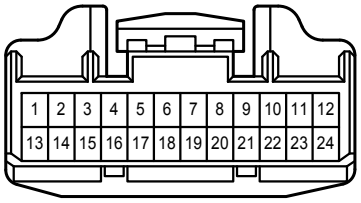

R 40
Black



S 3
Black

S 4
Brown

S 5
Blue

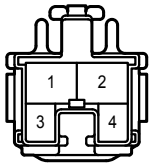

S 20
White

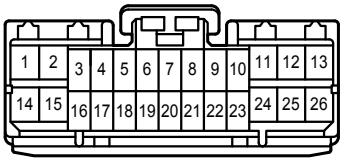

S 21
White

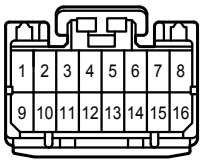

S 22
White

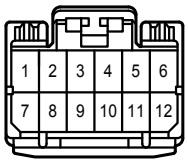

T 4
White

T 5
White

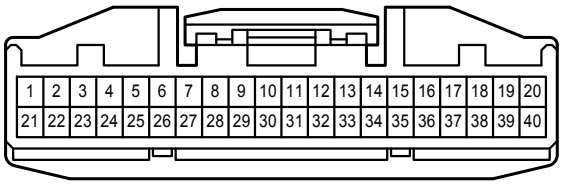

T 7
White

T 8
White

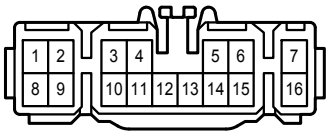

T 9
Black



T 10
Black

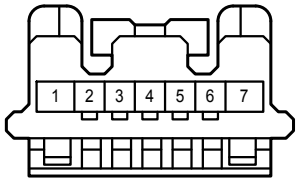

T 11
Black

T 18
White

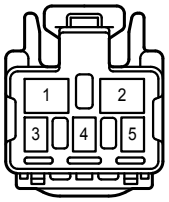

T 19
White

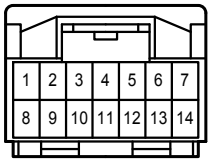

T 25
Black

T 26
White



T 27
Black

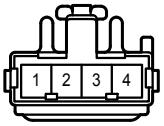

T 28
Blue



T 29
White

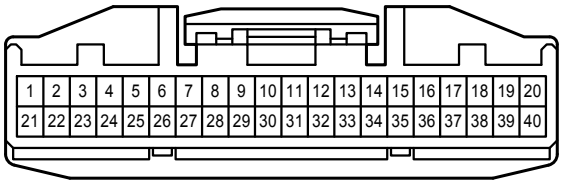

U 1
White



V 8
Black



Y 1
Black

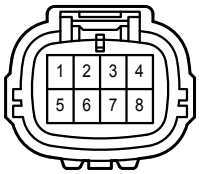

Z 1
White