


QUARTER WHEEL HOUSING OUTER PANEL (ASSY): 5-Door

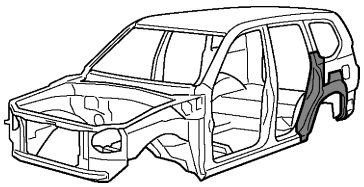

REMOVAL
With the quarter panel removed.

〔LH〕

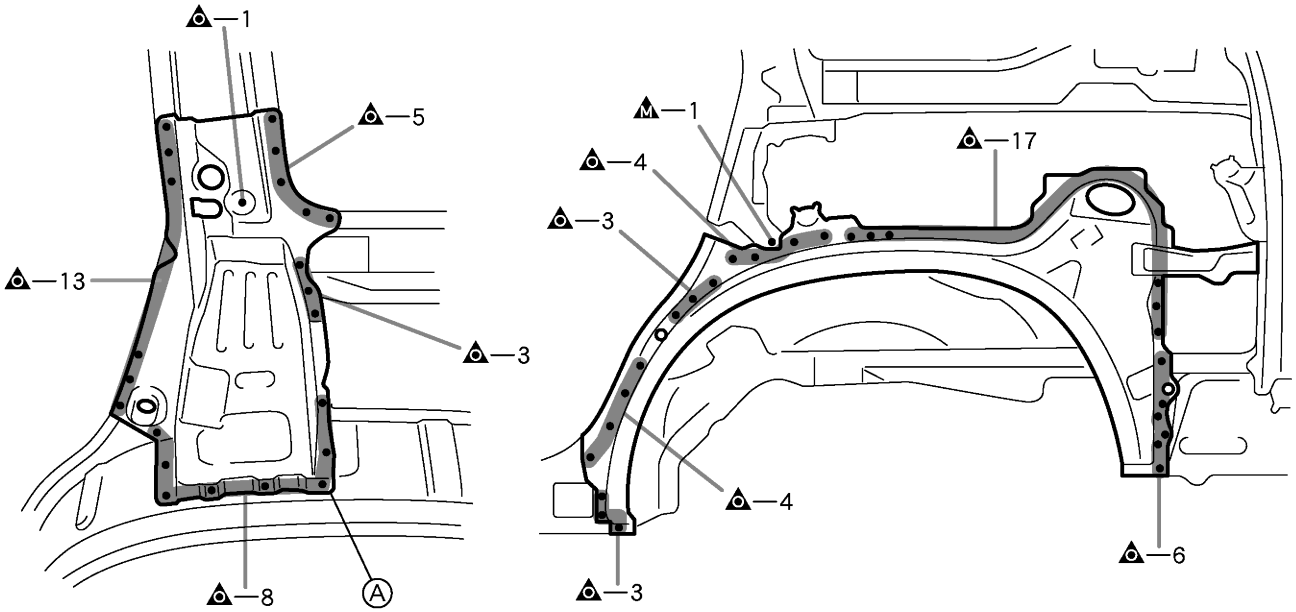


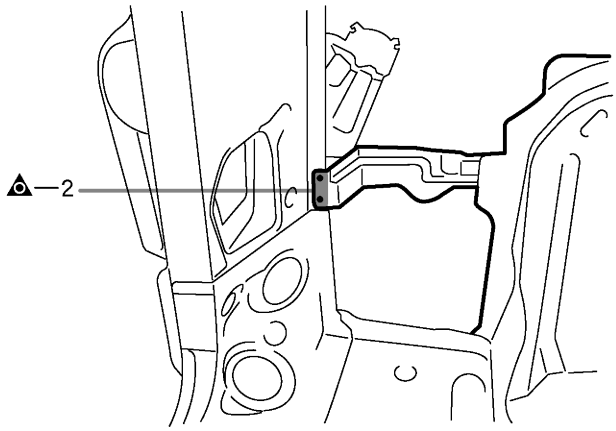


POINT
1 After removing the Ⓐ, remove quarter wheel housing outer panel.

PART NAME
Ⓐ Roof Side Outer Panel

〔RH〕

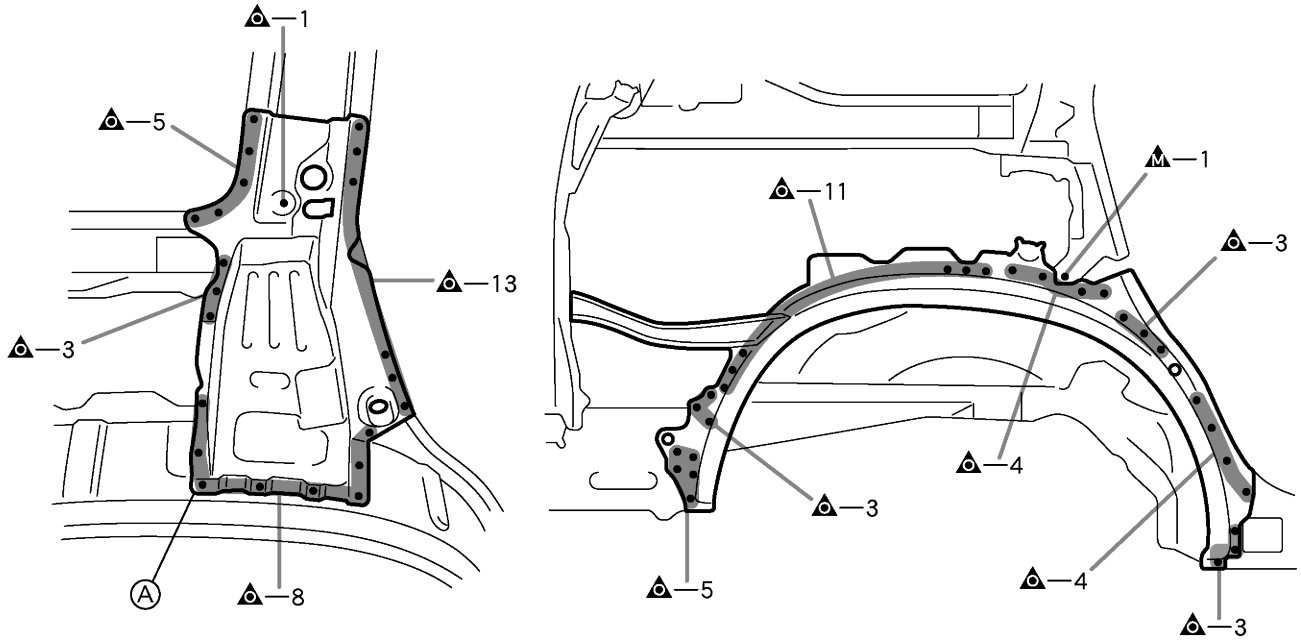

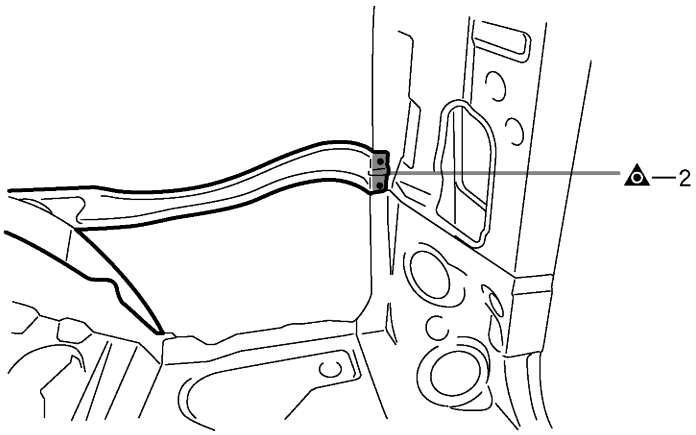


PART NAME

Ⓐ Roof Side Outer Panel

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam with corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

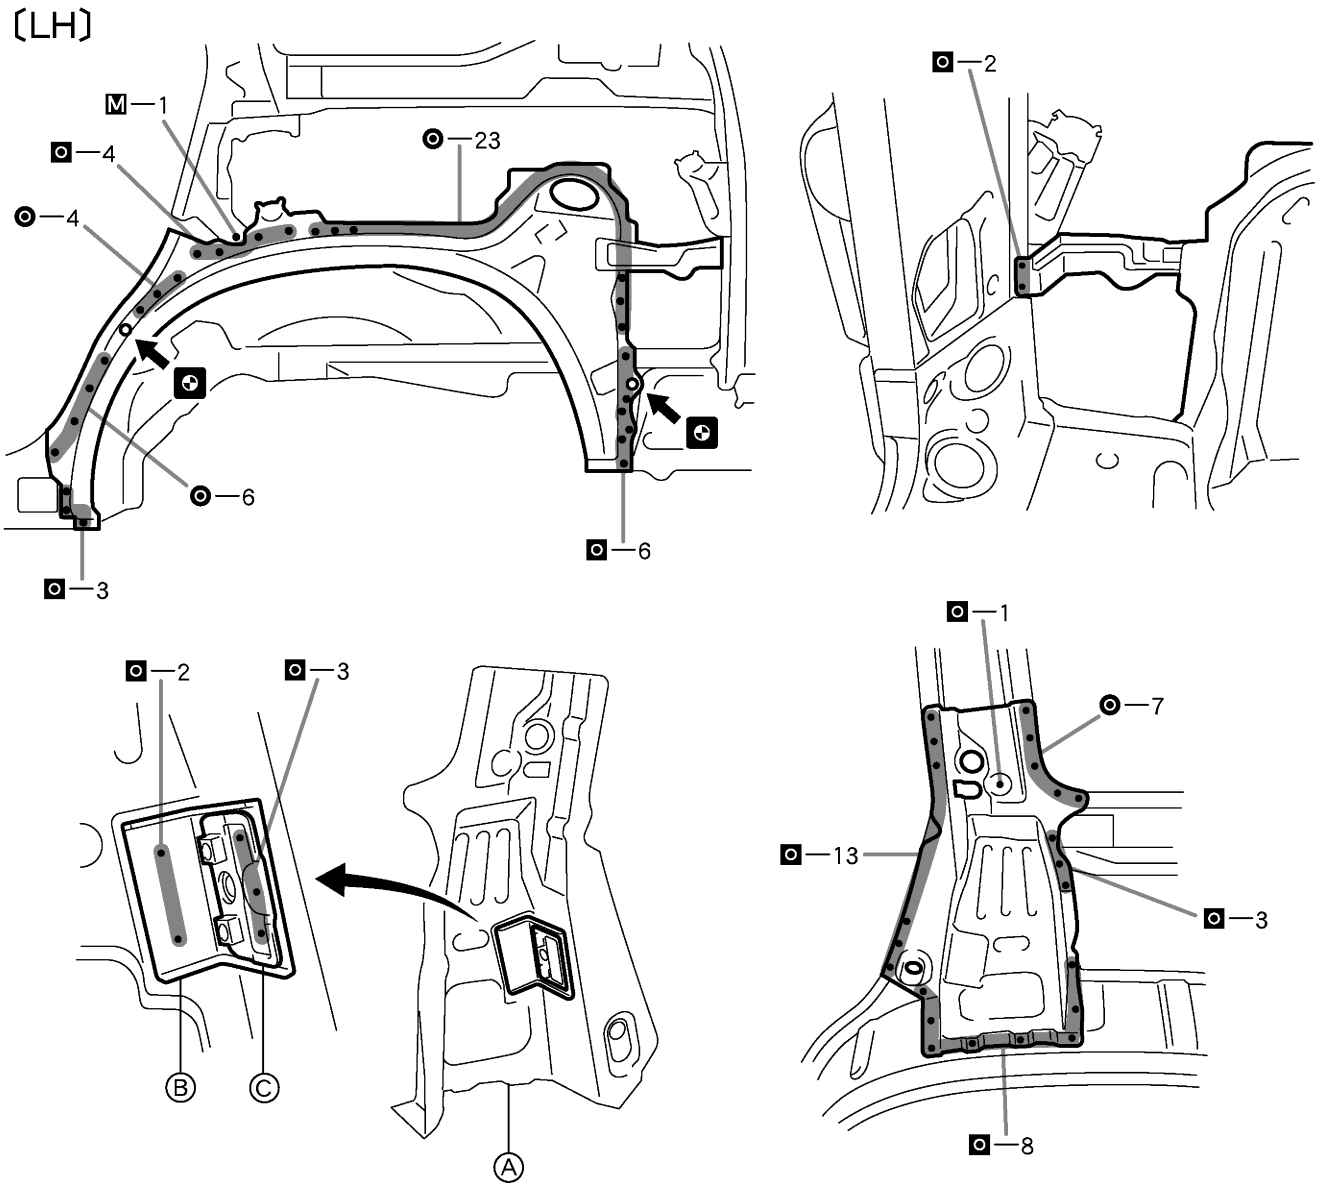


POINT

1 Determine the position of the new parts by assembly marks of the inner and outer panels.

PART NAME

Ⓐ Roof Side Outer Panel Ⓑ Quarter Lock Pillar Reinforcement
Ⓒ Door Lock Striker Retainer

〔RH〕

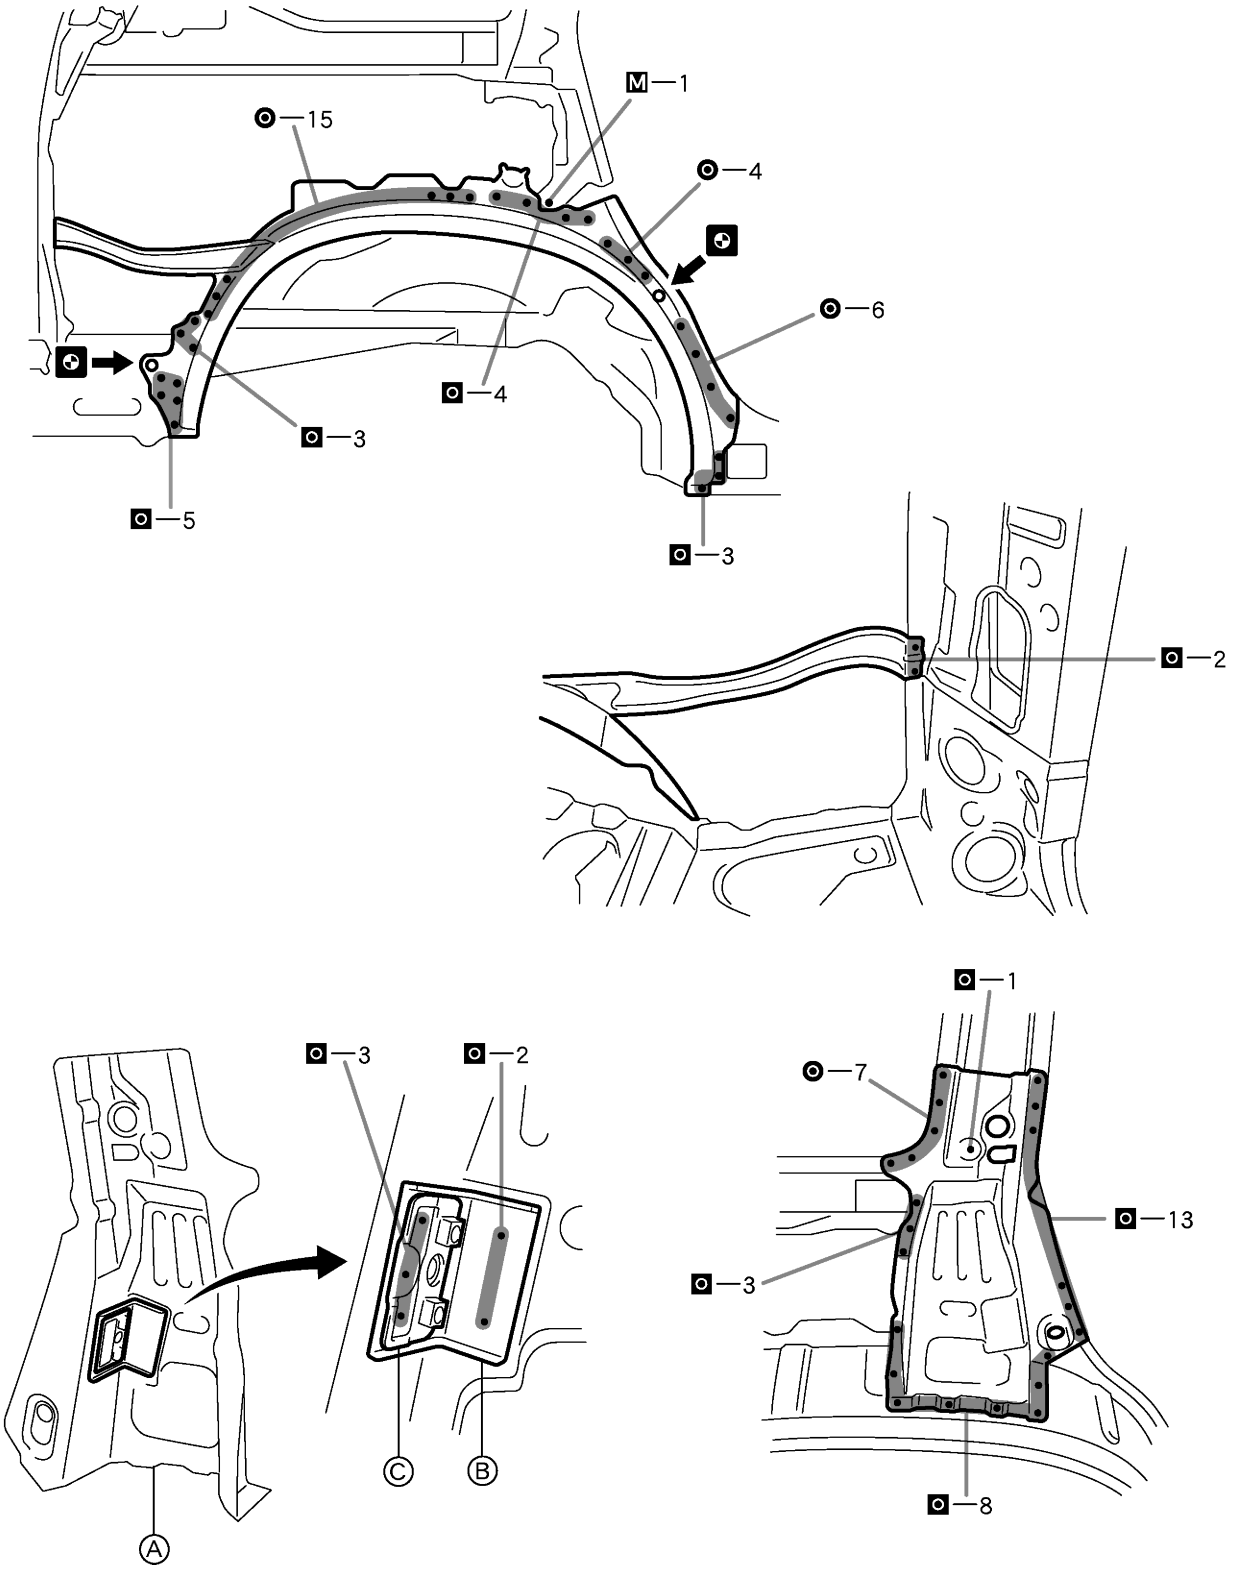

PART NAME

Ⓐ Roof Side Outer Panel Ⓑ Quarter Lock Pillar Reinforcement
Ⓒ Door Lock Striker Retainer