

QUARTER WHEEL HOUSING OUTER PANEL (ASSY): 3-Door

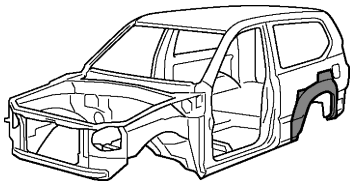

REMOVAL
With the quarter panel removed.


〔LH〕

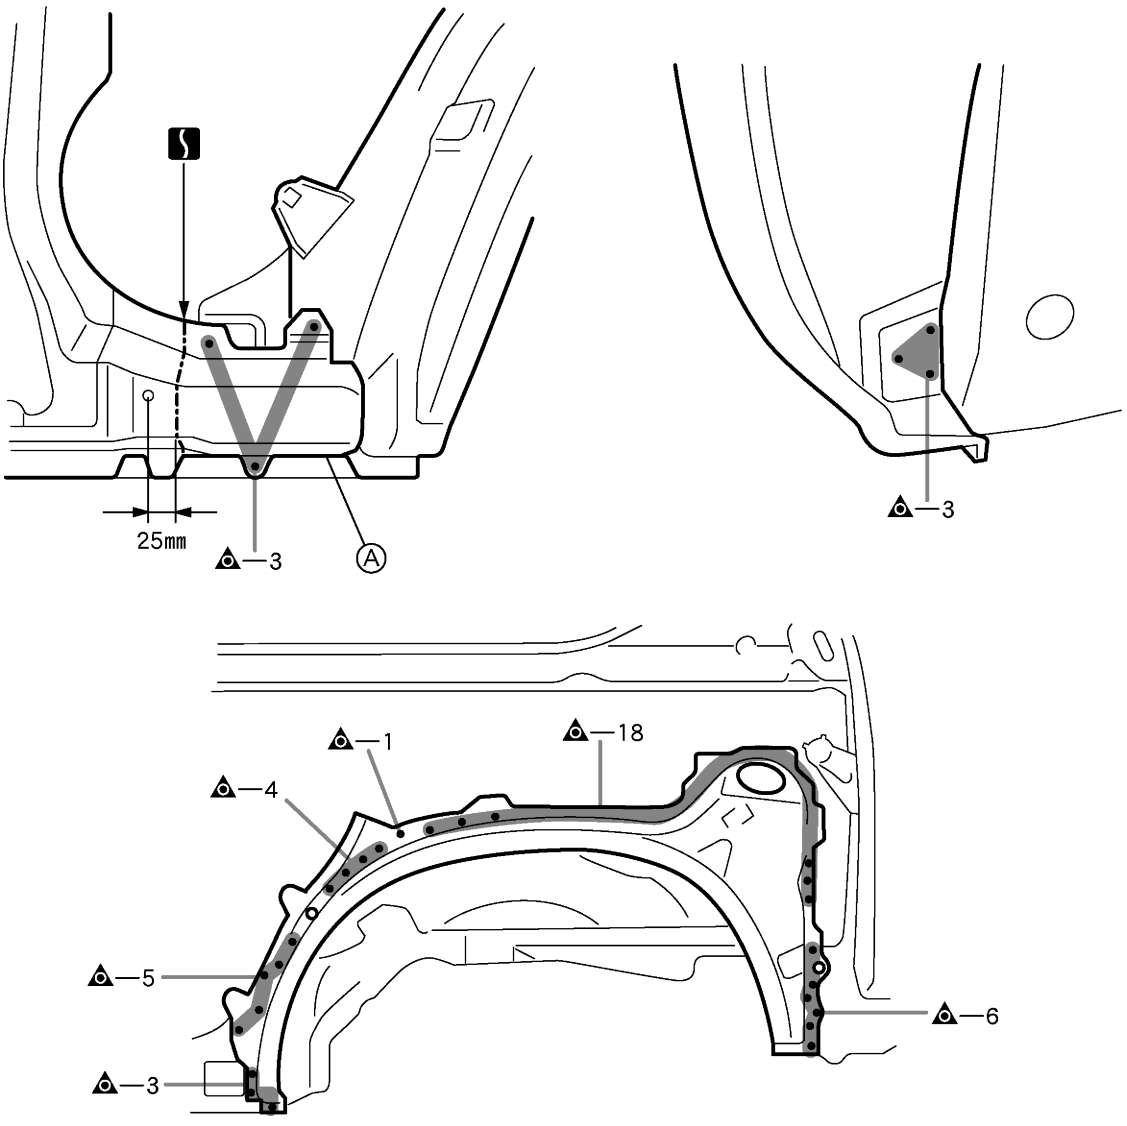

POINT
1 Remove the part of Ⓐ to remove the quarter wheel housing outer panel, but the part is reused when installing.

PART NAME
Ⓐ Rocker Panel Reinforcement
25mm (0.98in.)

〔RH〕

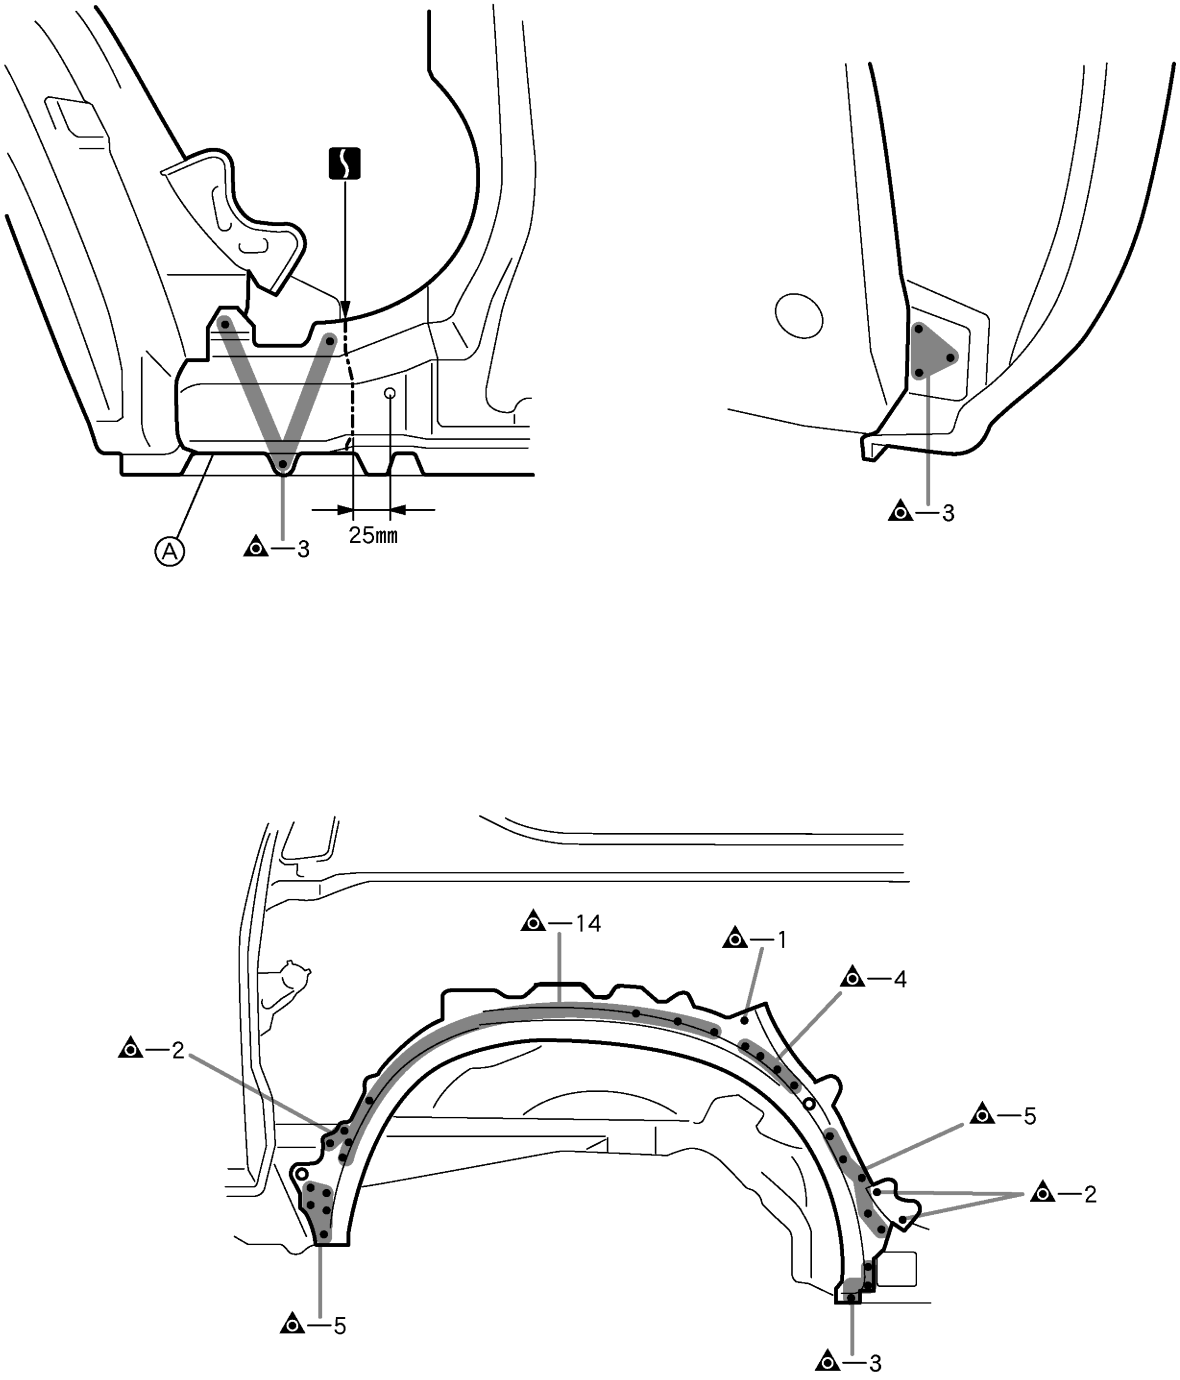

PART NAME


Ⓐ Rocker Panel Reinforcement


25mm (0.98in.)


INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam with corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

〔LH〕

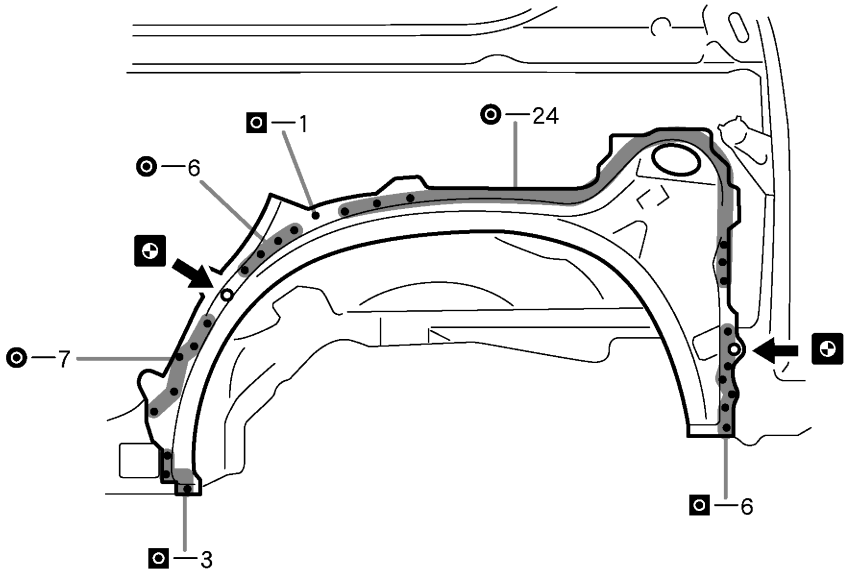

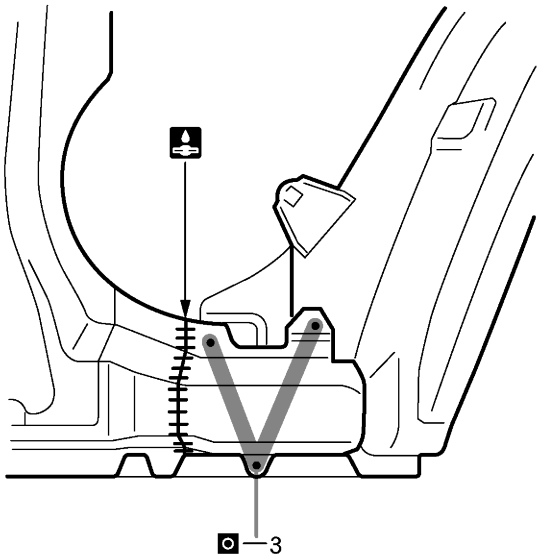

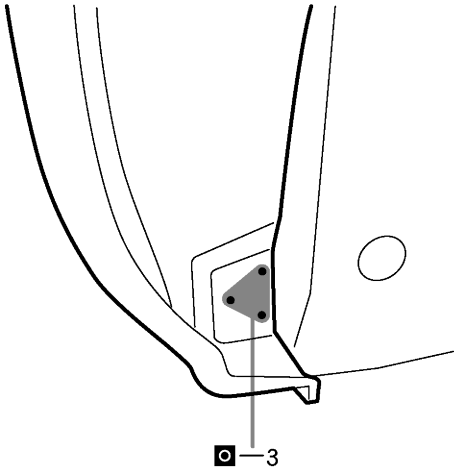

POINT

1 Determine the position of the new parts by the assembly marks of the inner and outer panels.

〔RH〕

