
Connector Joining Wire Harness and Wire Harness

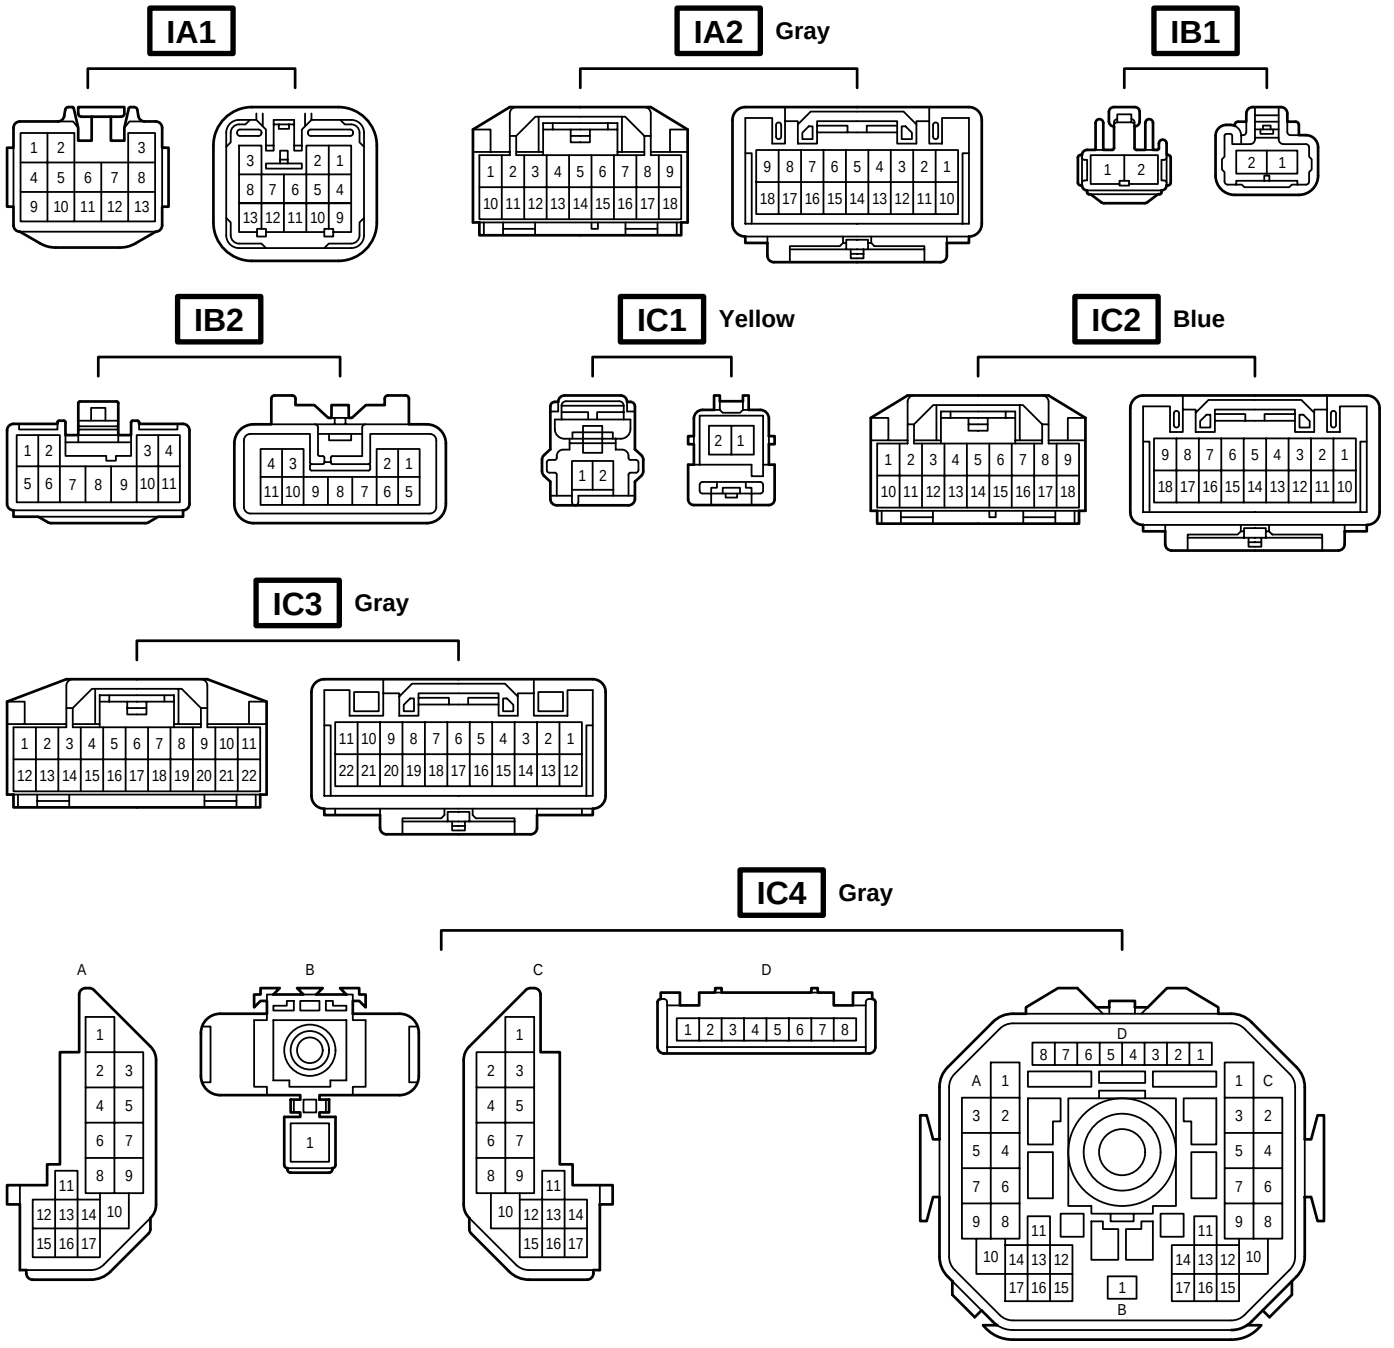

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2	
IB1	Floor No.2 Wire and Engine Room Main Wire (Left Kick Panel)
IB2	
IC1	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IC2	
IC3	
IC4	