
Connector Joining Wire Harness and Wire Harness

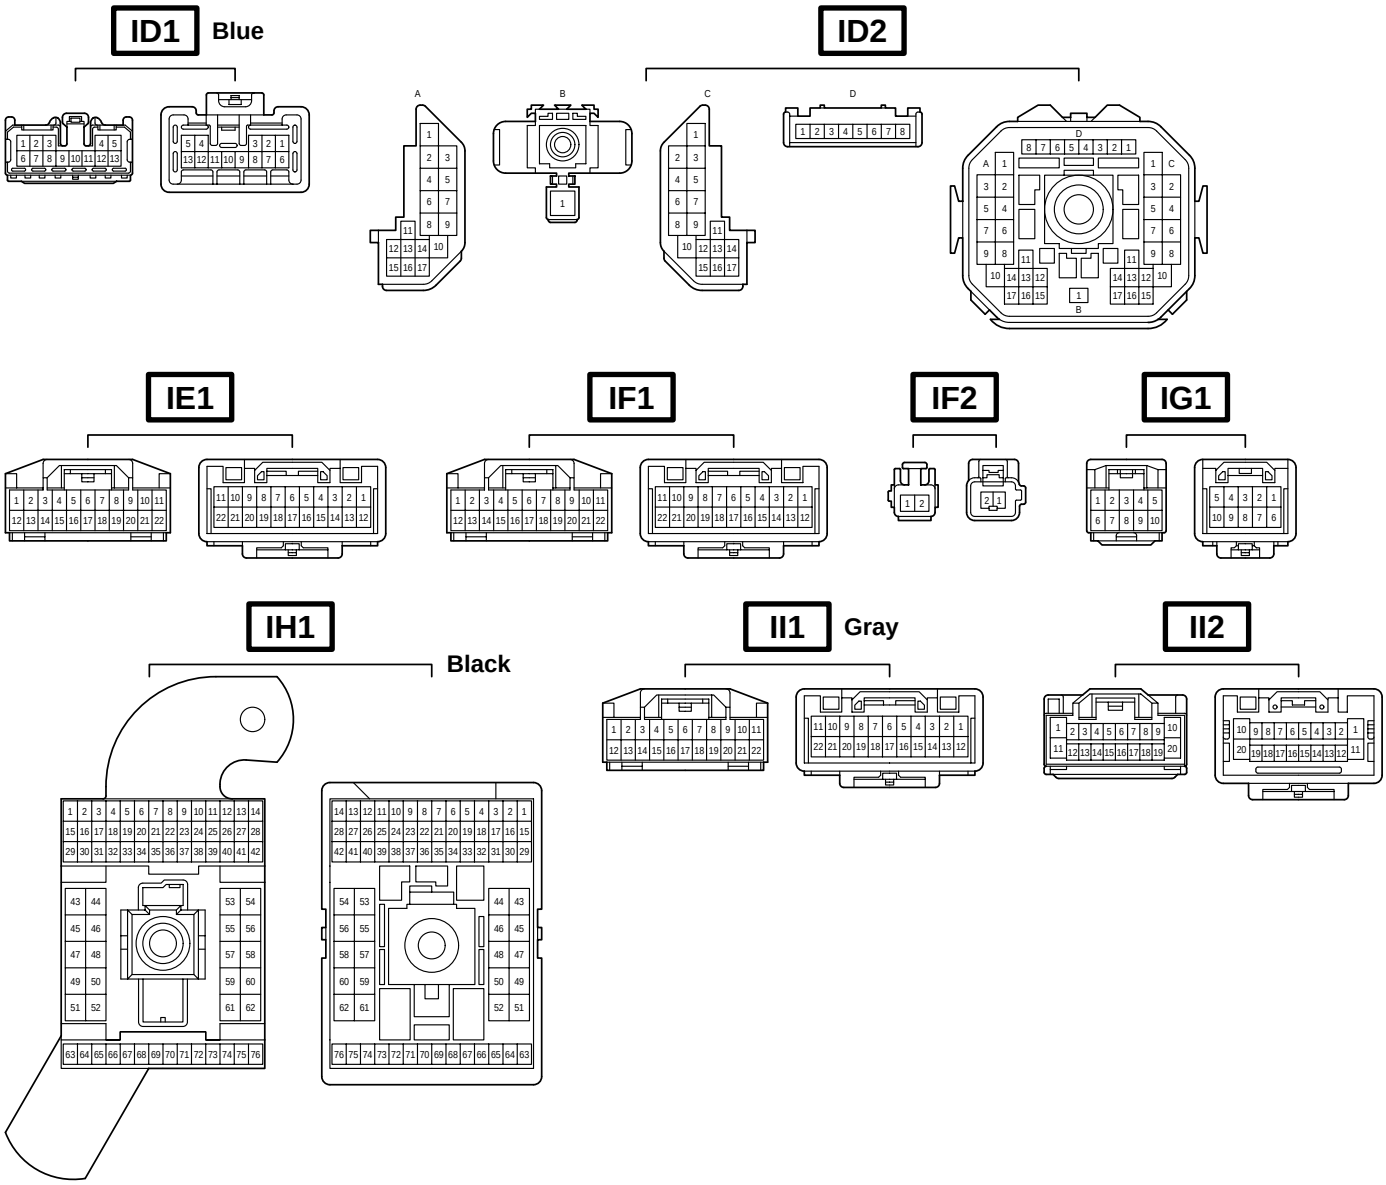

Code	Joining Wire Harness and Wire Harness (Connector Location)
ID1	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
ID2	
IE1	Roof Wire and Instrument Panel Wire (Left Side of the Driver Side J/B)
IF1	Instrument Panel Wire and Instrument Panel Wire (Near the Center J/B No.1)
IF2	Instrument Panel Wire and Instrument Panel Wire (Right Kick Panel)
IG1	Instrument Panel No.3 Wire and Instrument Panel Wire (Near the Combination Meter)
IH1	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Brace LH)
II1	Console Box Wire and Instrument Panel Wire (Under the Instrument Panel Brace LH)
II2	