
Position of Parts in Engine Compartment

[LHD : 1GR–FE]

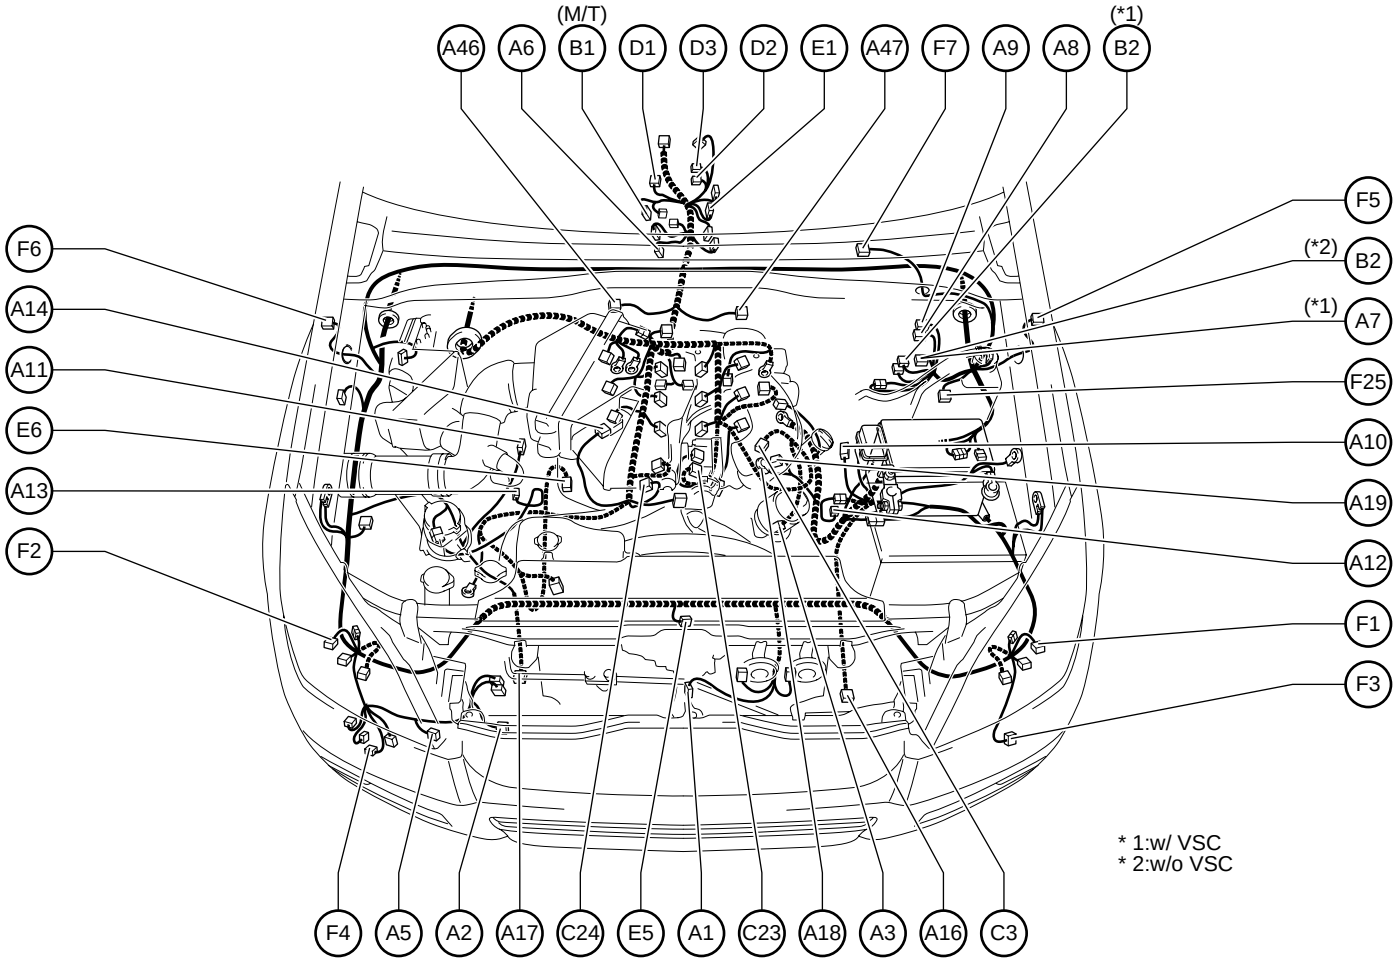

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor
A/C Magnetic Clutch
A 5 A/C Magnetic Valve
A 6 A/T Oil Temp. Sensor
A 7 ABS & BA & TRC & VSC Actuator
A 8 ABS & BA & TRC & VSC Actuator
A 9 ABS & BA & TRC & VSC Actuator
A 10 ABS Speed Sensor Front LH
A 11 ABS Speed Sensor Front RH
A 12 Absorber Control Actuator Front LH
A 13 Absorber Control Actuator Front RH
A 14 Air Flow Meter
A 16 Airbag Sensor Front LH
A 17 Airbag Sensor Front RH
A 18 Alternator
A 19 Alternator
A 46 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A 47 Air Fuel Ratio Sensor (Bank 2 Sensor 1)

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW

C 3 Crankshaft Position Sensor
C 23 Camshaft Timing Oil Control Valve LH
C 24 Camshaft Timing Oil Control Valve RH

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)
D 3 Detection SW (Transfer Neutral Position)

E 1 ECT Solenoid
E 5 Engine Hood Courtesy SW
E 6 Engine Oil Level Sensor

F 1 Front Clearance Light LH
Front Turn Signal Light LH
F 2 Front Clearance Light RH
Front Turn Signal Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Wiper Motor
F 25 Fuel Pump Resistor