
## Position of Parts in Engine Compartment

## [LHD : 3RZ–FE]

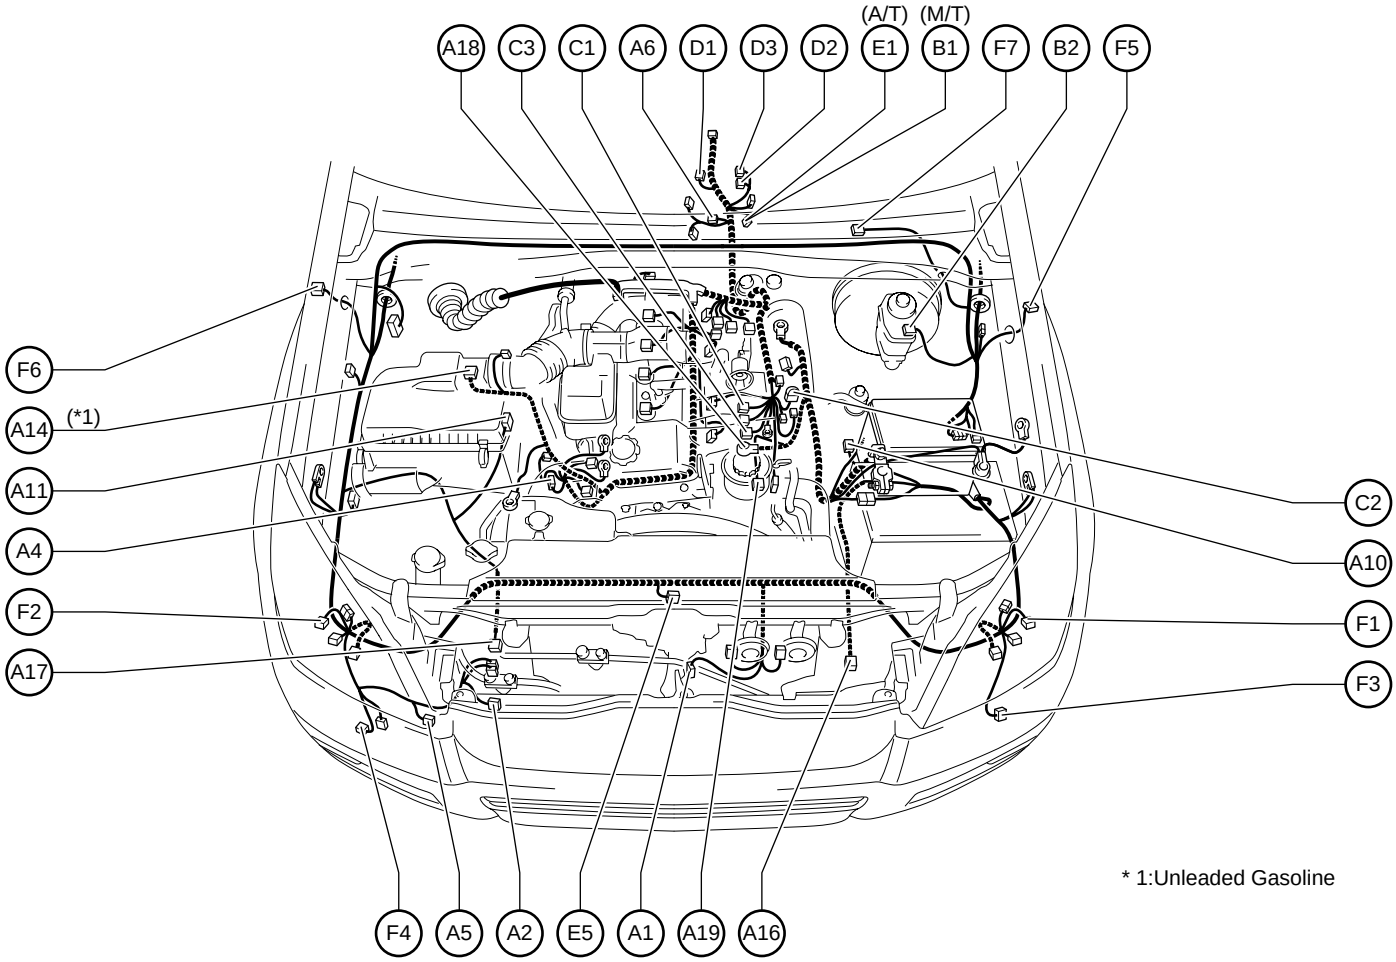


A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 4 A/C Magnetic Clutch
A 5 A/C Magnetic Valve
A 6 A/T Oil Temp. Sensor
A10 ABS Speed Sensor Front LH
A11 ABS Speed Sensor Front RH
A14 Air Flow Meter
A16 Airbag Sensor Front LH
A17 Airbag Sensor Front RH
A18 Alternator
A19 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Check Connector
C 3 Crankshaft Position Sensor

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)
D 3 Detection SW (Transfer Neutral Position)

E 1 ECT Solenoid
E 5 Engine Hood Courtesy SW

F 1 Front Clearance Light LH
Front Turn Signal Light LH
F 2 Front Clearance Light RH
Front Turn Signal Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Wiper Motor