
Position of Parts in Engine Compartment

[LHD : 3RZ–FE]

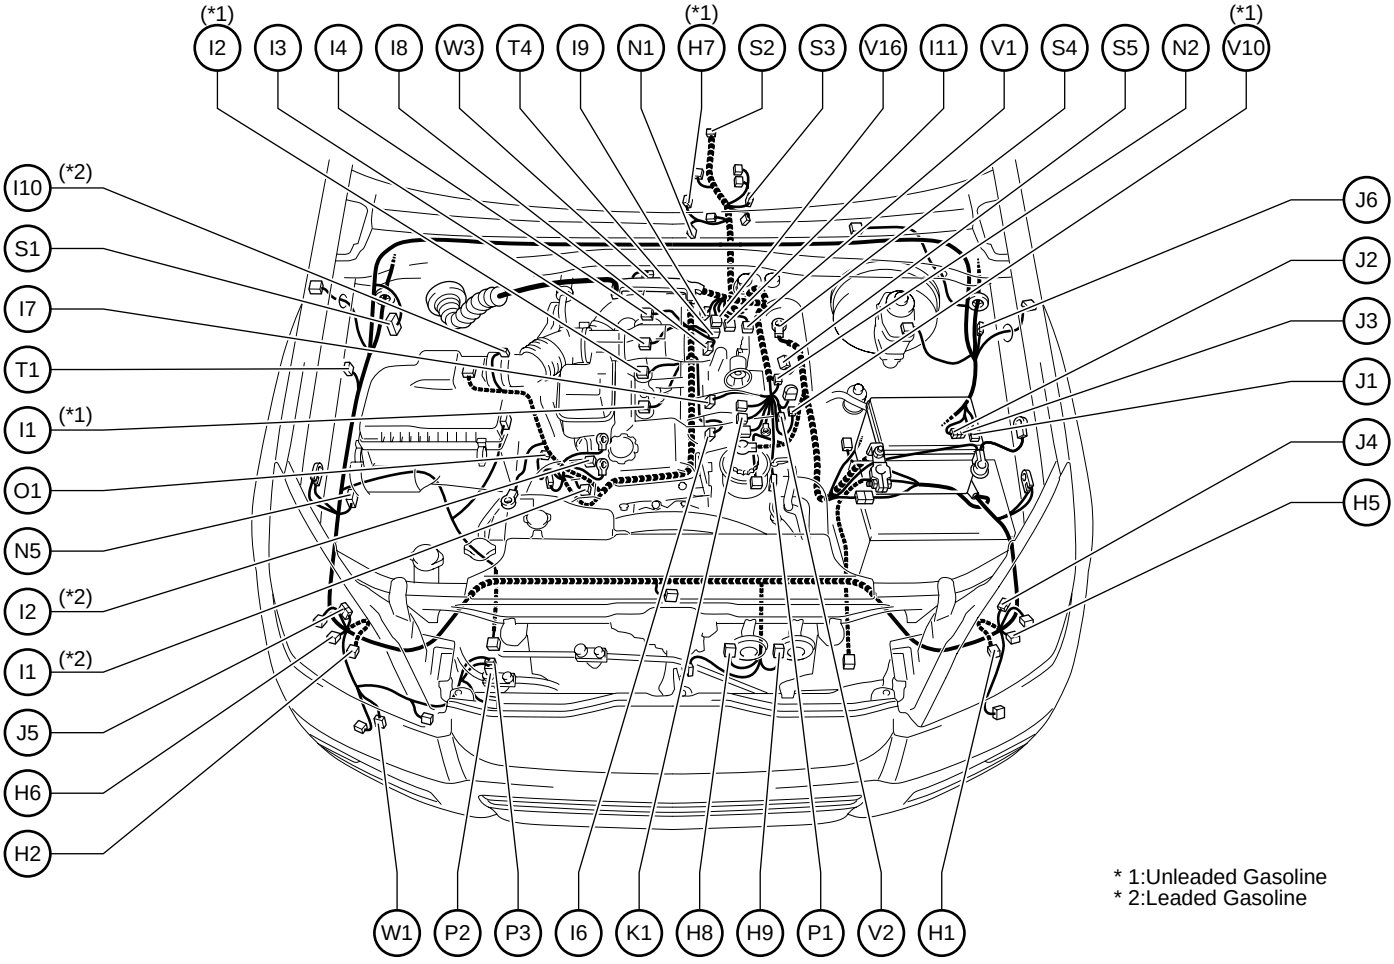

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 5 Headlight LH
H 6 Headlight RH
H 7 Heated Oxygen Sensor
H 8 Horn (High)
H 9 Horn (Low)

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 6 Injector No.1
I 7 Injector No.2
I 8 Injector No.3
I 9 Injector No.4
I 10 Intake Air Temp. Sensor
I 11 ISC Valve

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector

K 1 Knock Sensor

N 1 Neutral Start SW
N 2 Noise Filter
N 5 Noise Filter (Condenser Fan)

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW
P 2 Pressure SW
P 3 Pressure SW

S 1 Skid Control ECU with Actuator
S 2 Speed Sensor (Combination Meter)
S 3 Speed Sensor (ECT)
S 4 Starter
S 5 Starter

T 1 Theft Deterrent Horn
T 4 Throttle Position Sensor

V 1 Vacuum Sensor
V 2 Variable Resistor
V 10 VSV (EVAP)
V 16 VSV (EGR)

W 1 Washer Motor
W 3 Water Temp. Sensor