
Position of Parts in Instrument Panel

[LHD]

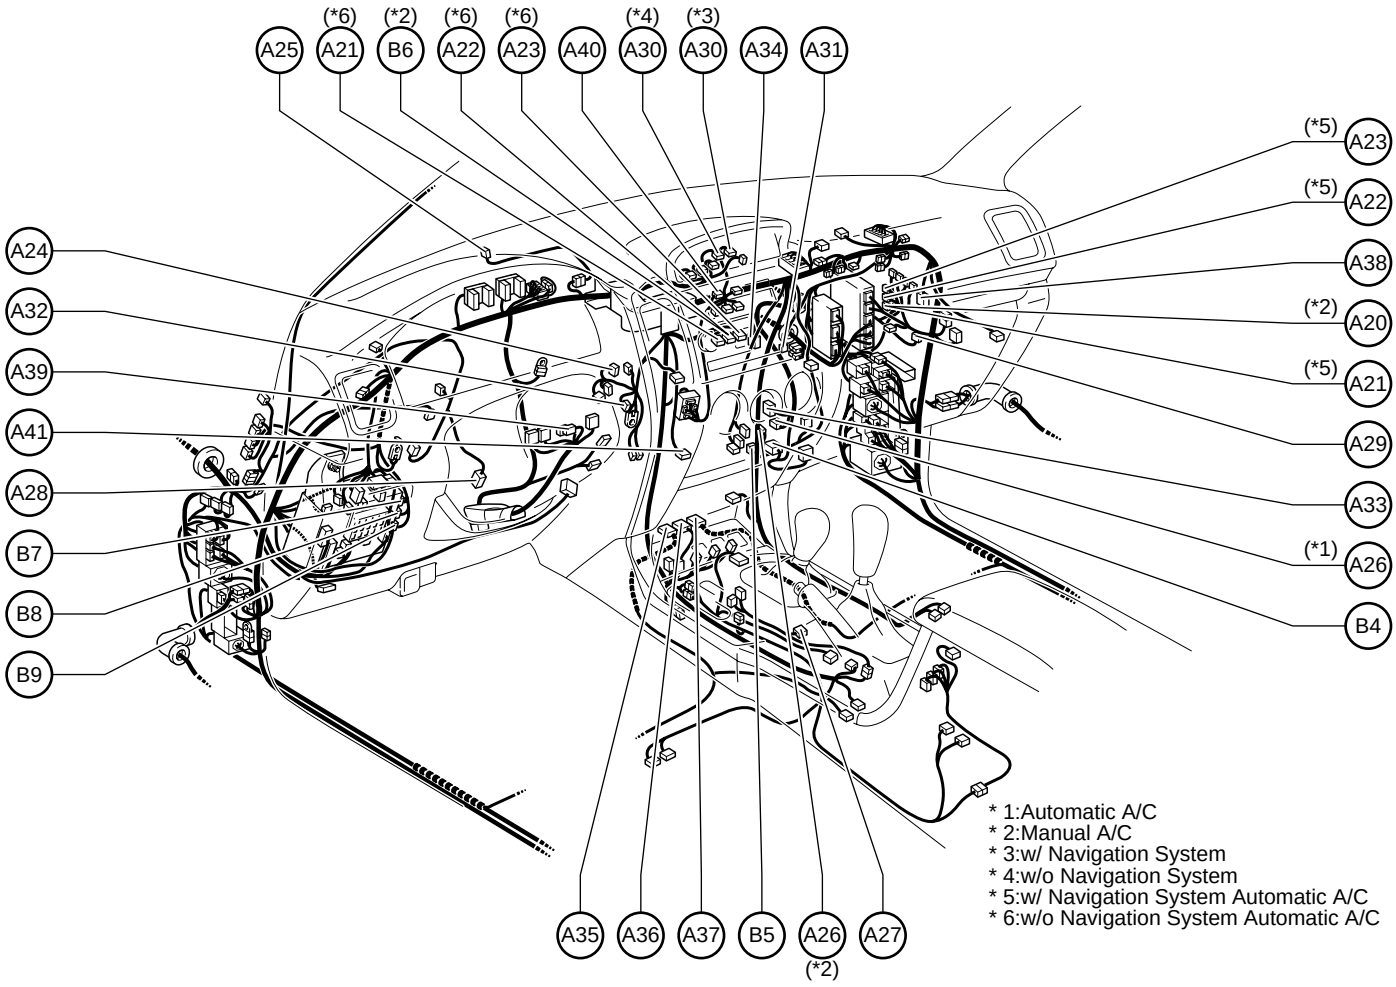

A20 A/C Amplifier
A21 A/C Control Assembly (w/o Navigation System)
A/C ECU (w/ Navigation System)
A22 A/C Control Assembly (w/o Navigation System)
A/C ECU (w/ Navigation System)
A23 A/C Control Assembly (w/o Navigation System)
A/C ECU (w/ Navigation System)
A24 A/C Room Temp. Sensor
A25 A/C Solar Sensor
A26 A/C Thermistor
A27 A/T Shift Indicator
A28 Accel Position Sensor
A29 Acceleration Control Sensor Front
A30 Accessory Meter
A31 Air Inlet Control Servo Motor
A32 Air Mix Control Servo Motor LH
A33 Air Mix Control Servo Motor RH
A34 Air Vent Mode Control Servo Motor
A35 Airbag Sensor Assembly
A36 Airbag Sensor Assembly
A37 Airbag Sensor Assembly
A38 Airbag Squib (Front Passenger Airbag Assembly)
A39 Airbag Squib (Steering Wheel Pad)
A40 Antenna Amplifier
A41 Ashtray Illumination

B 4 Blower Motor Linear Controller
B 5 Blower Resistor
B 6 Blower SW
B 7 Body ECU
B 8 Body ECU
B 9 Body ECU