
Position of Parts in Body

[LHD : 5–Door]

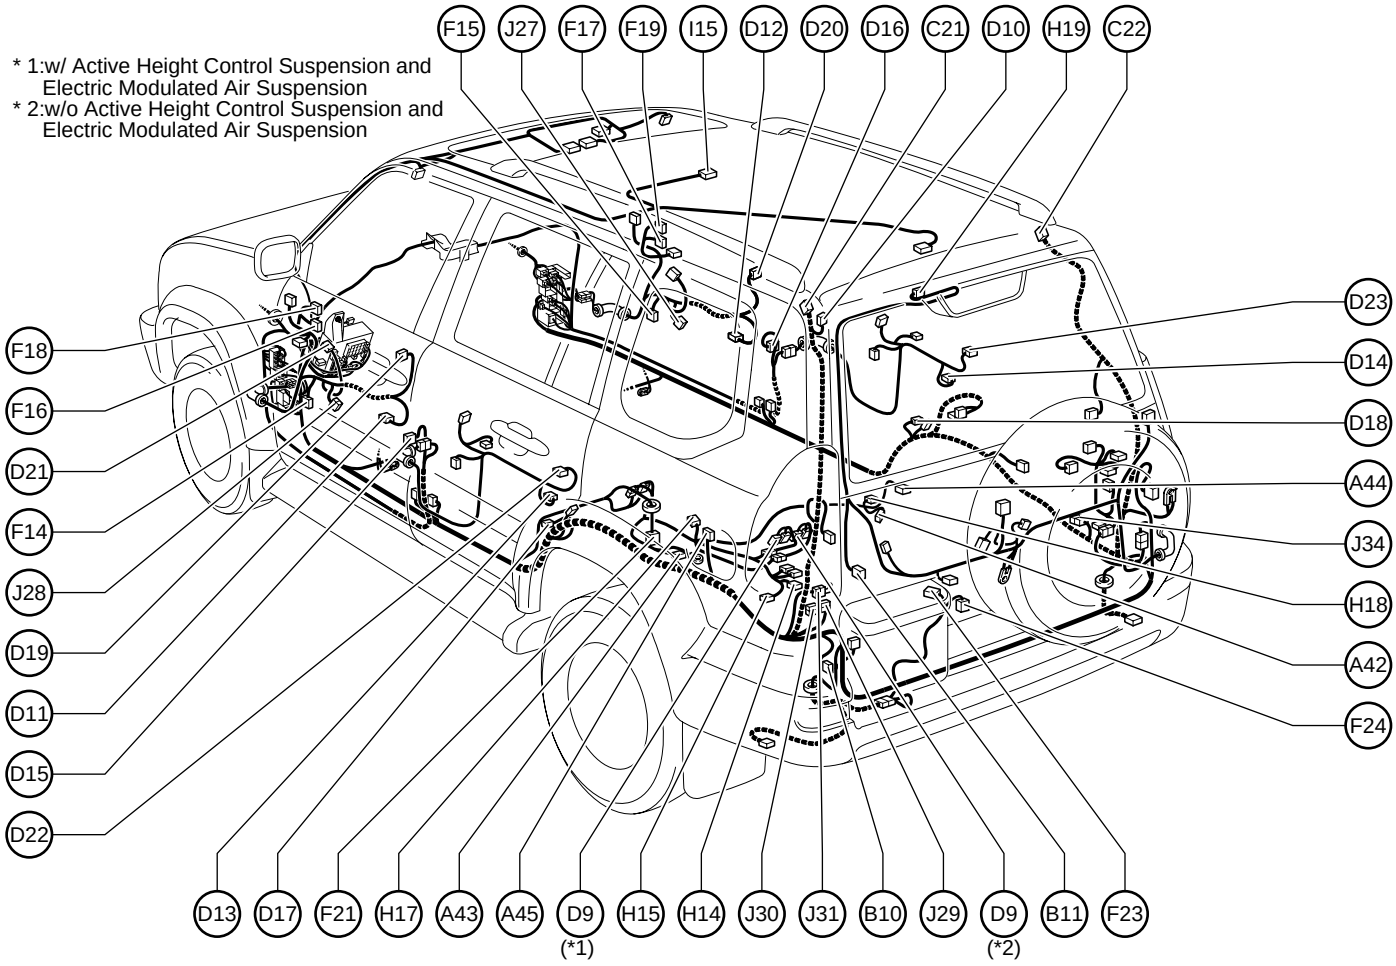

A42 ABS Speed Sensor Rear
A43 Absorber Control Actuator Rear LH
A44 Absorber Control Actuator Rear RH
A45 Acceleration Control Sensor Rear

B10 Back Door Courtesy SW
B11 Back Door Key Lock and Unlock SW
Back Door Lock Motor
Back Door Unlock Detection SW

C21 Curtain Shield Airbag Squib LH
C22 Curtain Shield Airbag Squib RH

D 9 Detection SW (Rear Diff. Lock)
D10 Door Control Receiver
D11 Door Courtesy Light Front LH
D12 Door Courtesy Light Front RH
D13 Door Courtesy Light Rear LH
D14 Door Courtesy Light Rear RH
D15 Door Courtesy SW Front LH
D16 Door Courtesy SW Front RH
D17 Door Courtesy SW Rear LH
D18 Door Courtesy SW Rear RH
D19 Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D20 Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
D21 Door Lock Control SW
Power Window Master SW
D22 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
D23 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH

F 14 Front Door Speaker LH
F 15 Front Door Speaker RH
F 16 Front Door Squawker LH
F 17 Front Door Squawker RH
F 18 Front Door Tweeter Speaker LH
F 19 Front Door Tweeter Speaker RH
F 21 Fuel Pump and Fuel Sender (Gasoline)
Fuel Sender (Diesel)
F 23 Fuel Sender (Sub)
F 24 Fuel Sender (Sub)

H14 Height Control Compressor
H15 Height Control Exhaust Valve
H17 Height Control Sensor Rear LH
H18 Height Control Sensor Rear RH
H19 High Mounted Stop Light

I 15 Interior Light

J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 31 Junction Connector
J 34 Junction Connector