
## Position of Parts in Engine Compartment

## [RHD : 1KD–FTV]

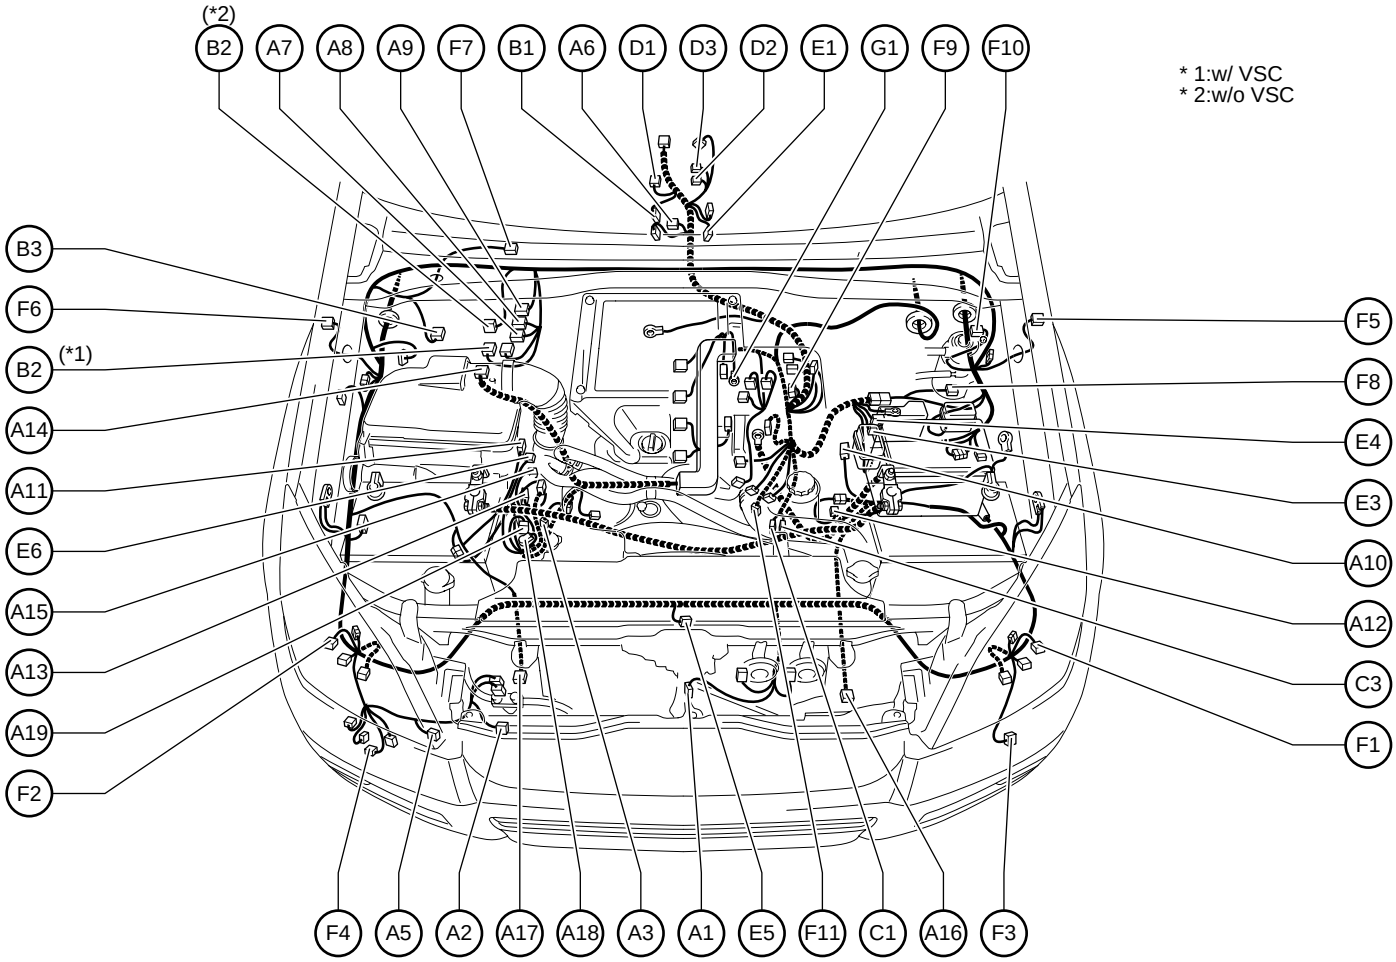


A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor
A/C Magnetic Clutch
A 5 A/C Magnetic Valve
A 6 A/T Oil Temp. Sensor
A 7 ABS & BA & TRC & VSC Actuator
A 8 ABS & BA & TRC & VSC Actuator
A 9 ABS & BA & TRC & VSC Actuator
A10 ABS Speed Sensor Front LH
A11 ABS Speed Sensor Front RH
A12 Absorber Control Actuator Front LH
A13 Absorber Control Actuator Front RH
A14 Air Flow Meter
A15 Air Vent Control Servo Motor
A16 Airbag Sensor Front LH
A17 Airbag Sensor Front RH
A18 Alternator
A19 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
C 3 Crankshaft Position Sensor

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)
D 3 Detection SW (Transfer Neutral Position)

E 1 ECT Solenoid
E 3 Electronic Driver Unit
E 4 Electronic Driver Unit
E 5 Engine Hood Courtesy SW
E 6 Engine Oil Level Sensor

F 1 Front Clearance Light LH
Front Turn Signal Light LH
F 2 Front Clearance Light RH
Front Turn Signal Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Wiper Motor
F 8 Fuel Heater
F 9 Fuel Pressure Sensor
F10 Fuel Sedimentary SW
F11 Fuel Temp. Sensor

G 1 Glow Plug