
Position of Parts in Engine Compartment

[RHD : 1KD–FTV]

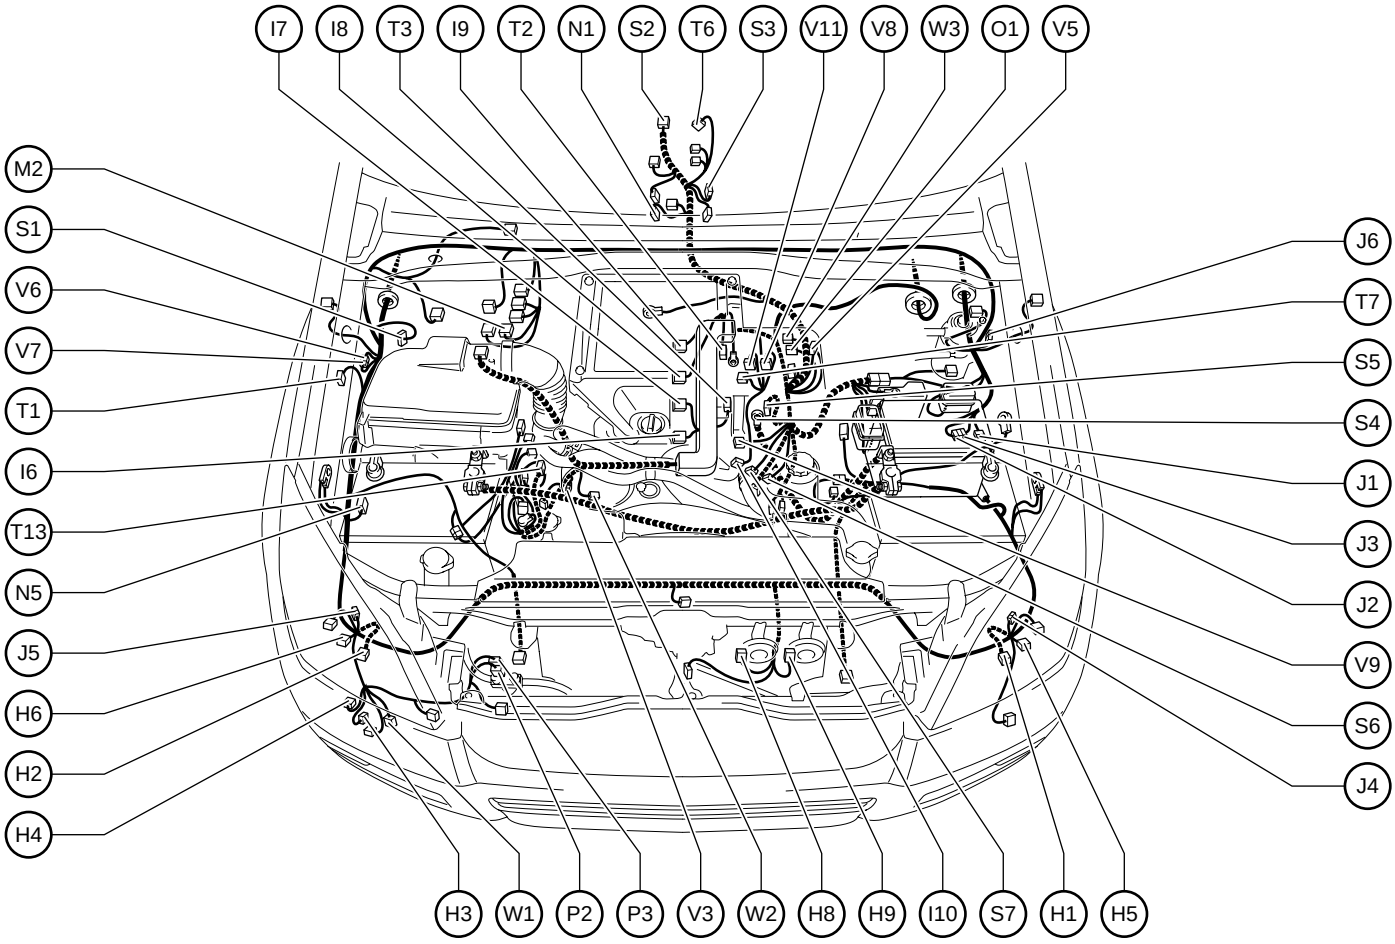

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Motor
H 4 Headlight Cleaner Relay
H 5 Headlight LH
H 6 Headlight RH
H 8 Horn (High)
H 9 Horn (Low)

I 6 Injector No.1
I 7 Injector No.2
I 8 Injector No.3
I 9 Injector No.4
I 10 Intake Air Temp. Sensor

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector

M 2 Master Cylinder Pressure Sensor

N 1 Neutral Start SW
N 5 Noise Filter (Condenser Fan)

O 1 Oil Pressure SW

P 2 Pressure SW
P 3 Pressure SW

S 1 Skid Control ECU with Actuator
S 2 Speed Sensor (Combination Meter)
S 3 Speed Sensor (ECT)
S 4 Starter
S 5 Starter
S 6 Suction Control Valve No.1
S 7 Suction Control Valve No.2

T 1 Theft Deterrent Horn
T 2 Throttle Control Motor
T 3 Throttle Open SW
T 6 Transfer Actuator
T 7 Turbo Pressure Sensor
T 13 Turbo Charger Conpensater Resistor

V 3 Viscous Heater Magnetic Clutch
V 5 VRV (EGR)
V 6 VSC Check Connector
V 7 VSC Check Connector
V 8 VSV (EGR Cut)
V 9 VSV (Engine Mount)
V 11 VSV (Pressure Charge Valve)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor