
Position of Parts in Engine Compartment

[RHD : 1KZ–TE]

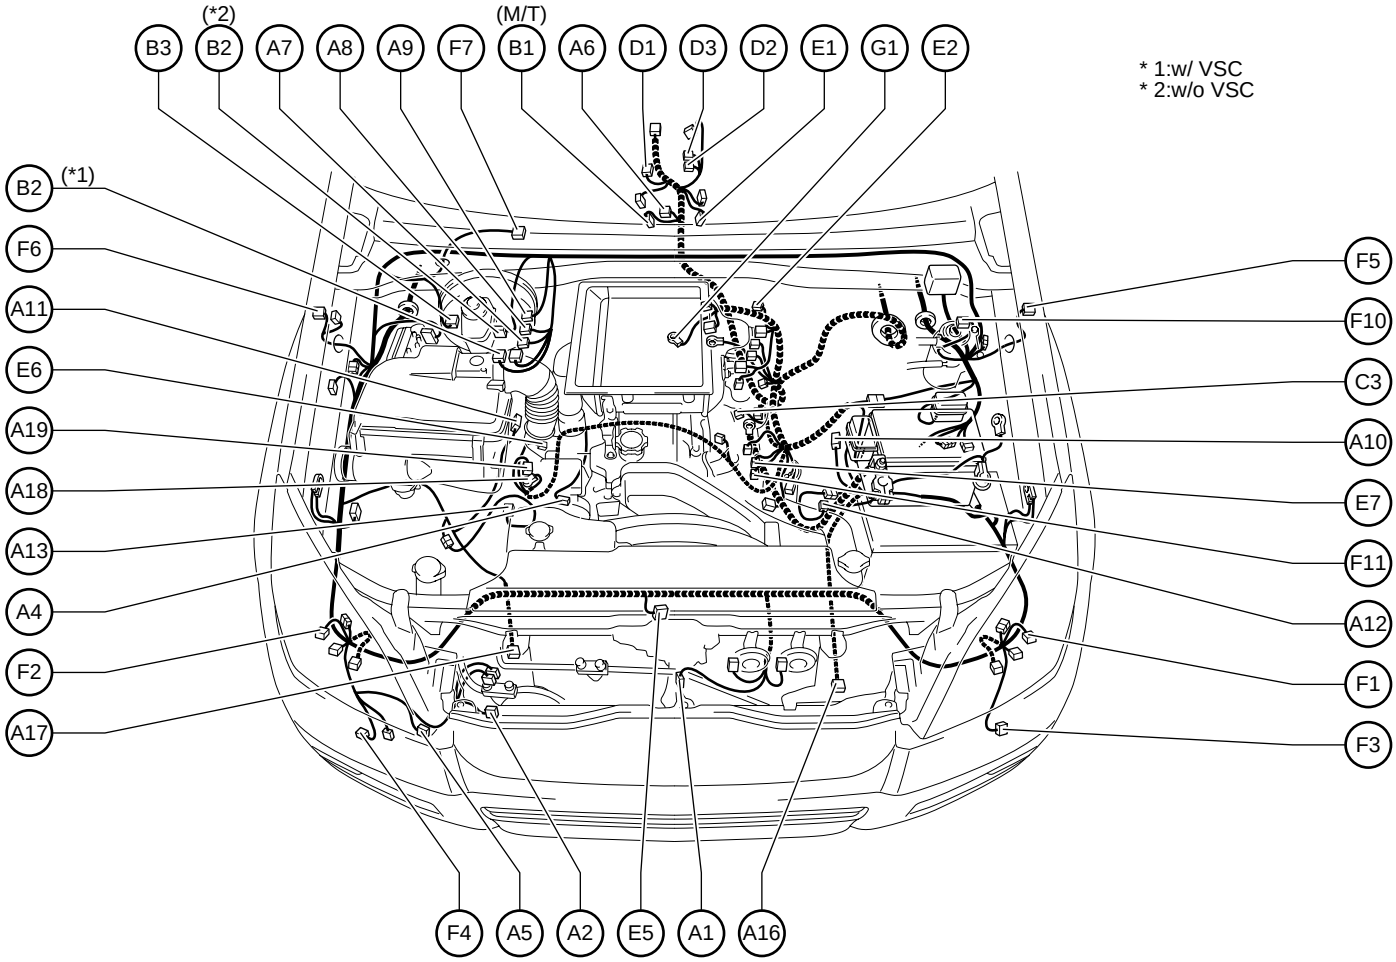

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 4 A/C Magnetic Clutch
A 5 A/C Magnetic Valve
A 6 A/T Oil Temp. Sensor
A 7 ABS & BA & TRC & VSC Actuator
A 8 ABS & BA & TRC & VSC Actuator
A 9 ABS & BA & TRC & VSC Actuator
A10 ABS Speed Sensor Front LH
A11 ABS Speed Sensor Front RH
A12 Absorber Control Actuator Front LH
A13 Absorber Control Actuator Front RH
A16 Airbag Sensor Front LH
A17 Airbag Sensor Front RH
A18 Alternator
A19 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 3 Crankshaft Position Sensor

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)
D 3 Detection SW (Transfer Neutral Position)

E 1 ECT Solenoid
E 2 EGR Valve Position Sensor
E 5 Engine Hood Courtesy SW
E 6 Engine Oil Level Sensor
E 7 Engine Speed Sensor

F 1 Front Clearance Light LH
Front Turn Signal Light LH
F 2 Front Clearance Light RH
Front Turn Signal Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Wiper Motor
F10 Fuel Sedimentary SW
F11 Fuel Temp. Sensor

G 1 Glow Plug