
Position of Parts in Body

[RHD : 5–Door]

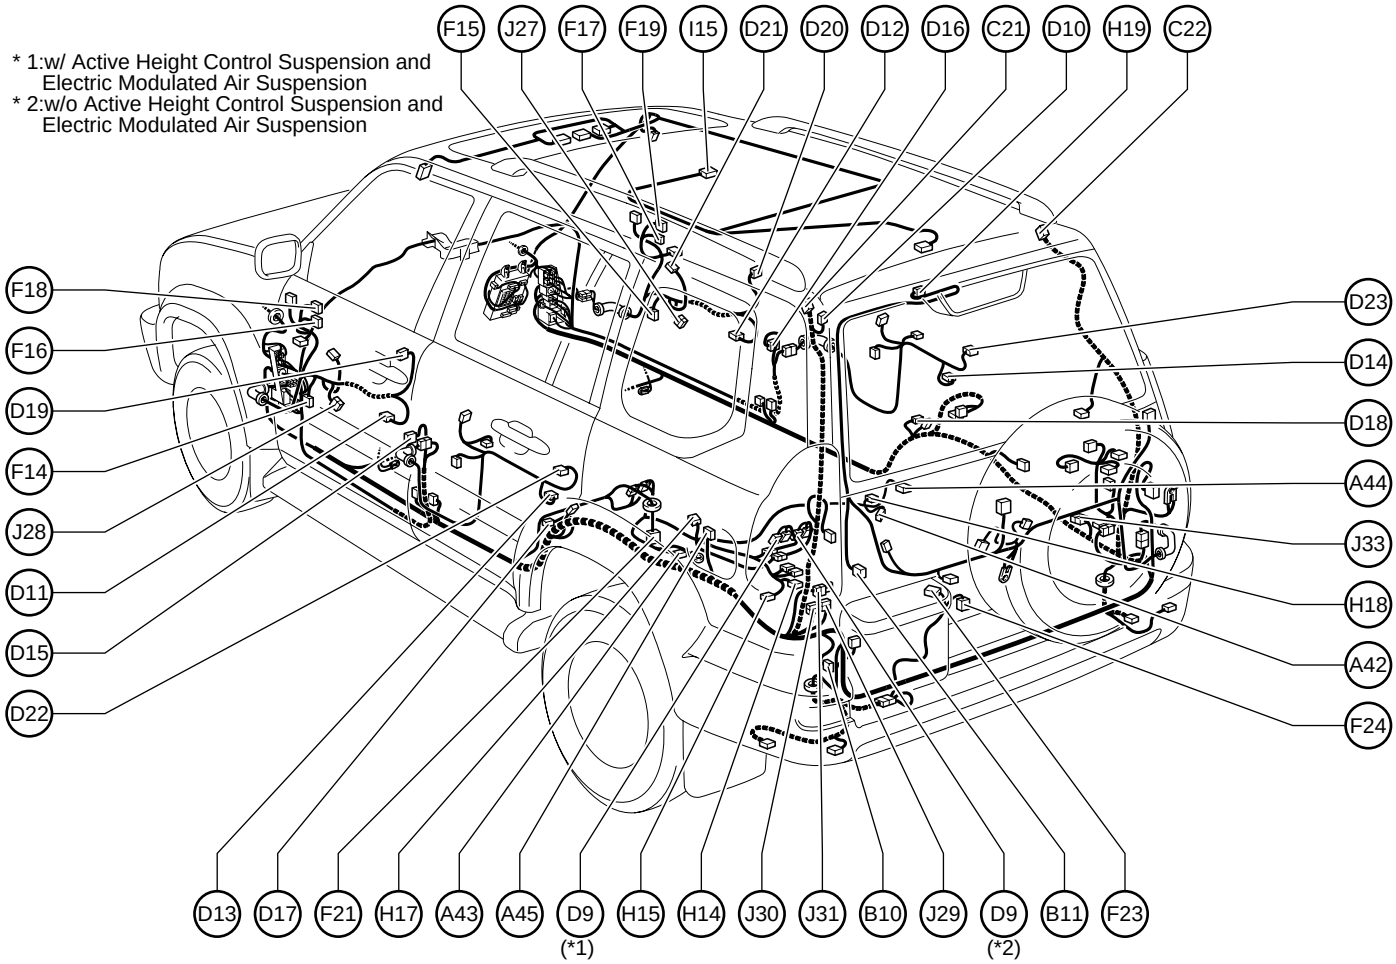

A 42 ABS Speed Sensor Rear
A 43 Absorber Control Actuator Rear LH
A 44 Absorber Control Actuator Rear RH
A 45 Acceleration Control Sensor Rear

B 10 Back Door Courtesy SW
B 11 Back Door Key Lock and Unlock SW
Back Door Lock Motor
Back Door Unlock Detection SW

C 21 Curtain Shield Airbag Squib LH
C 22 Curtain Shield Airbag Squib RH

D 9 Detection SW (Rear Diff. Lock)
D 10 Door Control Receiver
D 11 Door Courtesy Light Front LH
D 12 Door Courtesy Light Front RH
D 13 Door Courtesy Light Rear LH
D 14 Door Courtesy Light Rear RH
D 15 Door Courtesy SW Front LH
D 16 Door Courtesy SW Front RH
D 17 Door Courtesy SW Rear LH
D 18 Door Courtesy SW Rear RH
D 19 Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
Double Door Lock Motor Front LH
Position SW Front LH
D 20 Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
Double Door Lock Motor Front RH
Position SW Front RH
D 21 Door Lock Control SW
Power Window Master SW
D 22 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Door Lock Motor Rear LH
Position SW Rear LH
D 23 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
Double Door Lock Motor Rear RH
Position SW Rear RH

F 14 Front Door Speaker LH
F 15 Front Door Speaker RH
F 16 Front Door Squawker LH
F 17 Front Door Squawker RH
F 18 Front Door Tweeter Speaker LH
F 19 Front Door Tweeter Speaker RH
F 21 Fuel Pump and Fuel Sender (Gasoline)
Fuel Sender (Diesel)
F 23 Fuel Sender (Sub)
F 24 Fuel Sender (Sub)

H 14 Height Control Compressor
H 15 Height Control Exhaust Valve
H 17 Height Control Sensor Rear LH
H 18 Height Control Sensor Rear RH
H 19 High Mounted Stop Light

I 15 Interior Light

J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 31 Junction Connector
J 33 Junction Connector