
Position of Parts in Seat

[RHD : Except 8Way Power Seat]

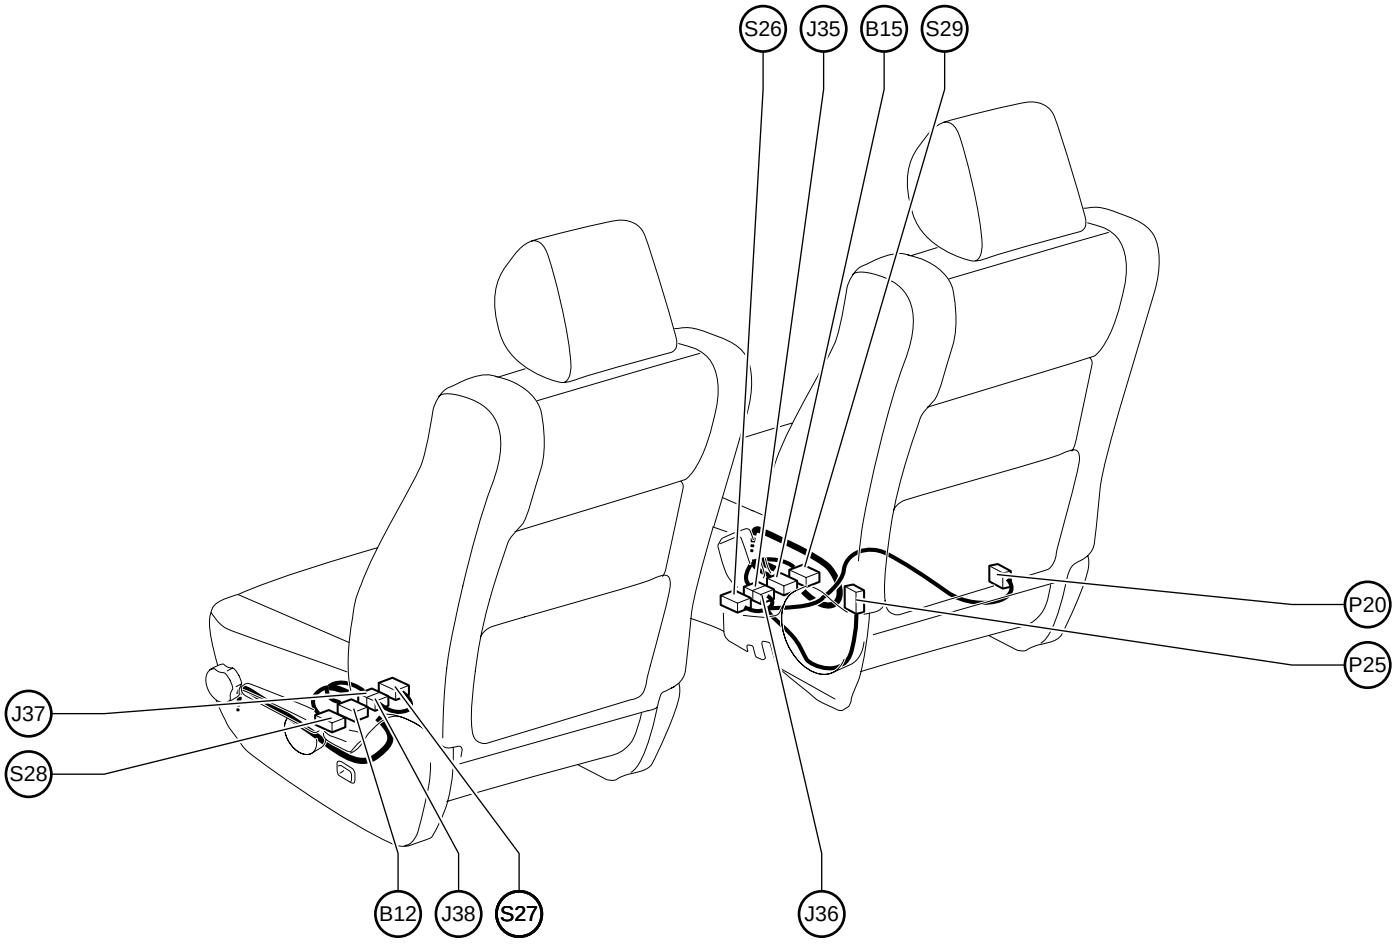

B12 Buckle SW LH
Occupant Detection Sensor
B15 Buckle SW RH
Seat Position Sensor

J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector

P20 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P25 Power Seat Motor
(Driver's Seat Lumbar Support Control)

S26 Seat Heater (Driver's Seat)
S27 Seat Heater (Front Passenger's Seat)
S28 Side Airbag Squib LH
S29 Side Airbag Squib RH