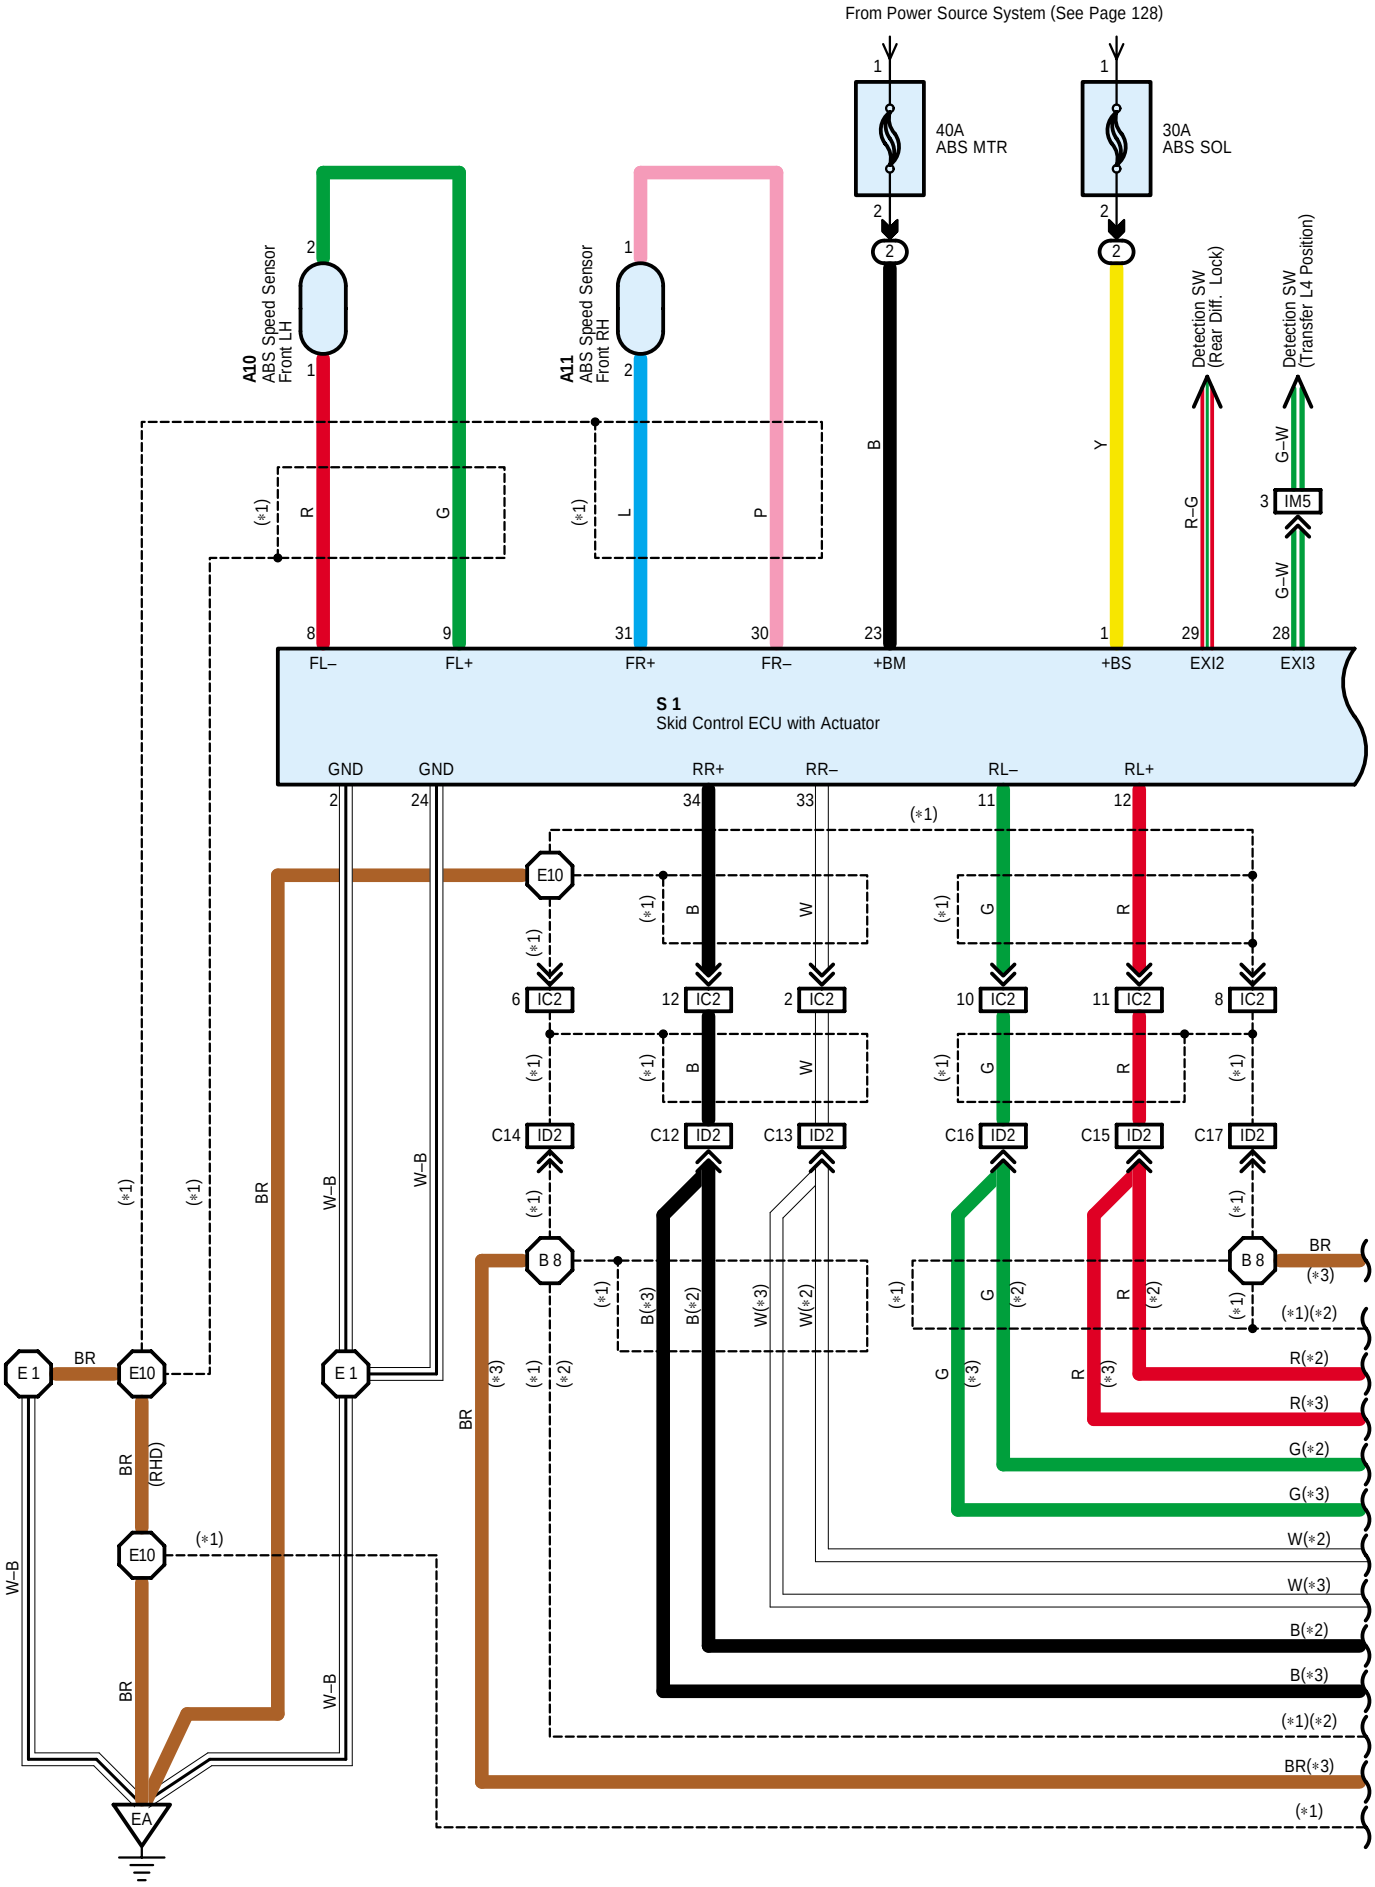
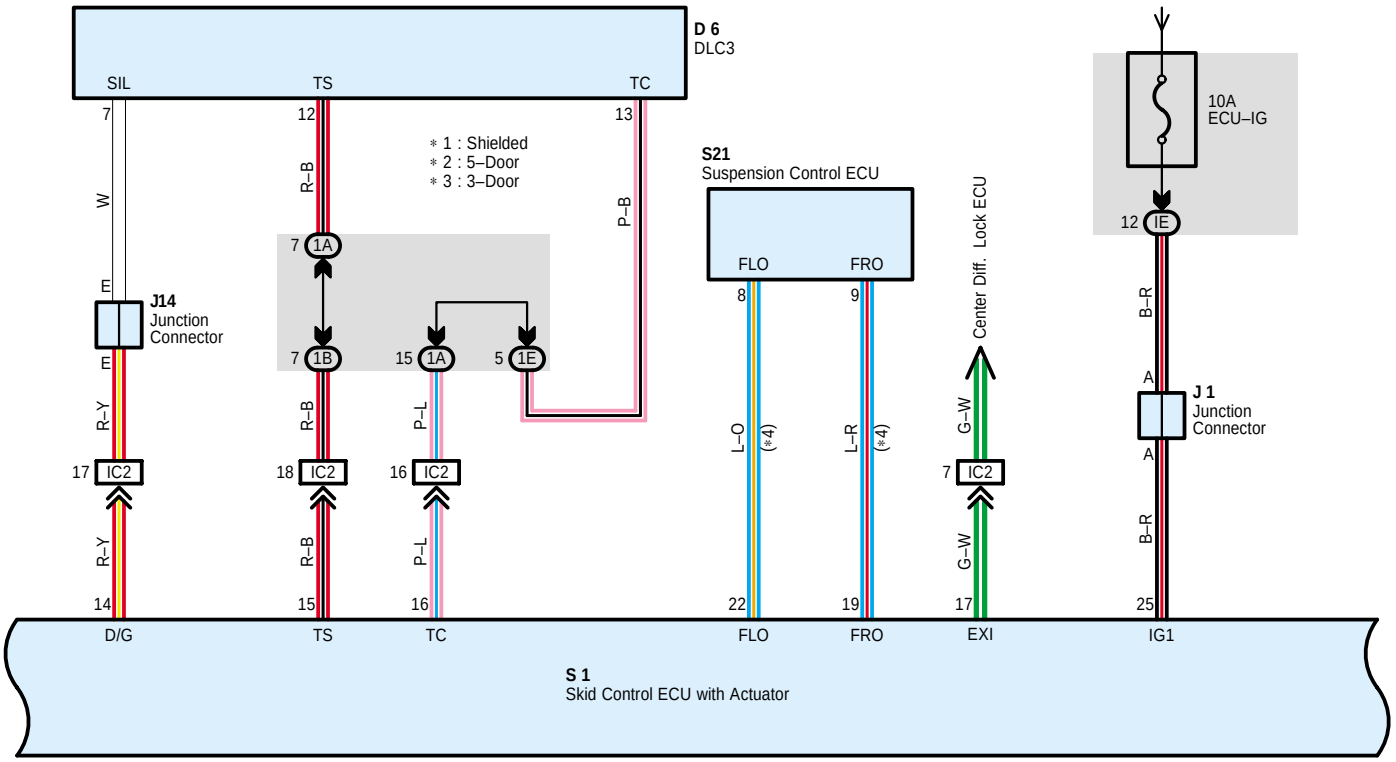
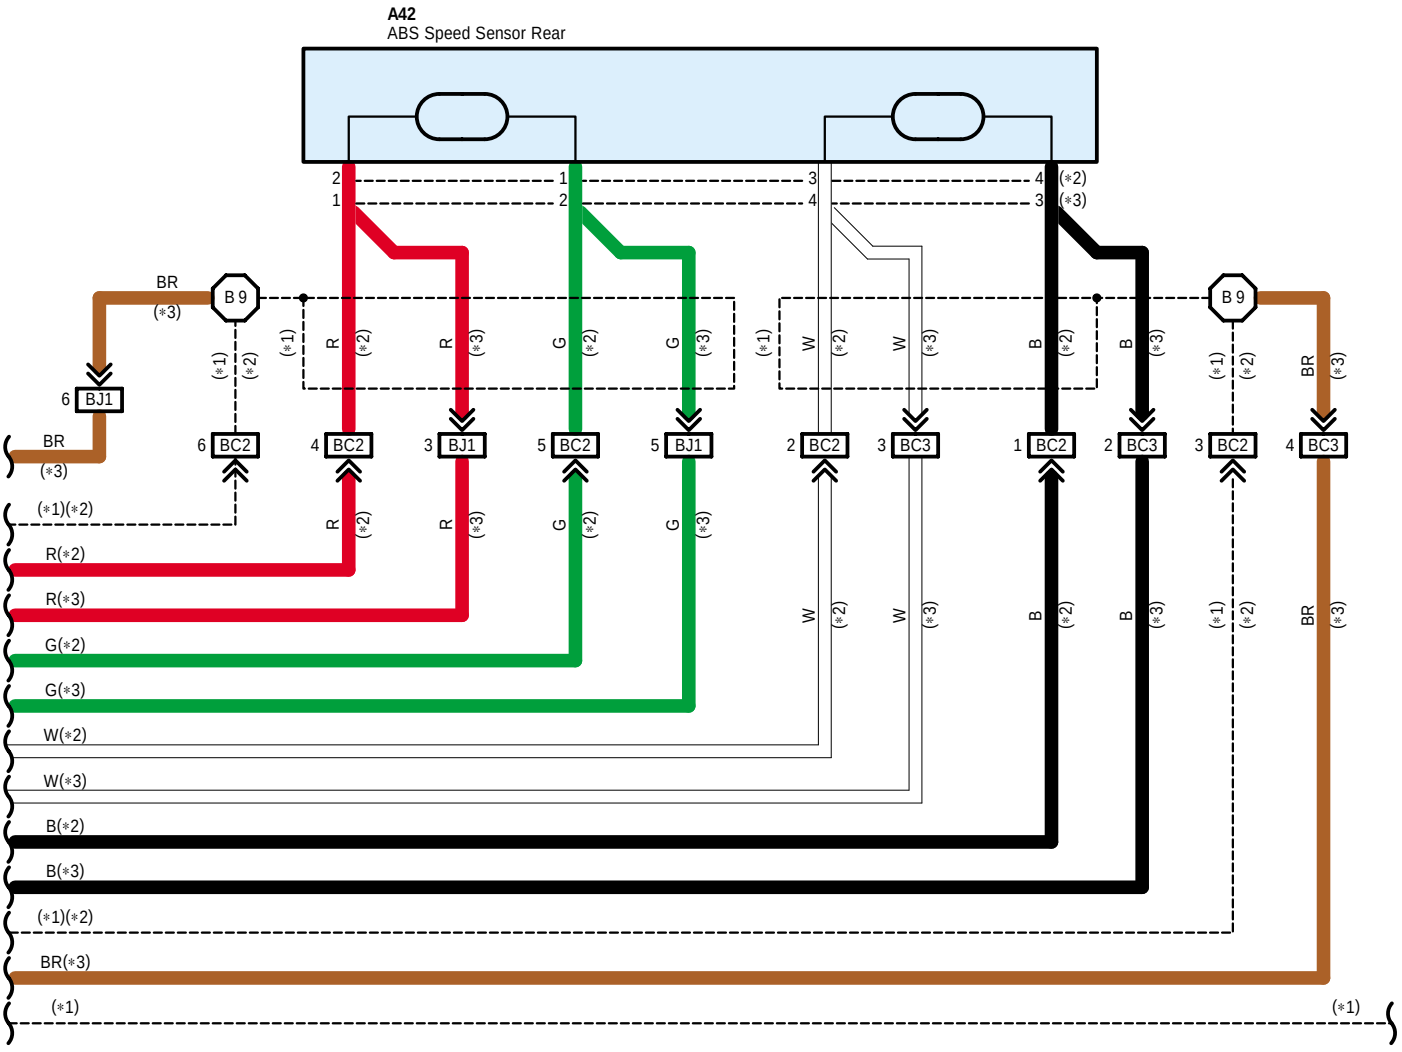
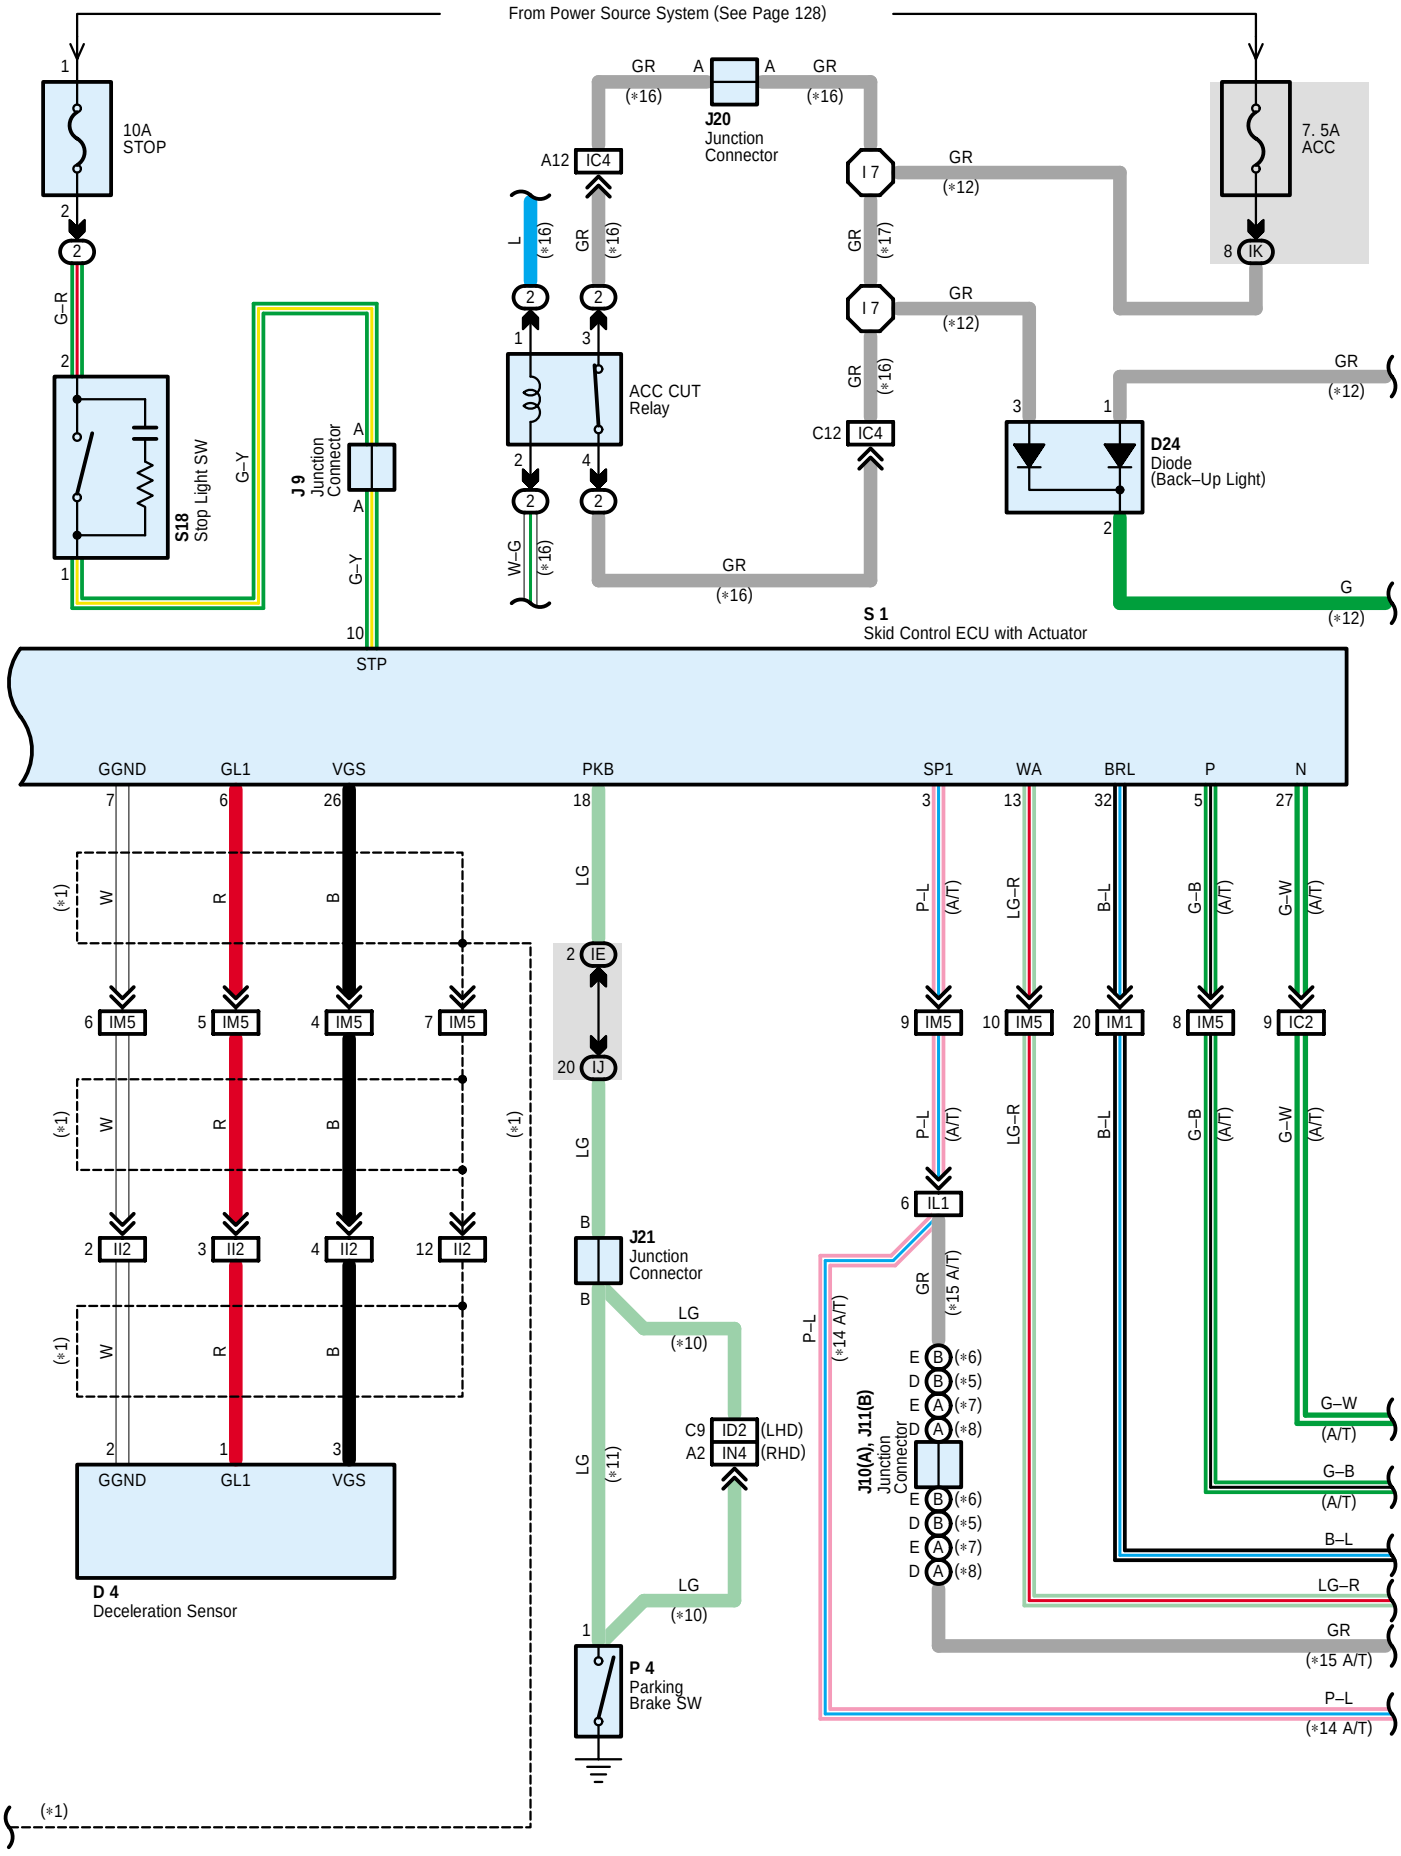
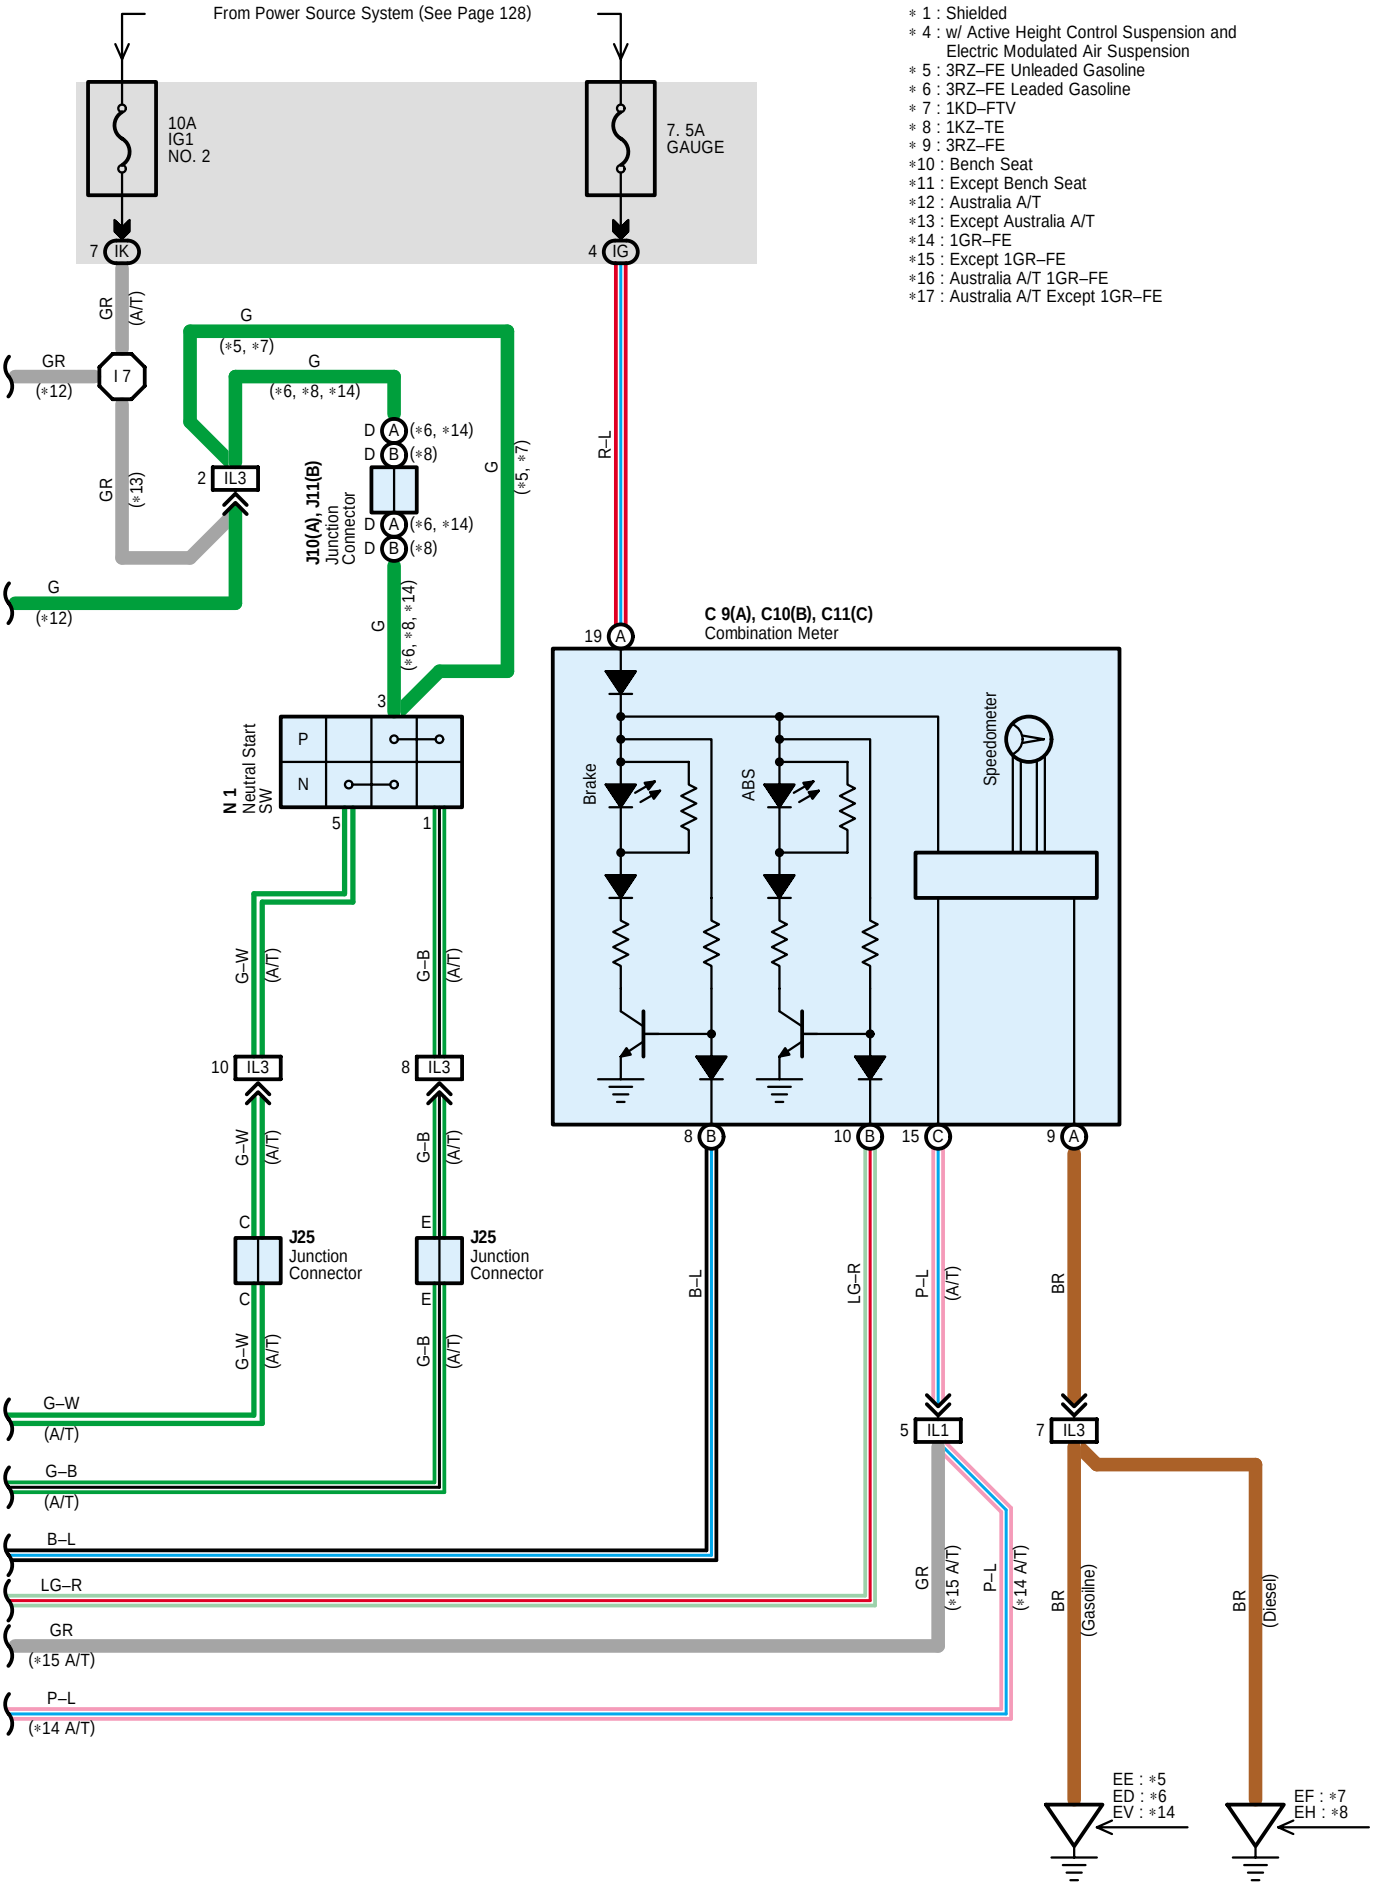

From Power Source System (See Page 128)
40A
ABS MTR
30A
ABS SOL
A10
ABS Speed Sensor
Front LH
A11
ABS Speed Sensor
Front RH
Detection SW
(Rear Diff. Lock)
Detection SW
(Transfer L4 Position)
IM5
FL–
FL+
FR+
FR–
+BM
+BS
EXI2
EXI3
S 1
Skid Control ECU with Actuator
GND
GND
RR+
RR–
RL–
RL+
E10
E 1
EA
IC2
ID2
B 8
C14
C12
C13
C16
C15
C17
(*1)
(*2)
(*3)
(RHD)
BR
W–B
R(*2)
R(*3)
G(*2)
G(*3)
W(*2)
W(*3)
B(*2)
B(*3)
(*1)(*2)
BR(*3)
(*1)

From Power Source System (See Page 128)






From Power Source System (See Page 128)
10A
STOP
7. 5A
ACC
J20
Junction
Connector
ACC CUT
Relay
S18
Stop Light SW
J9
Junction
Connector
D24
Diode
(Back–Up Light)
S1
Skid Control ECU with Actuator
STP
GGND
GL1
VGS
PKB
SP1
WA
BRL
P
N
D 4
Deceleration Sensor
J21
Junction
Connector
P 4
Parking
Brake SW
J10(A), J11(B)
Junction
Connector
(*1)



* 1 : Shielded
* 4 : w/ Active Height Control Suspension and Electric Modulated Air Suspension
* 5 : 3RZ–FE Unleaded Gasoline
* 6 : 3RZ–FE Leaded Gasoline
* 7 : 1KD–FTV
* 8 : 1KZ–TE
* 9 : 3RZ–FE
*10 : Bench Seat
*11 : Except Bench Seat
*12 : Australia A/T
*13 : Except Australia A/T
*14 : 1GR–FE
*15 : Except 1GR–FE
*16 : Australia A/T 1GR–FE
*17 : Australia A/T Except 1GR–FE