

Air Conditioner (Manual A/C Except 1GR-FE)

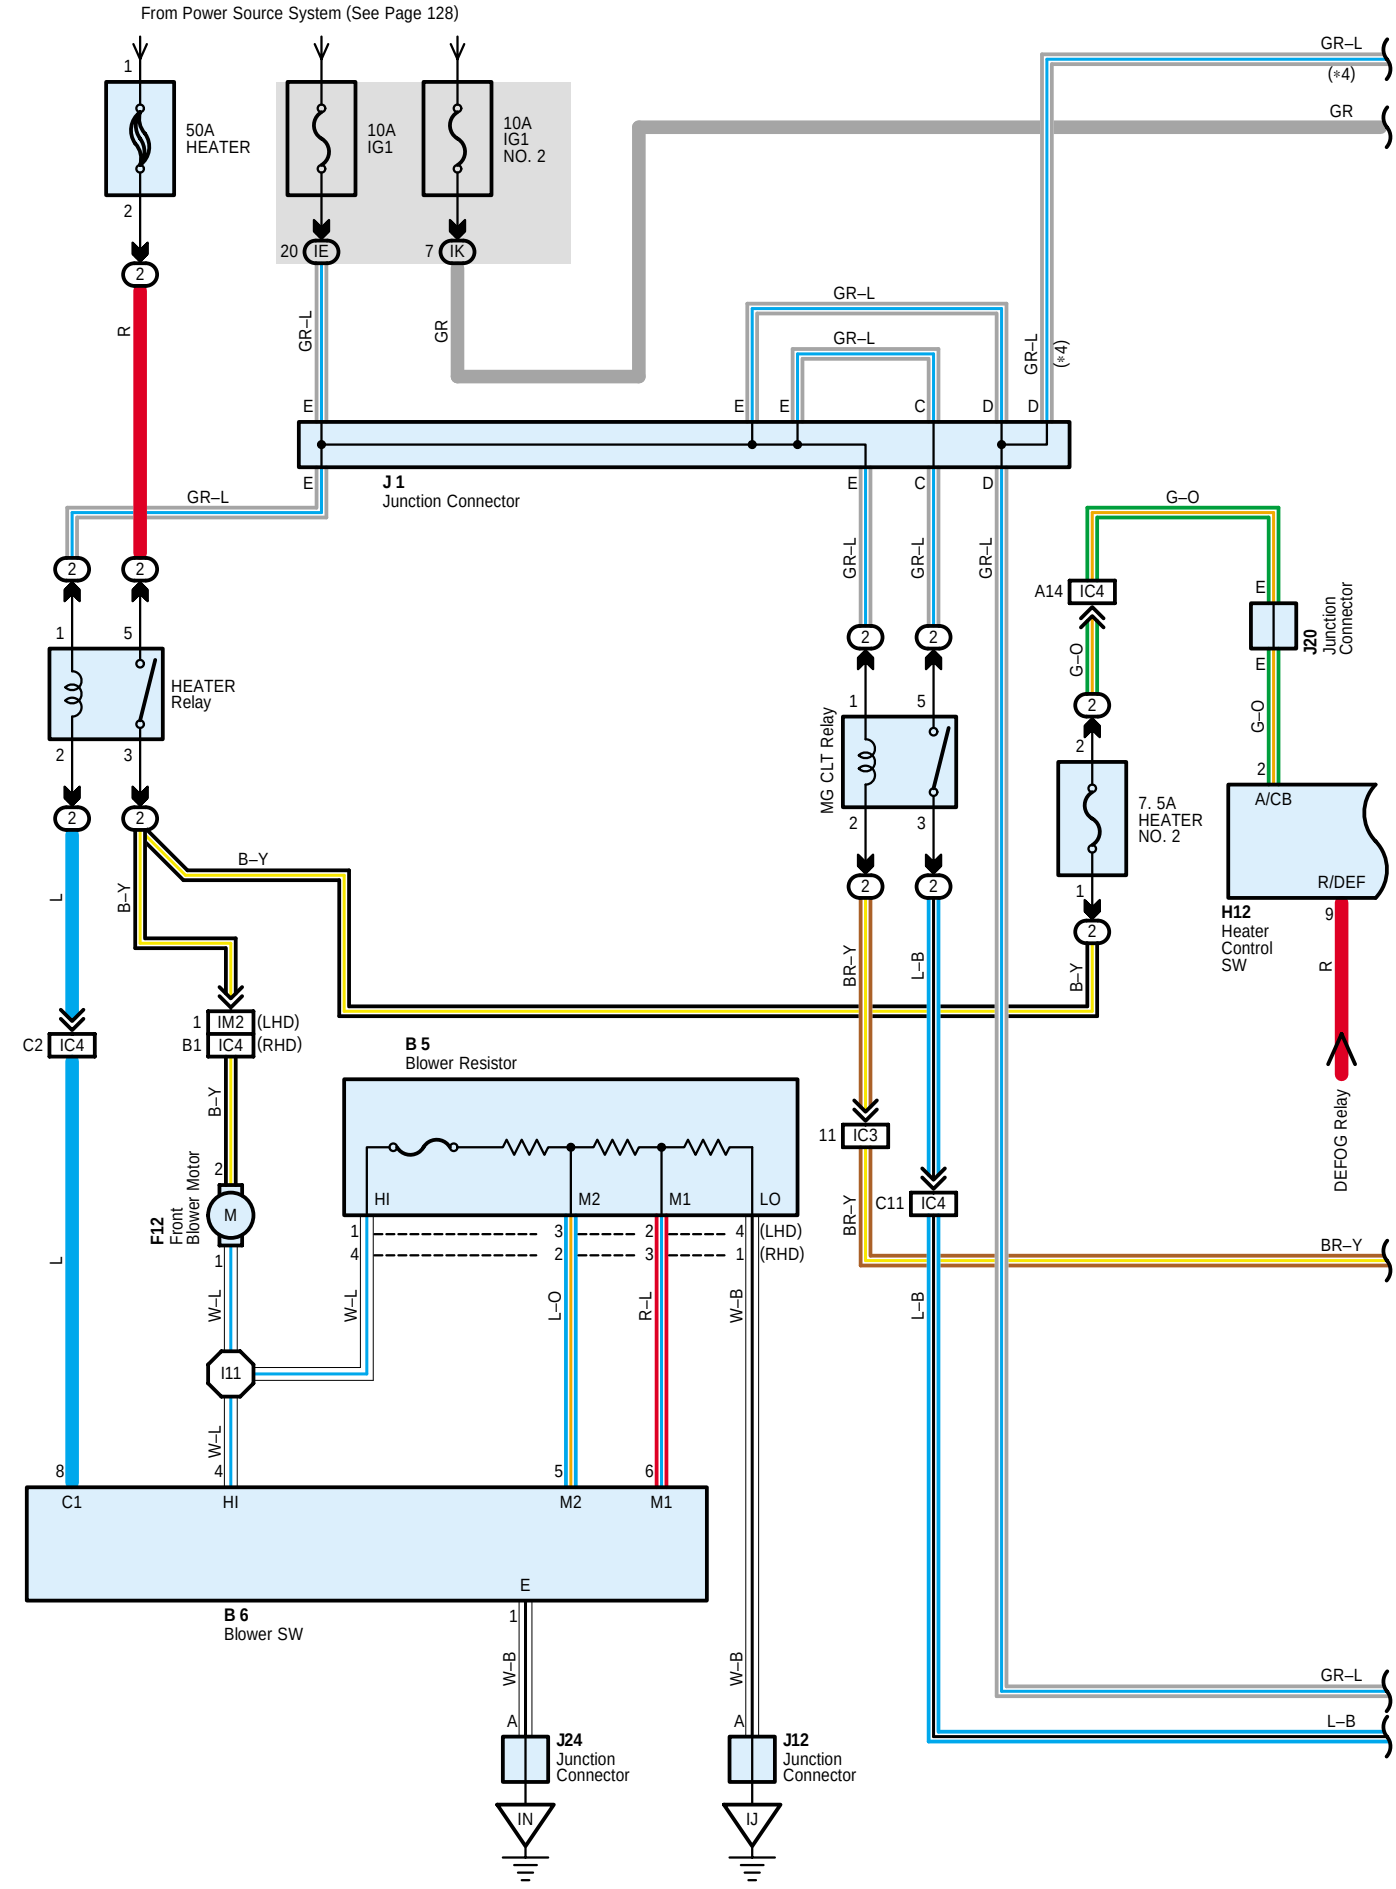


∗1 : 3RZ–FE
∗2 : 1KD–FTV
∗3 : Except 1KD–FTV
∗4 : w/ Cooler Box
∗5 : 3RZ–FE Unleaded Gasoline
∗6 : 3RZ–FE Leaded Gasoline
A 5 A/C Magnetic Valve
E 9(A), E10(B) Engine ECU (M/T) Engine and ECT ECU (A/T)
CLBX
TAC
AC1
ACT
J25 Junction Connector
A31 Air Inlet Control Servo Motor
IG+
REC
FRS
H12 Heater Control SW
GND
LA/C
A/C–
IG
FRMGV
IGN
A20(A), (B) A/C Amplifier
A/C
LED
MGC
PRS
LOCK
J 9 Junction Connector
P 2 Pressure SW
P 3 Pressure SW
A 4 A/C Magnetic Clutch
A 3 A/C Lock Sensor A/C Magnetic Clutch
(Except ∗1)

∗ 2 : 1KD–FTV
∗ 3 : Except 1KD–FTV

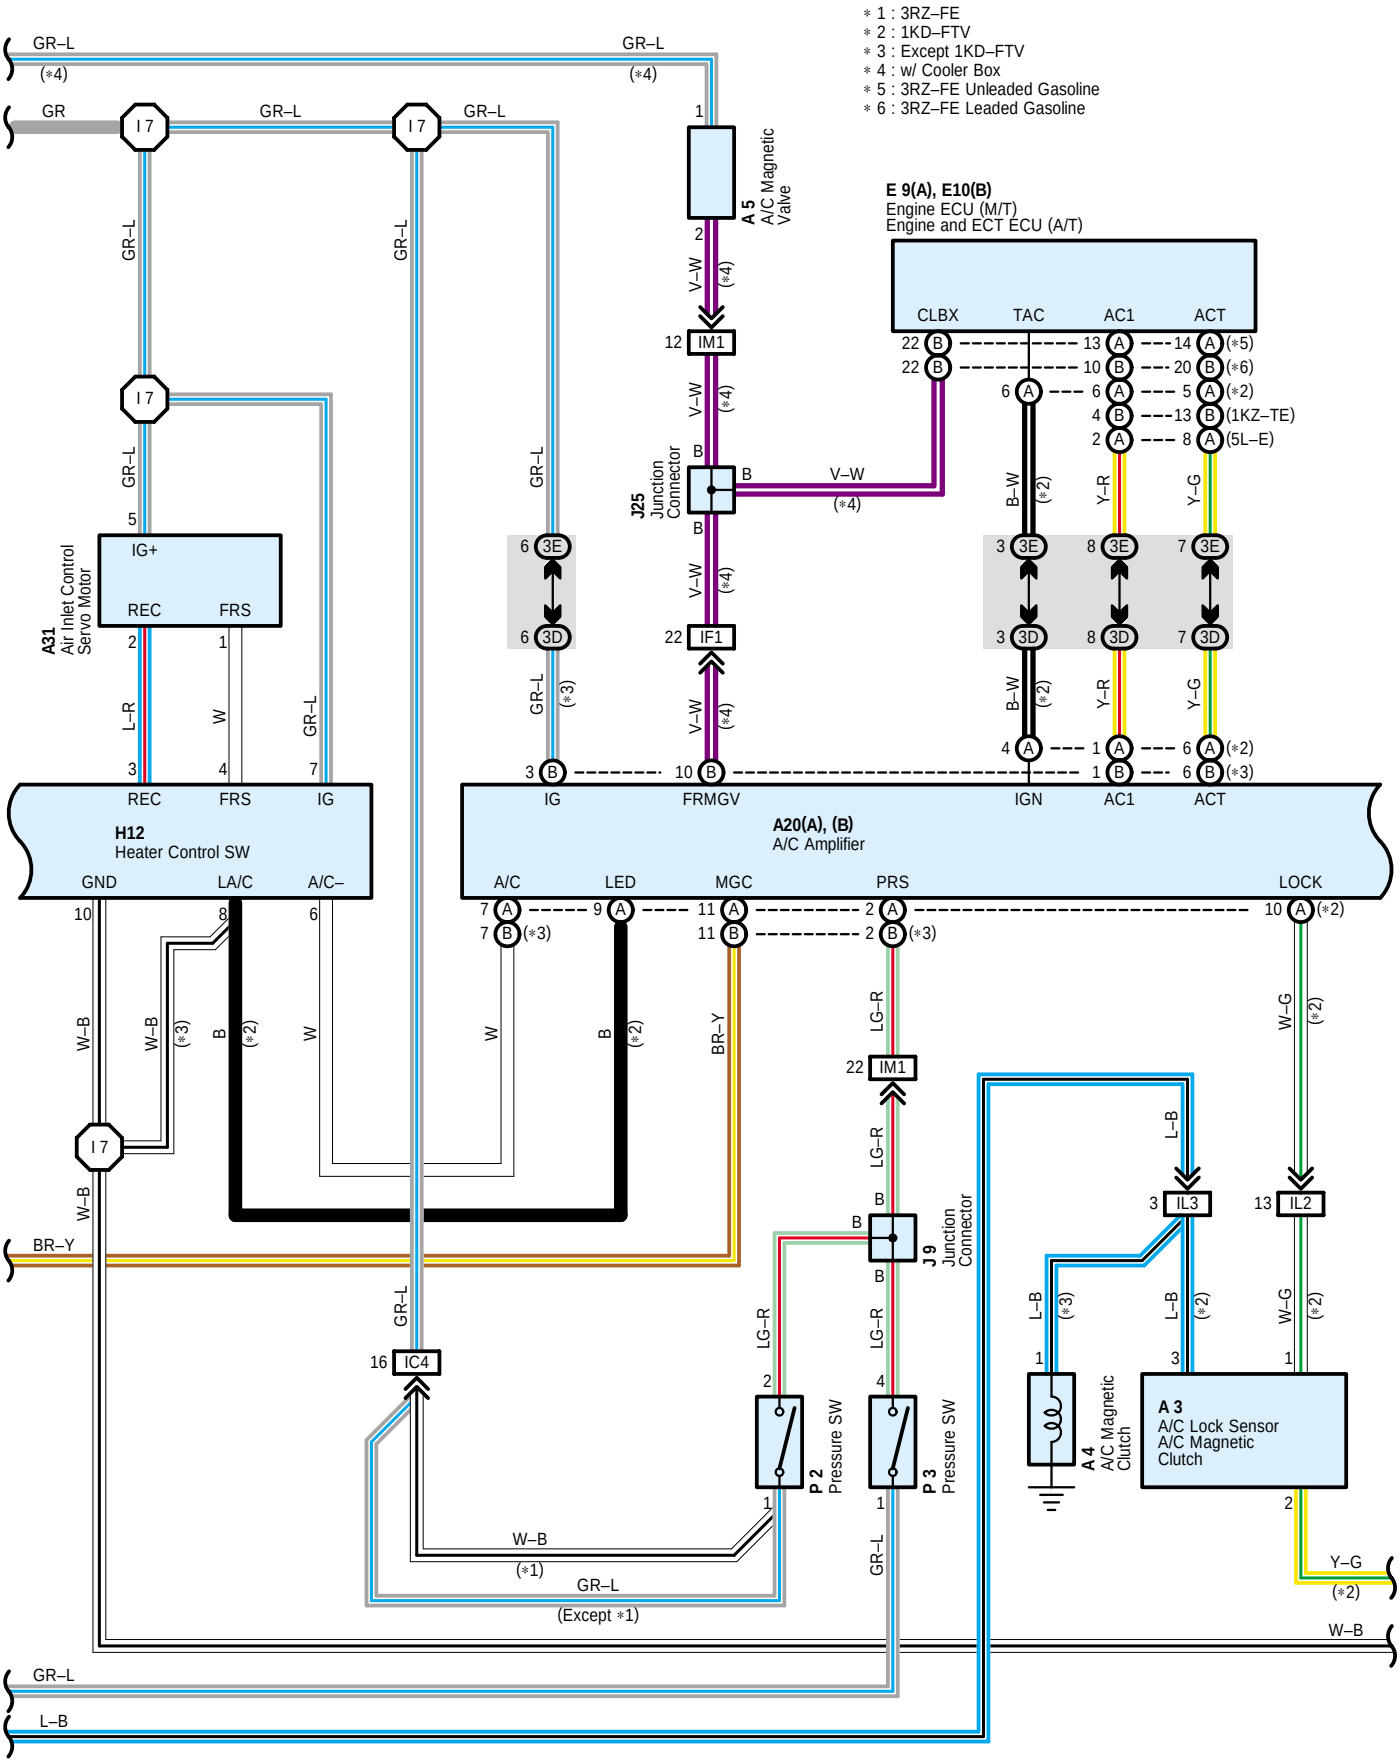