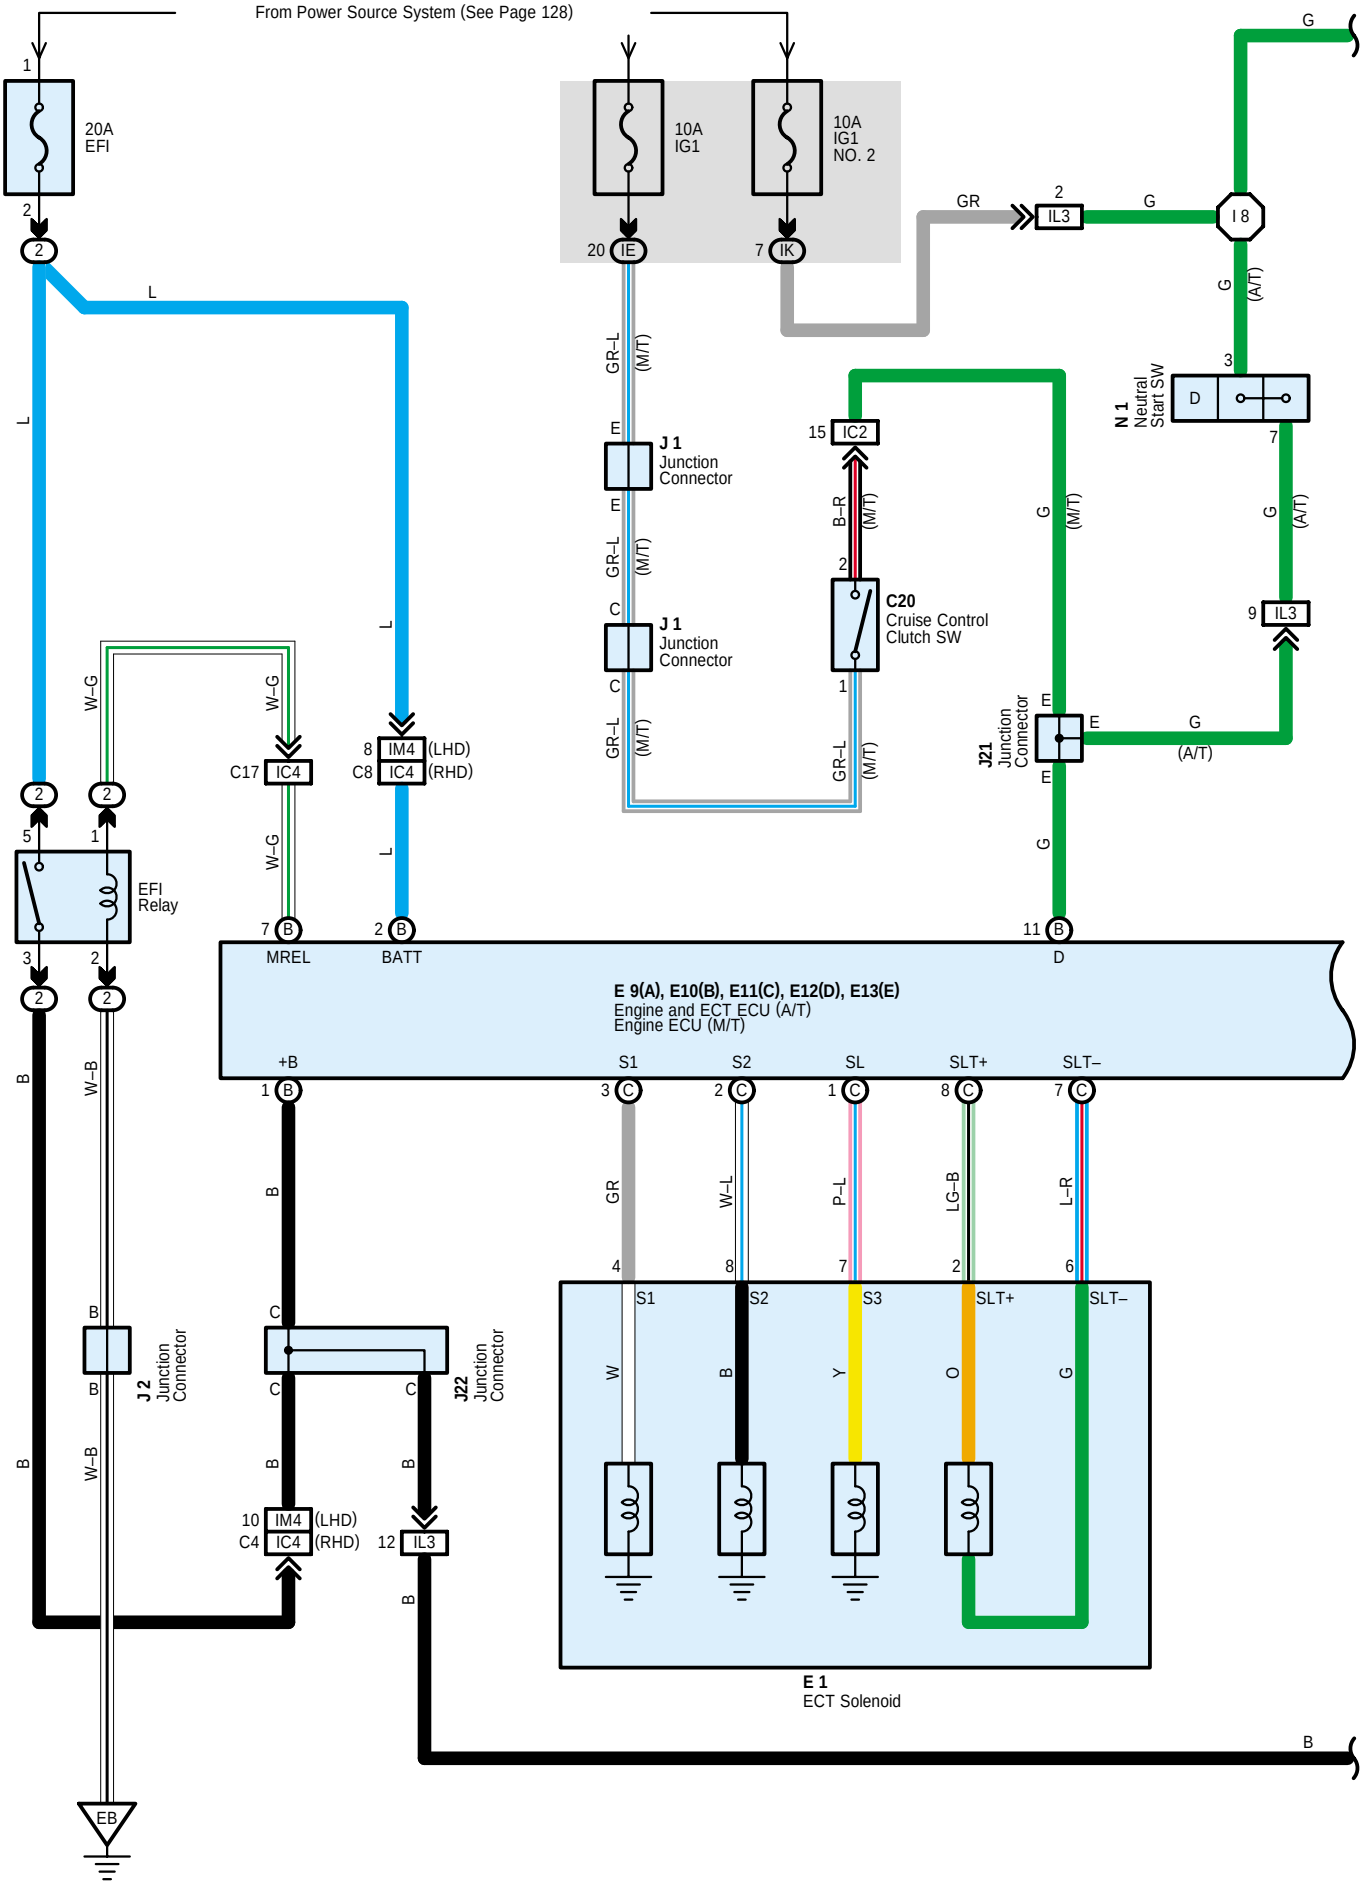
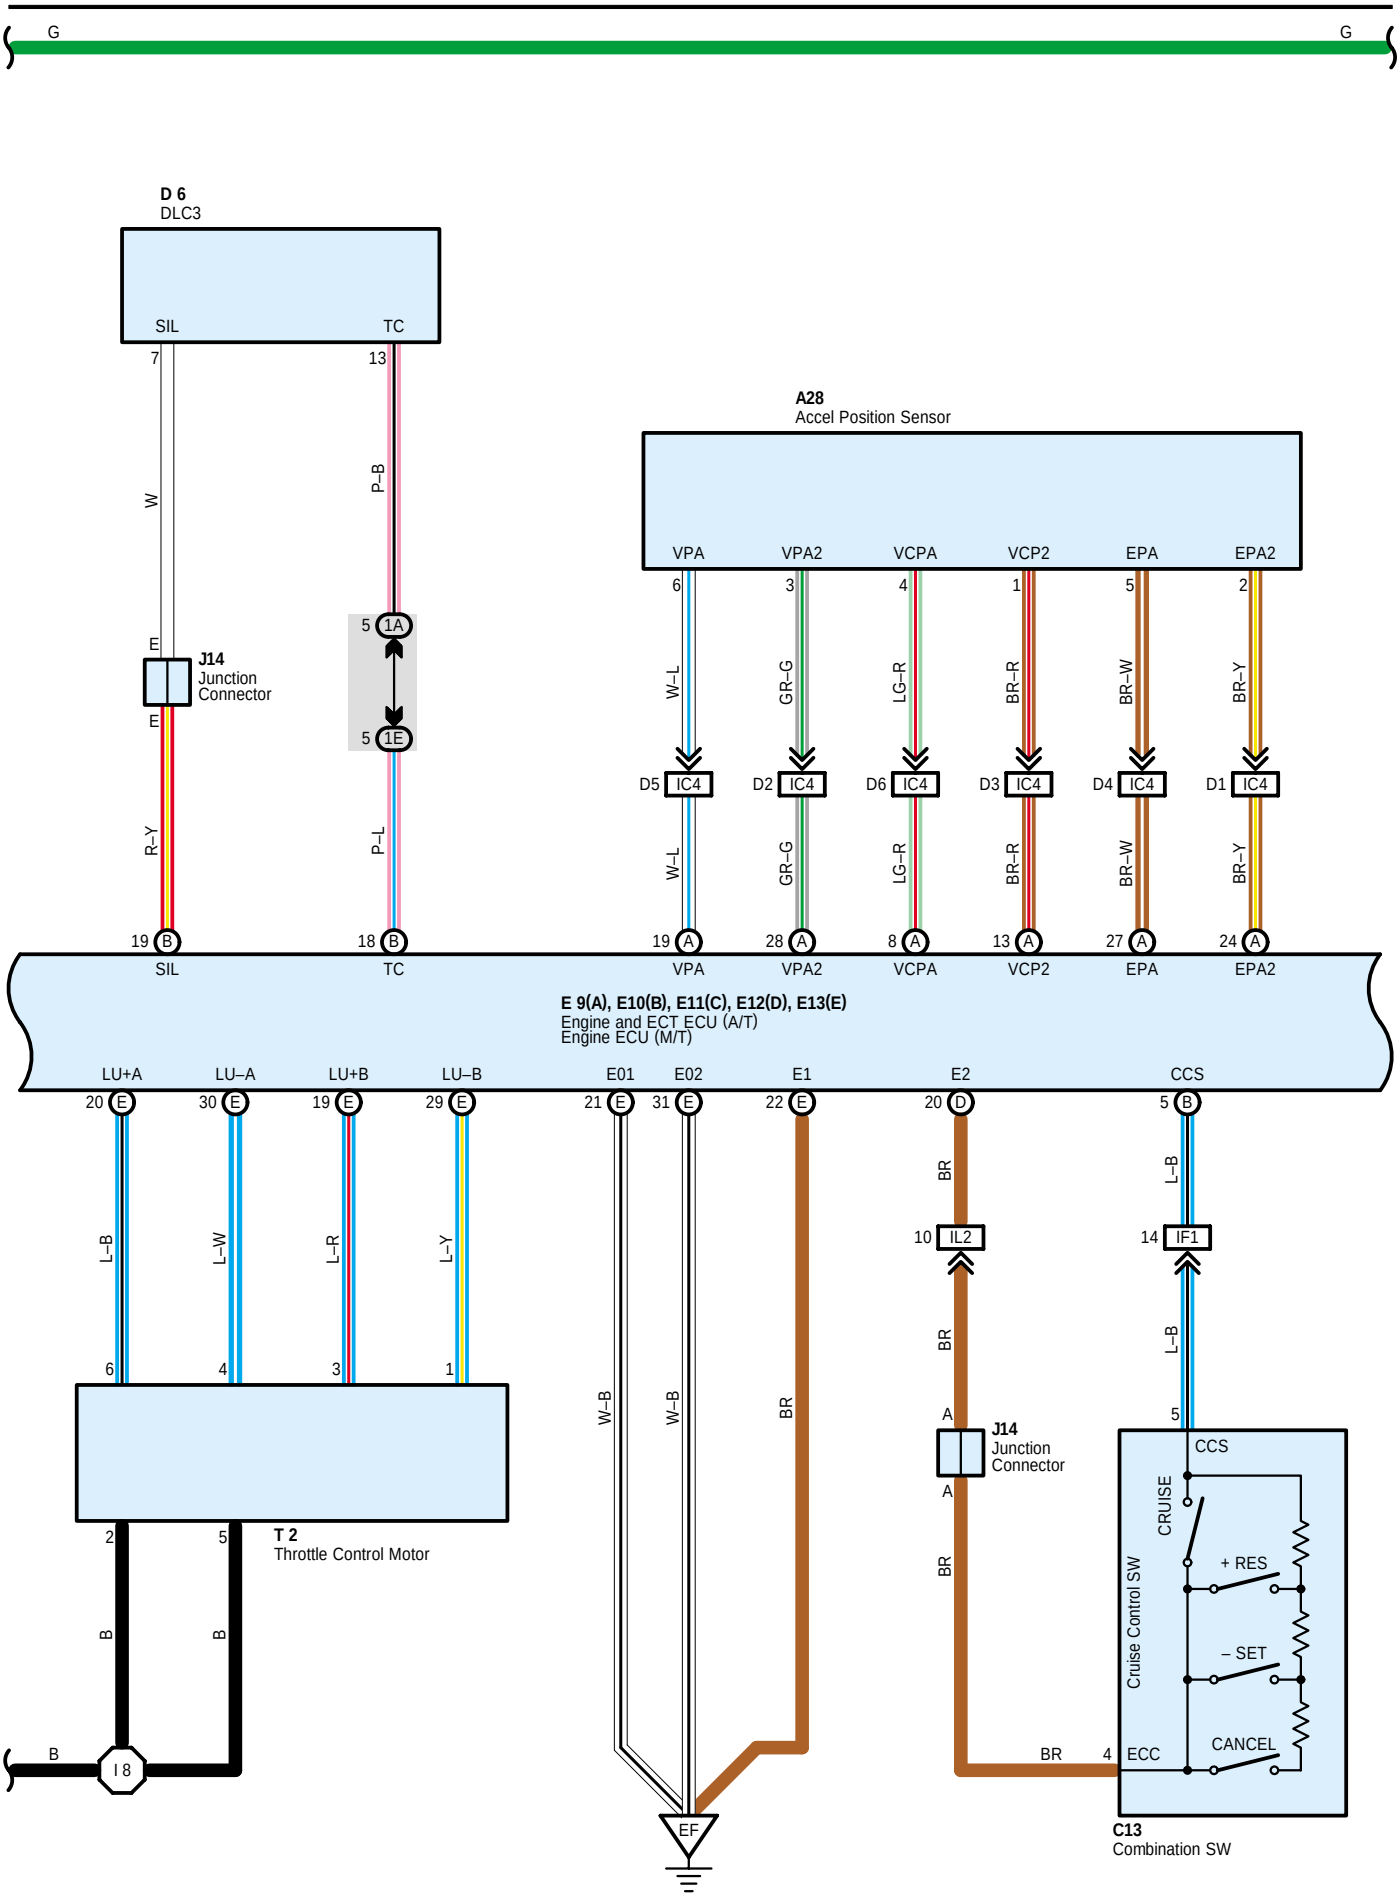
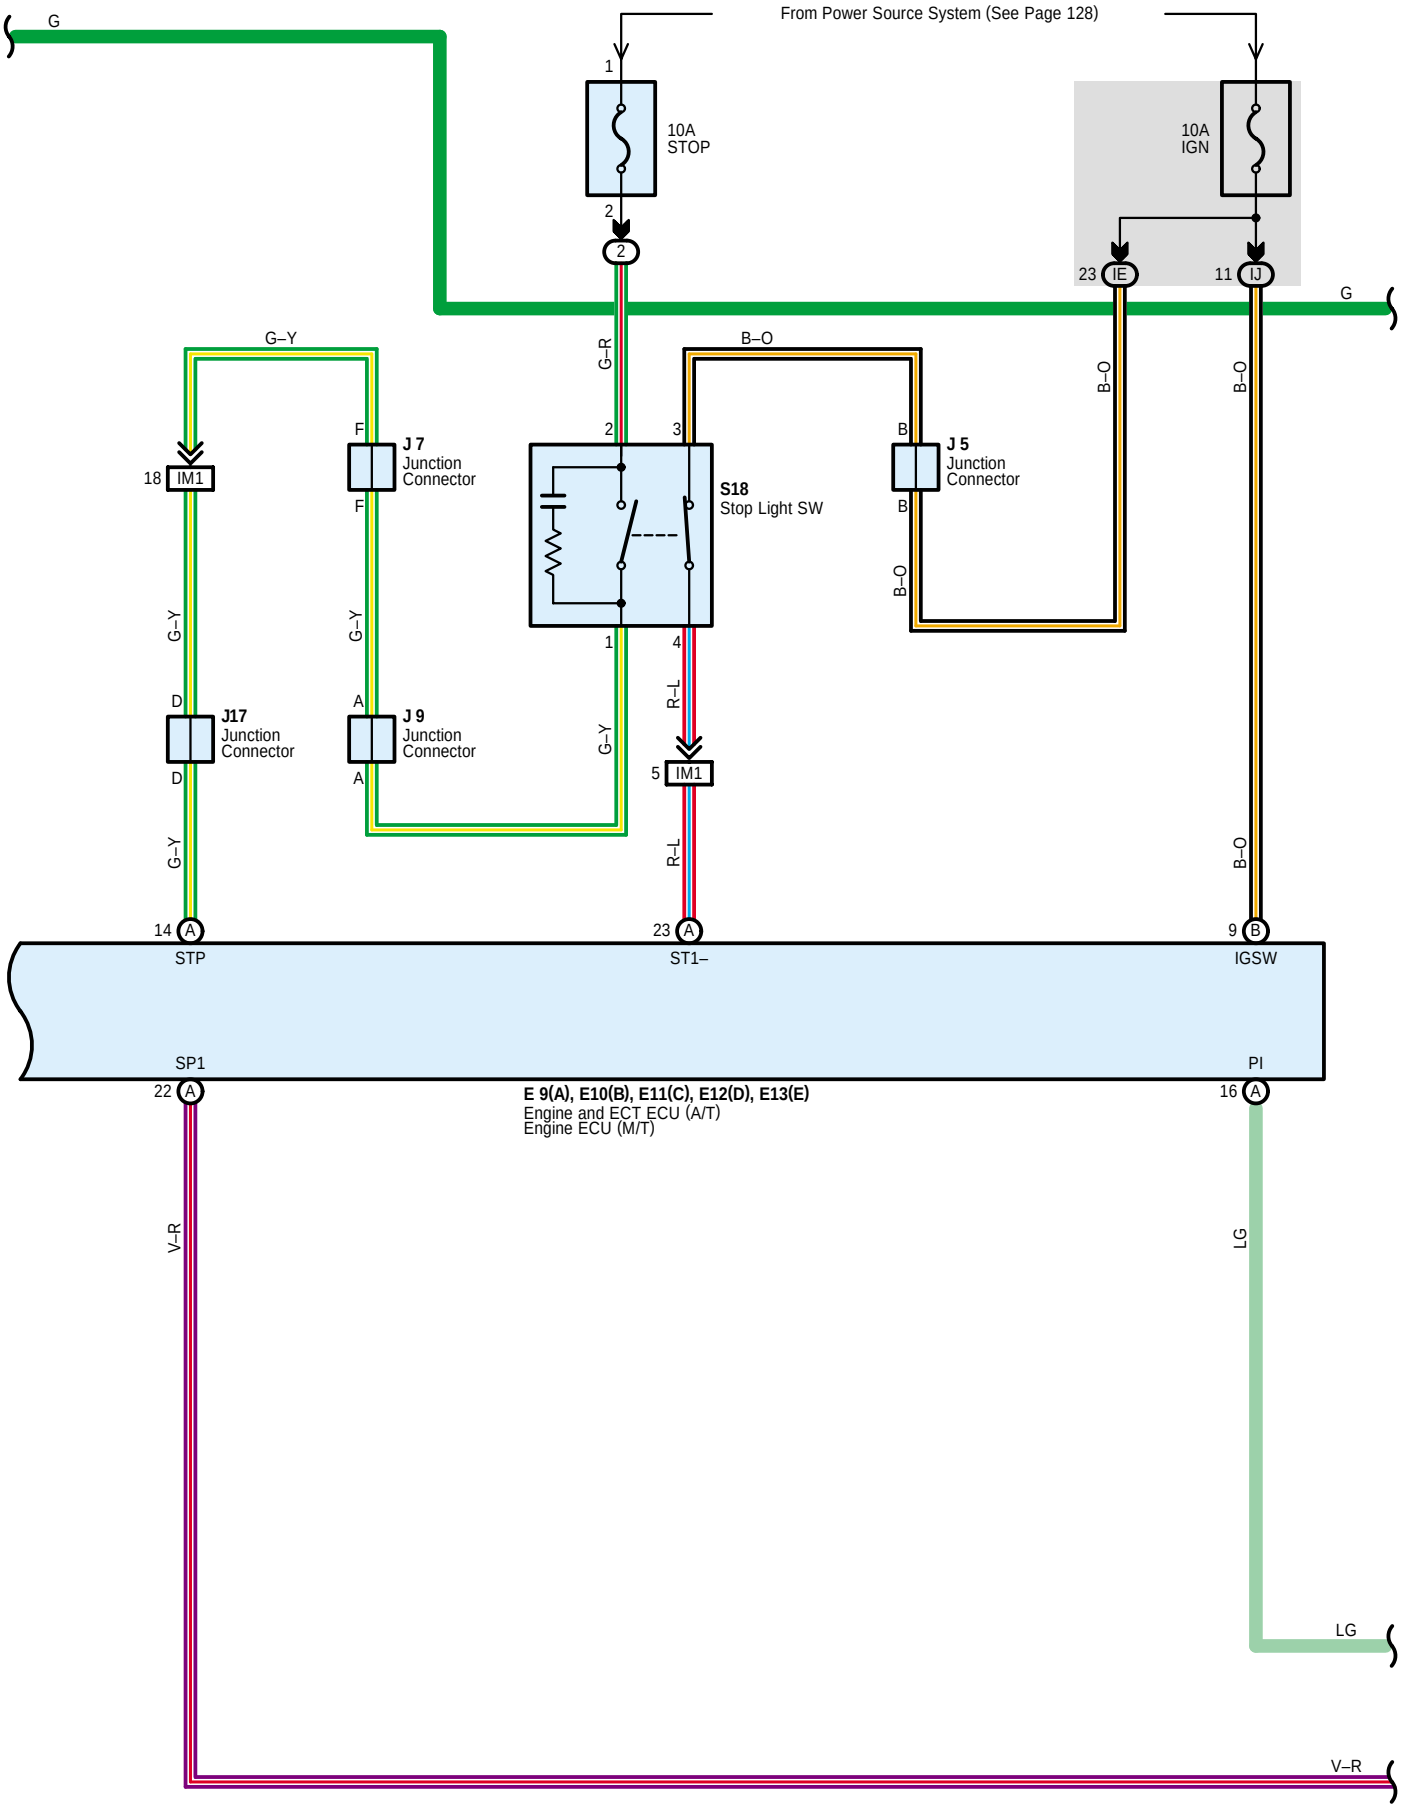
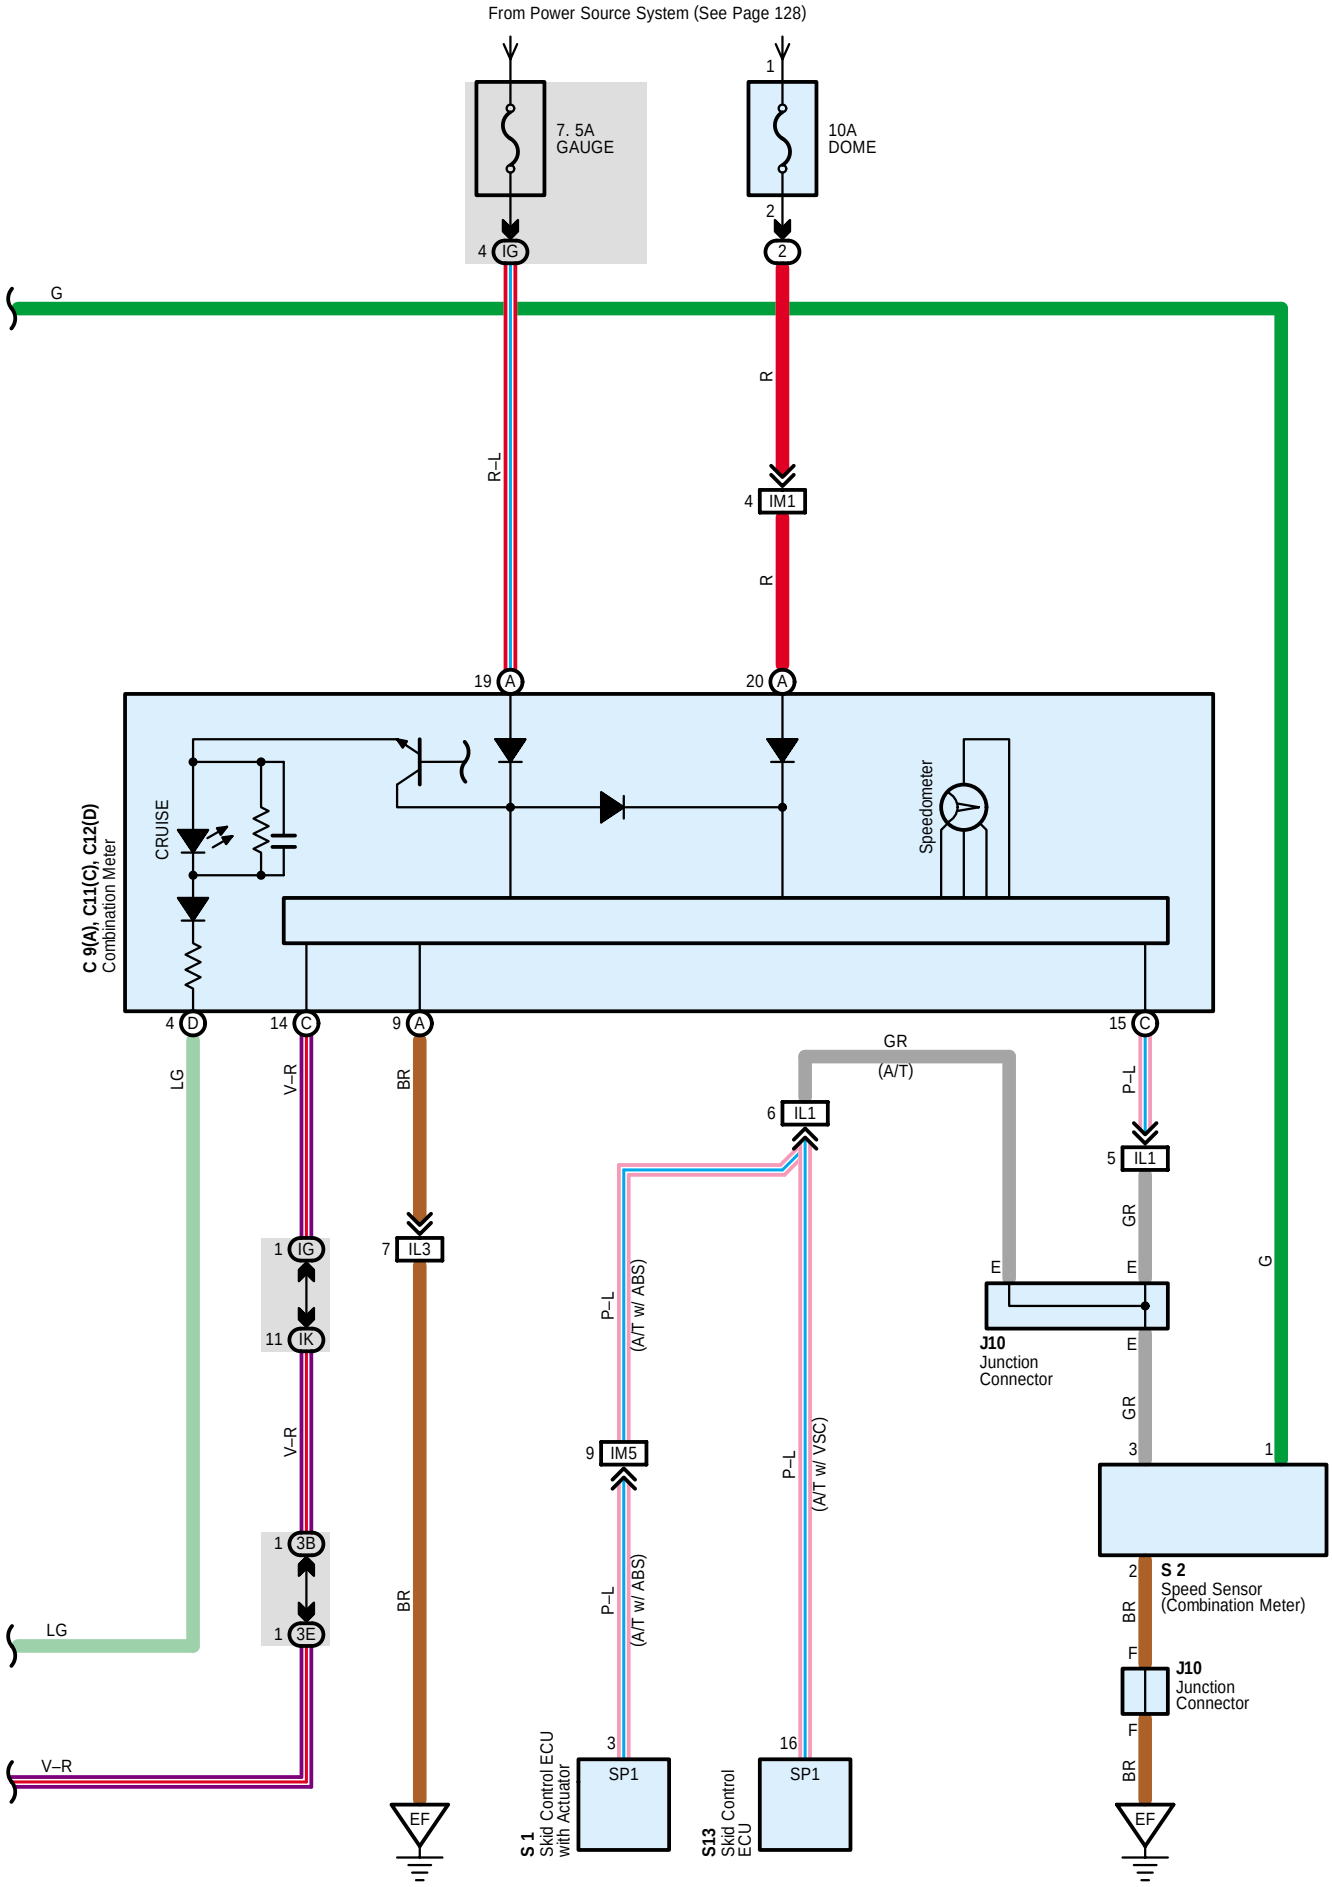

From Power Source System (See Page 128)
20A EFI
10A IG1
10A IG1 NO. 2
EFI Relay
J 1 Junction Connector
J 2 Junction Connector
J22 Junction Connector
J21 Junction Connector
C20 Cruise Control Clutch SW
N 1 Neutral Start SW
E 9(A), E10(B), E11(C), E12(D), E13(E)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
+B
S1
S2
SL
SLT+
SLT–
MREL
BATT
D
E 1
ECT Solenoid
EB
(LHD)
(RHD)
(M/T)
(A/T)


G
G
D 6
DLC3
SIL
TC
7
13
W
P–B
E
J14
Junction
Connector
E
5 1A
5 1E
R–Y
P–L
19 B
18 B
SIL
TC
A28
Accel Position Sensor
VPA
VPA2
VCPA
VCP2
EPA
EPA2
6
3
4
1
5
2
W–L
GR–G
LG–R
BR–R
BR–W
BR–Y
D5 IC4
D2 IC4
D6 IC4
D3 IC4
D4 IC4
D1 IC4
W–L
GR–G
LG–R
BR–R
BR–W
BR–Y
19 A
28 A
8 A
13 A
27 A
24 A
VPA
VPA2
VCPA
VCP2
EPA
EPA2
E 9(A), E10(B), E11(C), E12(D), E13(E)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
LU+A
LU–A
LU+B
LU–B
E01
E02
E1
E2
CCS
20 E
30 E
19 E
29 E
21 E
31 E
22 E
20 D
5 B
L–B
L–W
L–R
L–Y
W–B
W–B
BR
BR
L–B
6
4
3
1
10 IL2
14 IF1
BR
BR
L–B
A
J14
Junction
Connector
A
5
BR
CCS
CRUISE
+ RES
– SET
CANCEL
Cruise Control SW
2
5
T 2
Throttle Control Motor
B
B
BR
4 ECC
B
I 8
EF
C13
Combination SW

Cruise Control (1KD–FTV)




From Power Source System (See Page 128)
7. 5A
GAUGE
10A
DOME
4 IG
2
G
R
R–L
4 IM1
19 A
20 A
C 9(A), C11(C), C12(D)
Combination Meter
CRUISE
Speedometer
4 D
14 C
9 A
15 C
LG
V–R
BR
GR
(A/T)
6 IL1
5 IL1
P–L
GR
1 IG
11 IK
7 IL3
E
J10
Junction
Connector
G
9 IM5
(A/T w/ ABS)
(A/T w/ VSC)
3
1
1 3B
1 3E
LG
V–R
BR
2
S 2
Speed Sensor
(Combination Meter)
F
J10
Junction
Connector
3 SP1
16 SP1
S 1
Skid Control ECU
with Actuator
S13
Skid Control
ECU
EF