



Double Locking

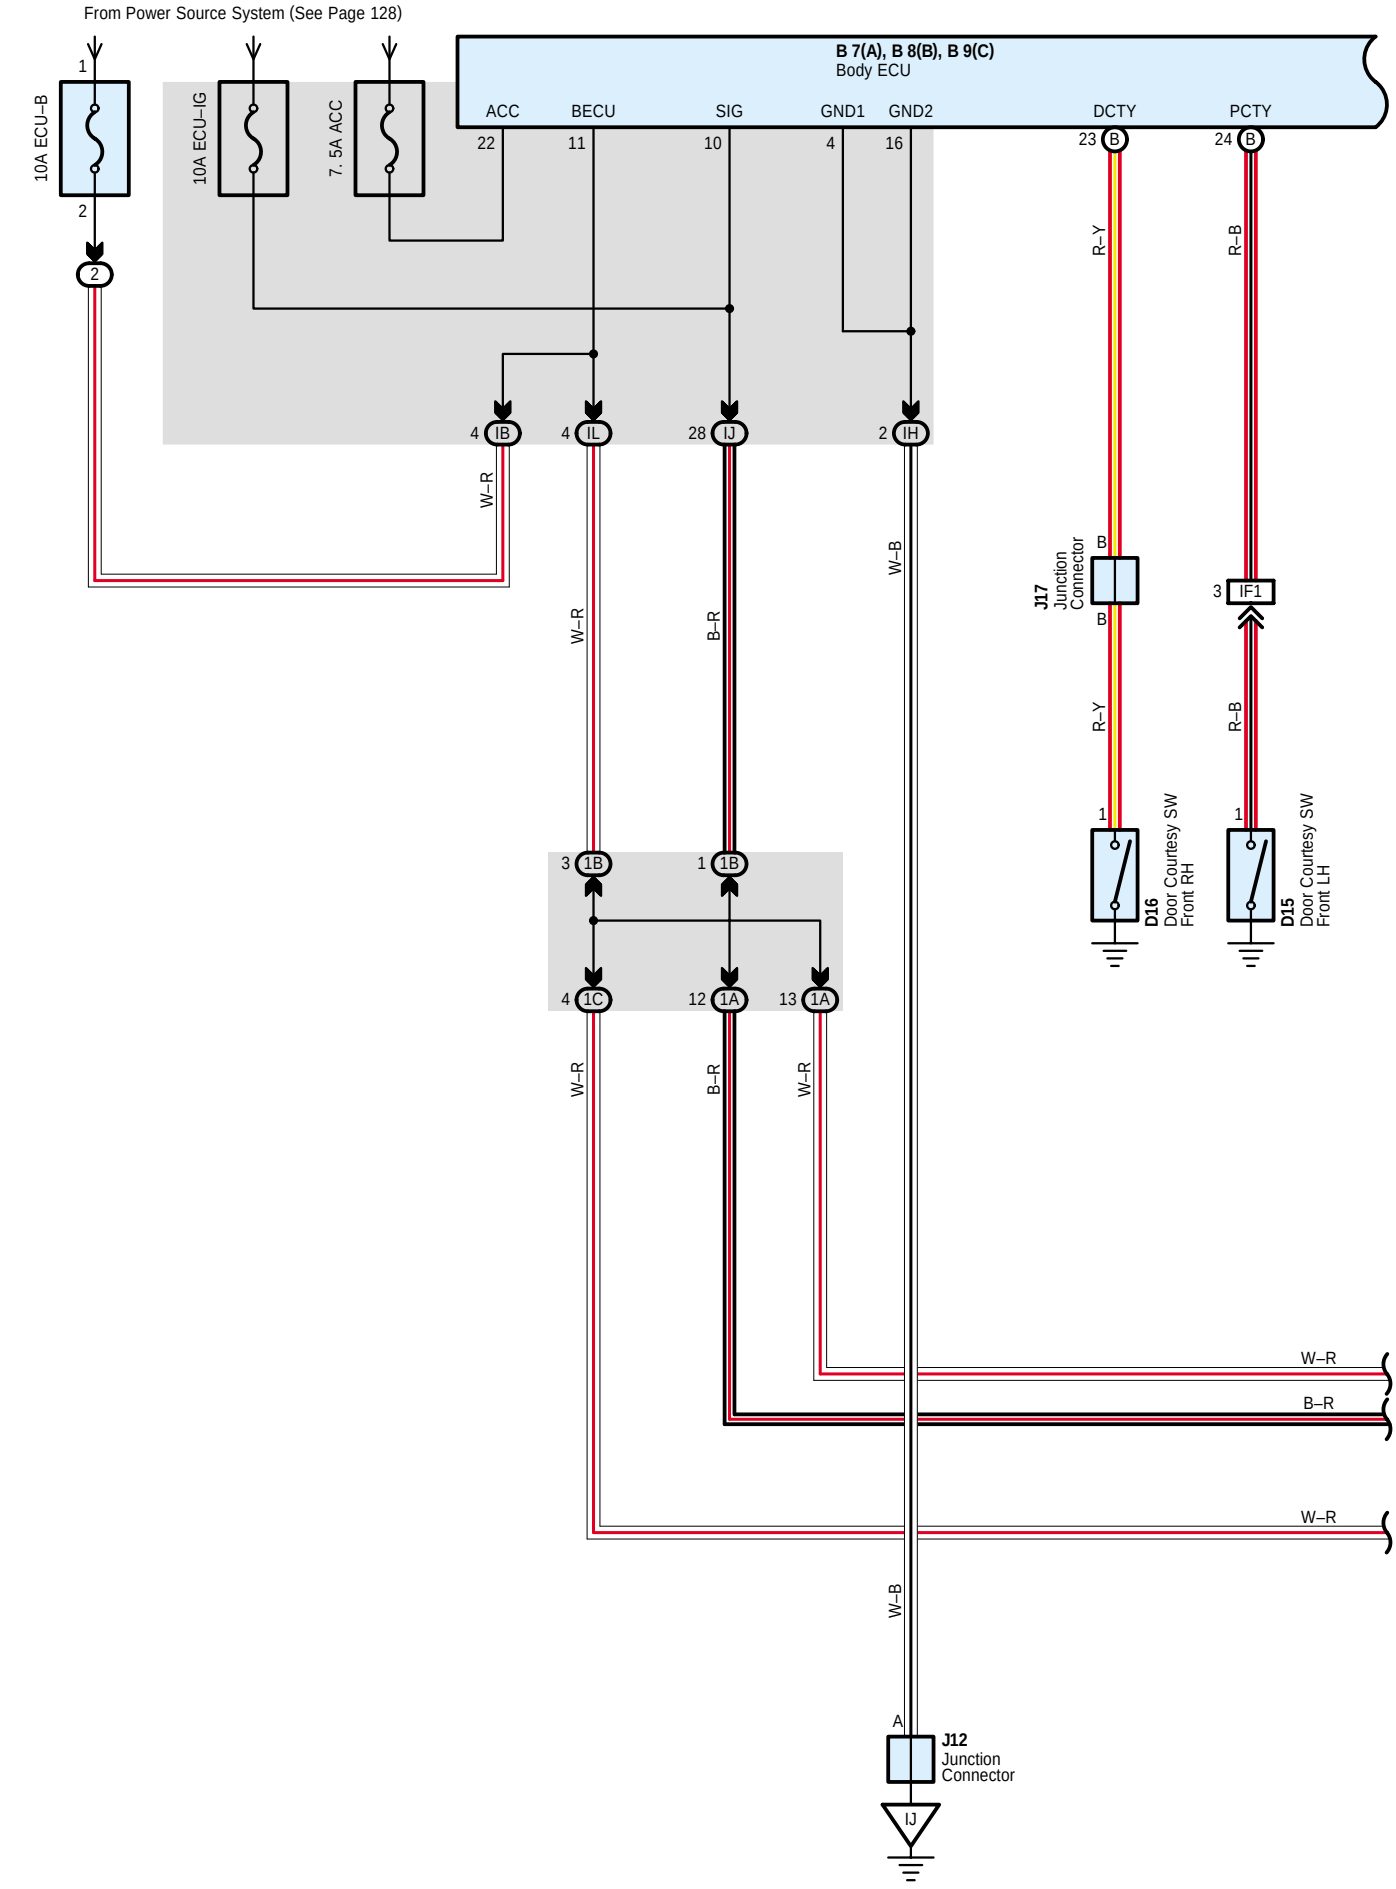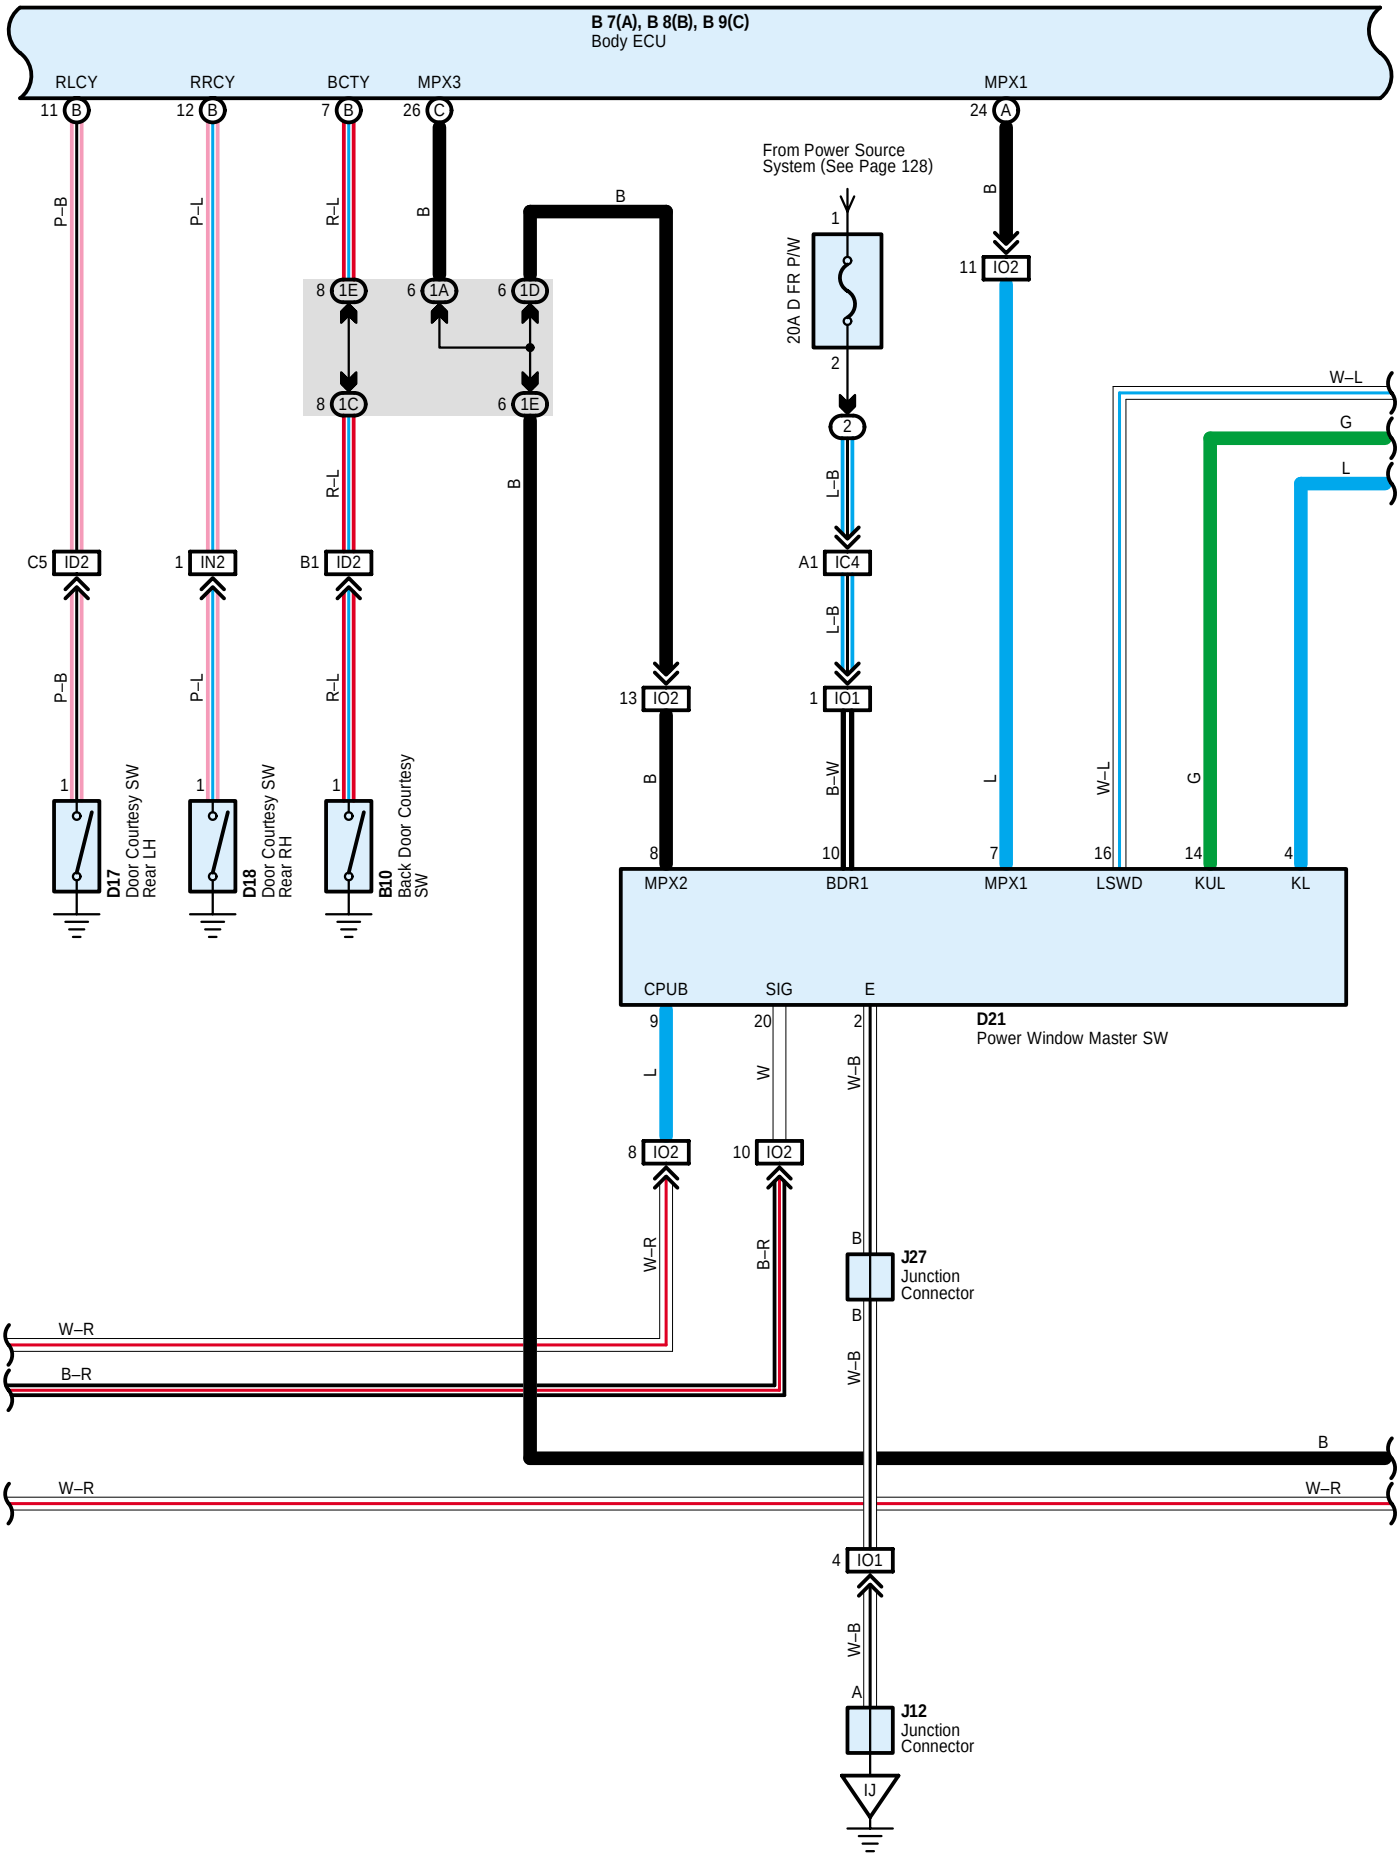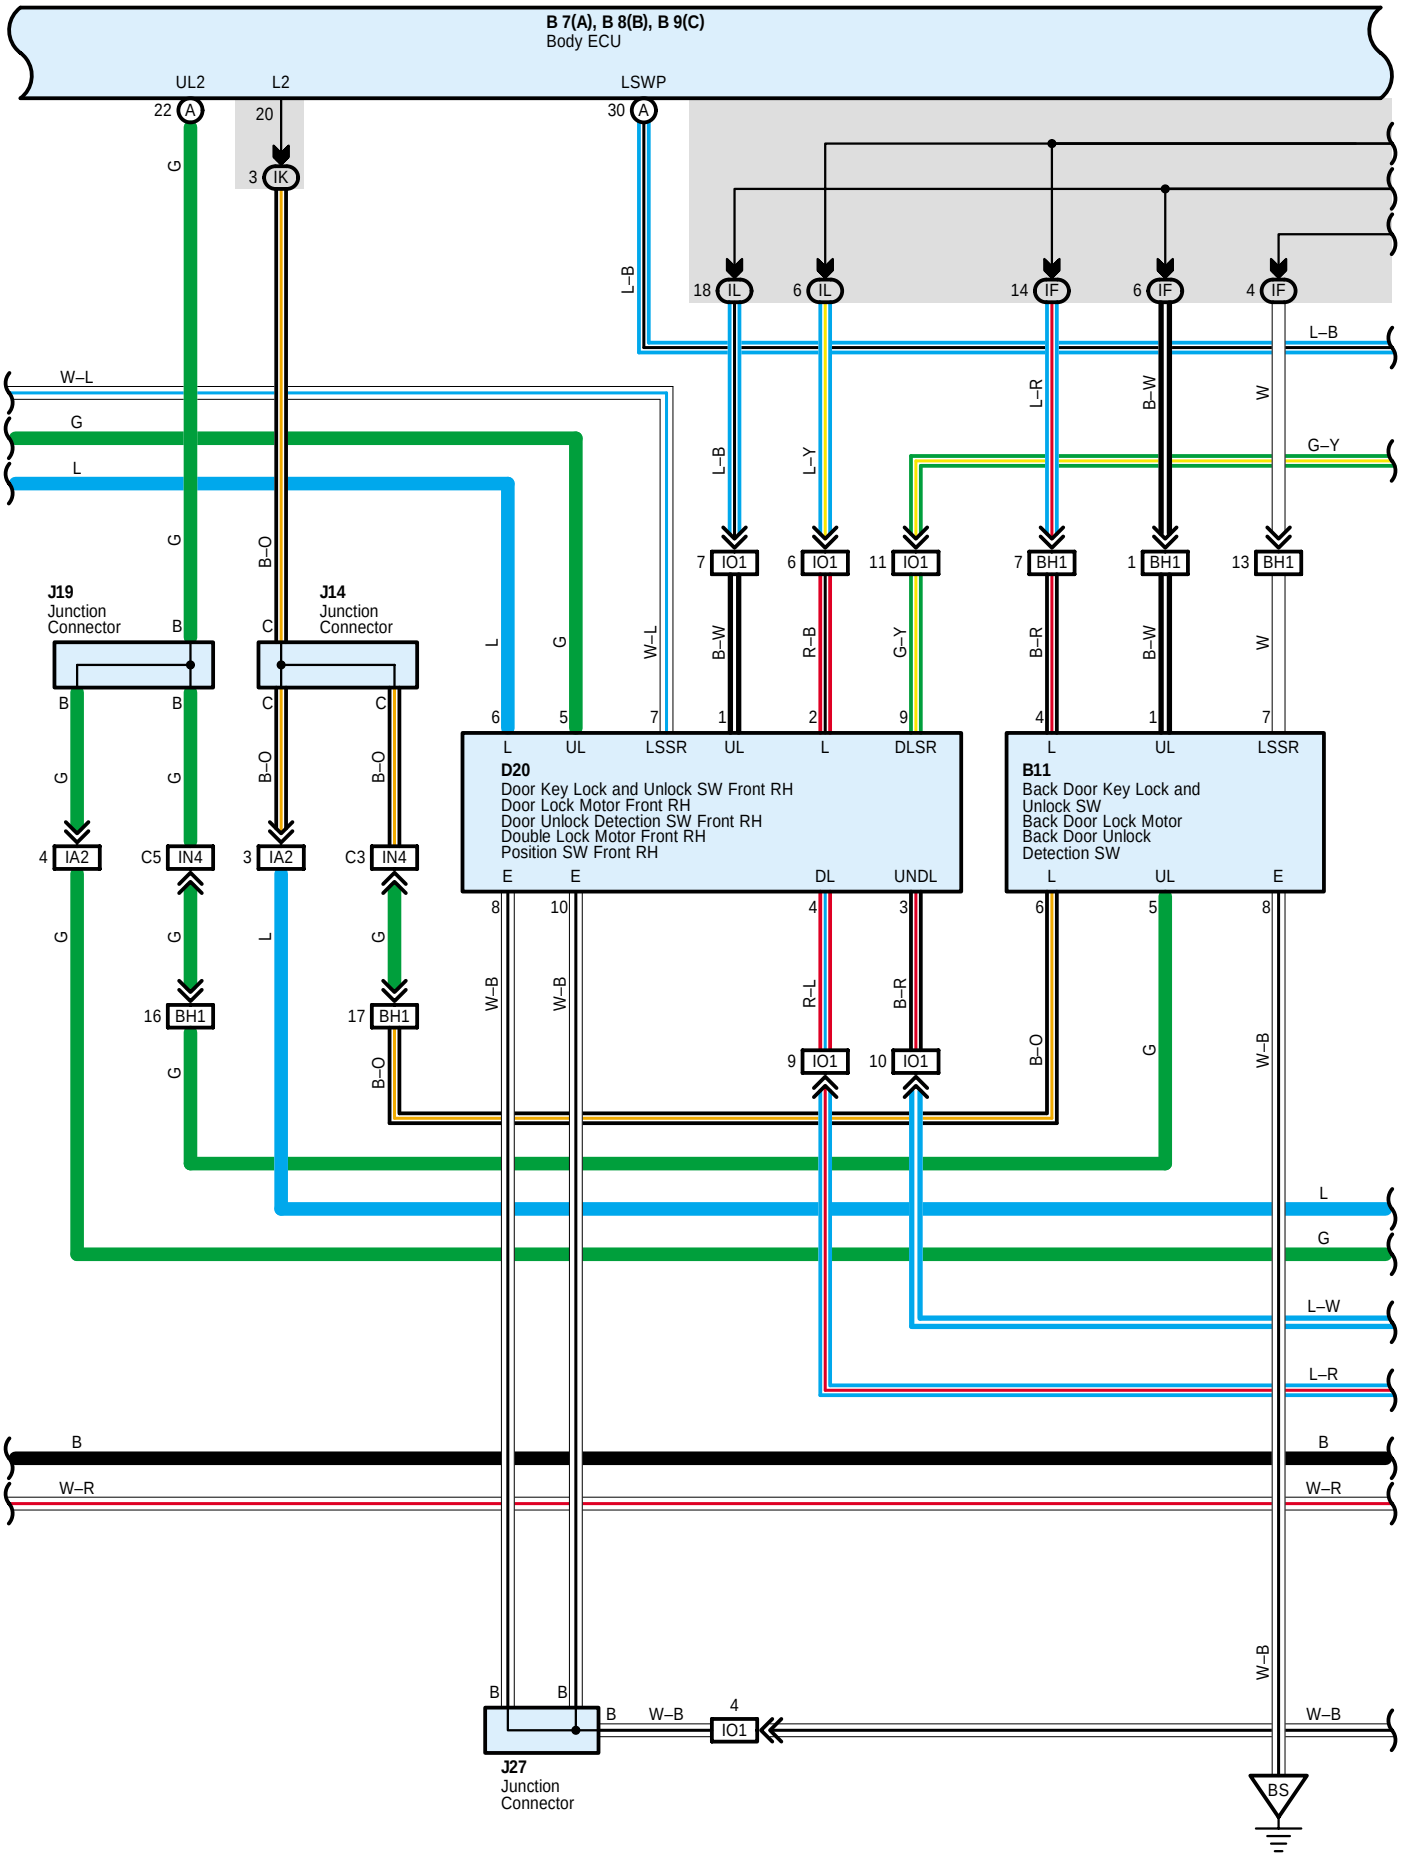


B 7(A), B 8(B), B 9(C)
Body ECU
RLCY
RRCY
BCTY
MPX3
MPX1
From Power Source System (See Page 128)
20A D FR P/W
D17 Door Courtesy SW Rear LH
D18 Door Courtesy SW Rear RH
B10 Back Door Courtesy SW
MPX2
BDR1
MPX1
LSWD
KUL
KL
D21 Power Window Master SW
CPUB
SIG
J27 Junction Connector
J12 Junction Connector
IJ

Double Locking

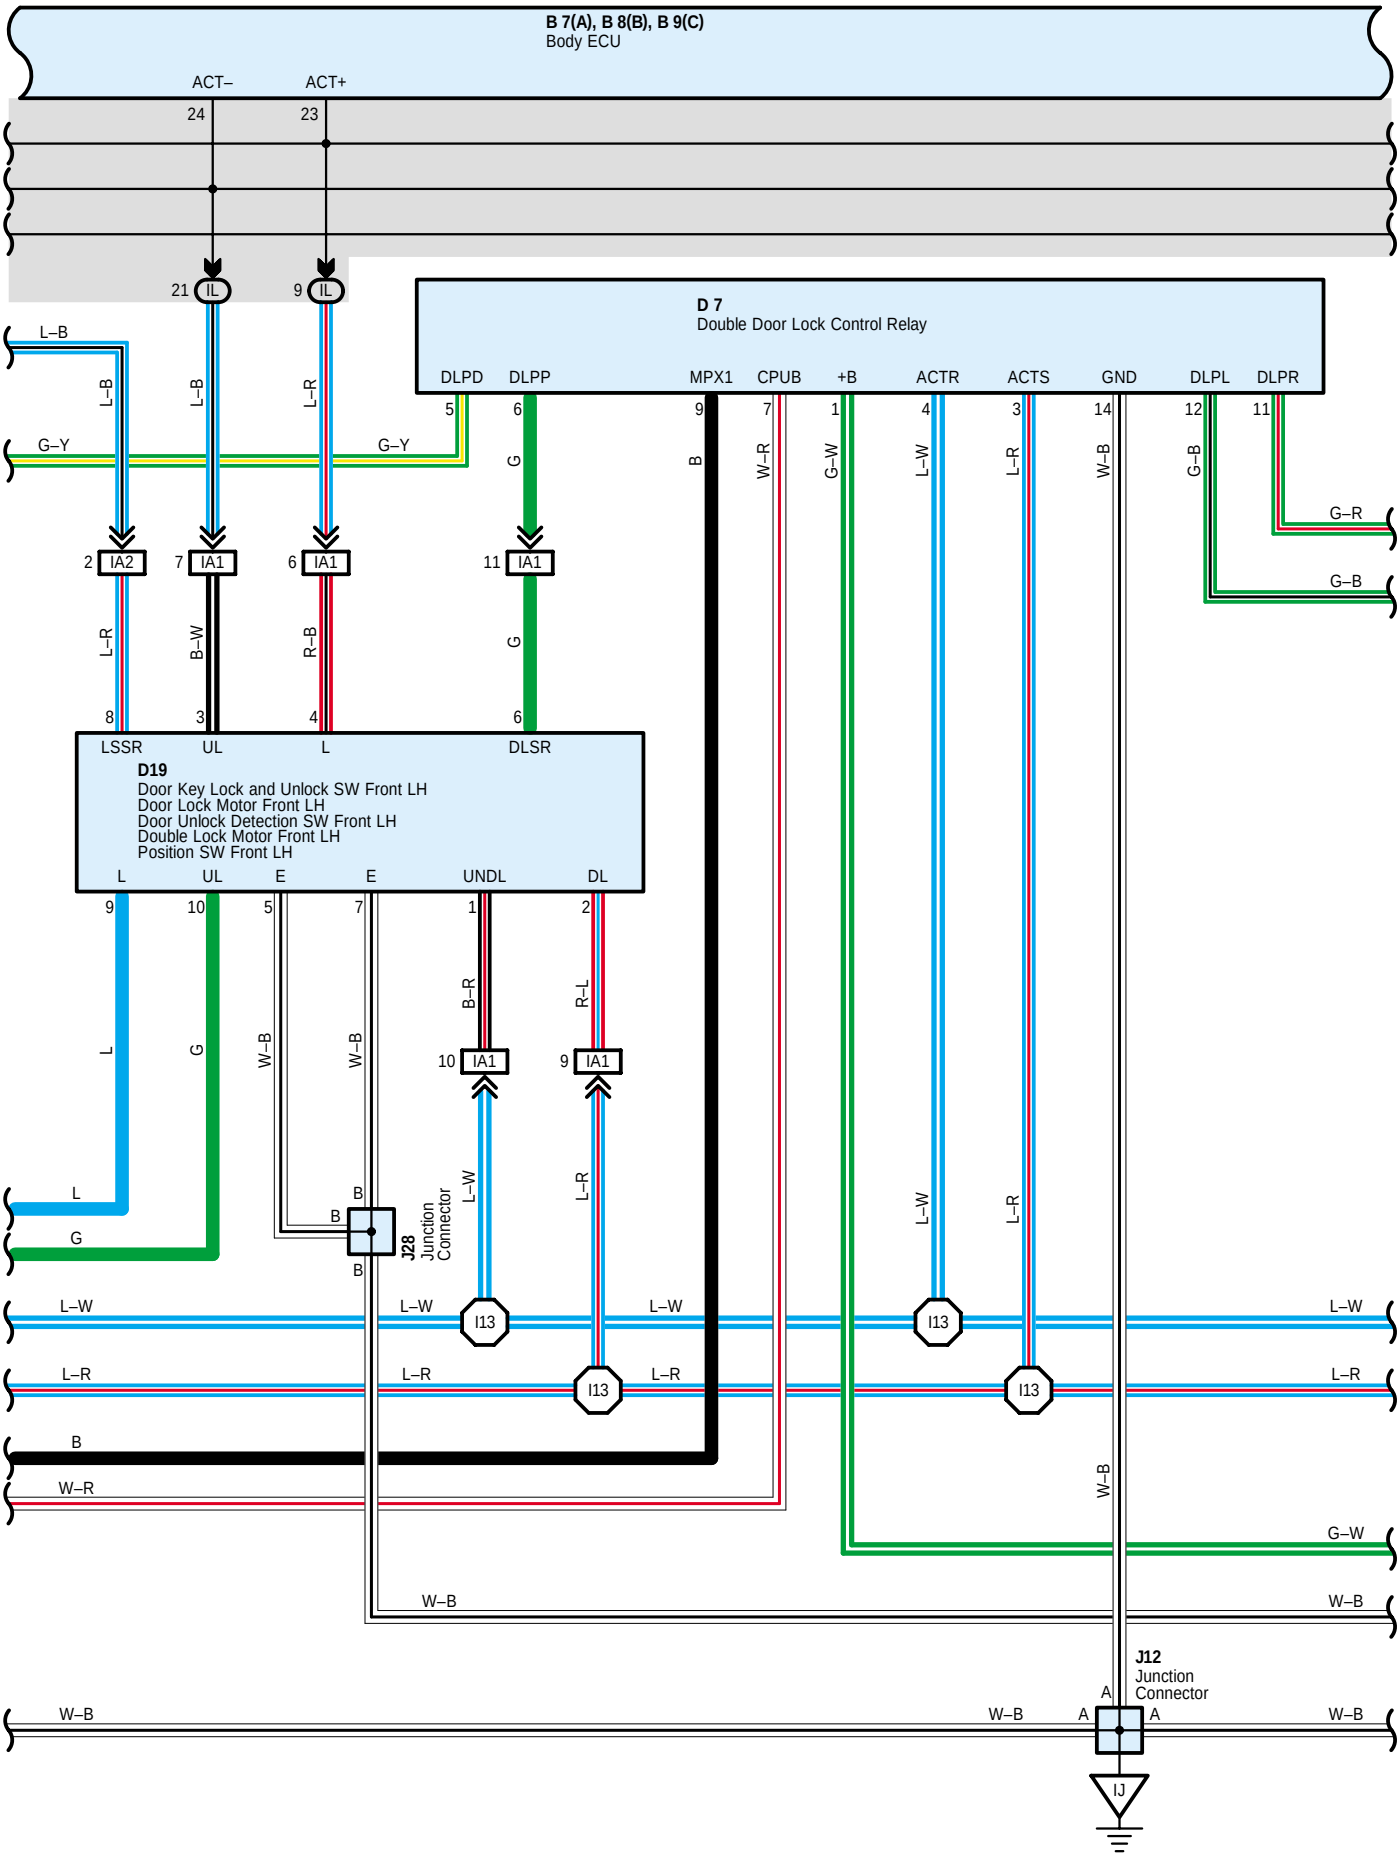


B 7(A), B 8(B), B 9(C)
Body ECU
ACT–
ACT+
24
23
21 IL
9 IL
D 7
Double Door Lock Control Relay
DLPD
DLPP
MPX1
CPUB
+B
ACTR
ACTS
GND
DLPL
DLPR
5
6
9
7
1
4
3
14
12
11
L–B
G–Y
L–B
L–R
G–Y
G
B
W–R
G–W
L–W
L–R
W–B
G–B
G–R
2 IA2
7 IA1
6 IA1
11 IA1
L–R
B–W
R–B
G
8
3
4
6
LSSR
UL
L
DLSR
D19
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
Double Lock Motor Front LH
Position SW Front LH
L
UL
E
E
UNDL
DL
9
10
5
7
1
2
L
G
W–B
W–B
B–R
R–L
10 IA1
9 IA1
L
G
B
B
B
J28
Junction
Connector
L–W
L–R
I13
I13
I13
I13
L–W
L–R
B
W–R
W–B
G–W
W–B
W–B
W–B
A
A
A
J12
Junction
Connector
IJ

Double Locking

