



Door Lock Control and Theft Deterrent (RHD)

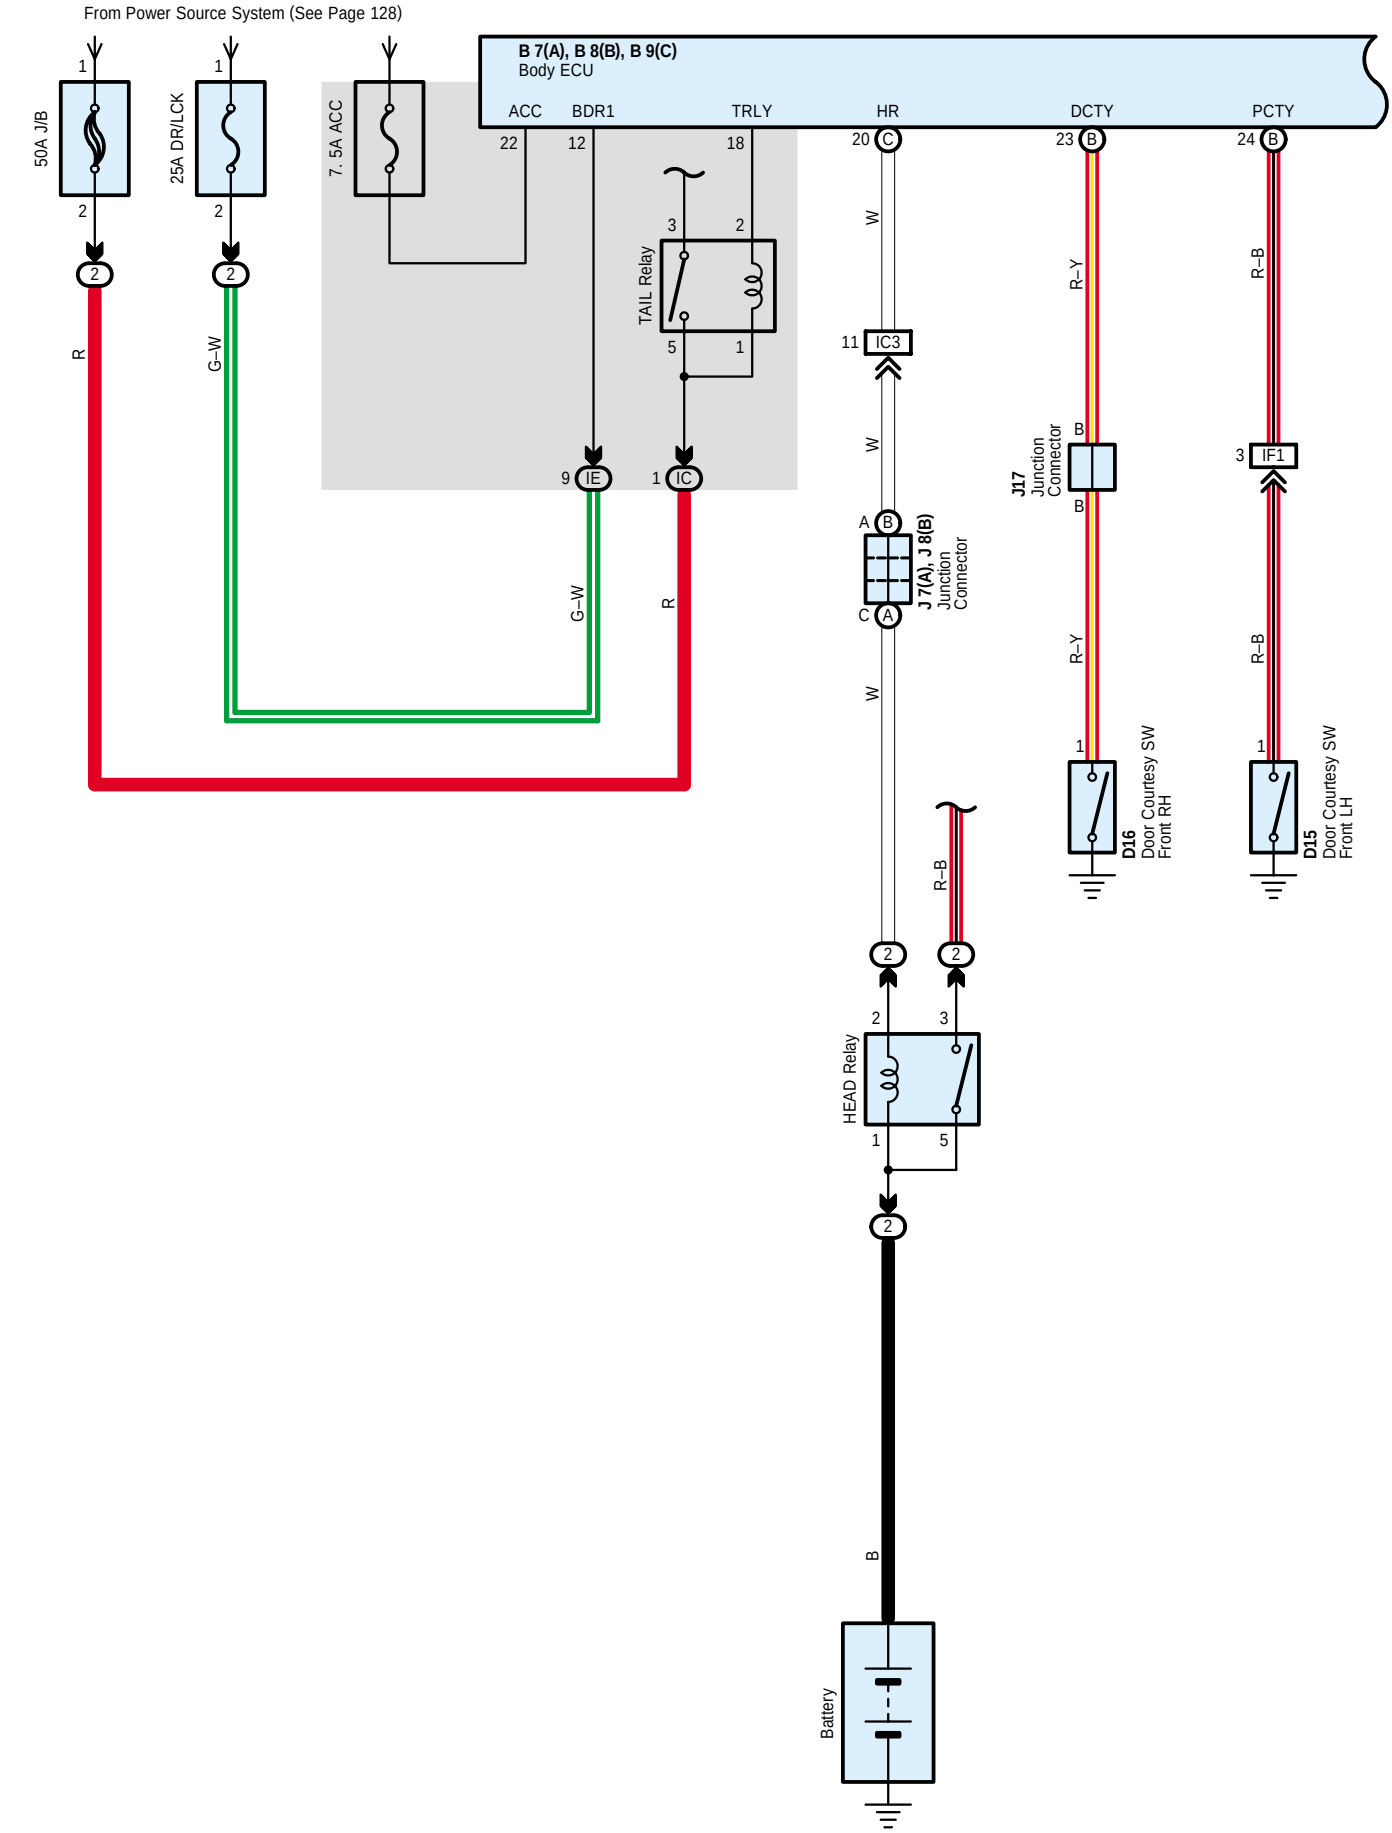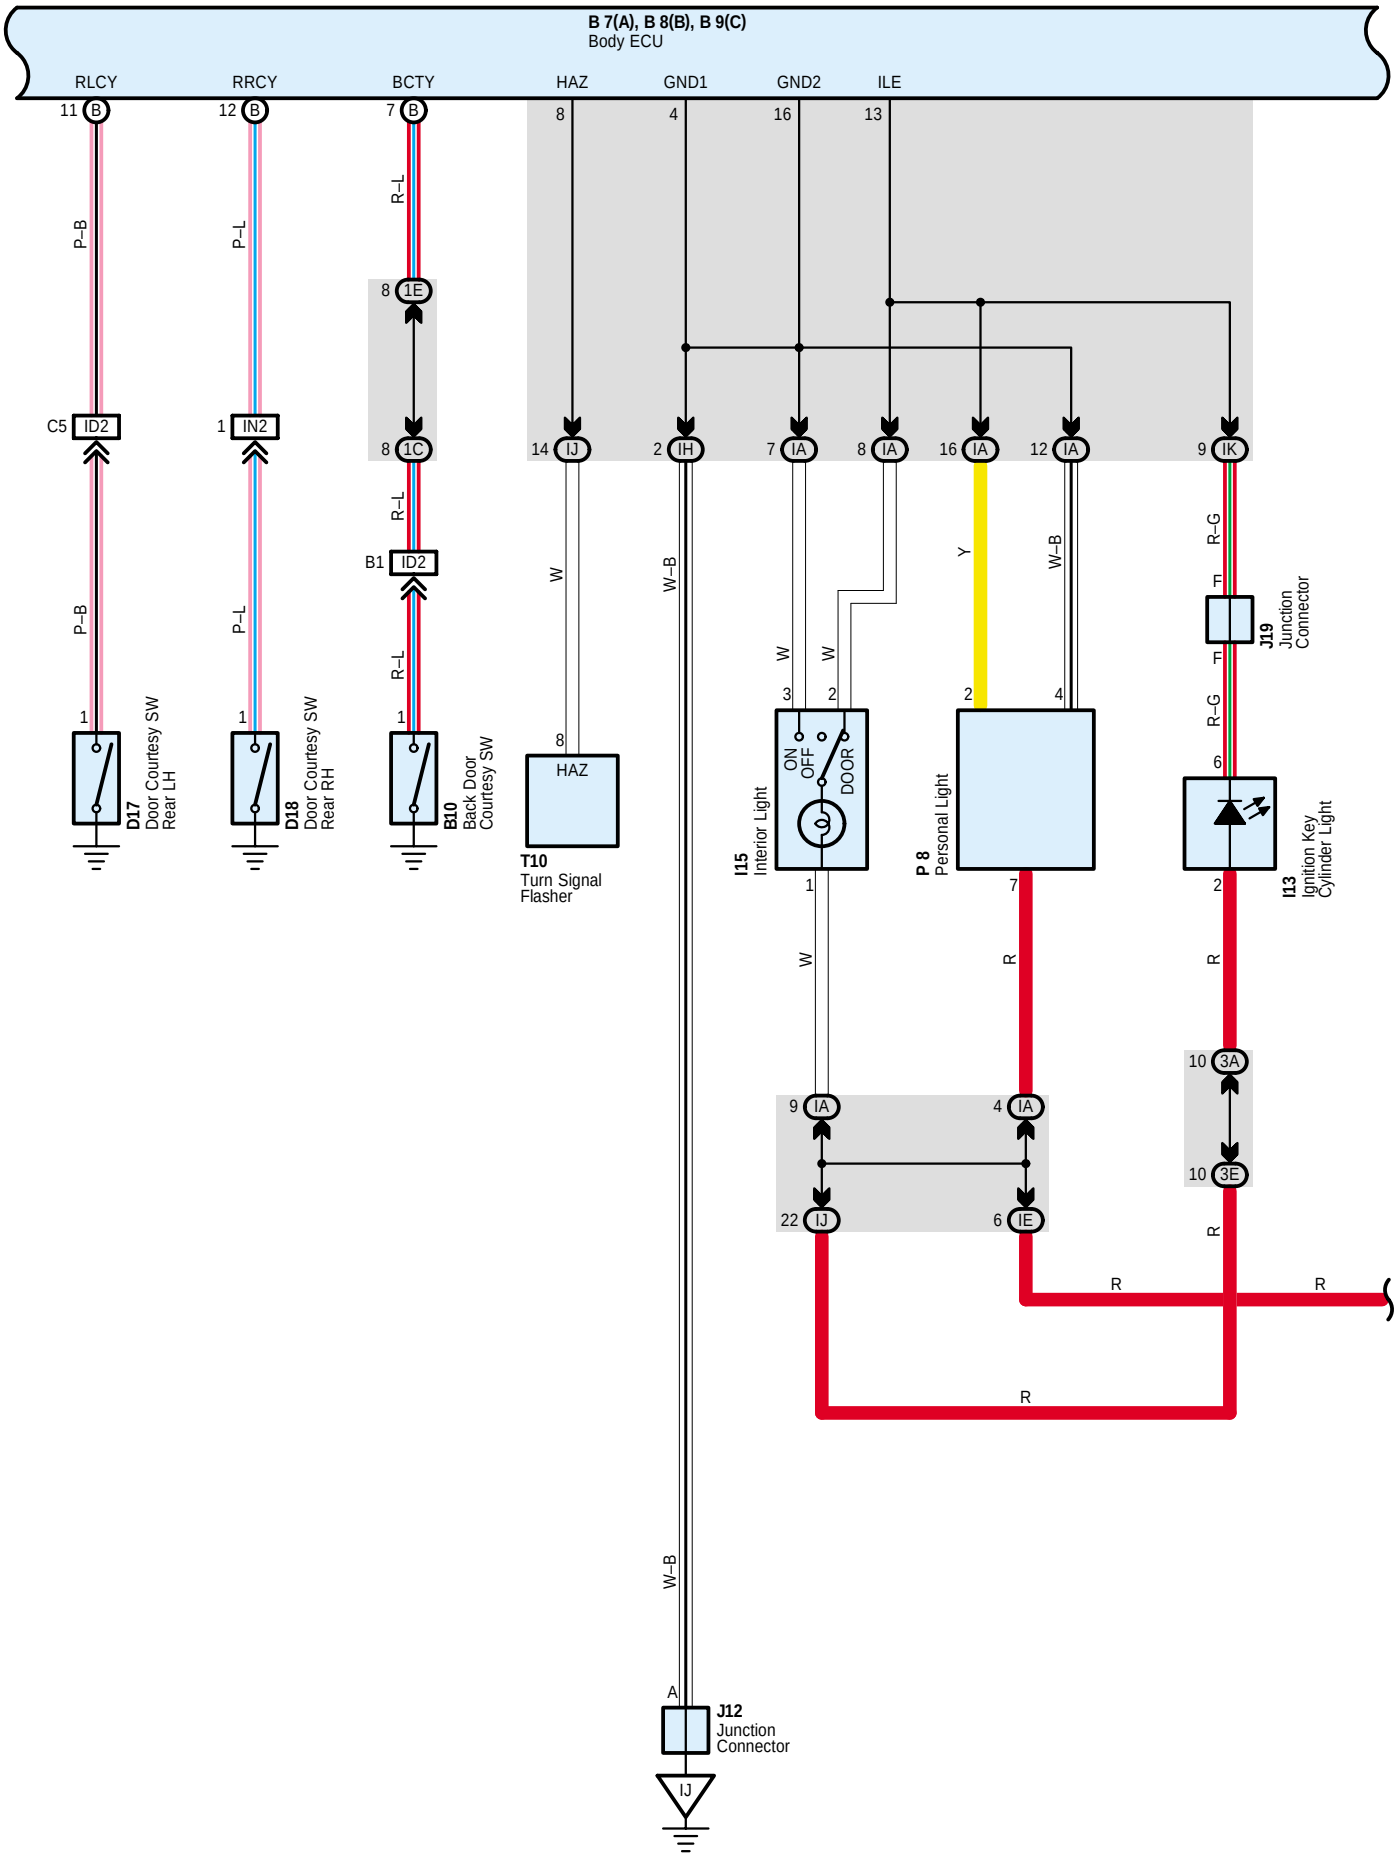


B 7(A), B 8(B), B 9(C)
Body ECU
RLCY
RRCY
BCTY
HAZ
GND1
GND2
ILE
11 B
12 B
7 B
8
4
16
13
P–B
P–L
R–L
8 1E
C5 ID2
1 IN2
8 1C
14 IJ
2 IH
7 IA
8 IA
16 IA
12 IA
9 IK
R–L
B1 ID2
W
W–B
Y
W–B
R–G
J19
Junction Connector
D17
Door Courtesy SW Rear LH
D18
Door Courtesy SW Rear RH
B10
Back Door Courtesy SW
8
HAZ
T10
Turn Signal Flasher
W
W
3
2
2
4
6
I15
Interior Light
ON
OFF
DOOR
P 8
Personal Light
I13
Ignition Key Cylinder Light
1
7
2
W
R
R
10 3A
9 IA
4 IA
10 3E
22 IJ
6 IE
R
R
R
A
J12
Junction Connector
IJ


Door Lock Control and Theft Deterrent (RHD)

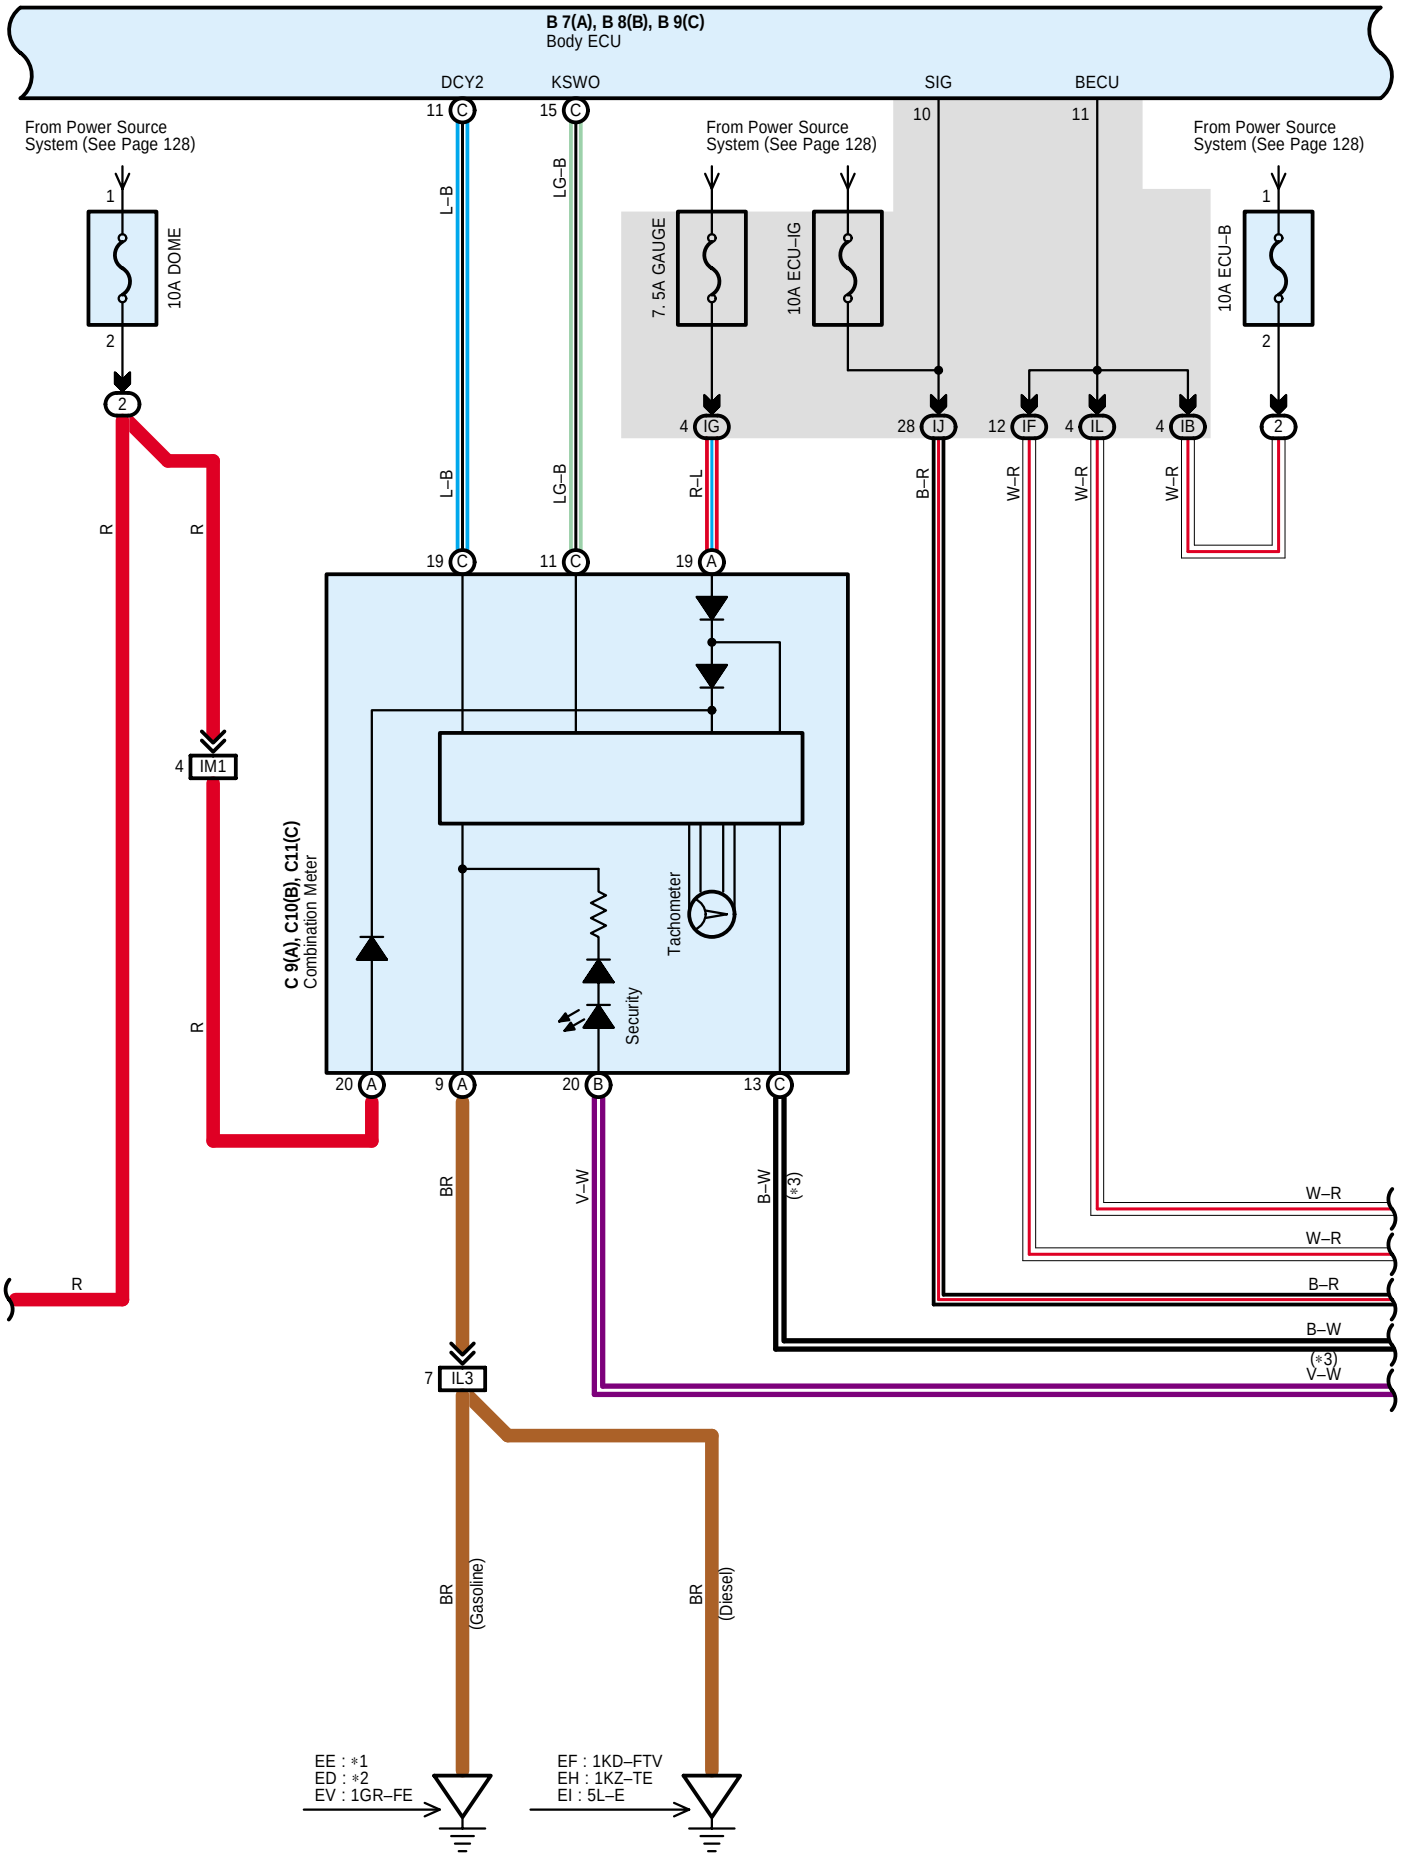


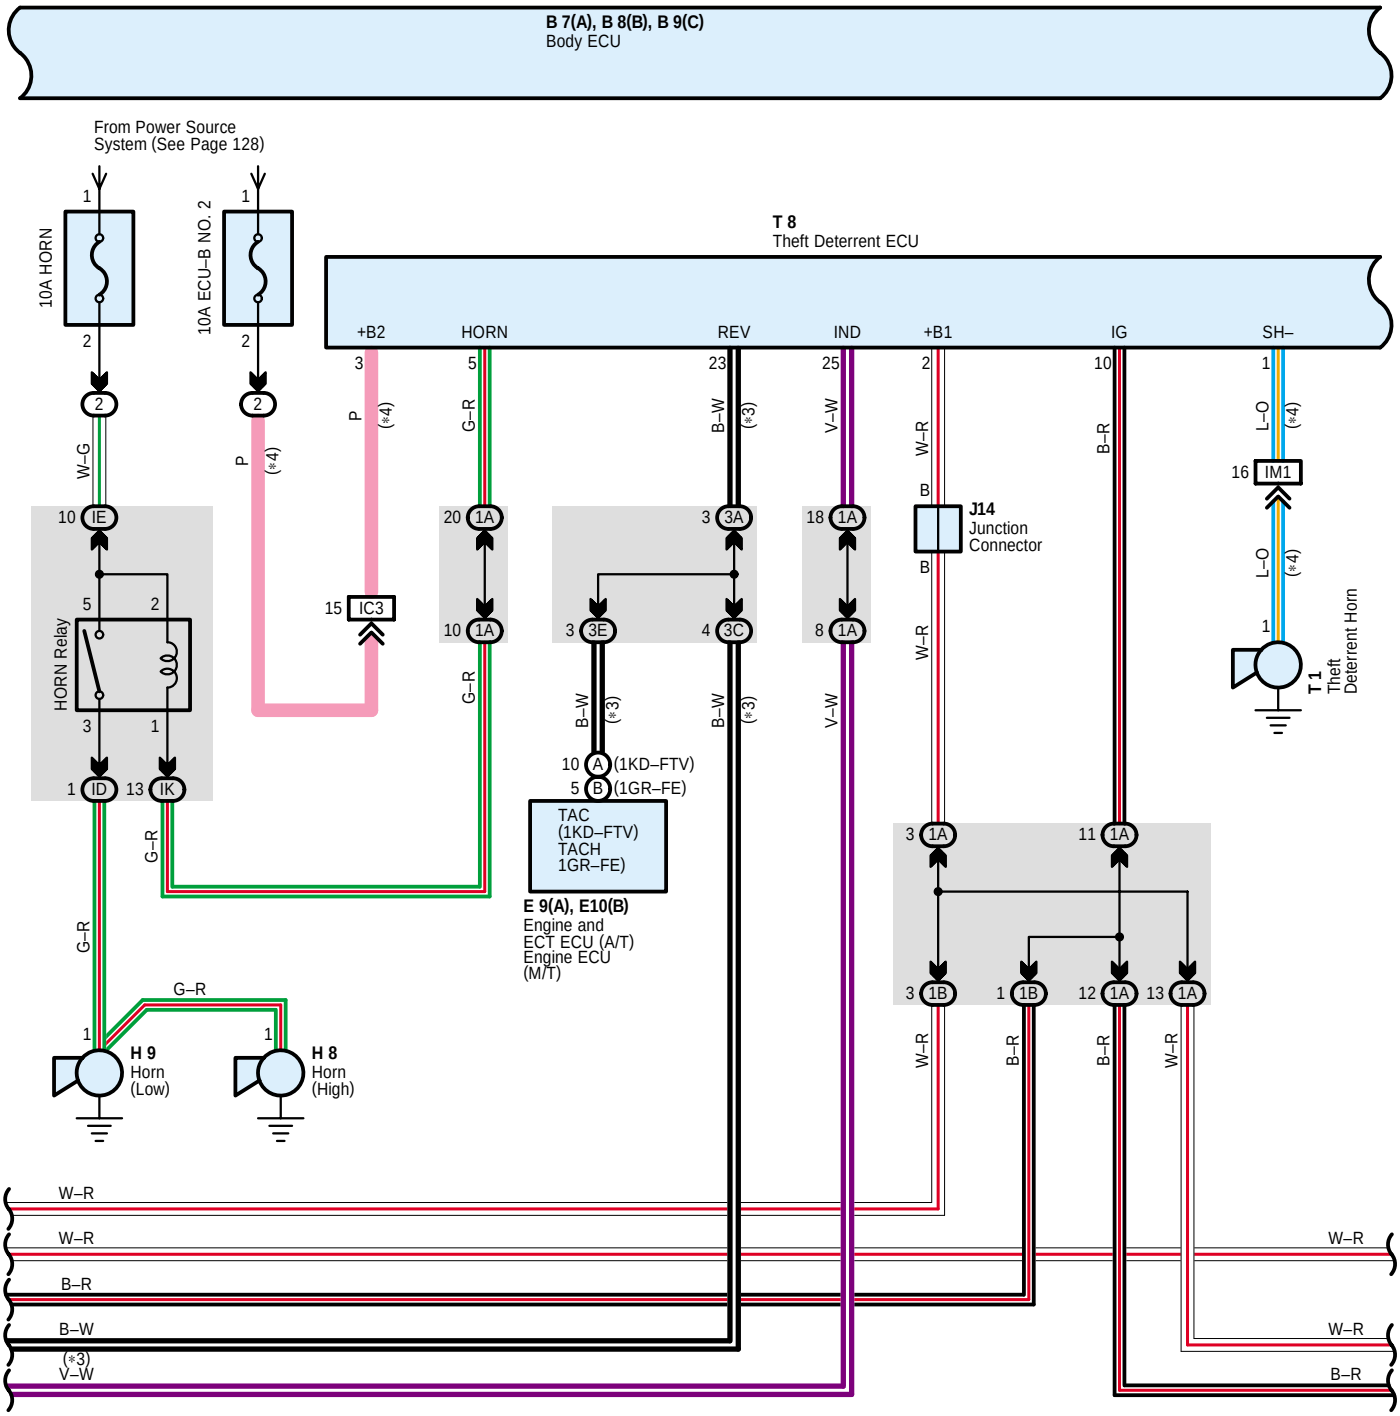


* 1 : 3RZ–FE Unleaded Gasoline
* 2 : 3RZ–FE Leaded Gasoline
* 3 : Europe
* 4 : Except Europe


Door Lock Control and Theft Deterrent (RHD)

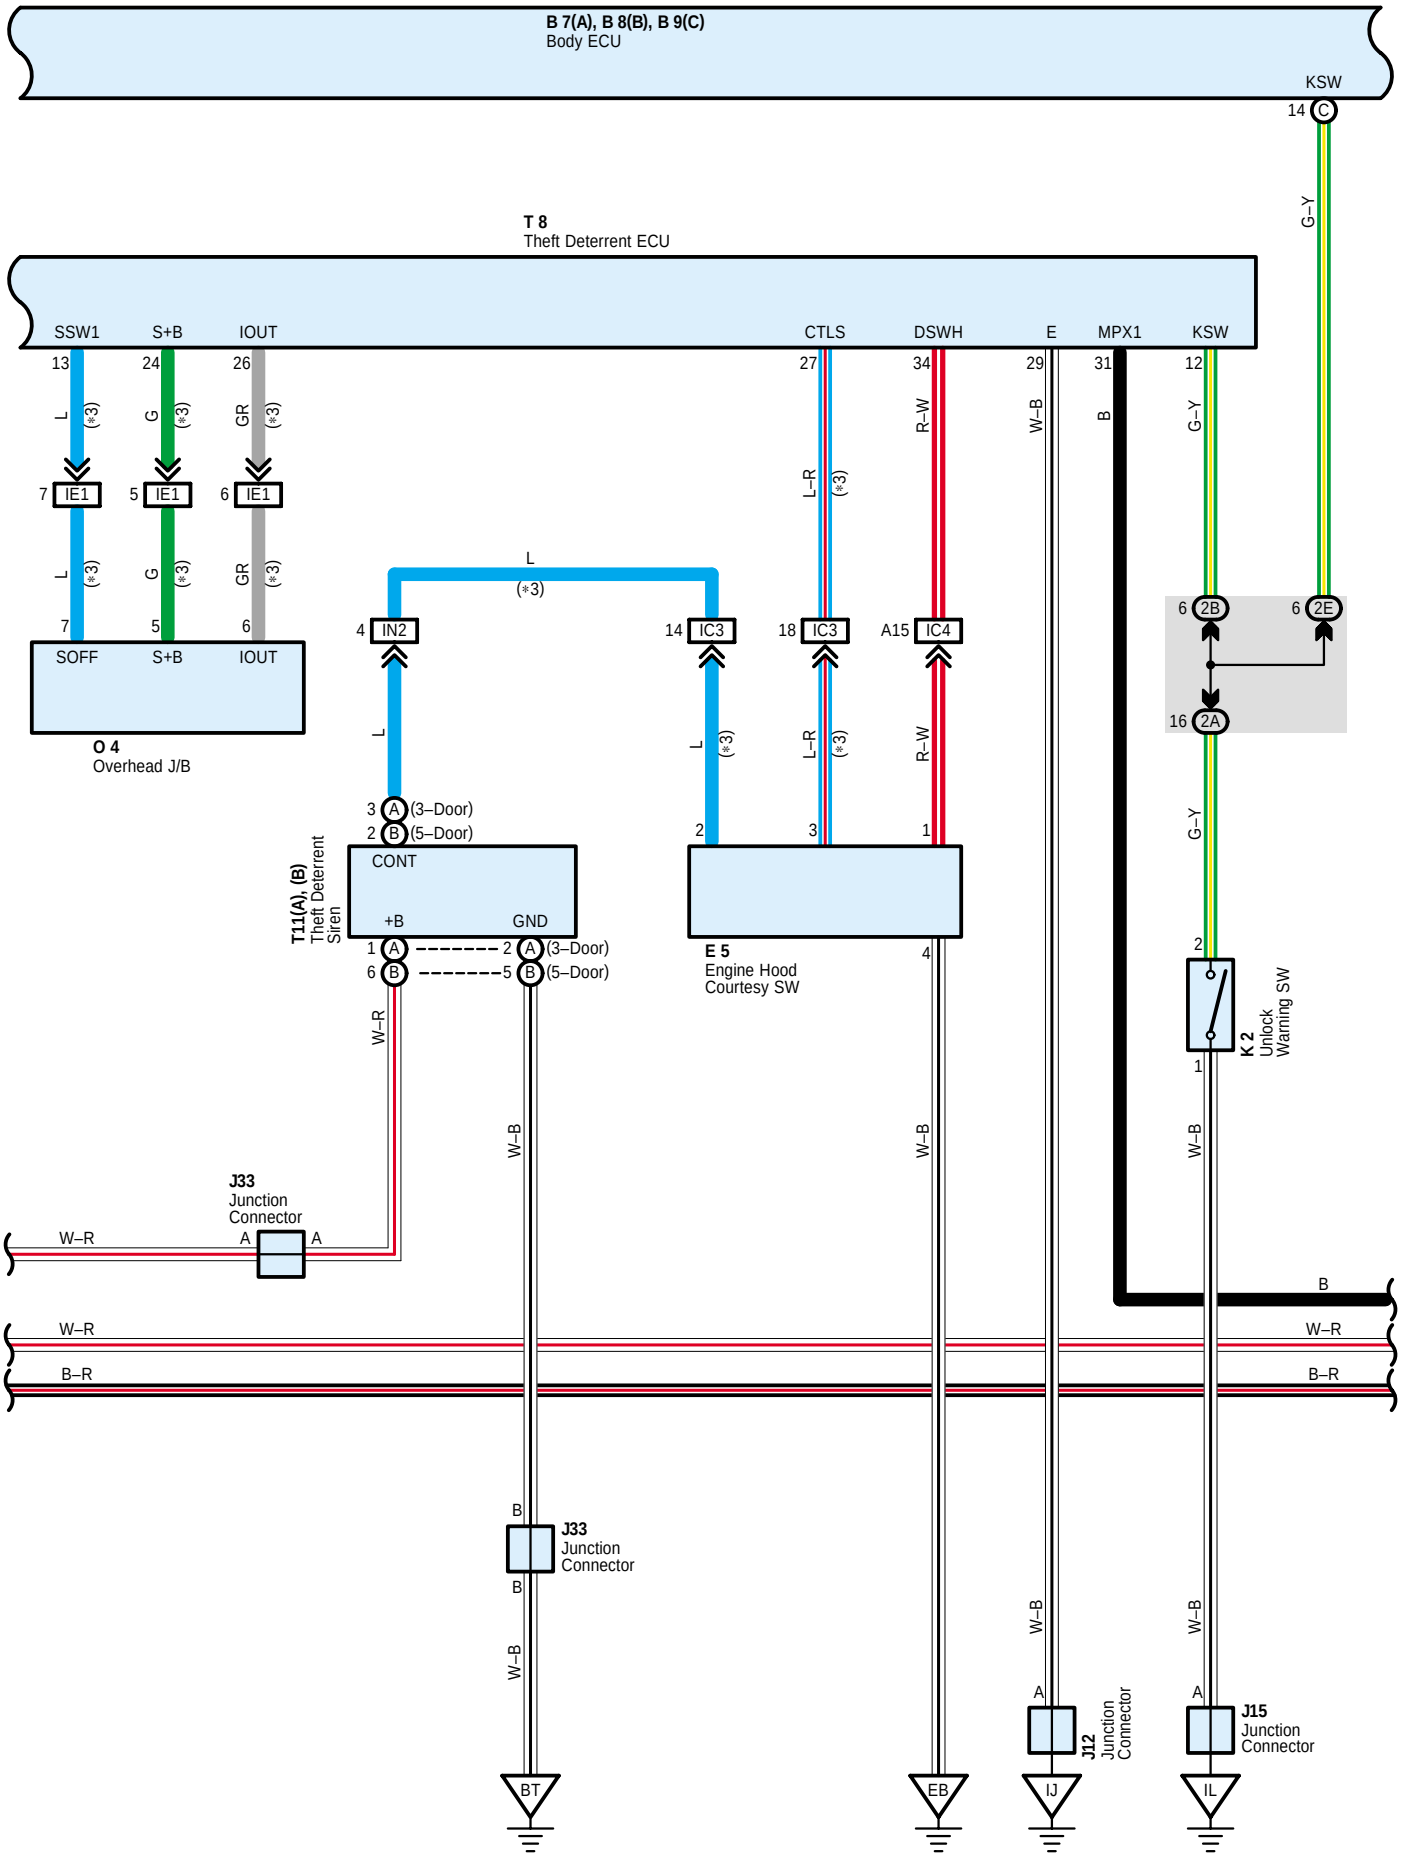

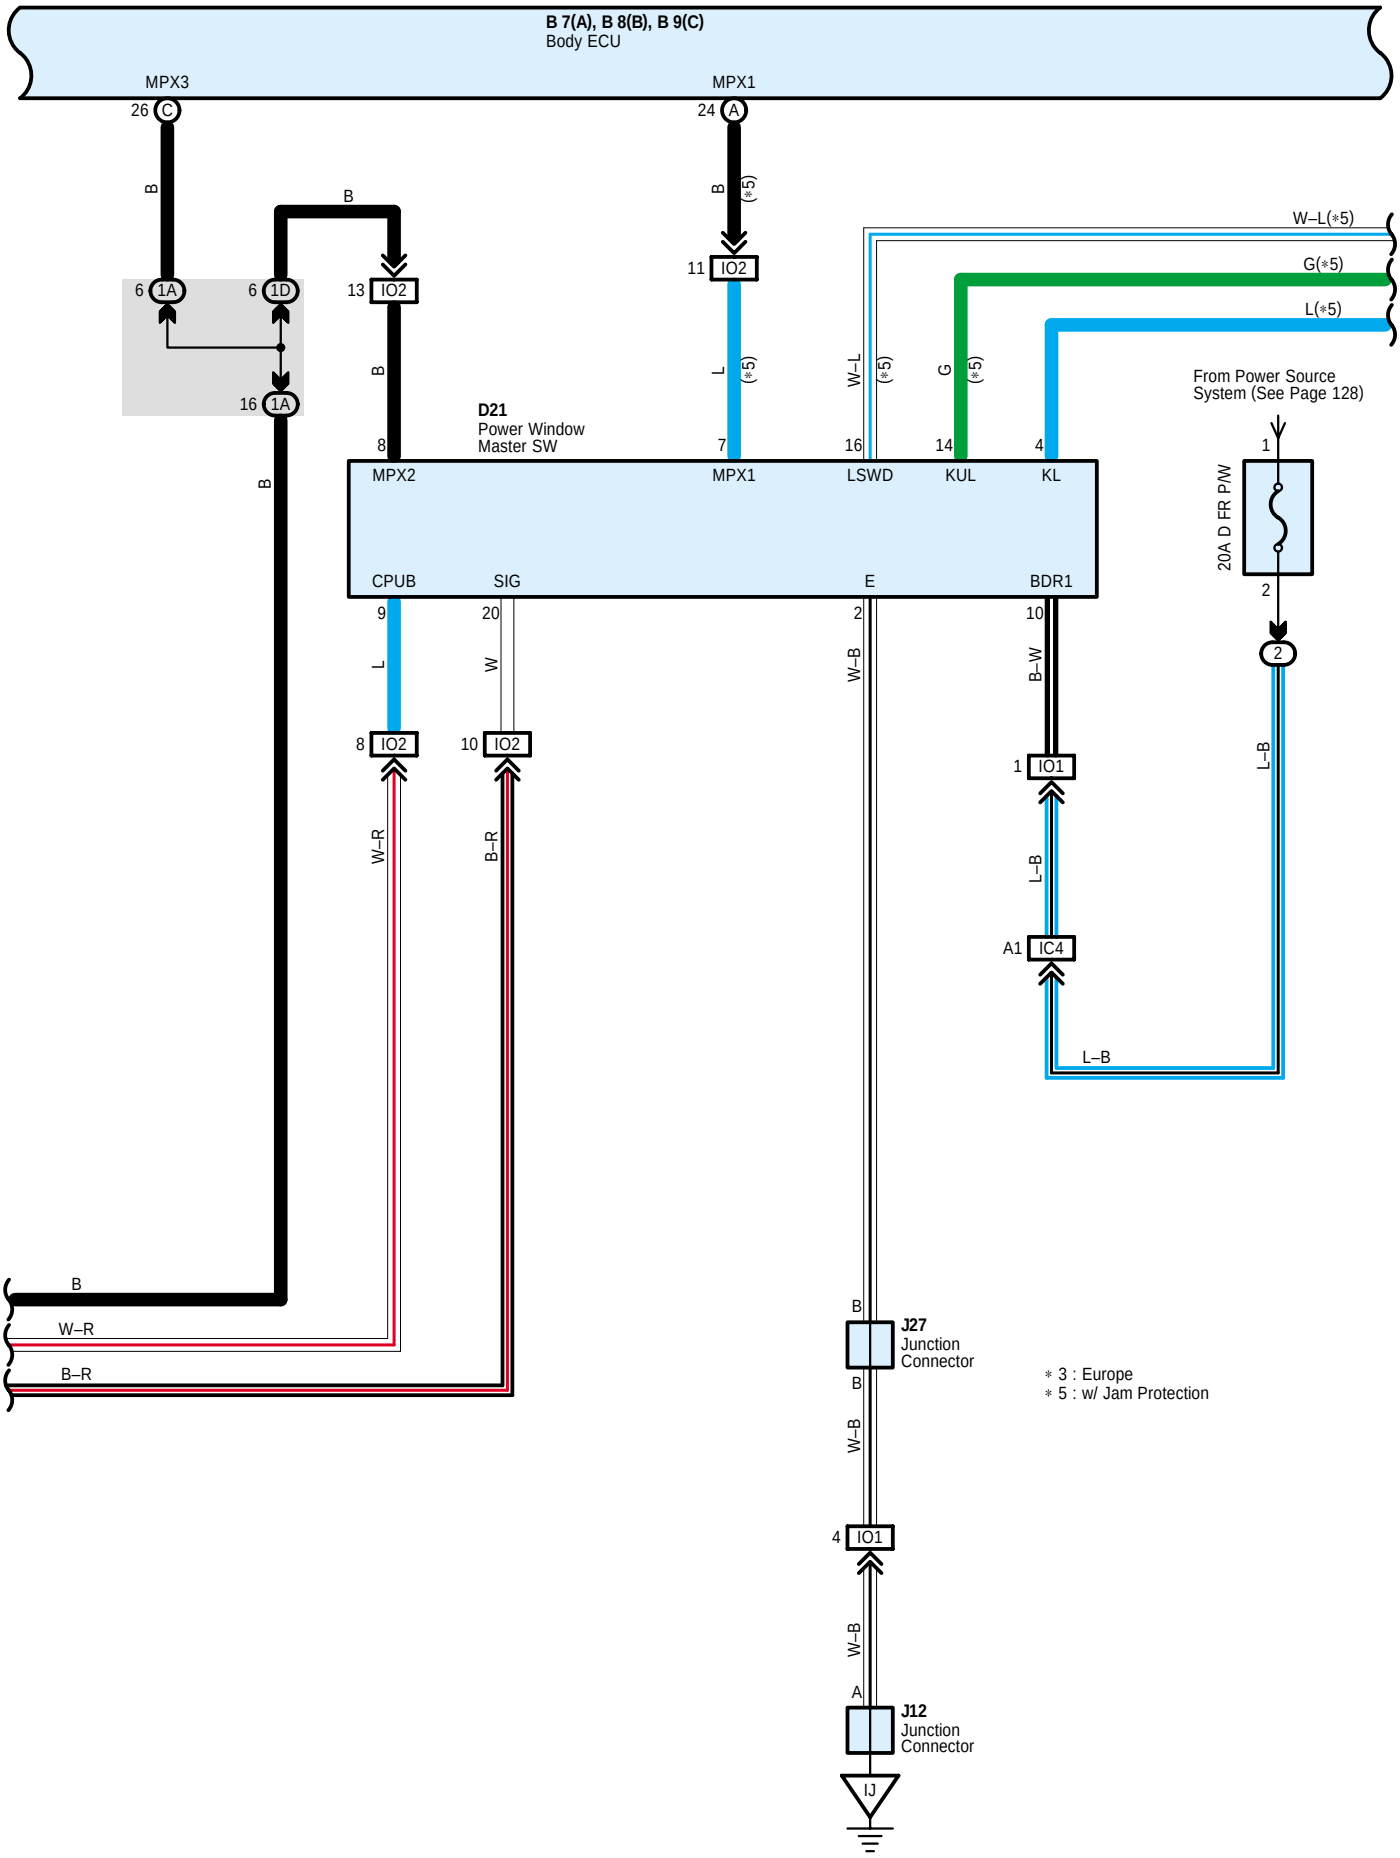
B 7(A), B 8(B), B 9(C)
Body ECU
MPX3
26 C
MPX1
24 A
B
B
B (*5)
6 1A
6 1D
13 IO2
11 IO2
16 1A
B
L (*5)
W–L (*5)
G (*5)
W–L(*5)
G(*5)
L(*5)
From Power Source System (See Page 128)
D21
Power Window Master SW
8
MPX2
7
MPX1
16
LSWD
14
KUL
4
KL
1
20A D FR P/W
2
2
CPUB
SIG
E
BDR1
9
20
2
10
L
W
W–B
B–W
8 IO2
10 IO2
1 IO1
L–B
W–R
B–R
L–B
A1 IC4
L–B
B
W–R
B–R
B
J27
Junction Connector
B
W–B
4 IO1
W–B
A
J12
Junction Connector
IJ
* 3 : Europe
* 5 : w/ Jam Protection

Door Lock Control and Theft Deterrent (RHD)

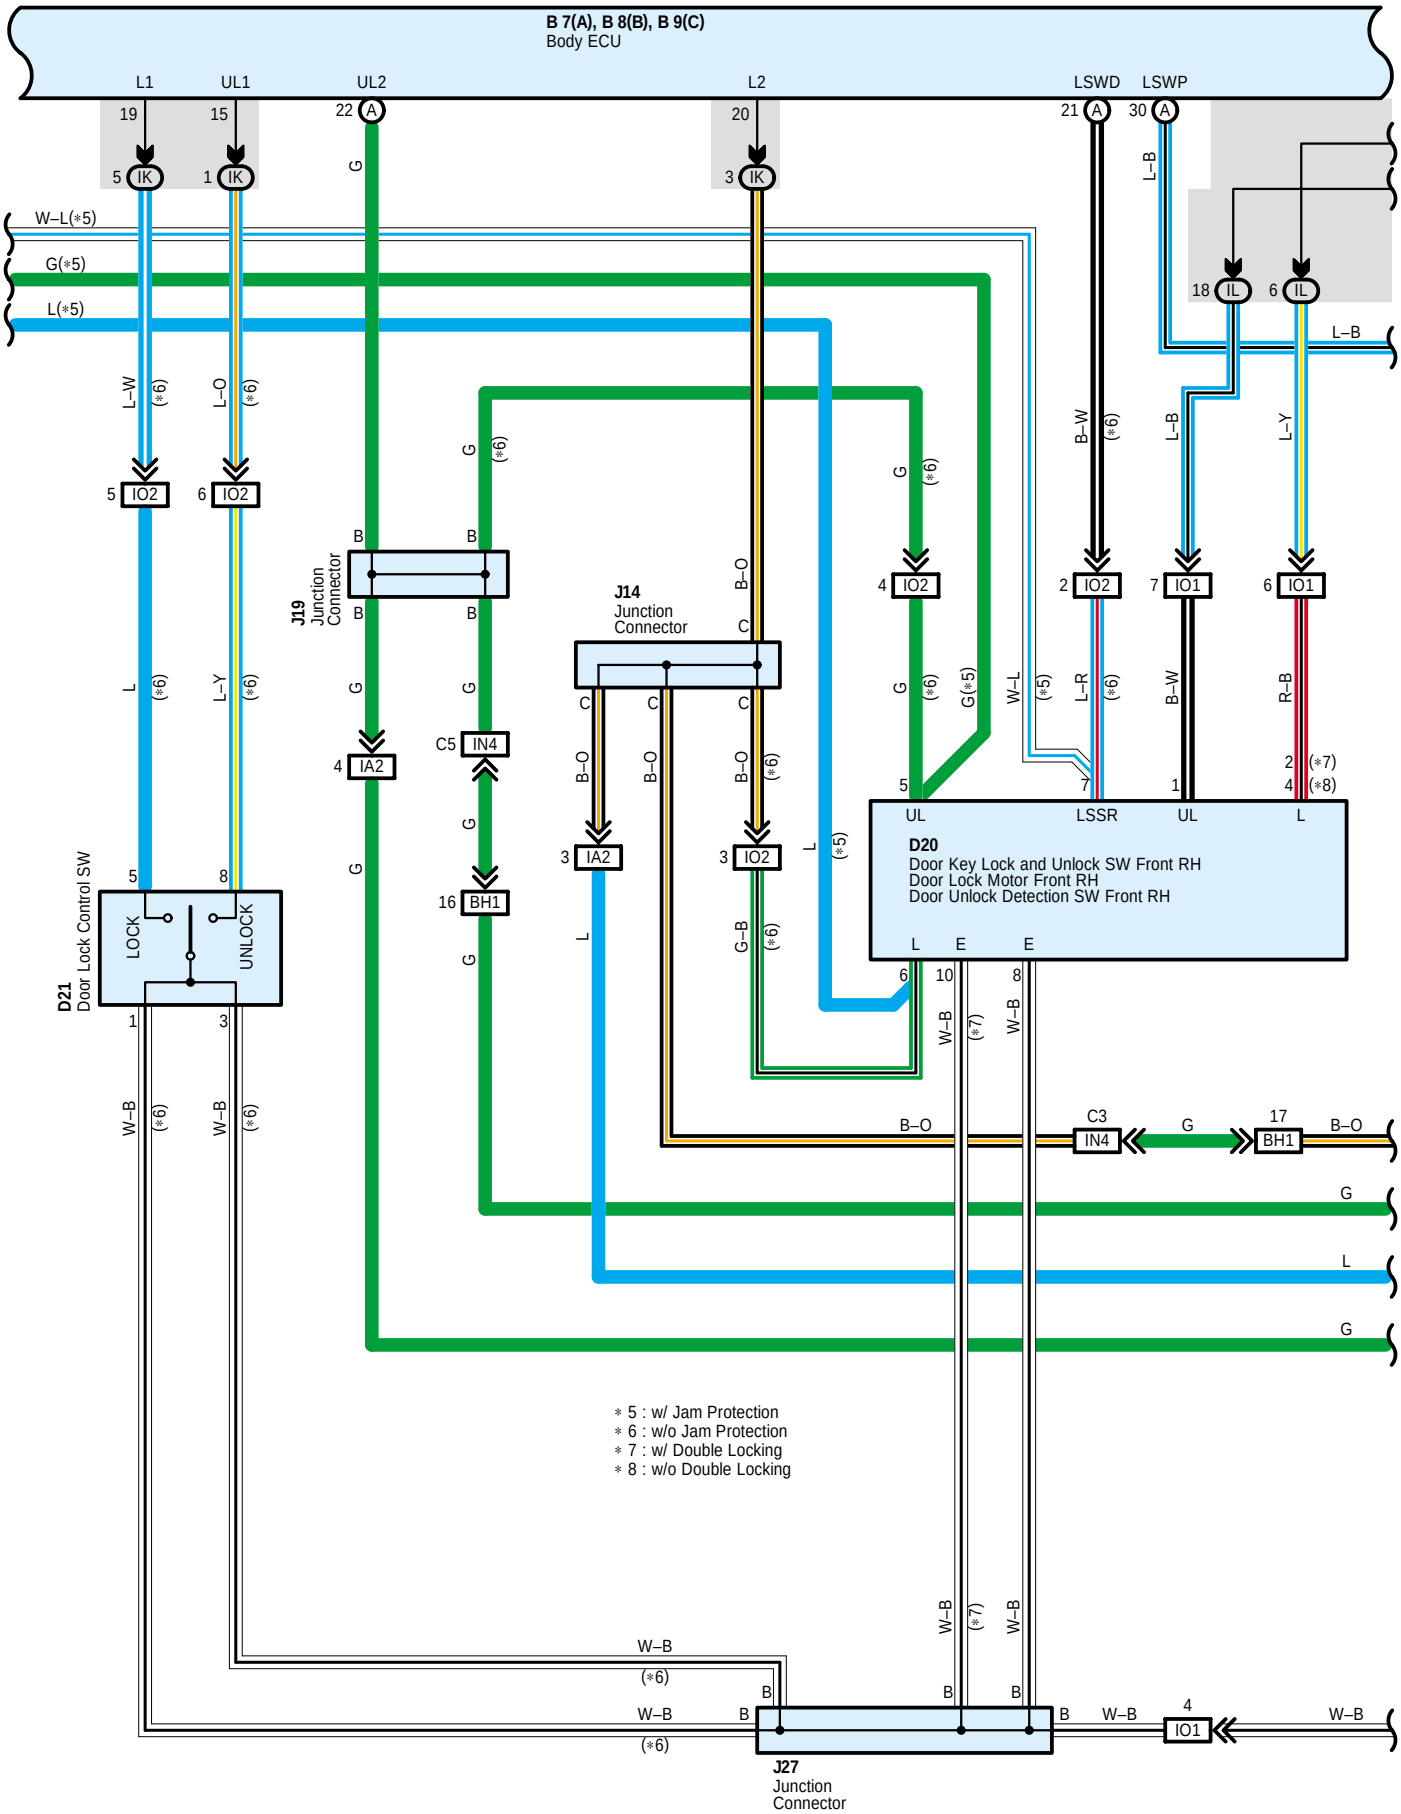

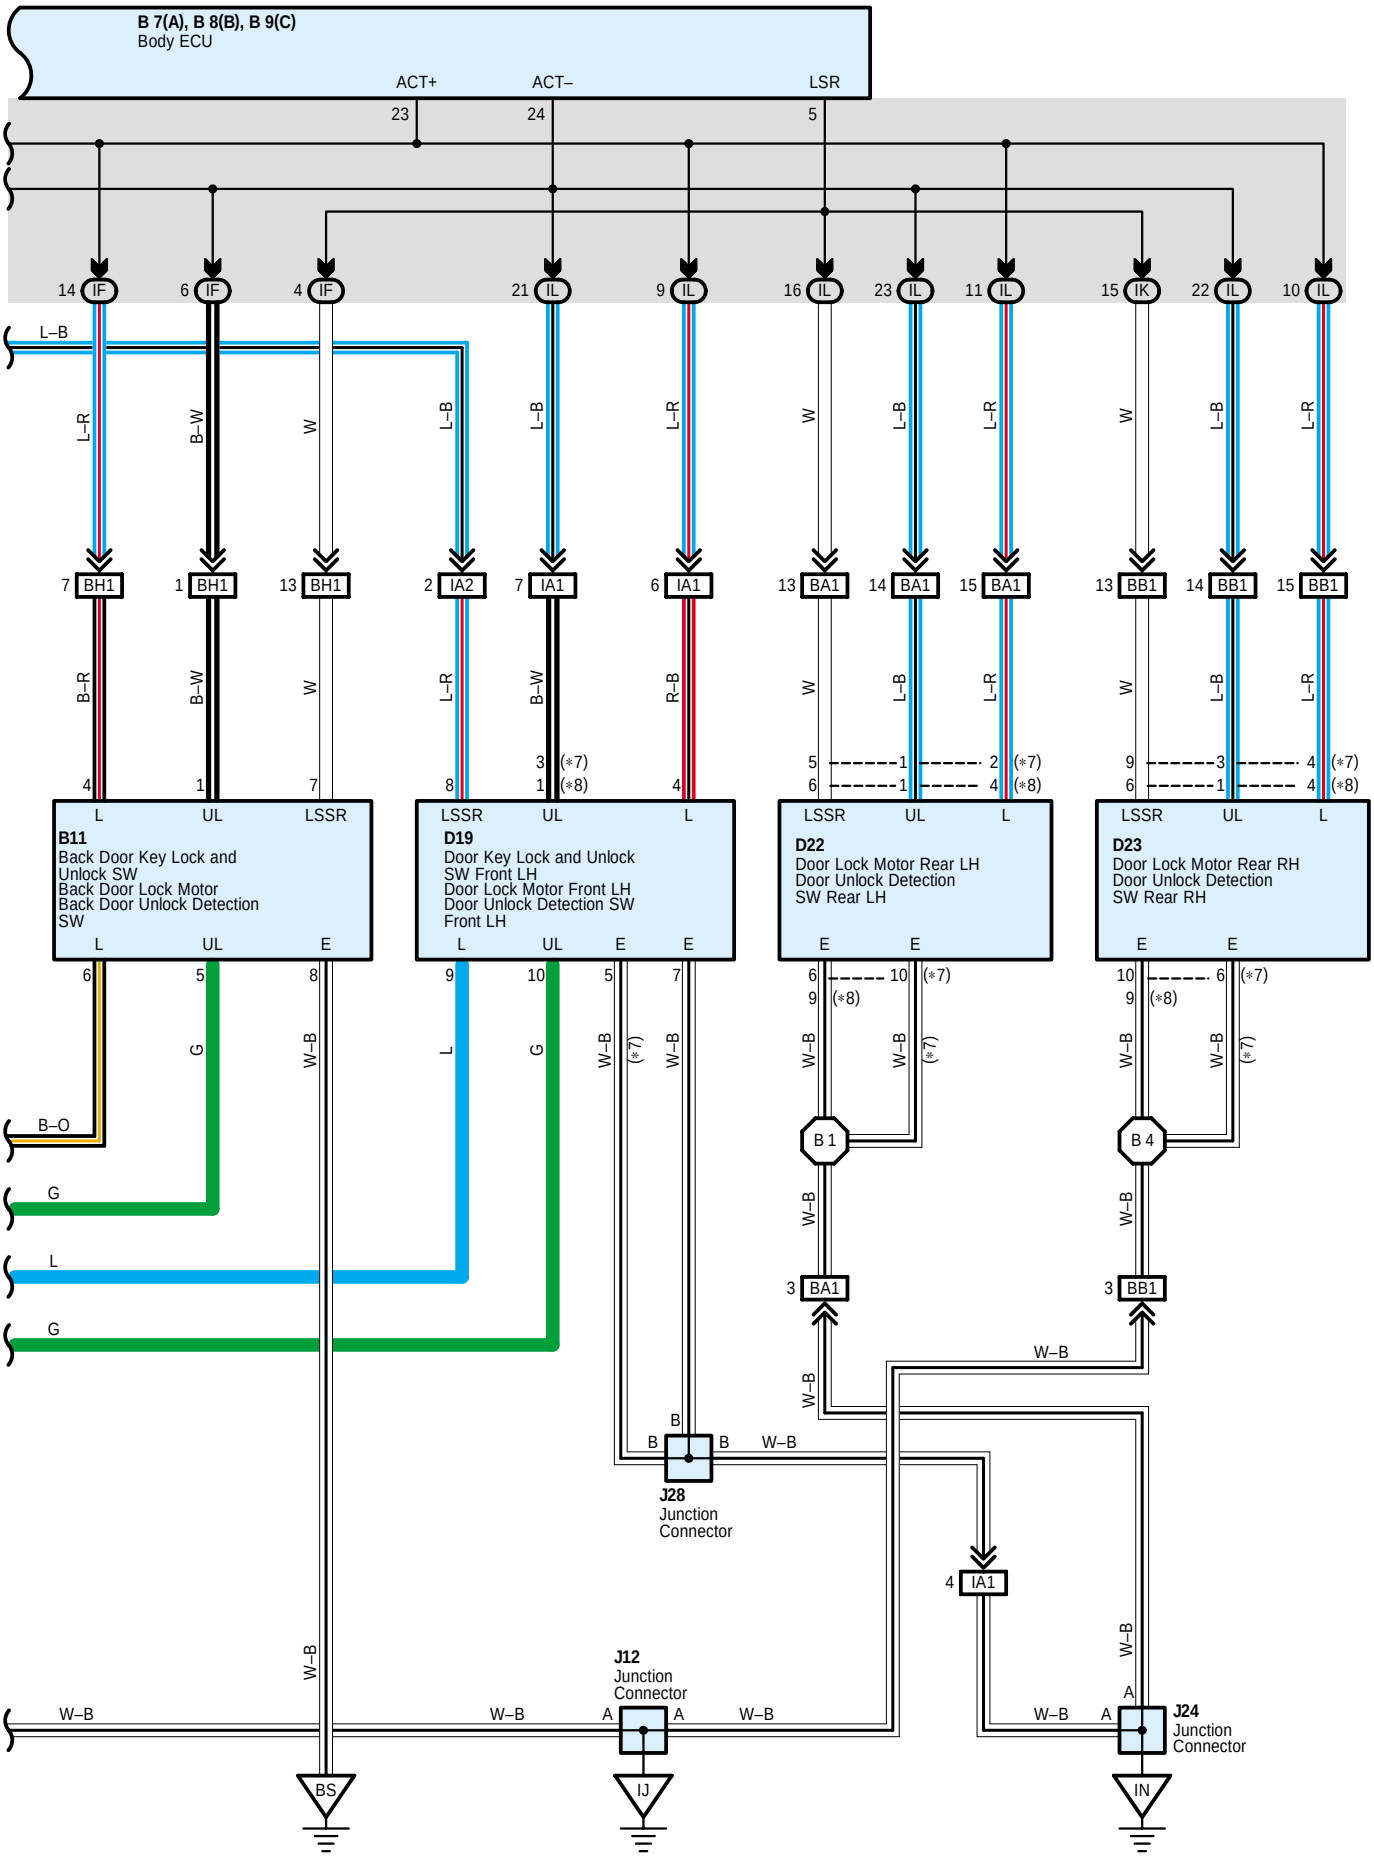
B 7(A), B 8(B), B 9(C)
Body ECU
ACT+
ACT–
LSR
23
24
5
14 IF
6 IF
4 IF
21 IL
9 IL
16 IL
23 IL
11 IL
15 IK
22 IL
10 IL
L–B
L–R
B–W
W
L–B
L–B
L–R
W
L–B
L–R
W
L–B
L–R
7 BH1
1 BH1
13 BH1
2 IA2
7 IA1
6 IA1
13 BA1
14 BA1
15 BA1
13 BB1
14 BB1
15 BB1
B–R
B–W
W
L–R
B–W
R–B
W
L–B
L–R
W
L–B
L–R
4
1
7
8
3 (*7)
1 (*8)
4
5
1
2 (*7)
6
1
4 (*8)
9
3
4 (*7)
6
1
4 (*8)
L
UL
LSSR
LSSR
UL
L
LSSR
UL
L
LSSR
UL
L
B11
Back Door Key Lock and Unlock SW
Back Door Lock Motor
Back Door Unlock Detection SW
D19
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D22
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
D23
Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
L
UL
E
L
UL
E
E
E
E
E
6
5
8
9
10
5
7
6
10 (*7)
9 (*8)
10
6 (*7)
9 (*8)
W–B
G
W–B
L
G
W–B
(*7)
W–B
W–B
(*7)
W–B
(*7)
W–B
(*7)
B–O
G
L
G
B 1
B 4
W–B
W–B
3 BA1
3 BB1
W–B
W–B
B
B
B
W–B
J28
Junction Connector
4 IA1
W–B
J12
Junction Connector
W–B
W–B
A
A
W–B
W–B
A
A
J24
Junction Connector
BS
IJ
IN