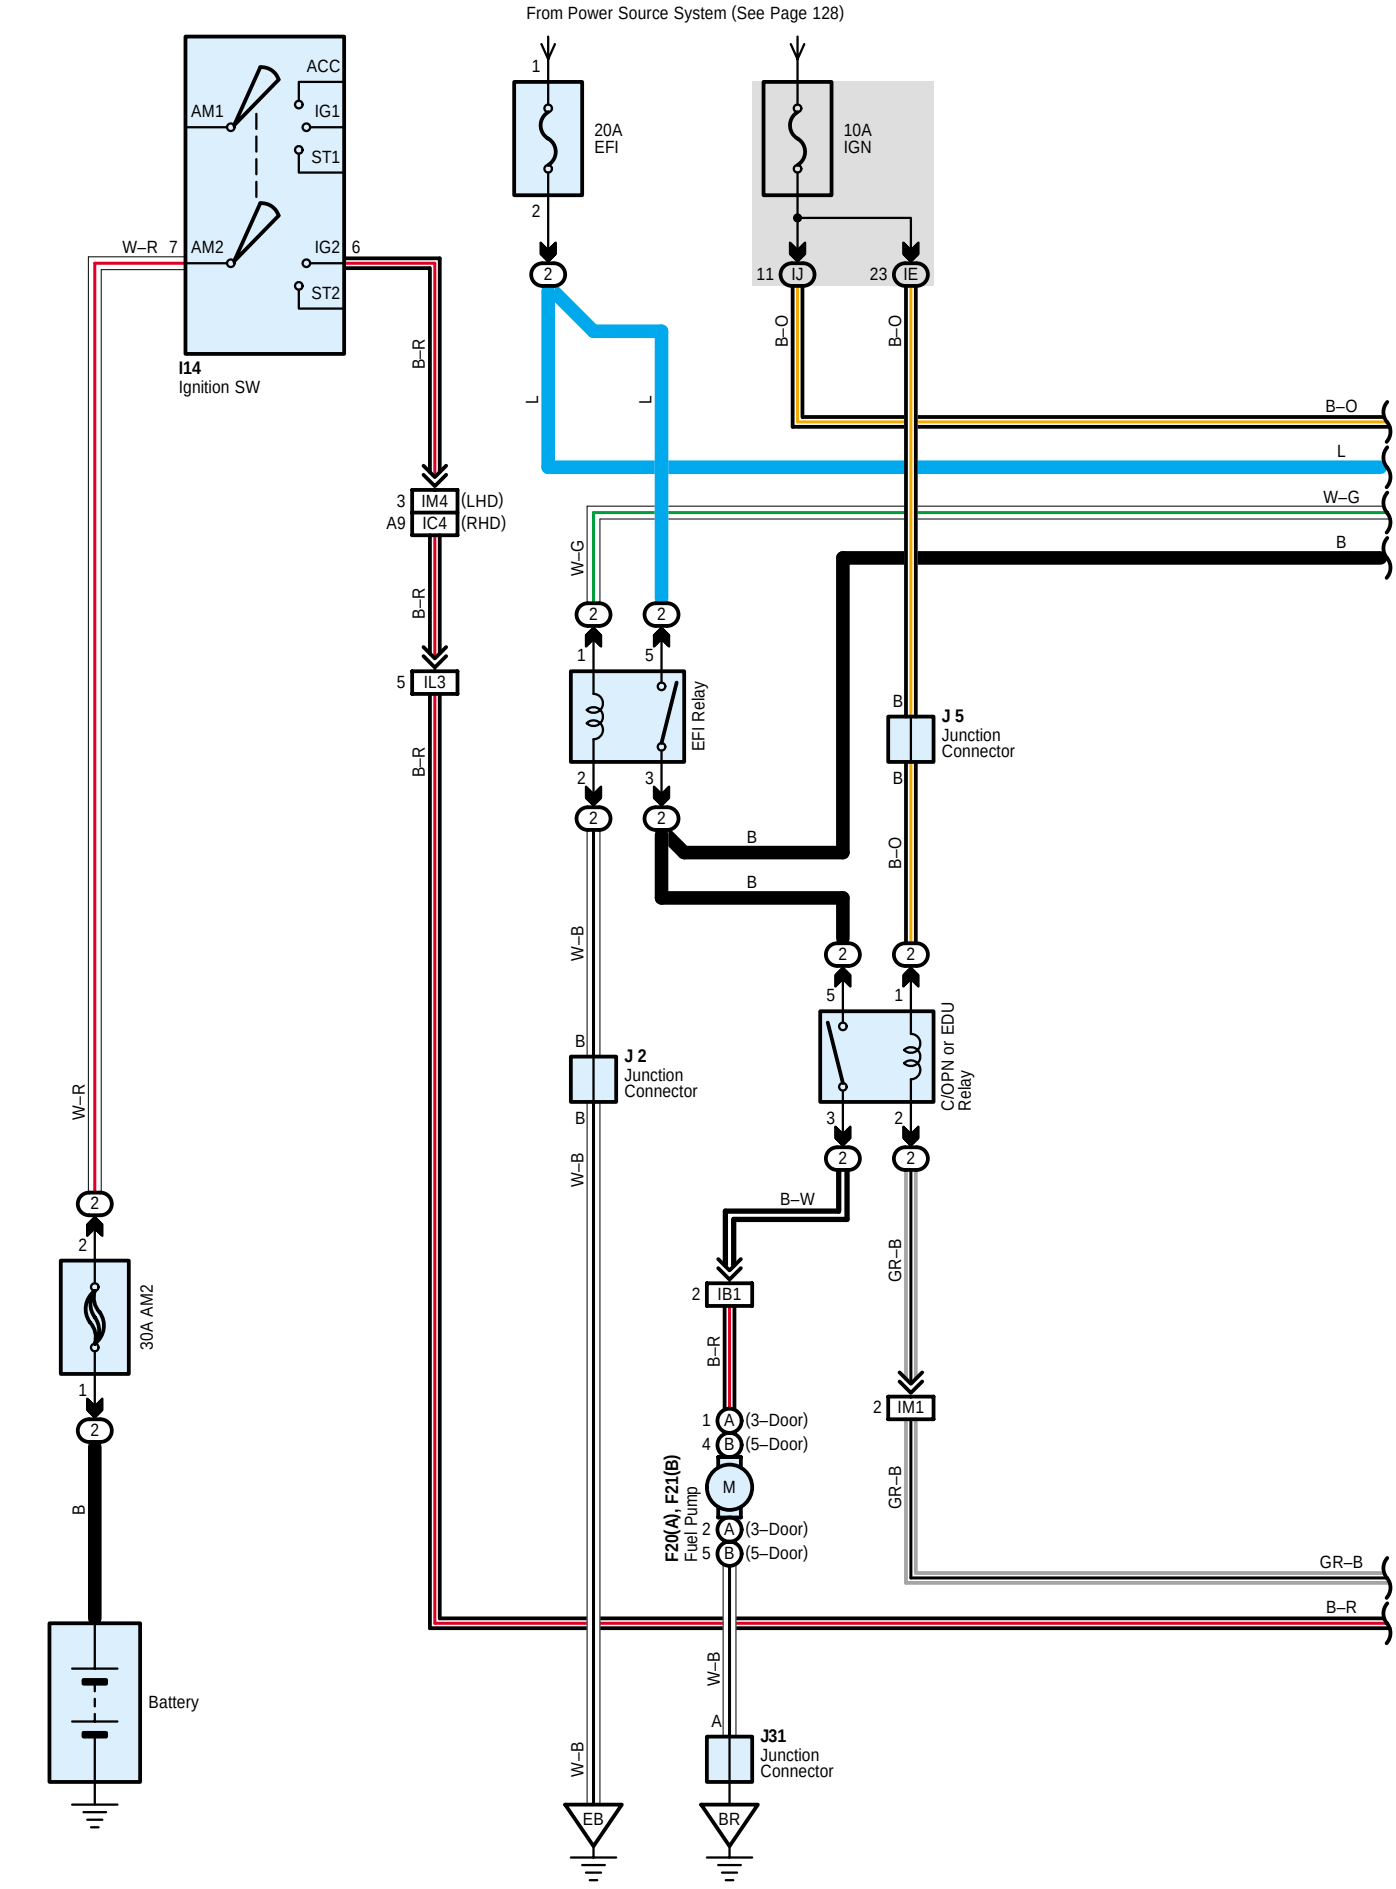
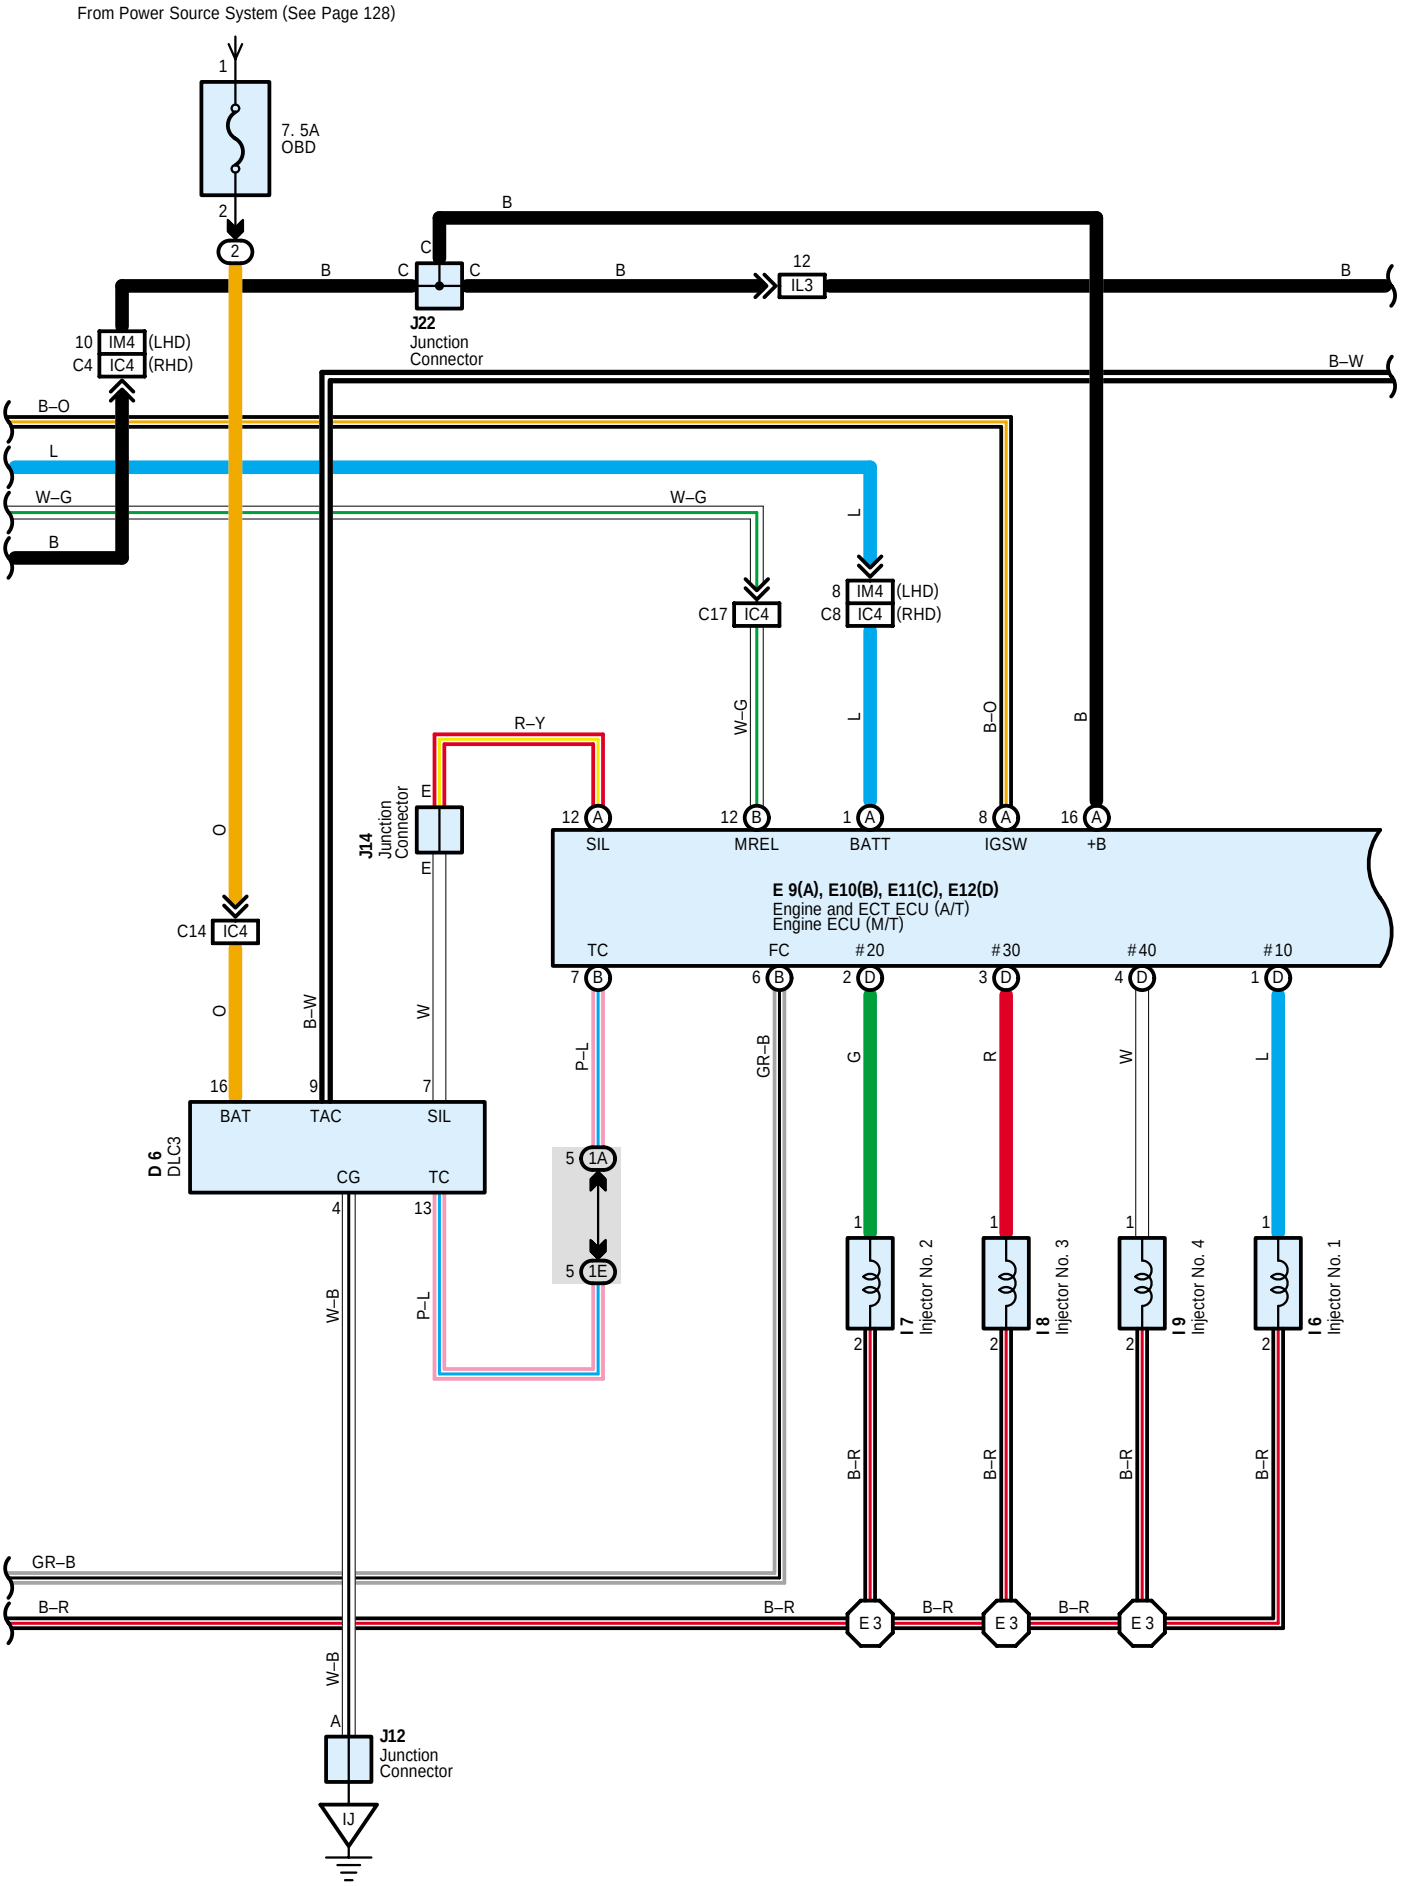
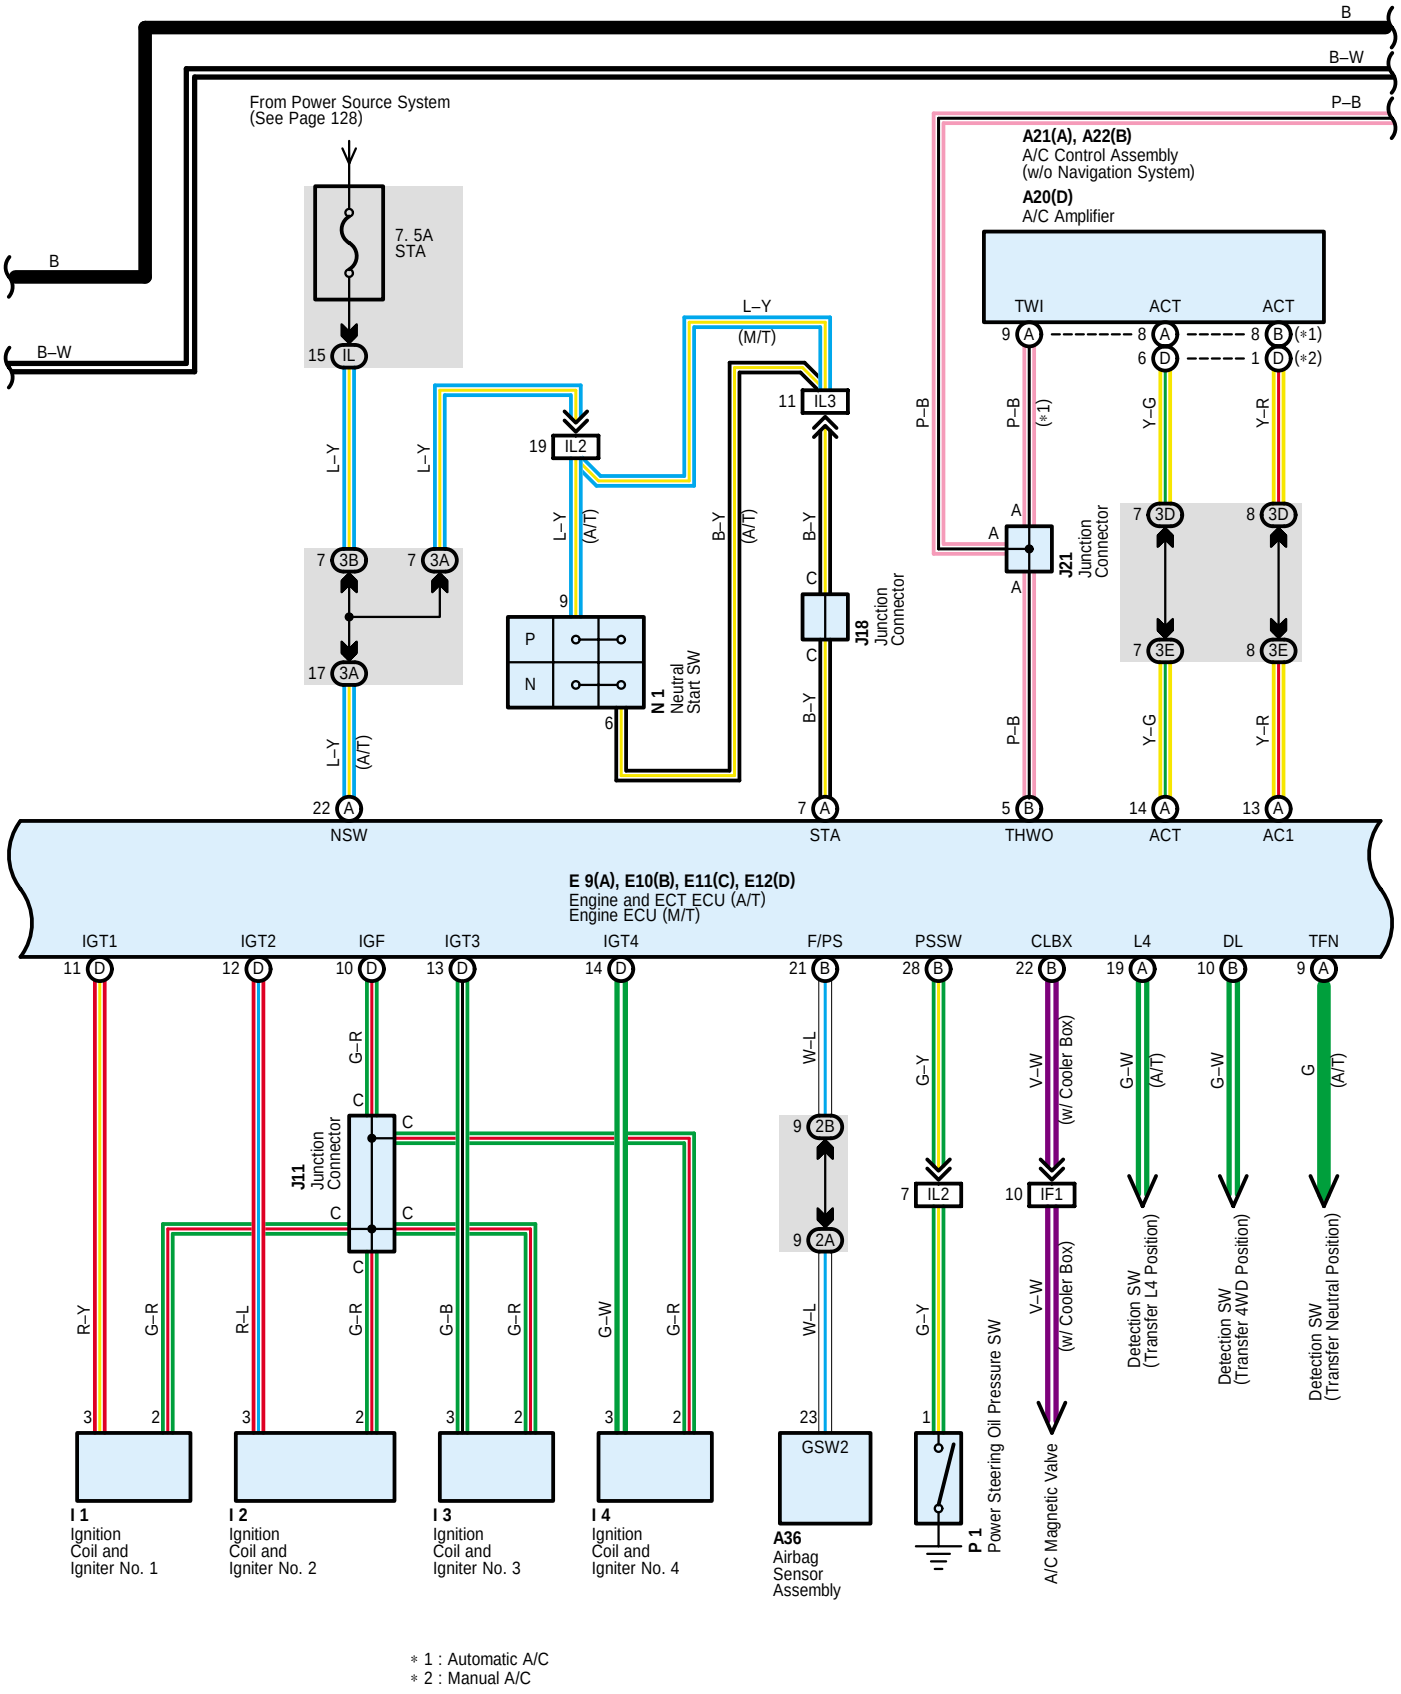
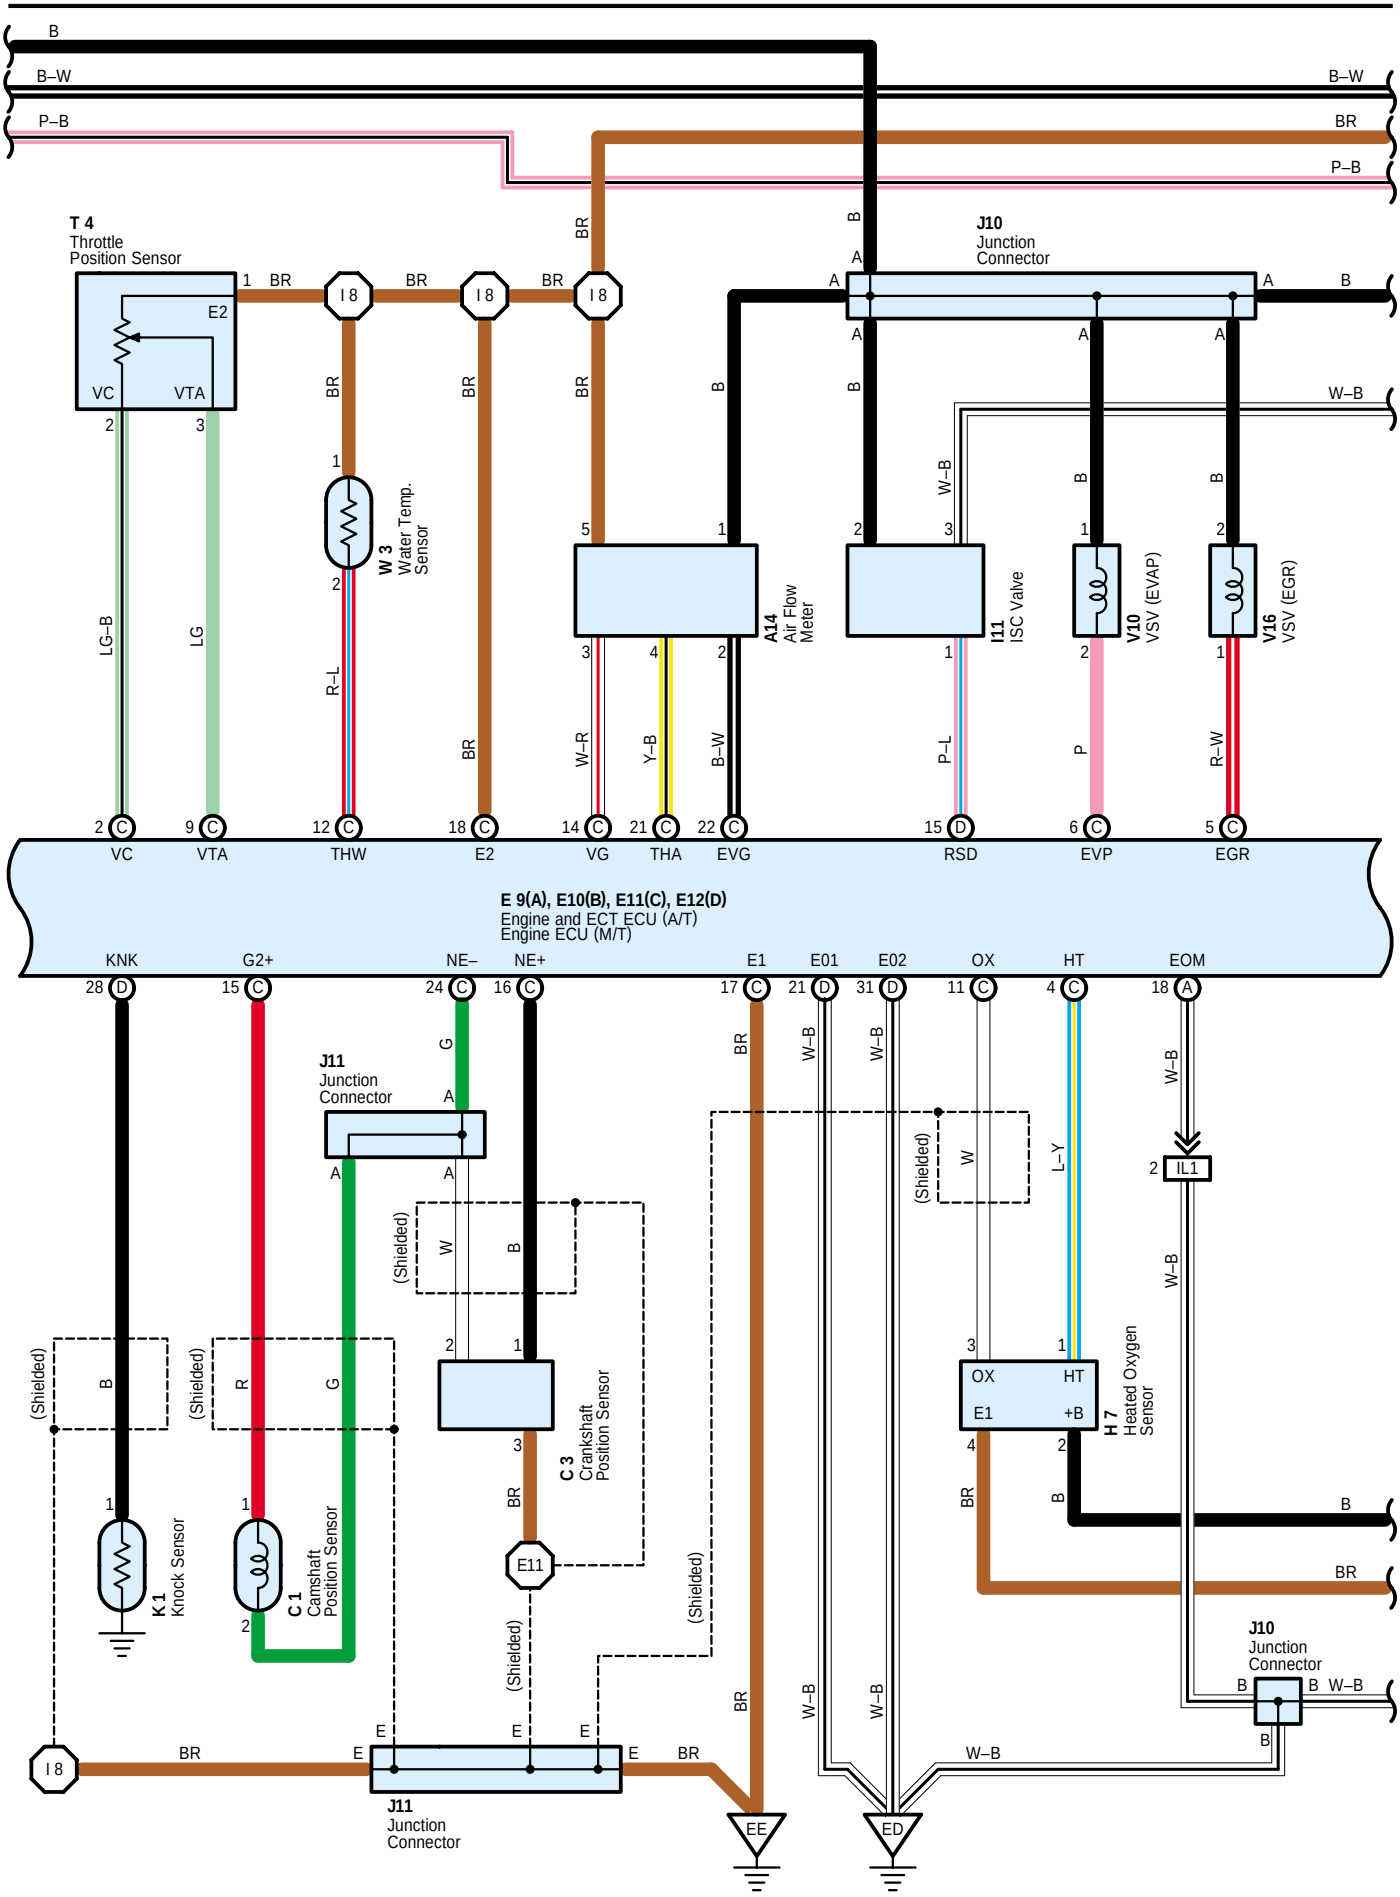
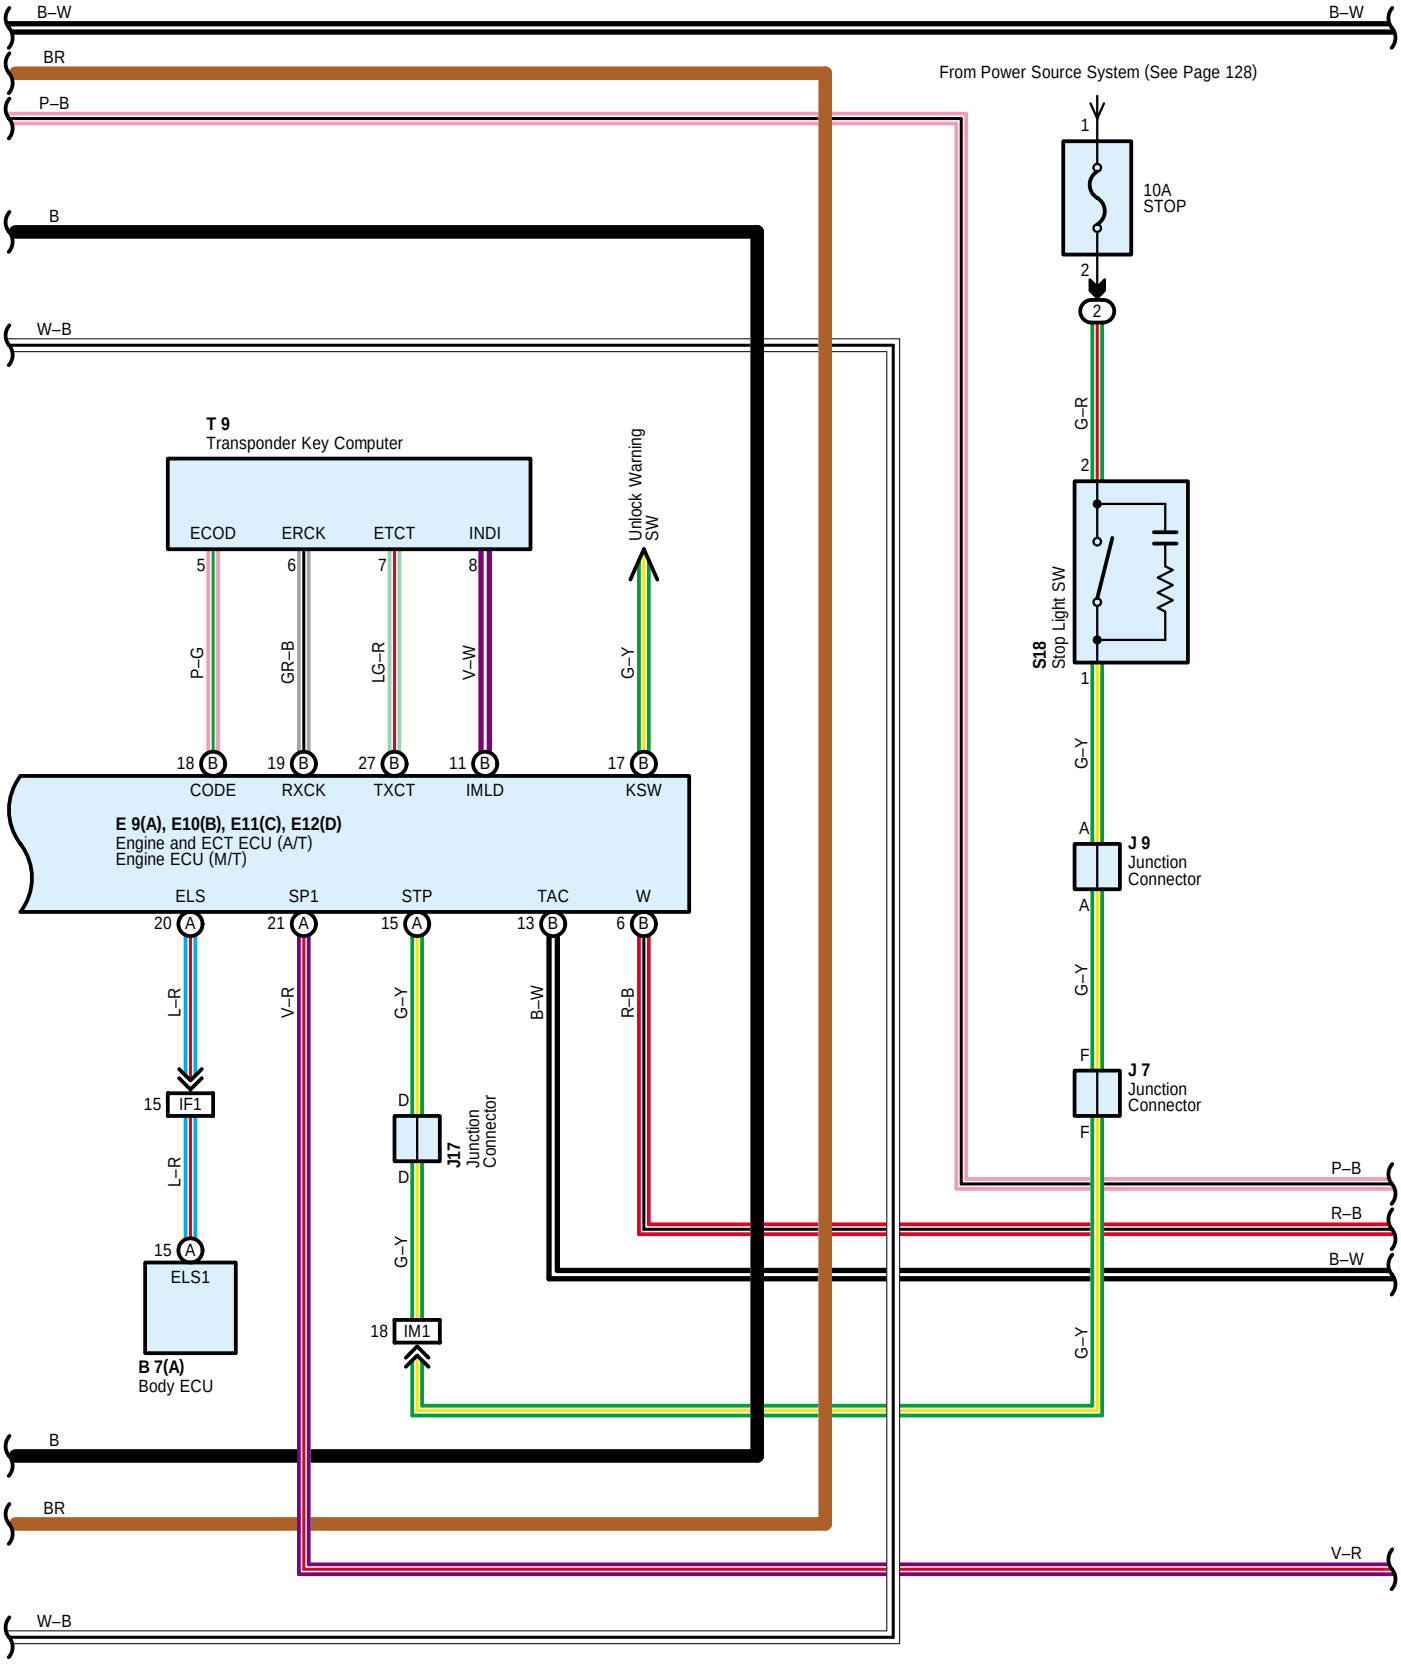

From Power Source System (See Page 128)
ACC
AM1
IG1
ST1
W–R 7
AM2
IG2 6
ST2
I14
Ignition SW
1
20A
EFI
2
10A
IGN
11 IJ
23 IE
B–O
B–O
B–R
L
L
B–O
L
W–G
B
3 IM4 (LHD)
A9 IC4 (RHD)
B–R
5 IL3
B–R
W–G
2
2
1
5
EFI Relay
2
3
2
2
B
B
B
J 5
Junction
Connector
B
B–O
W–B
B
J 2
Junction
Connector
B
W–B
2
2
5
1
C/OPN or EDU
Relay
3
2
2
2
B–W
GR–B
W–R
2
30A AM2
1
2
B
2 IB1
B–R
2 IM1
1 A (3–Door)
4 B (5–Door)
M
F20(A), F21(B)
Fuel Pump
2 A (3–Door)
5 B (5–Door)
GR–B
GR–B
B–R
W–B
A
J31
Junction
Connector
W–B
Battery
EB
BR

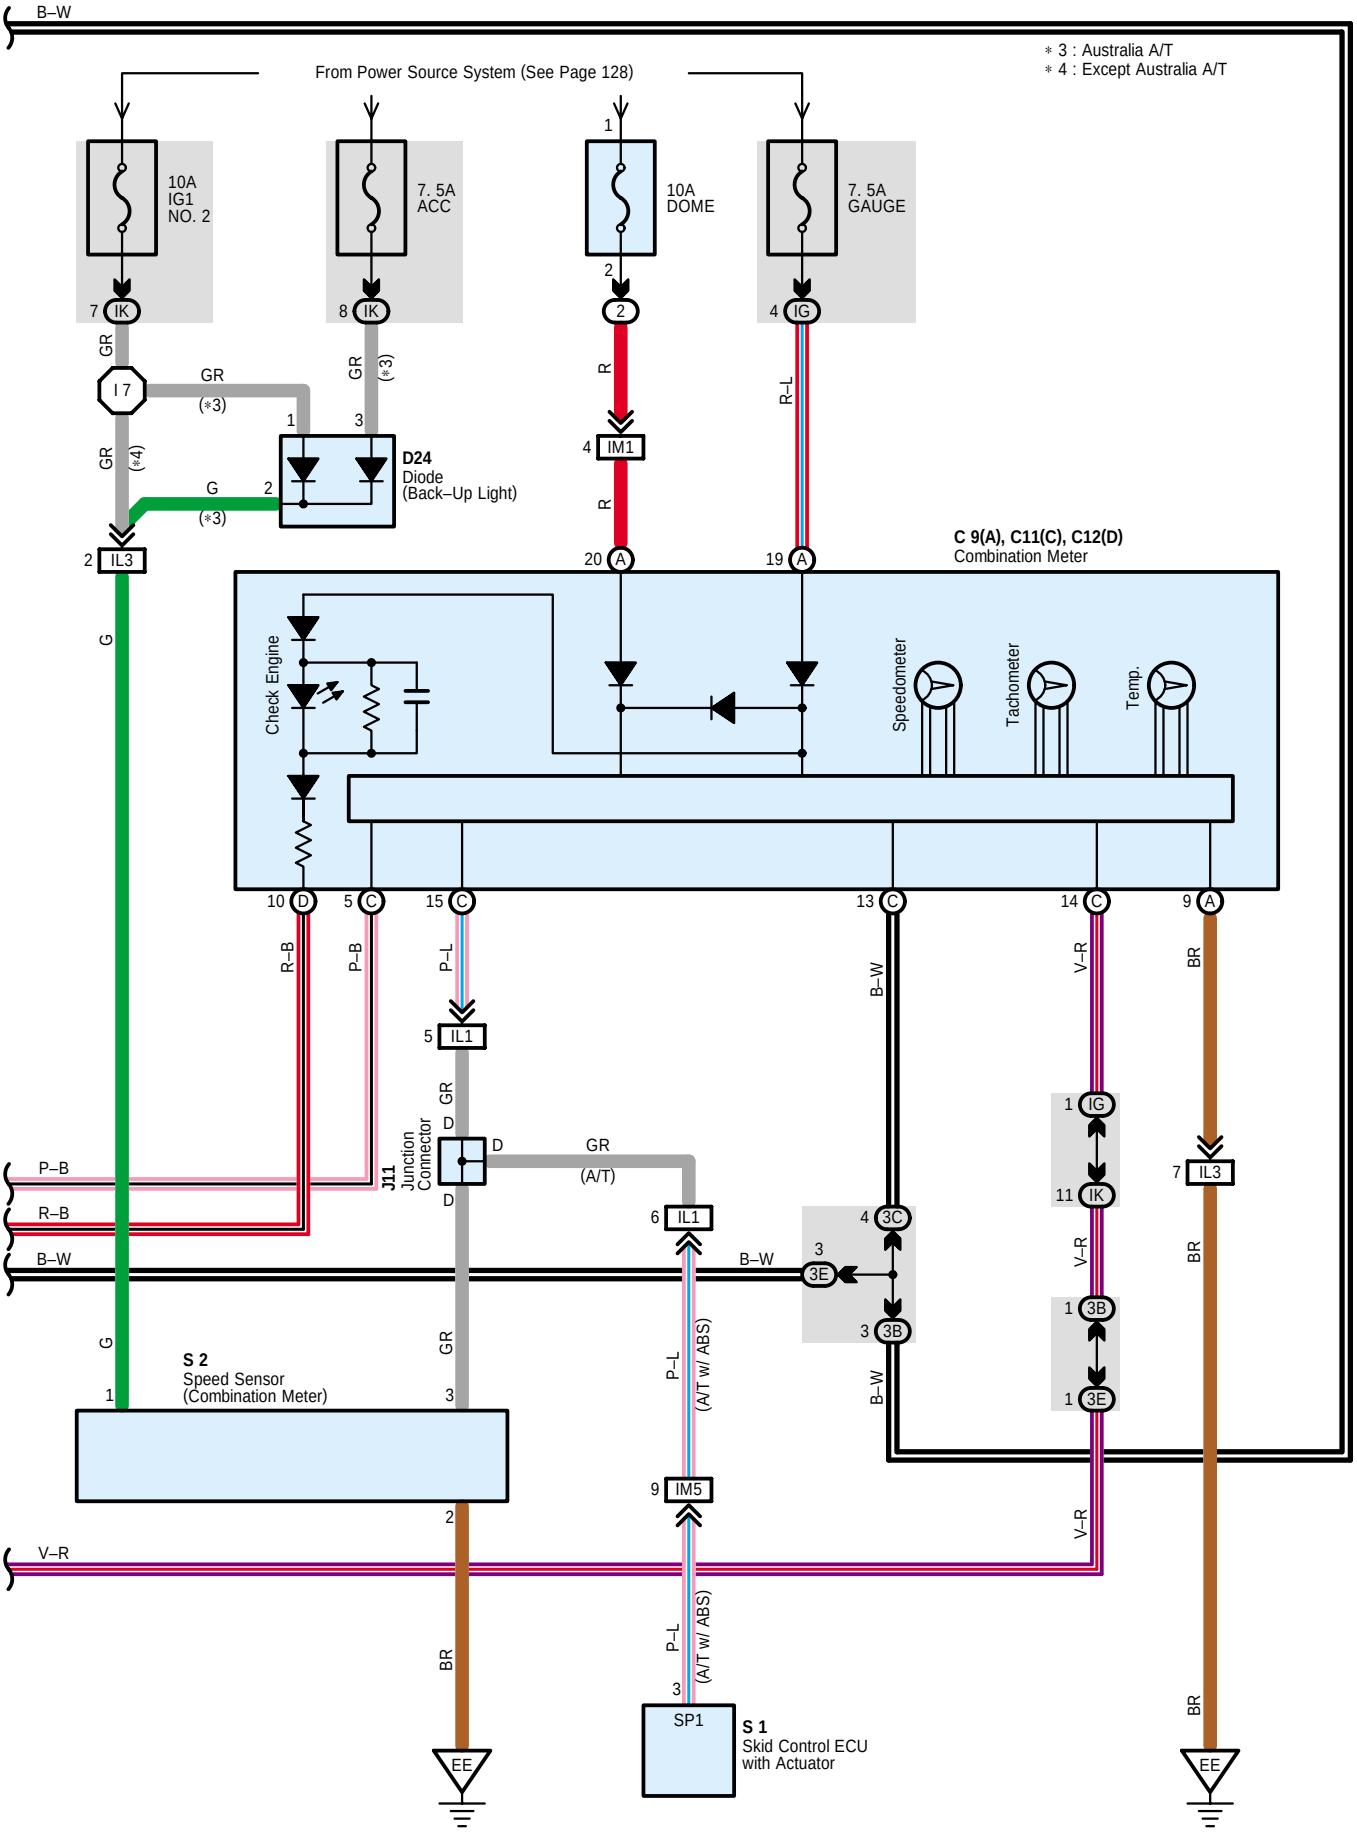

From Power Source System (See Page 128)
7. 5A
OBD
J22
Junction
Connector
IL3
10 IM4 (LHD)
C4 IC4 (RHD)
C14 IC4
C17 IC4
8 IM4 (LHD)
C8 IC4 (RHD)
J14
Junction
Connector
E 9(A), E10(B), E11(C), E12(D)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
SIL
MREL
BATT
IGSW
+B
TC
FC
#20
#30
#40
#10
D 6
DLC3
BAT
TAC
SIL
CG
TC
J12
Junction
Connector
I 7 Injector No. 2
I 8 Injector No. 3
I 9 Injector No. 4
I 6 Injector No. 1
E 3
B
B–W
B–O
L
W–G
R–Y
W
P–L
G
R
GR–B
B–R
W–B
O




* 1 : Automatic A/C
* 2 : Manual A/C


T 4
Throttle
Position Sensor
E2
VC
VTA
J10
Junction
Connector
W 3
Water Temp.
Sensor
A14
Air Flow
Meter
I11
ISC Valve
V10
VSV (EVAP)
V16
VSV (EGR)
VC
VTA
THW
E2
VG
THA
EVG
RSD
EVP
EGR
E 9(A), E10(B), E11(C), E12(D)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
KNK
G2+
NE–
NE+
E1
E01
E02
OX
HT
EOM
J11
Junction
Connector
(Shielded)
C 3
Crankshaft
Position Sensor
K1
Knock Sensor
C 1
Camshaft
Position Sensor
H 7
Heated Oxygen
Sensor
OX
HT
E1
+B
IL1
E11
EE
ED


B–W
B–W
BR
P–B
From Power Source System (See Page 128)
1
10A
STOP
2
2
B
W–B
G–R
2
T 9
Transponder Key Computer
ECOD
ERCK
ETCT
INDI
Unlock Warning SW
5
6
7
8
P–G
GR–B
LG–R
V–W
G–Y
S18
Stop Light SW
1
18 B
19 B
27 B
11 B
17 B
CODE
RXCK
TXCT
IMLD
KSW
G–Y
A
J 9
Junction Connector
A
E 9(A), E10(B), E11(C), E12(D)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
ELS
SP1
STP
TAC
W
20 A
21 A
15 A
13 B
6 B
G–Y
F
J 7
Junction Connector
F
L–R
V–R
G–Y
B–W
R–B
15
IF1
D
J17
Junction Connector
D
P–B
R–B
B–W
L–R
15 A
ELS1
G–Y
18
IM1
B 7(A)
Body ECU
G–Y
B
BR
V–R
W–B


B–W
From Power Source System (See Page 128)
* 3 : Australia A/T
* 4 : Except Australia A/T
10A
IG1
NO. 2
7. 5A
ACC
10A
DOME
7. 5A
GAUGE
D24
Diode
(Back–Up Light)
C 9(A), C11(C), C12(D)
Combination Meter
Check Engine
Speedometer
Tachometer
Temp.
Junction Connector
J11
S 2
Speed Sensor
(Combination Meter)
S 1
Skid Control ECU
with Actuator
(A/T w/ ABS)
(A/T)
EE