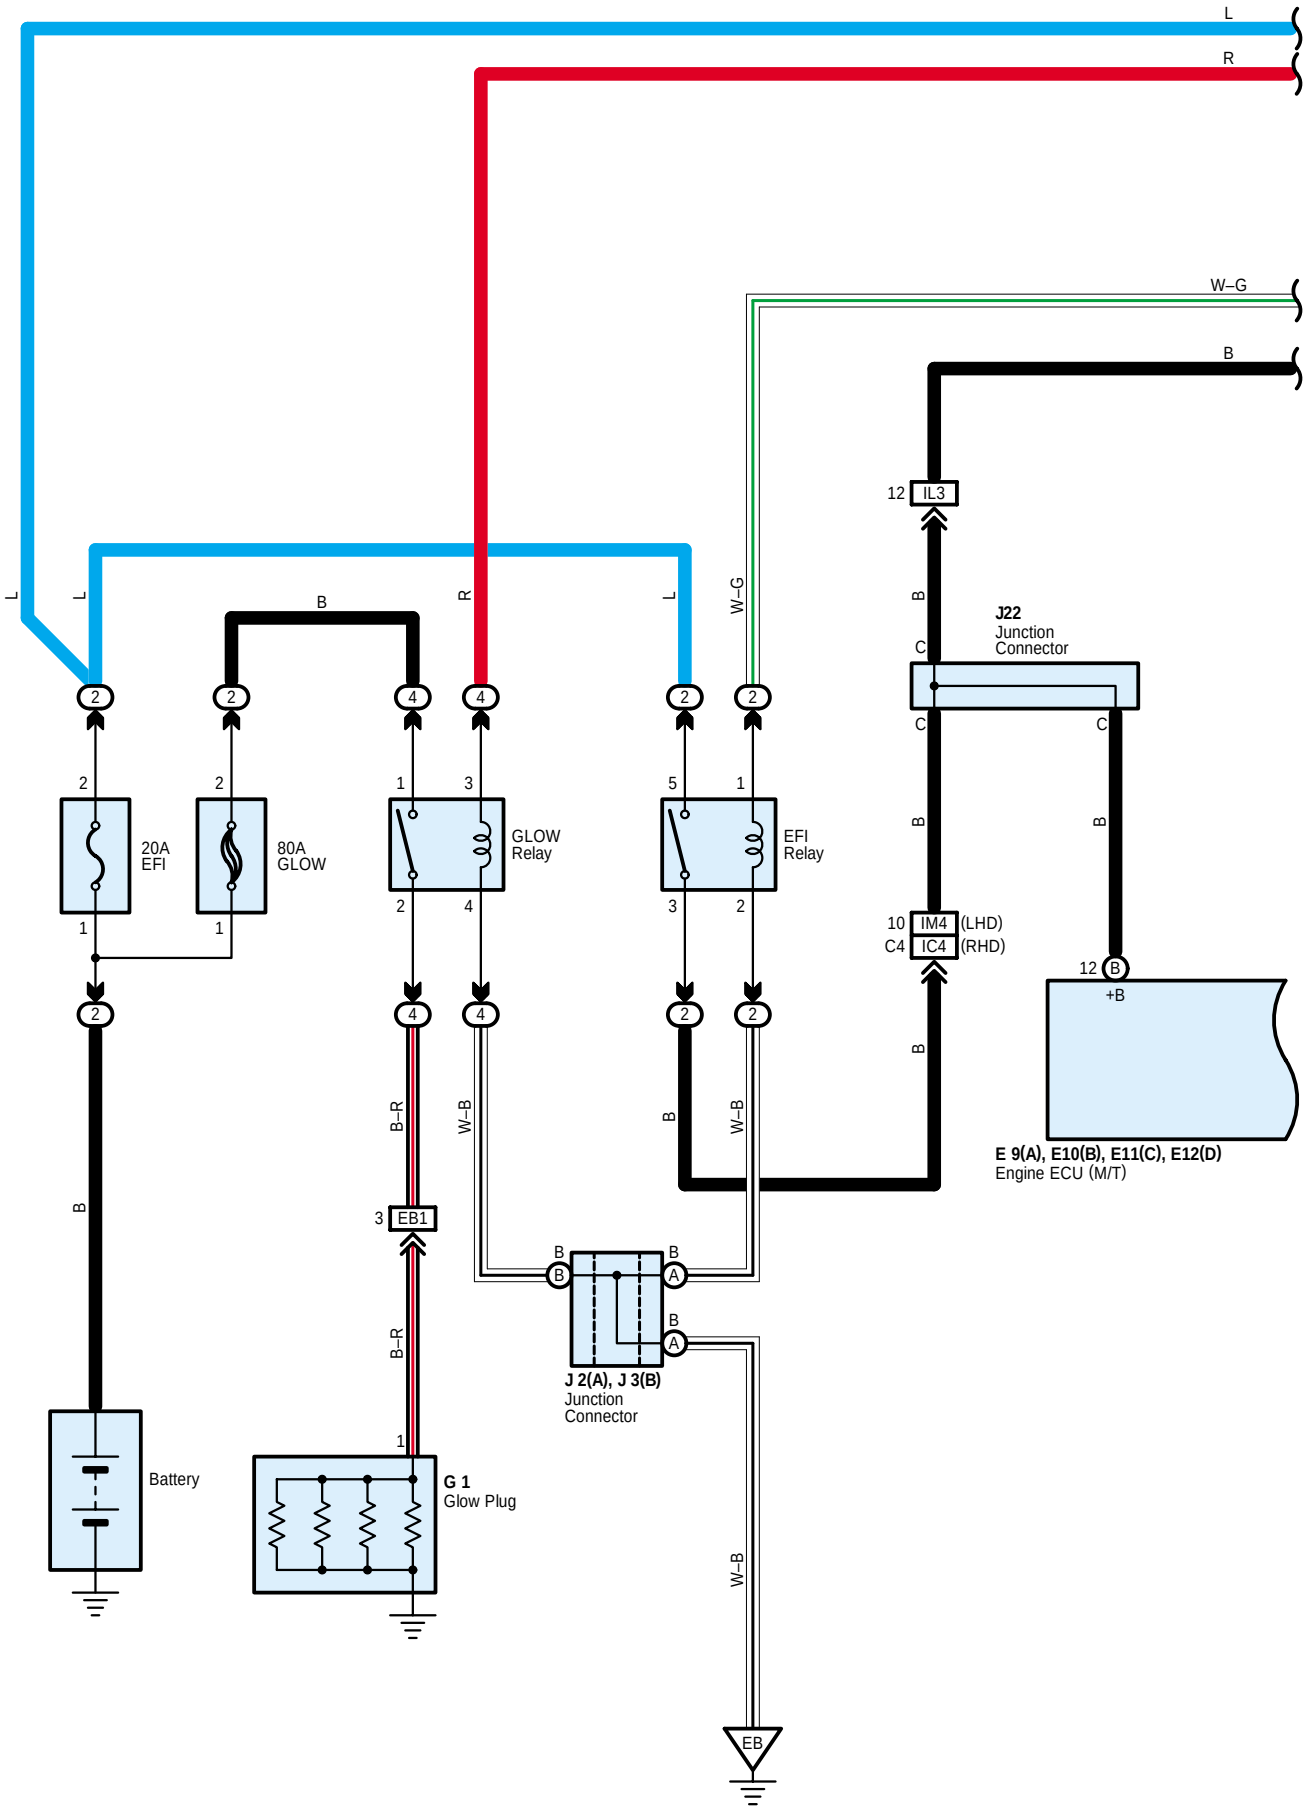
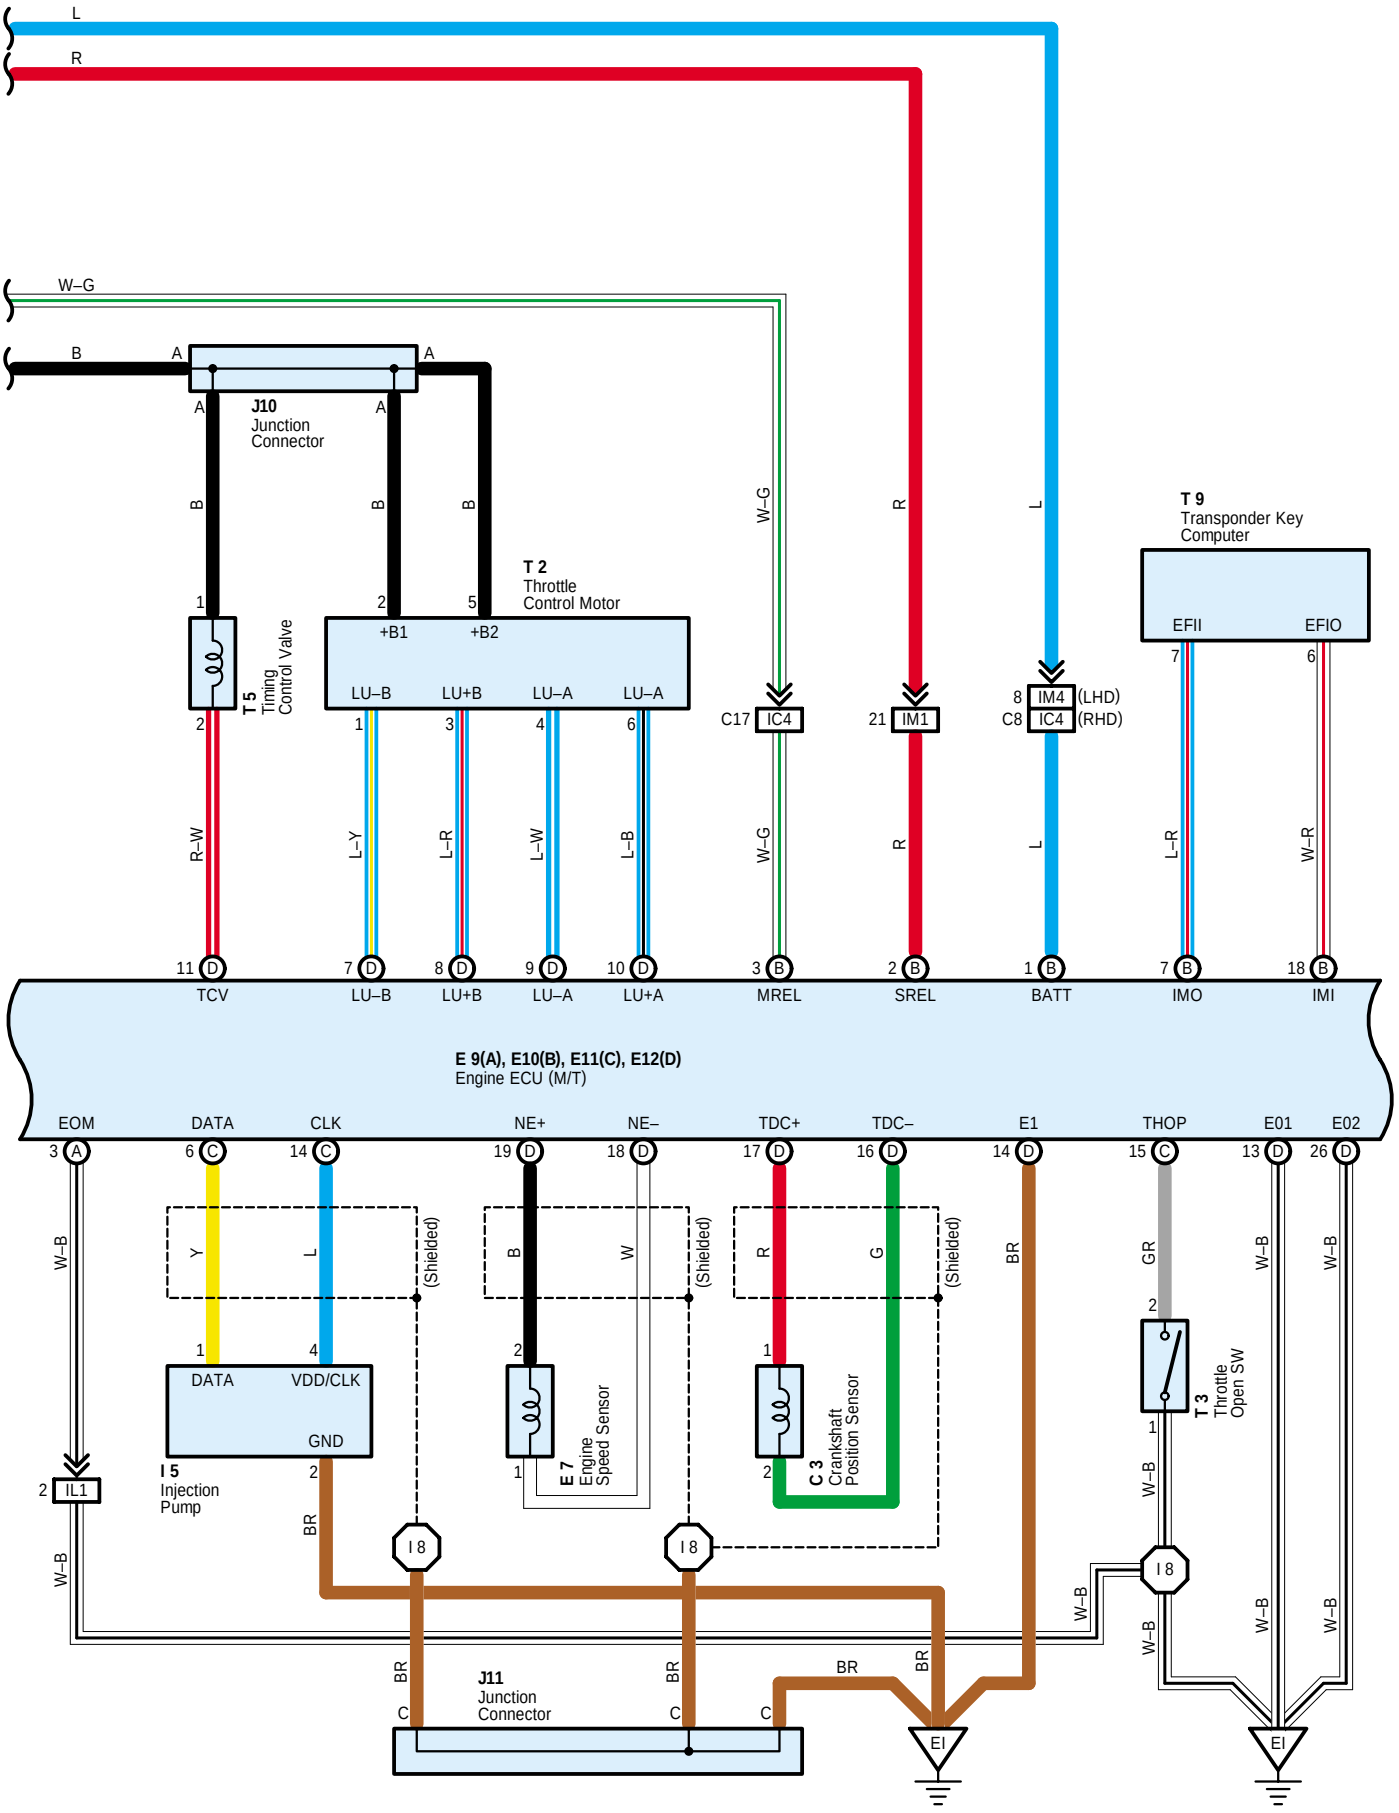
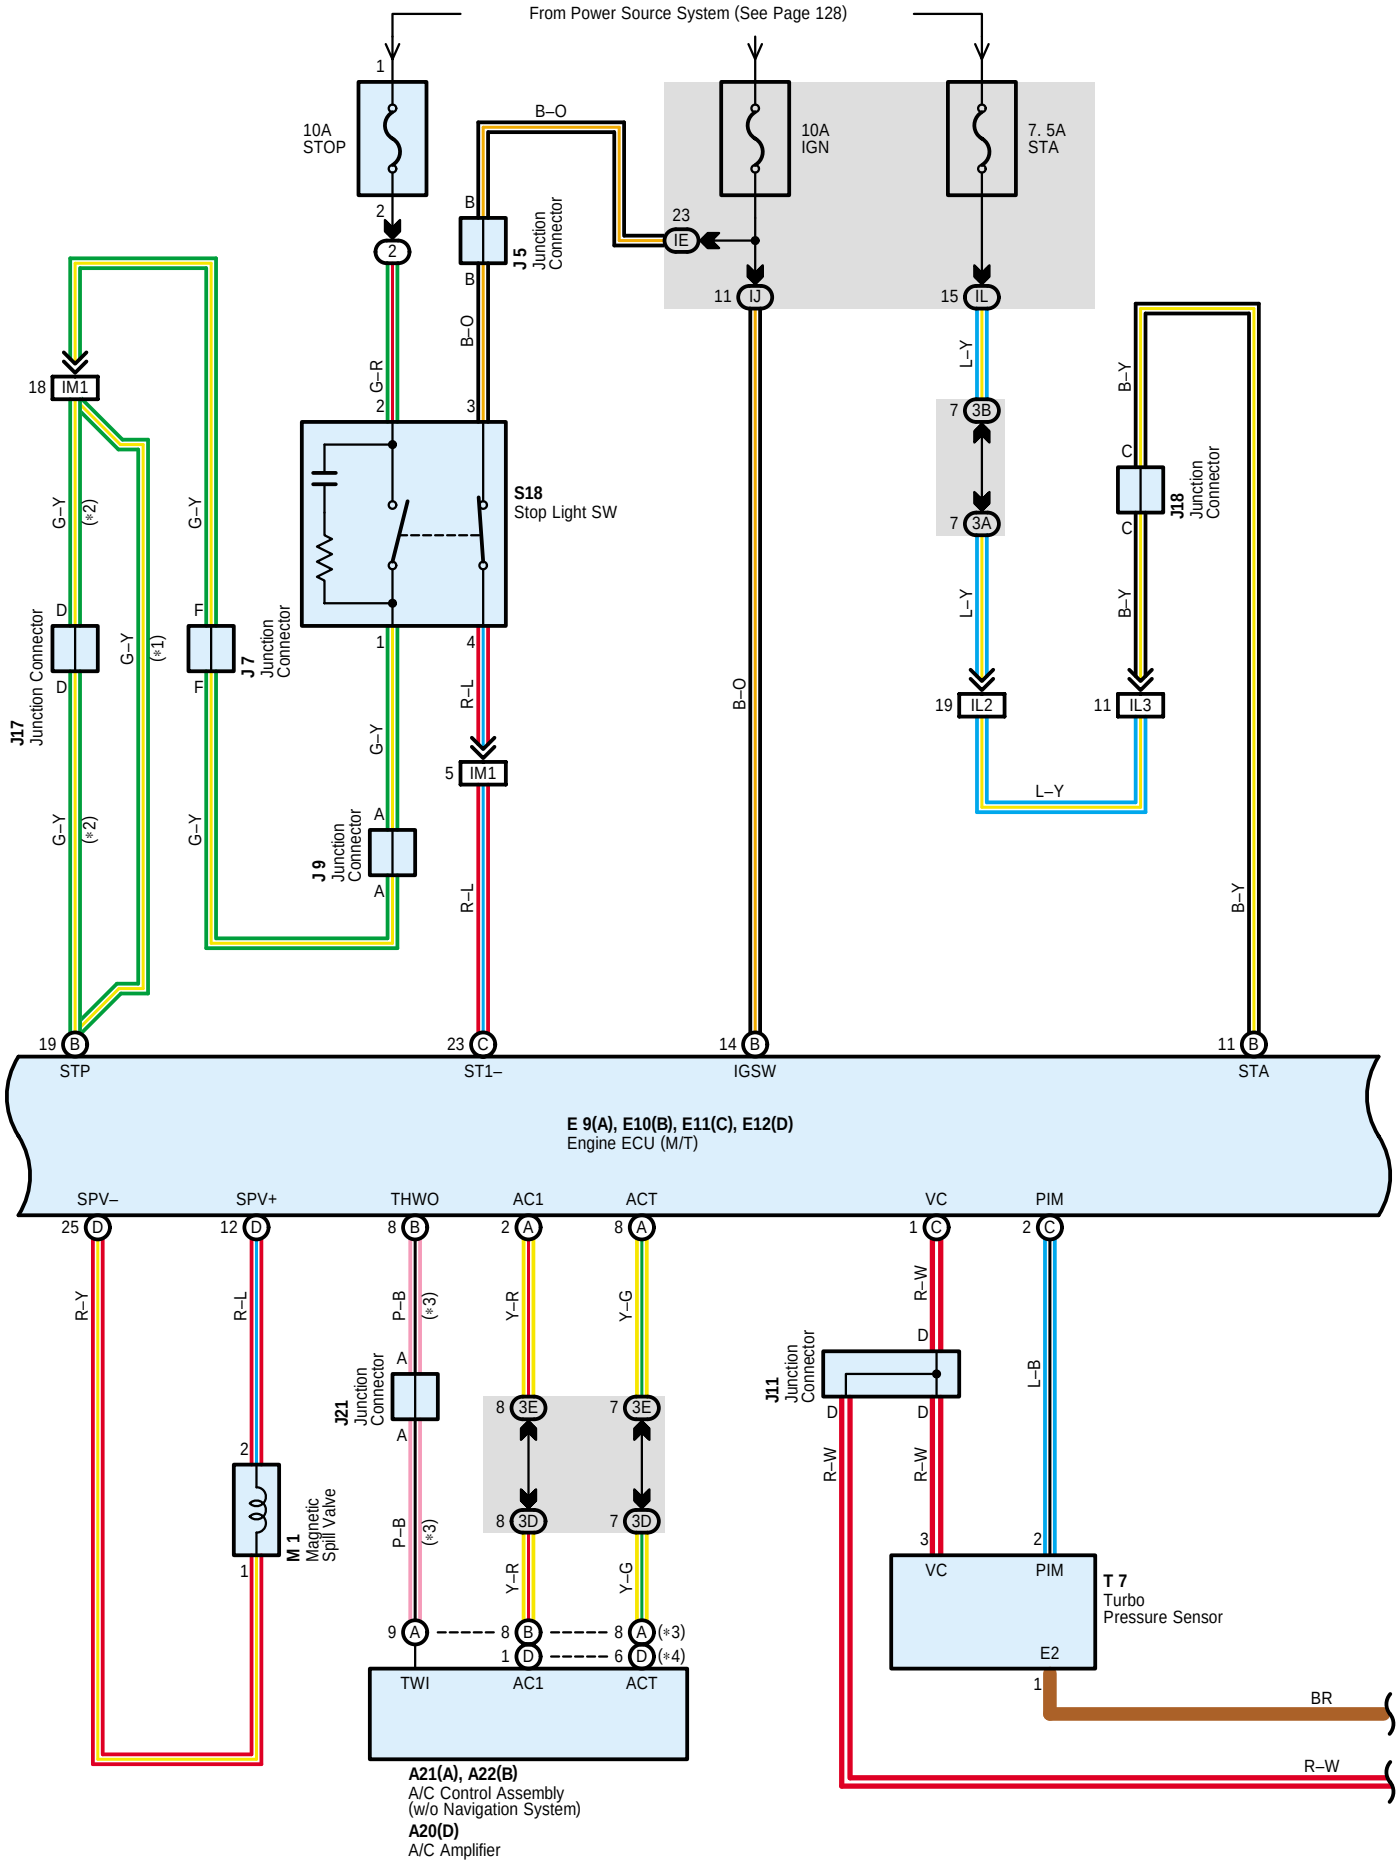
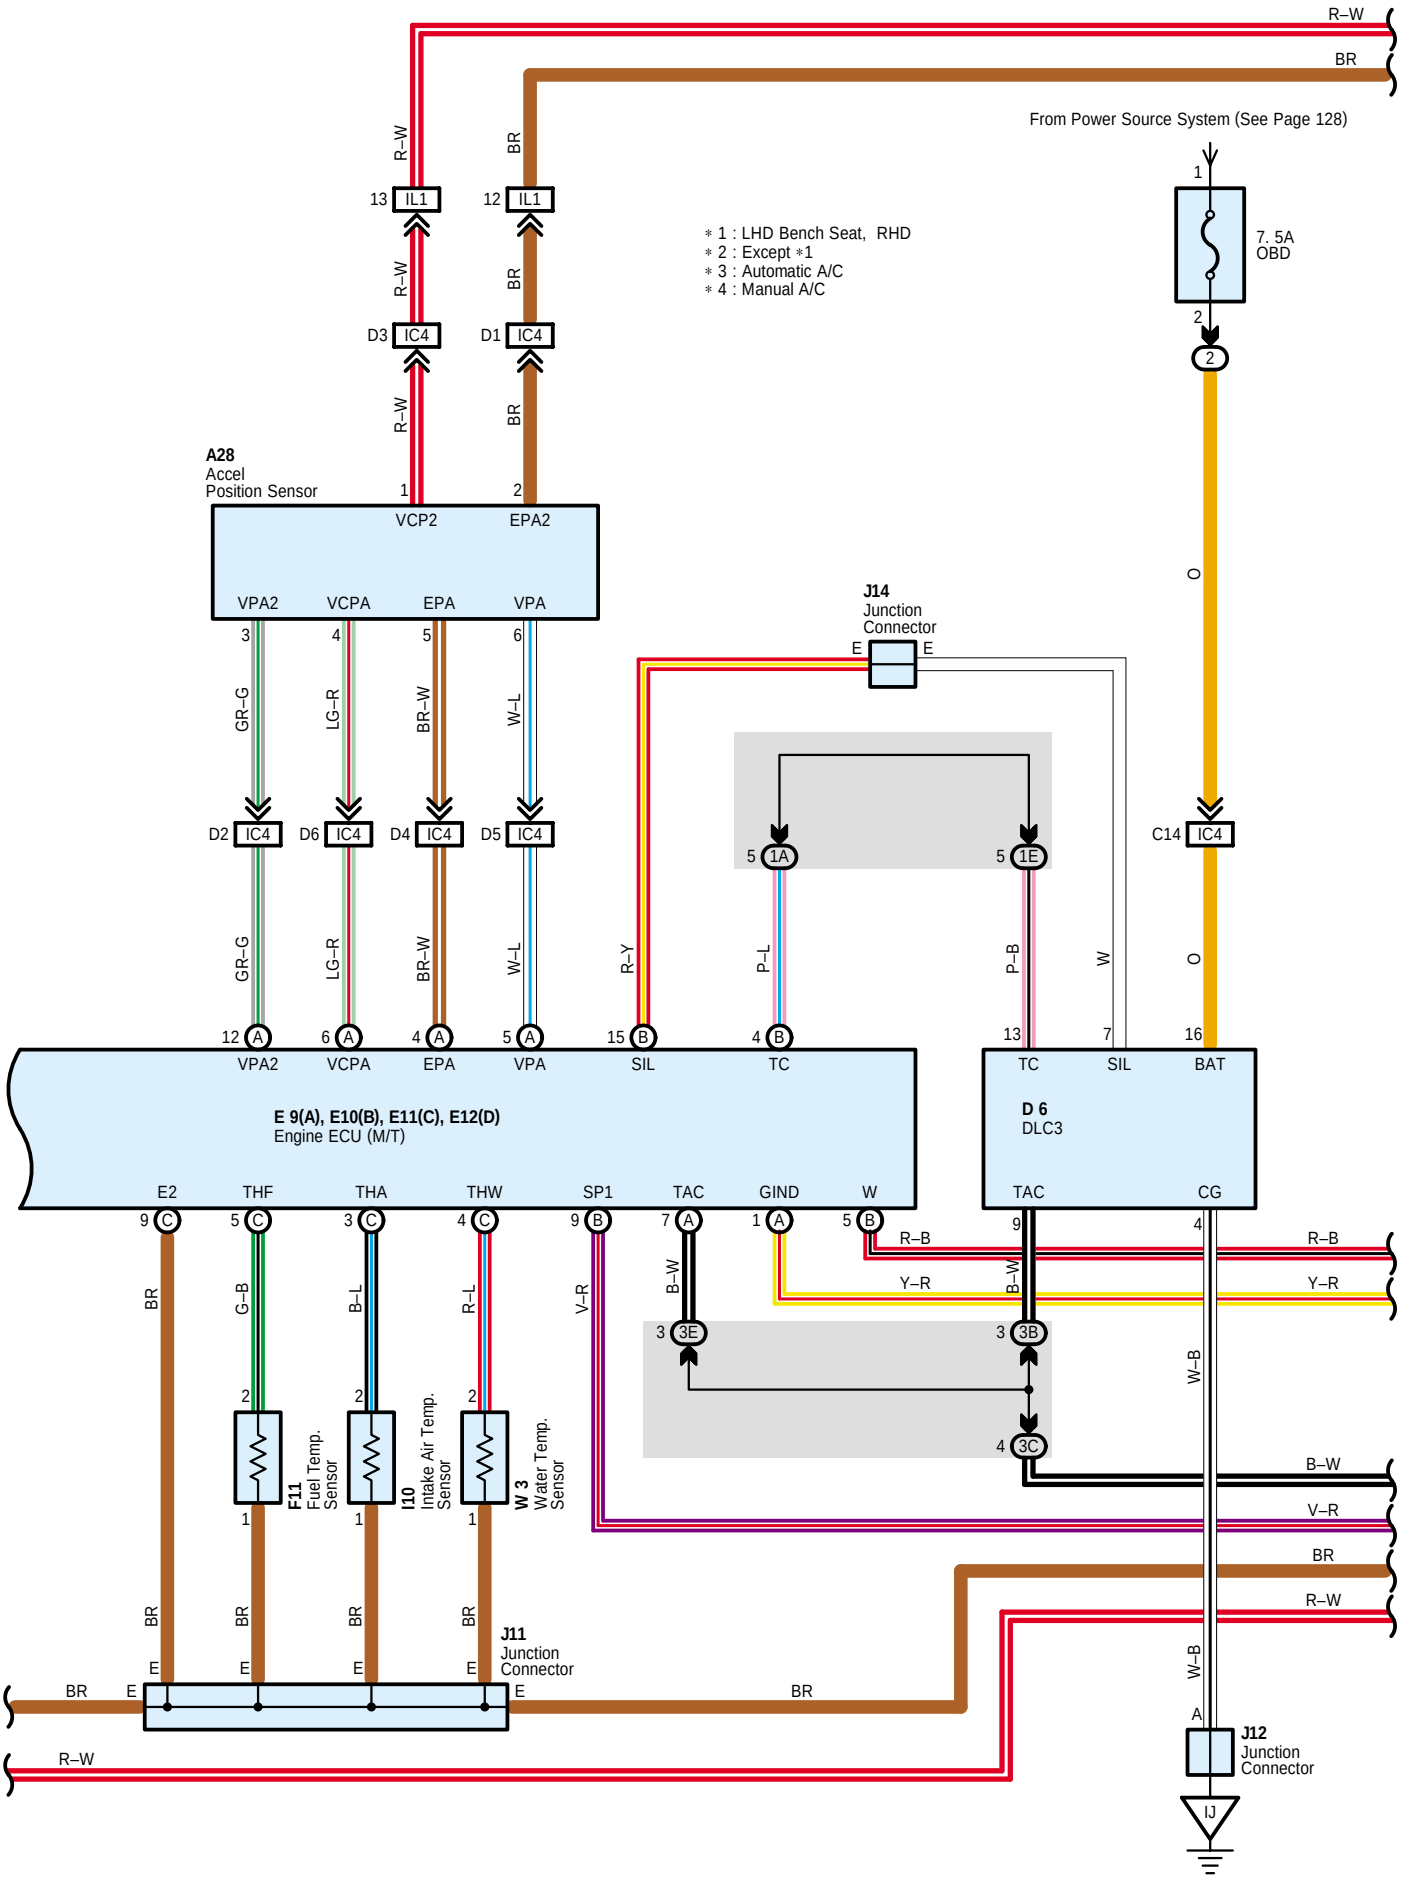
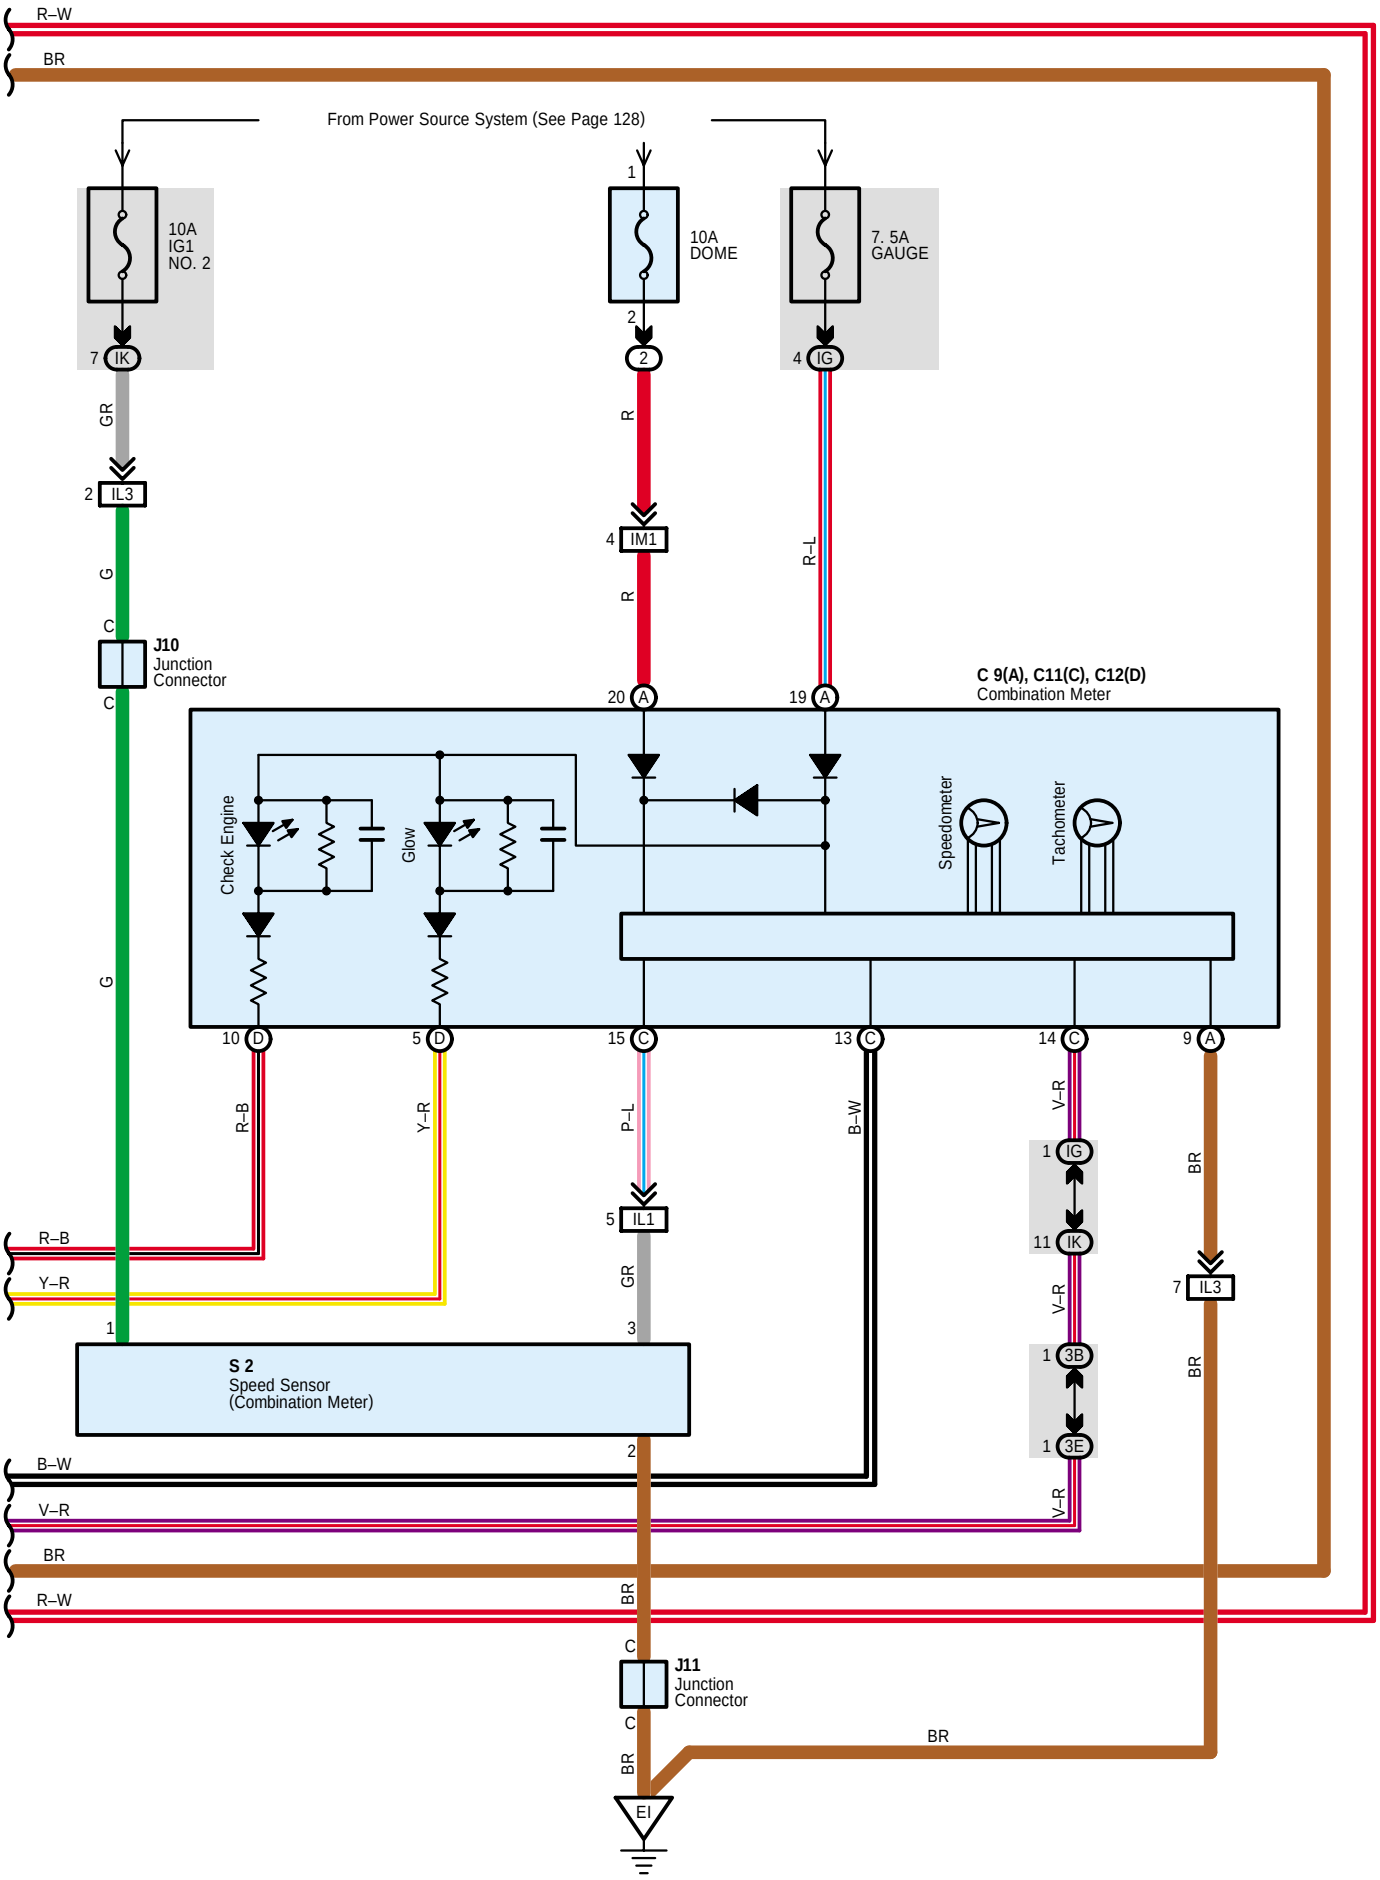

L
R
W–G
B
12 IL3
J22
Junction
Connector
C
B
20A
EFI
80A
GLOW
GLOW
Relay
EFI
Relay
10 IM4 (LHD)
C4 IC4 (RHD)
12 B
+B
E 9(A), E10(B), E11(C), E12(D)
Engine ECU (M/T)
B–R
W–B
3 EB1
J 2(A), J 3(B)
Junction
Connector
Battery
G 1
Glow Plug
EB


L
R
W–G
B
A
J10
Junction
Connector
T 2
Throttle
Control Motor
+B1
+B2
LU–B
LU+B
LU–A
LU–A
T 5
Timing
Control Valve
R–W
L–Y
L–R
L–W
L–B
W–G
R
L
T 9
Transponder Key
Computer
EFII
EFIO
L–R
W–R
C17 IC4
21 IM1
8 IM4 (LHD)
C8 IC4 (RHD)
TCV
LU–B
LU+B
LU–A
LU+A
MREL
SREL
BATT
IMO
IMI
E 9(A), E10(B), E11(C), E12(D)
Engine ECU (M/T)
EOM
DATA
CLK
NE+
NE–
TDC+
TDC–
E1
THOP
E01
E02
W–B
Y
L
B
W
R
G
BR
GR
(Shielded)
DATA
VDD/CLK
GND
I 5
Injection
Pump
IL1
E 7
Engine
Speed Sensor
C 3
Crankshaft
Position Sensor
T 3
Throttle
Open SW
I 8
J11
Junction
Connector
EI


From Power Source System (See Page 128)
10A STOP
10A IGN
7. 5A STA
B–O
J5 Junction Connector
S18 Stop Light SW
J7 Junction Connector
J9 Junction Connector
J17 Junction Connector
J18 Junction Connector
IM1
IE
IJ
IL
3B
3A
IL2
IL3
G–Y
G–R
R–L
L–Y
B–Y
(*1)
(*2)
STP
ST1–
IGSW
STA
E 9(A), E10(B), E11(C), E12(D)
Engine ECU (M/T)
SPV–
SPV+
THWO
AC1
ACT
VC
PIM
R–Y
P–B
Y–R
Y–G
R–W
L–B
(*3)
(*4)
J21 Junction Connector
J11 Junction Connector
M 1 Magnetic Spill Valve
T 7 Turbo Pressure Sensor
E2
BR
TWI
A21(A), A22(B)
A/C Control Assembly
(w/o Navigation System)
A20(D)
A/C Amplifier


R–W
BR
From Power Source System (See Page 128)
∗ 1 : LHD Bench Seat, RHD
∗ 2 : Except ∗1
∗ 3 : Automatic A/C
∗ 4 : Manual A/C
7. 5A
OBD
A28
Accel
Position Sensor
VCP2
EPA2
VPA2
VCPA
EPA
VPA
J14
Junction
Connector
C14
IC4
E 9(A), E10(B), E11(C), E12(D)
Engine ECU (M/T)
D 6
DLC3
E2
THF
THA
THW
SP1
TAC
GIND
W
CG
BAT
SIL
TC
F11
Fuel Temp.
Sensor
I10
Intake Air Temp.
Sensor
W 3
Water Temp.
Sensor
J11
Junction
Connector
J12
Junction
Connector
IJ


R–W
BR
From Power Source System (See Page 128)
10A
IG1
NO. 2
10A
DOME
7. 5A
GAUGE
7 IK
1
2
2
4 IG
GR
R
R–L
2 IL3
4 IM1
R
G
C
J10
Junction
Connector
C
20 A
19 A
C 9(A), C11(C), C12(D)
Combination Meter
Check Engine
Glow
Speedometer
Tachometer
G
10 D
5 D
15 C
13 C
14 C
9 A
R–B
Y–R
P–L
B–W
V–R
BR
1 IG
11 IK
7 IL3
5 IL1
GR
1
3
S 2
Speed Sensor
(Combination Meter)
1 3B
1 3E
2
B–W
V–R
BR
R–W
BR
C
J11
Junction
Connector
C
BR
BR
EI