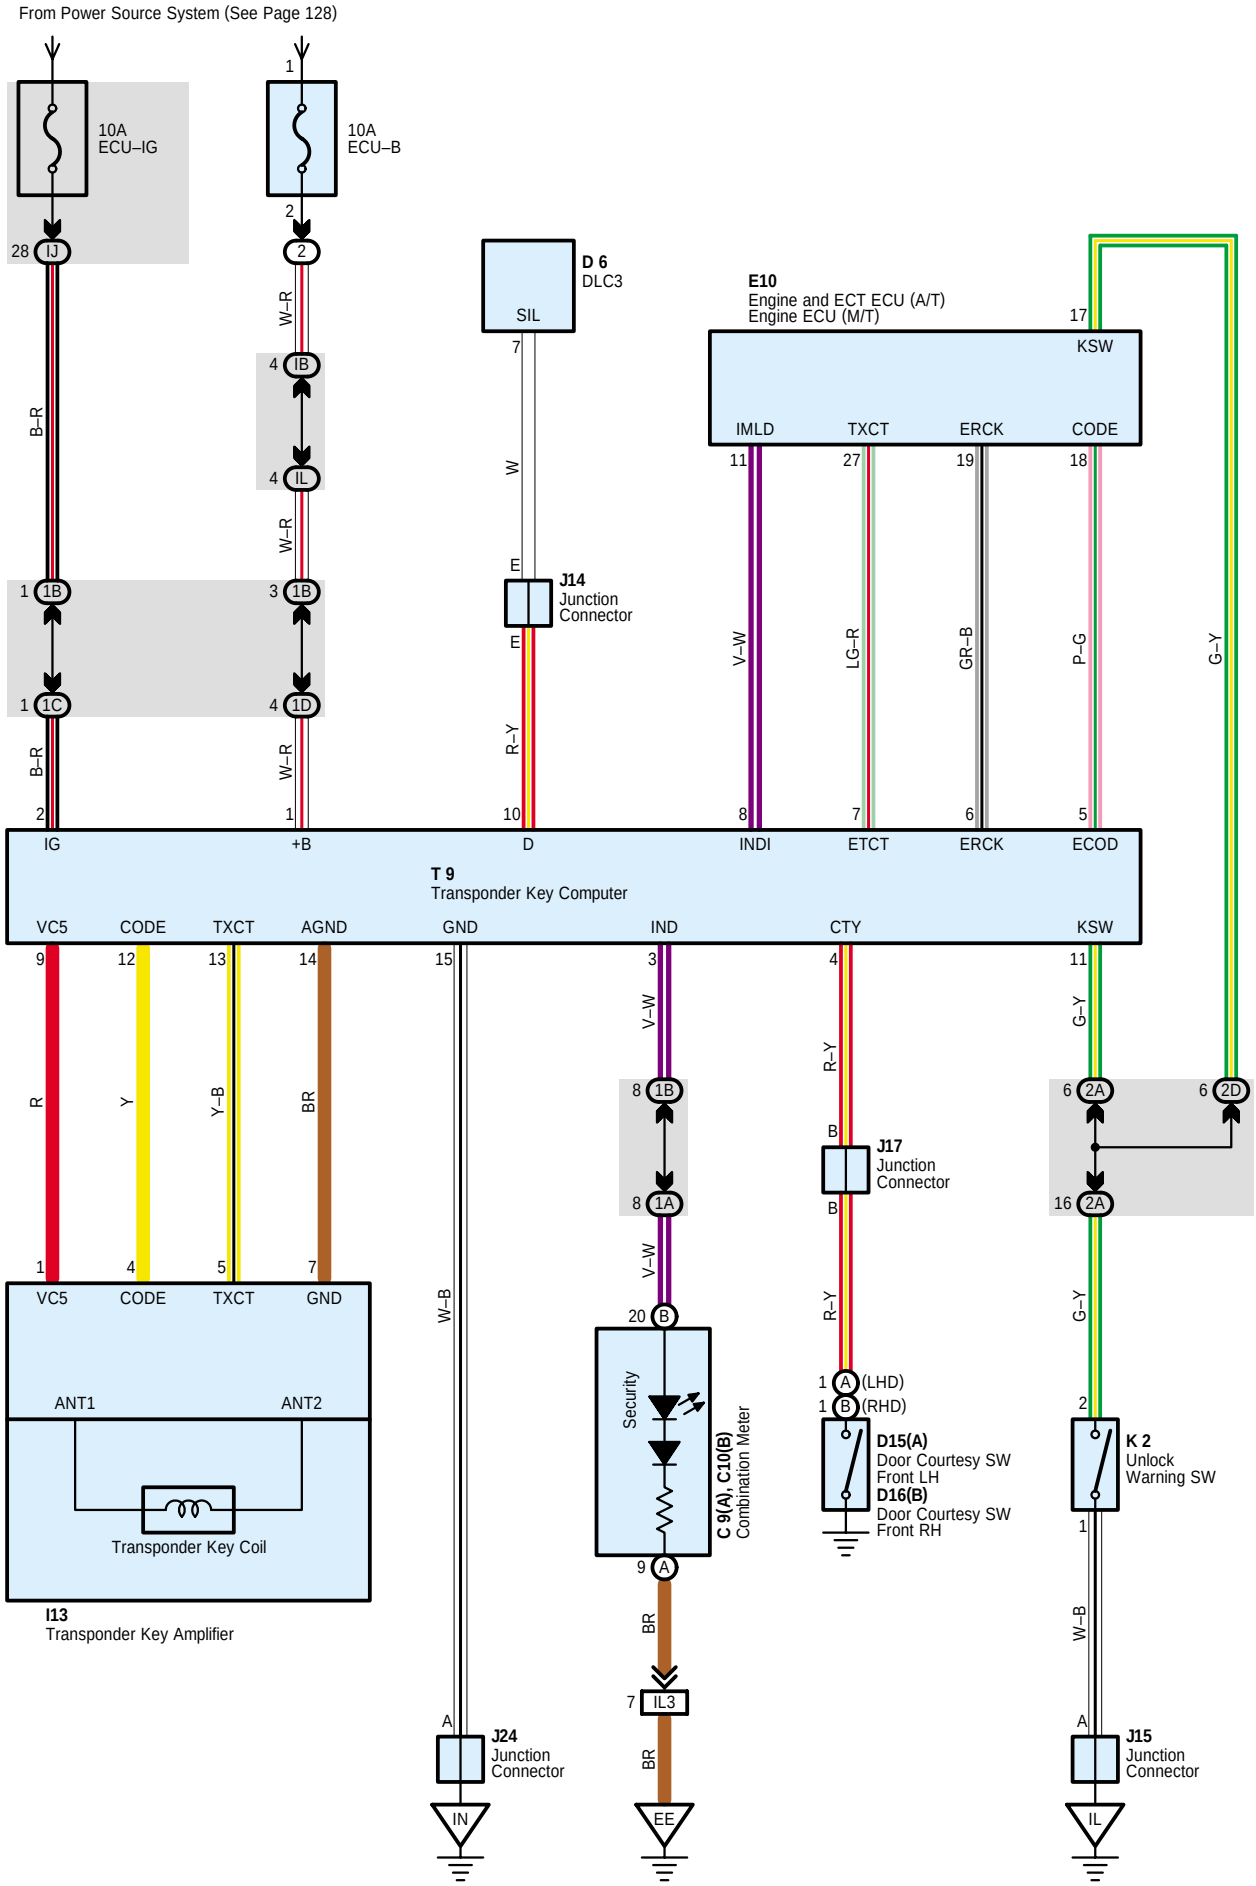

From Power Source System (See Page 128)
10A
ECU–IG
10A
ECU–B
D 6
DLC3
SIL
E10
Engine and ECT ECU (A/T)
Engine ECU (M/T)
KSW
IMLD
TXCT
ERCK
CODE
J14
Junction
Connector
T 9
Transponder Key Computer
IG
+B
D
INDI
ETCT
ERCK
ECOD
VC5
CODE
TXCT
AGND
GND
IND
CTY
KSW
ANT1
ANT2
Transponder Key Coil
I13
Transponder Key Amplifier
J17
Junction
Connector
D15(A)
Door Courtesy SW
Front LH
D16(B)
Door Courtesy SW
Front RH
(LHD)
(RHD)
C 9(A), C10(B)
Combination Meter
Security
K 2
Unlock
Warning SW
J24
Junction
Connector
J15
Junction
Connector
IN
EE
IL
IL3
W–R
B–R
R
Y
Y–B
BR
V–W
R–Y
G–Y
W–B
LG–R
GR–B
P–G