



I GROUND POINT (RHD)

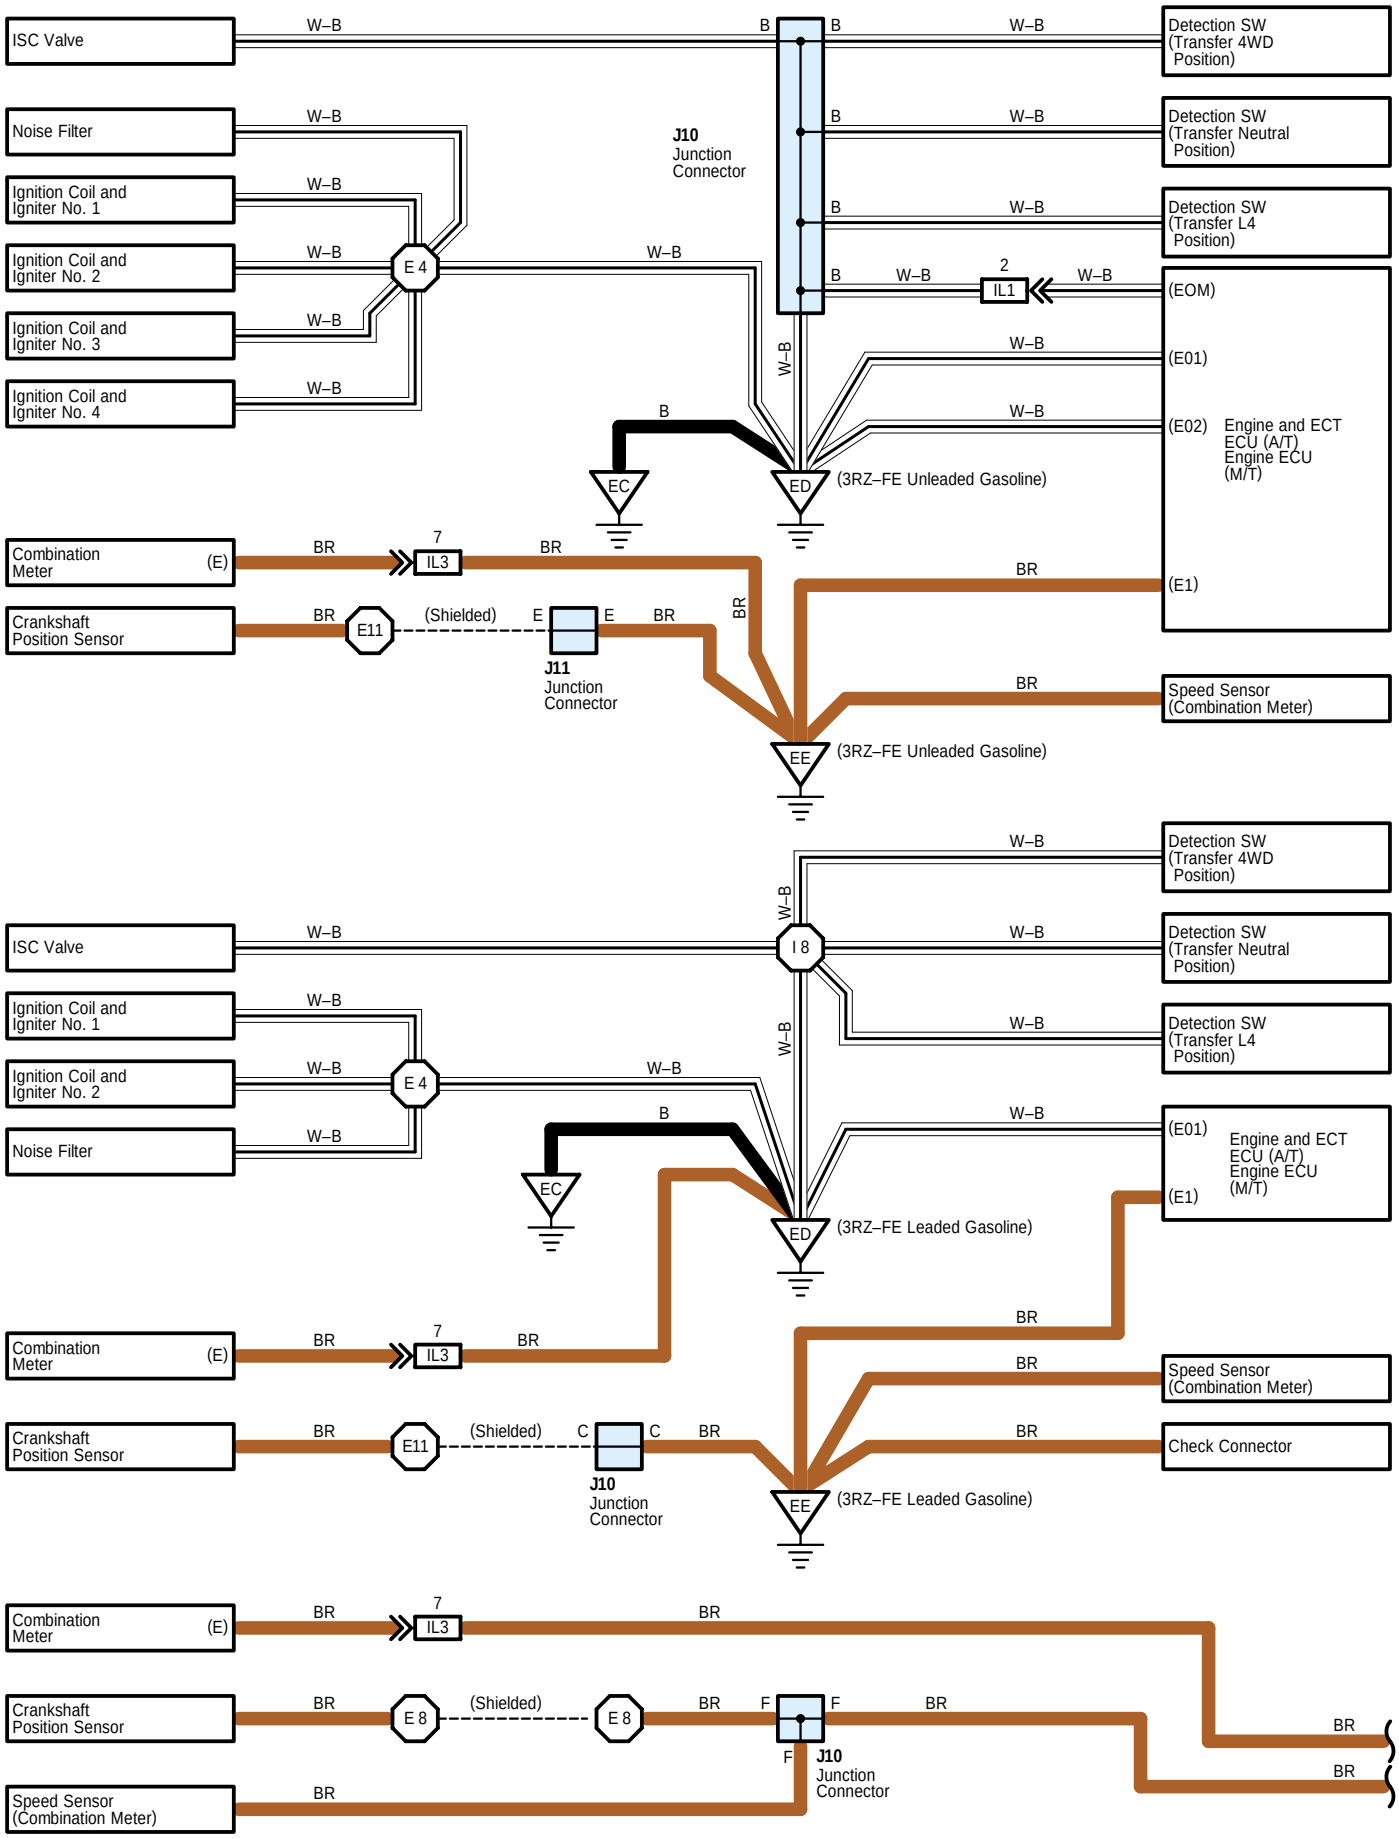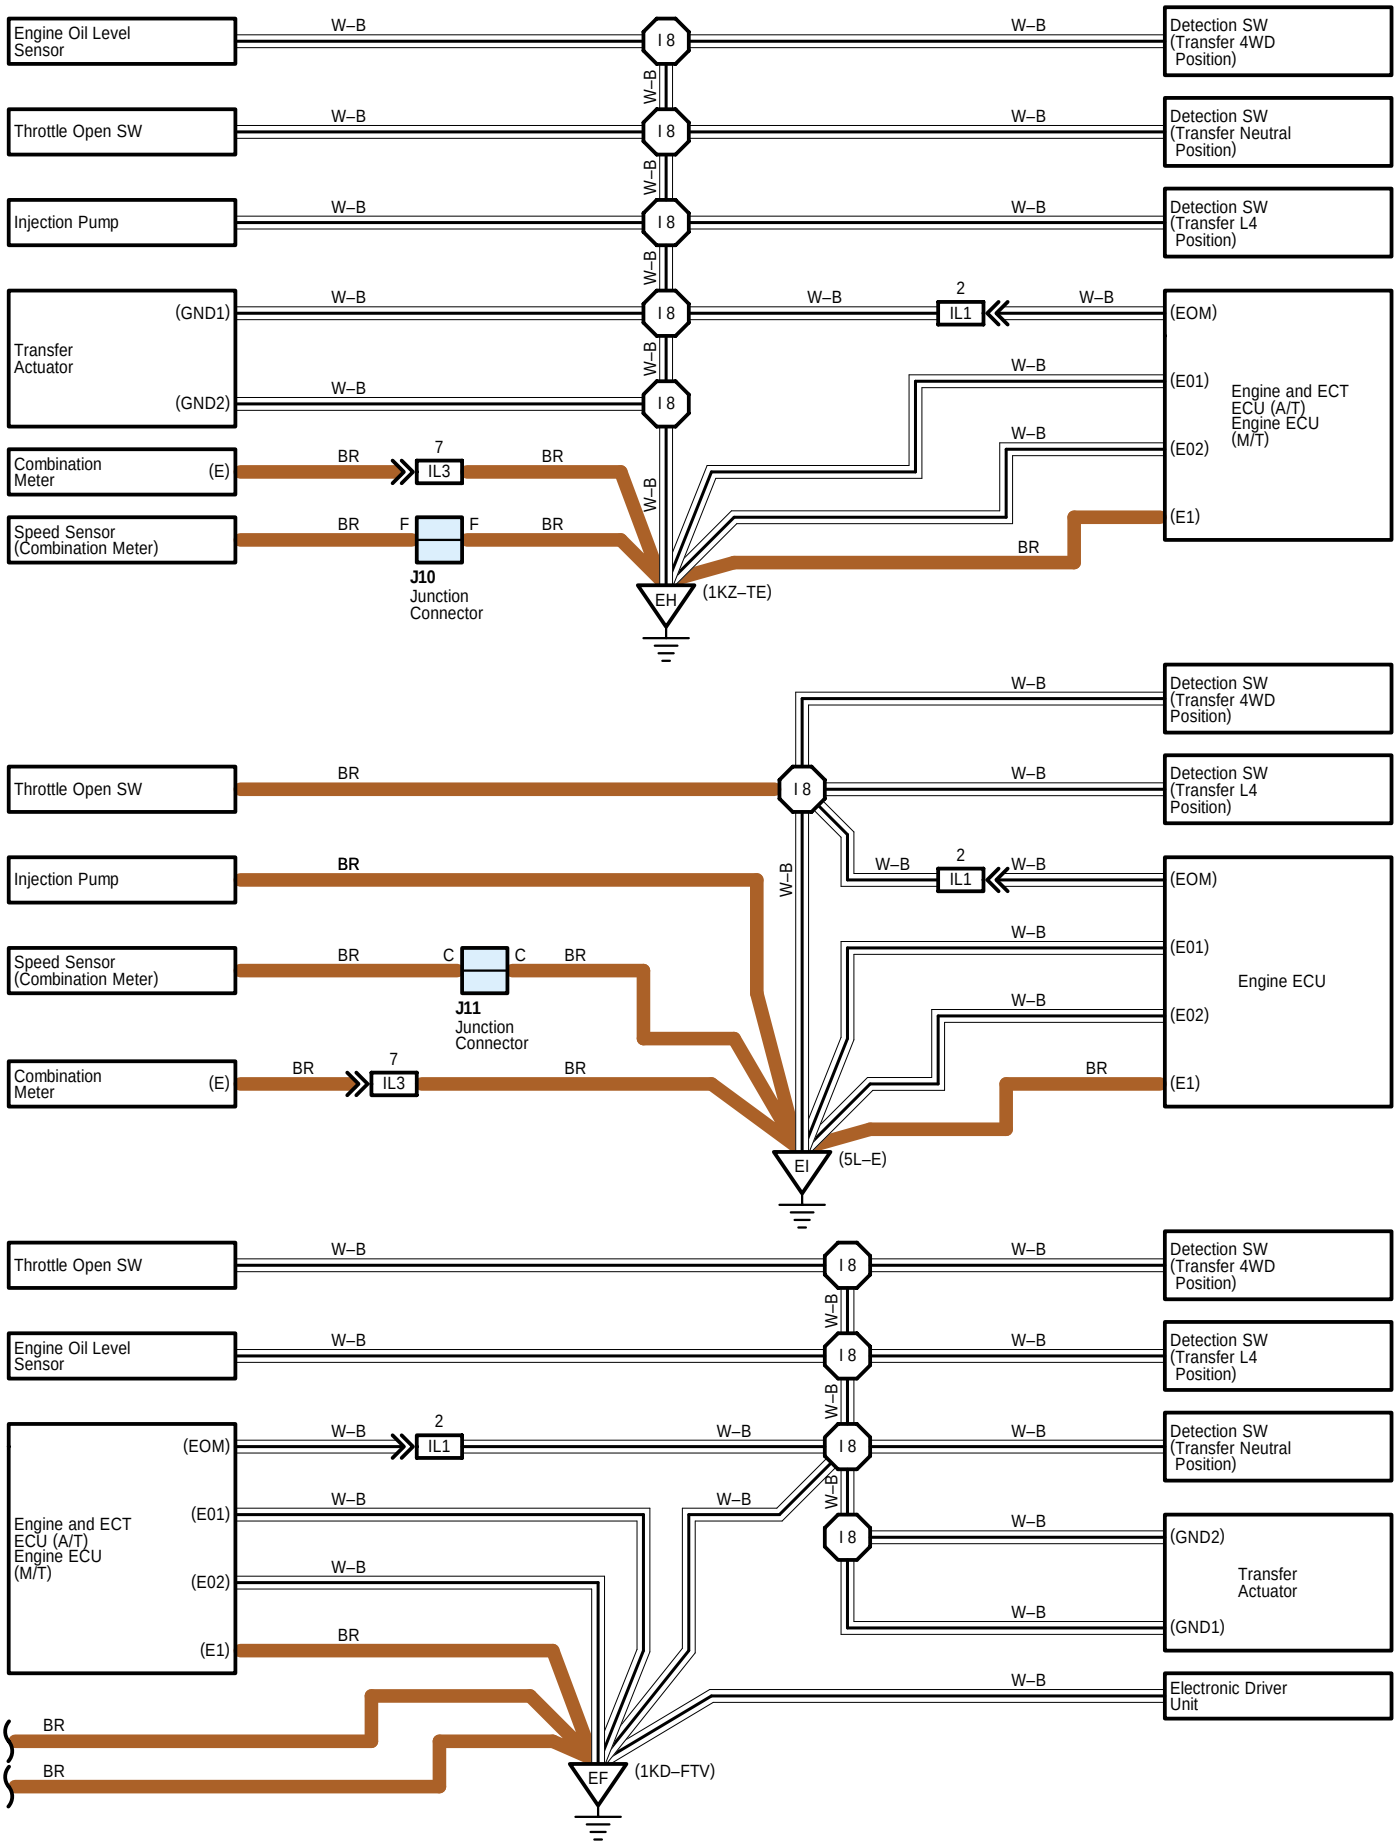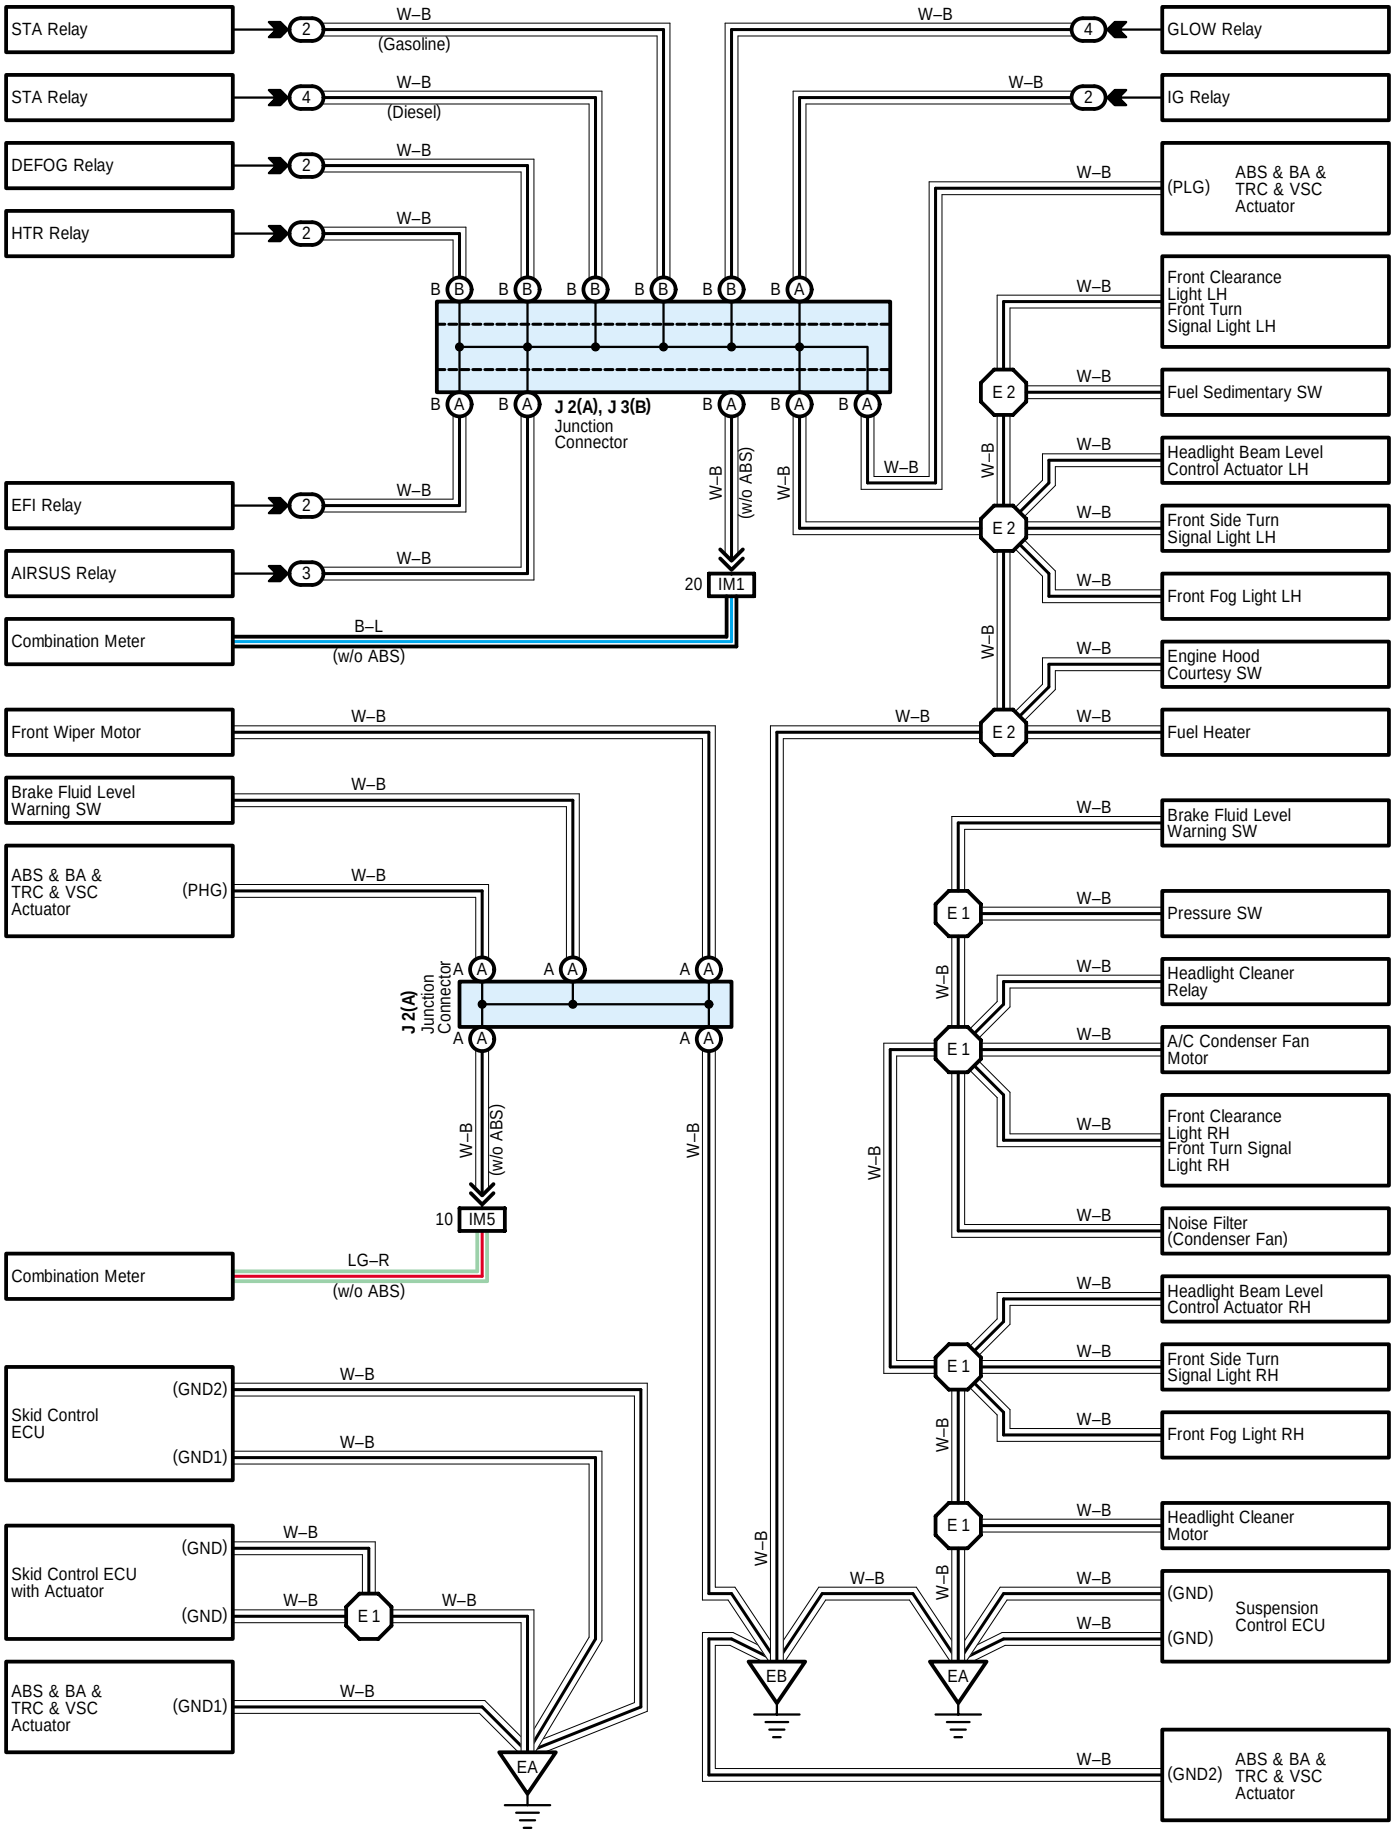



Engine Oil Level Sensor
Throttle Open SW
Injection Pump
Transfer Actuator
(GND1)
(GND2)
Combination Meter
(E)
Speed Sensor (Combination Meter)
W–B
BR
F
7
IL3
2
IL1
I 8
J10
Junction Connector
EH
(1KZ–TE)
Detection SW (Transfer 4WD Position)
Detection SW (Transfer Neutral Position)
Detection SW (Transfer L4 Position)
(EOM)
(E01)
(E02)
(E1)
Engine and ECT ECU (A/T) Engine ECU (M/T)
Throttle Open SW
Injection Pump
Speed Sensor (Combination Meter)
Combination Meter
(E)
C
J11
Junction Connector
Engine ECU
EI
(5L–E)
Throttle Open SW
Engine Oil Level Sensor
Engine and ECT ECU (A/T) Engine ECU (M/T)
(EOM)
(E01)
(E02)
(E1)
(GND2)
(GND1)
Transfer Actuator
Electronic Driver Unit
EF
(1KD–FTV)


I GROUND POINT (RHD)

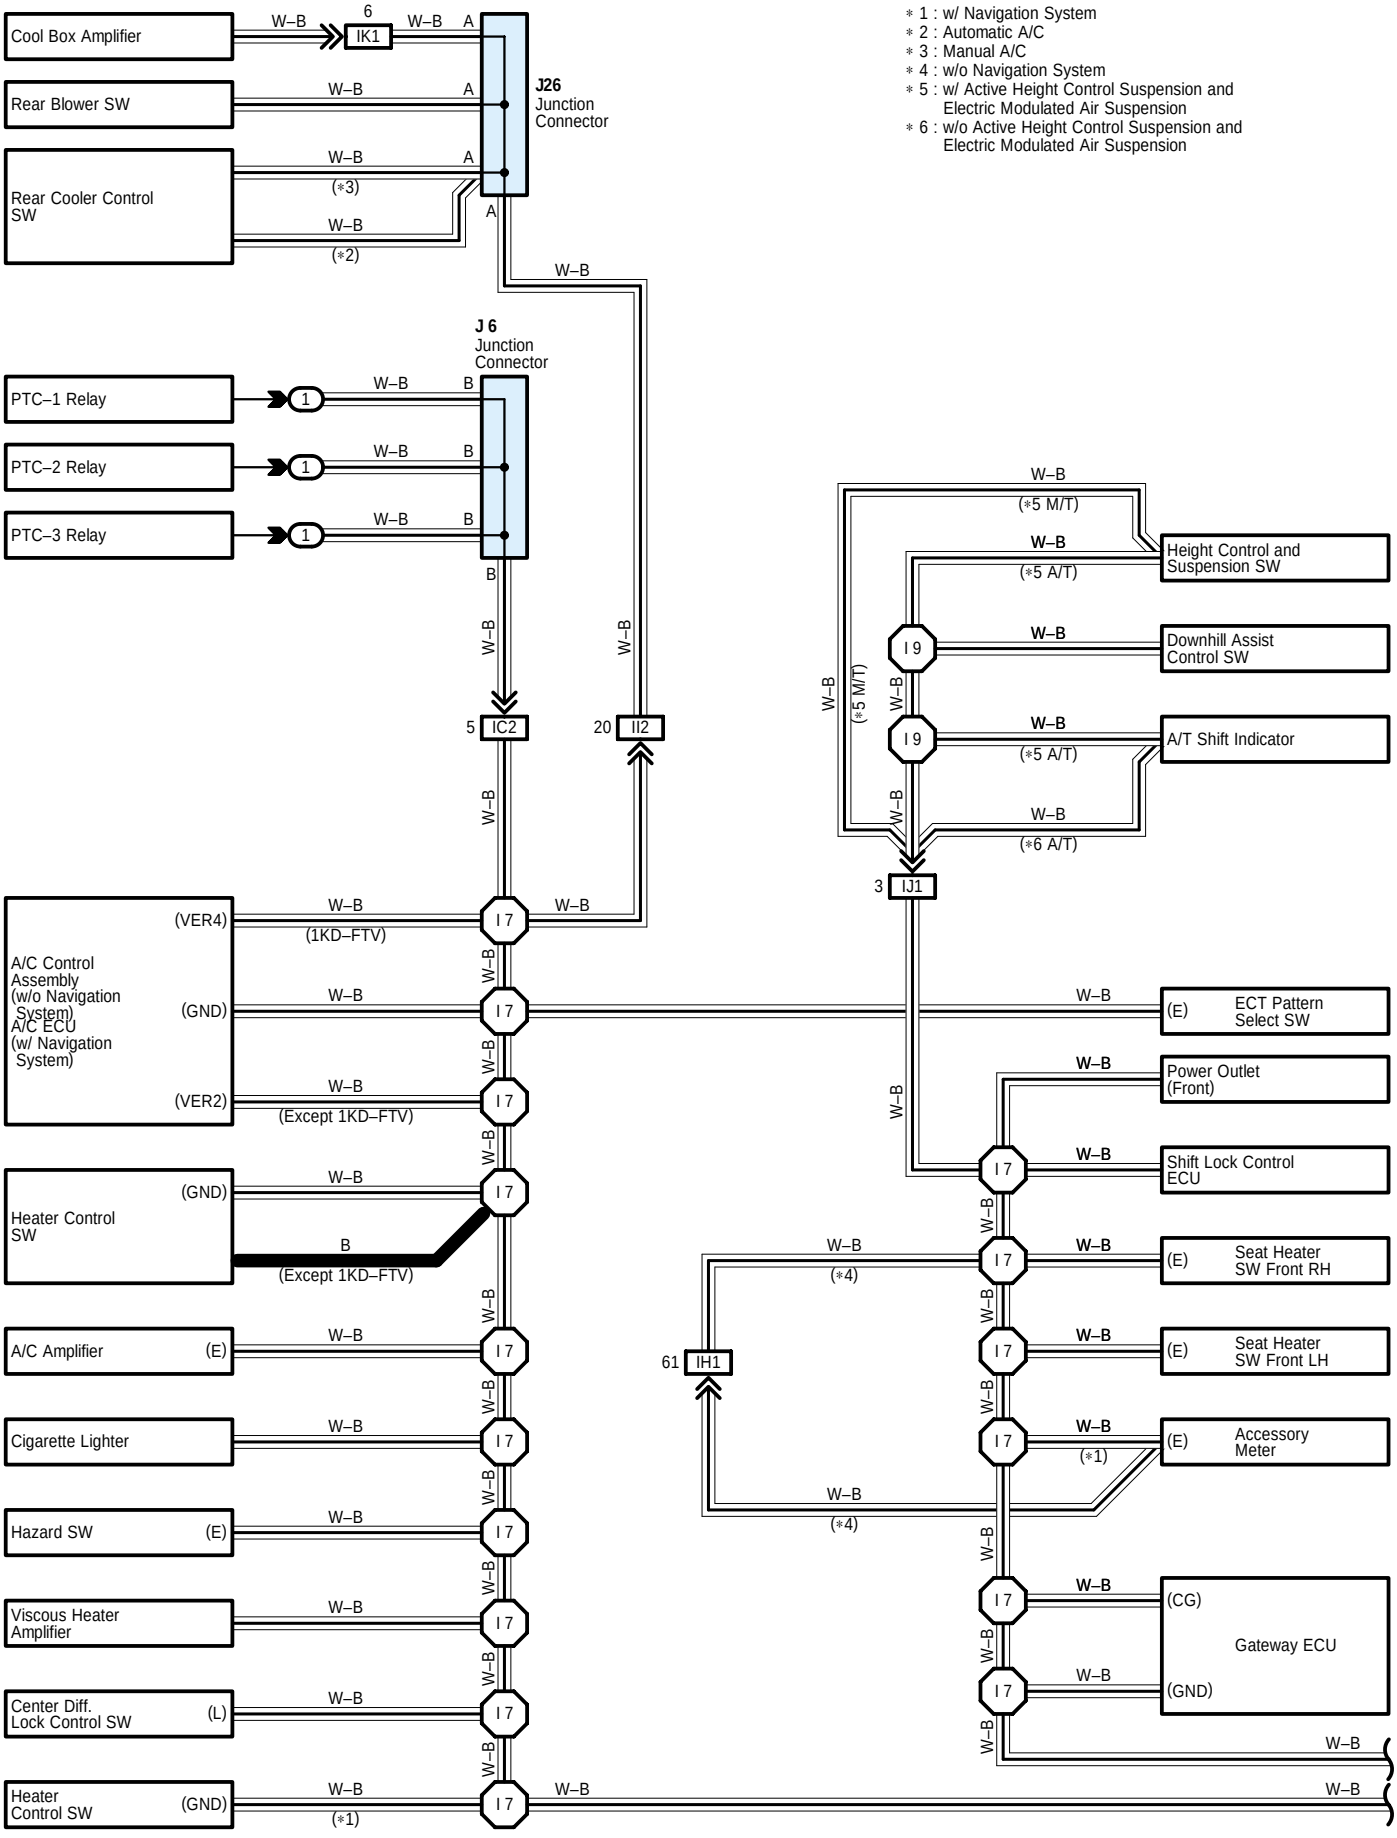



∗ 1 : w/ Navigation System
∗ 2 : Automatic A/C
∗ 3 : Manual A/C
∗ 4 : w/o Navigation System
∗ 5 : w/ Active Height Control Suspension and Electric Modulated Air Suspension
∗ 6 : w/o Active Height Control Suspension and Electric Modulated Air Suspension
Cool Box Amplifier
Rear Blower SW
Rear Cooler Control SW
J26 Junction Connector
J 6 Junction Connector
PTC–1 Relay
PTC–2 Relay
PTC–3 Relay
A/C Control Assembly (w/o Navigation System) A/C ECU (w/ Navigation System)
Heater Control SW
A/C Amplifier
Cigarette Lighter
Hazard SW
Viscous Heater Amplifier
Center Diff. Lock Control SW
Heater Control SW
Height Control and Suspension SW
Downhill Assist Control SW
A/T Shift Indicator
ECT Pattern Select SW
Power Outlet (Front)
Shift Lock Control ECU
Seat Heater SW Front RH
Seat Heater SW Front LH
Accessory Meter
Gateway ECU
W–B
(∗5 M/T)
(∗5 A/T)
(∗6 A/T)
(∗4)
(∗1)
(∗2)
(∗3)
(1KD–FTV)
(Except 1KD–FTV)
IK1
IC2
II2
IJ1
IH1
I 7
I 9


I GROUND POINT (RHD)

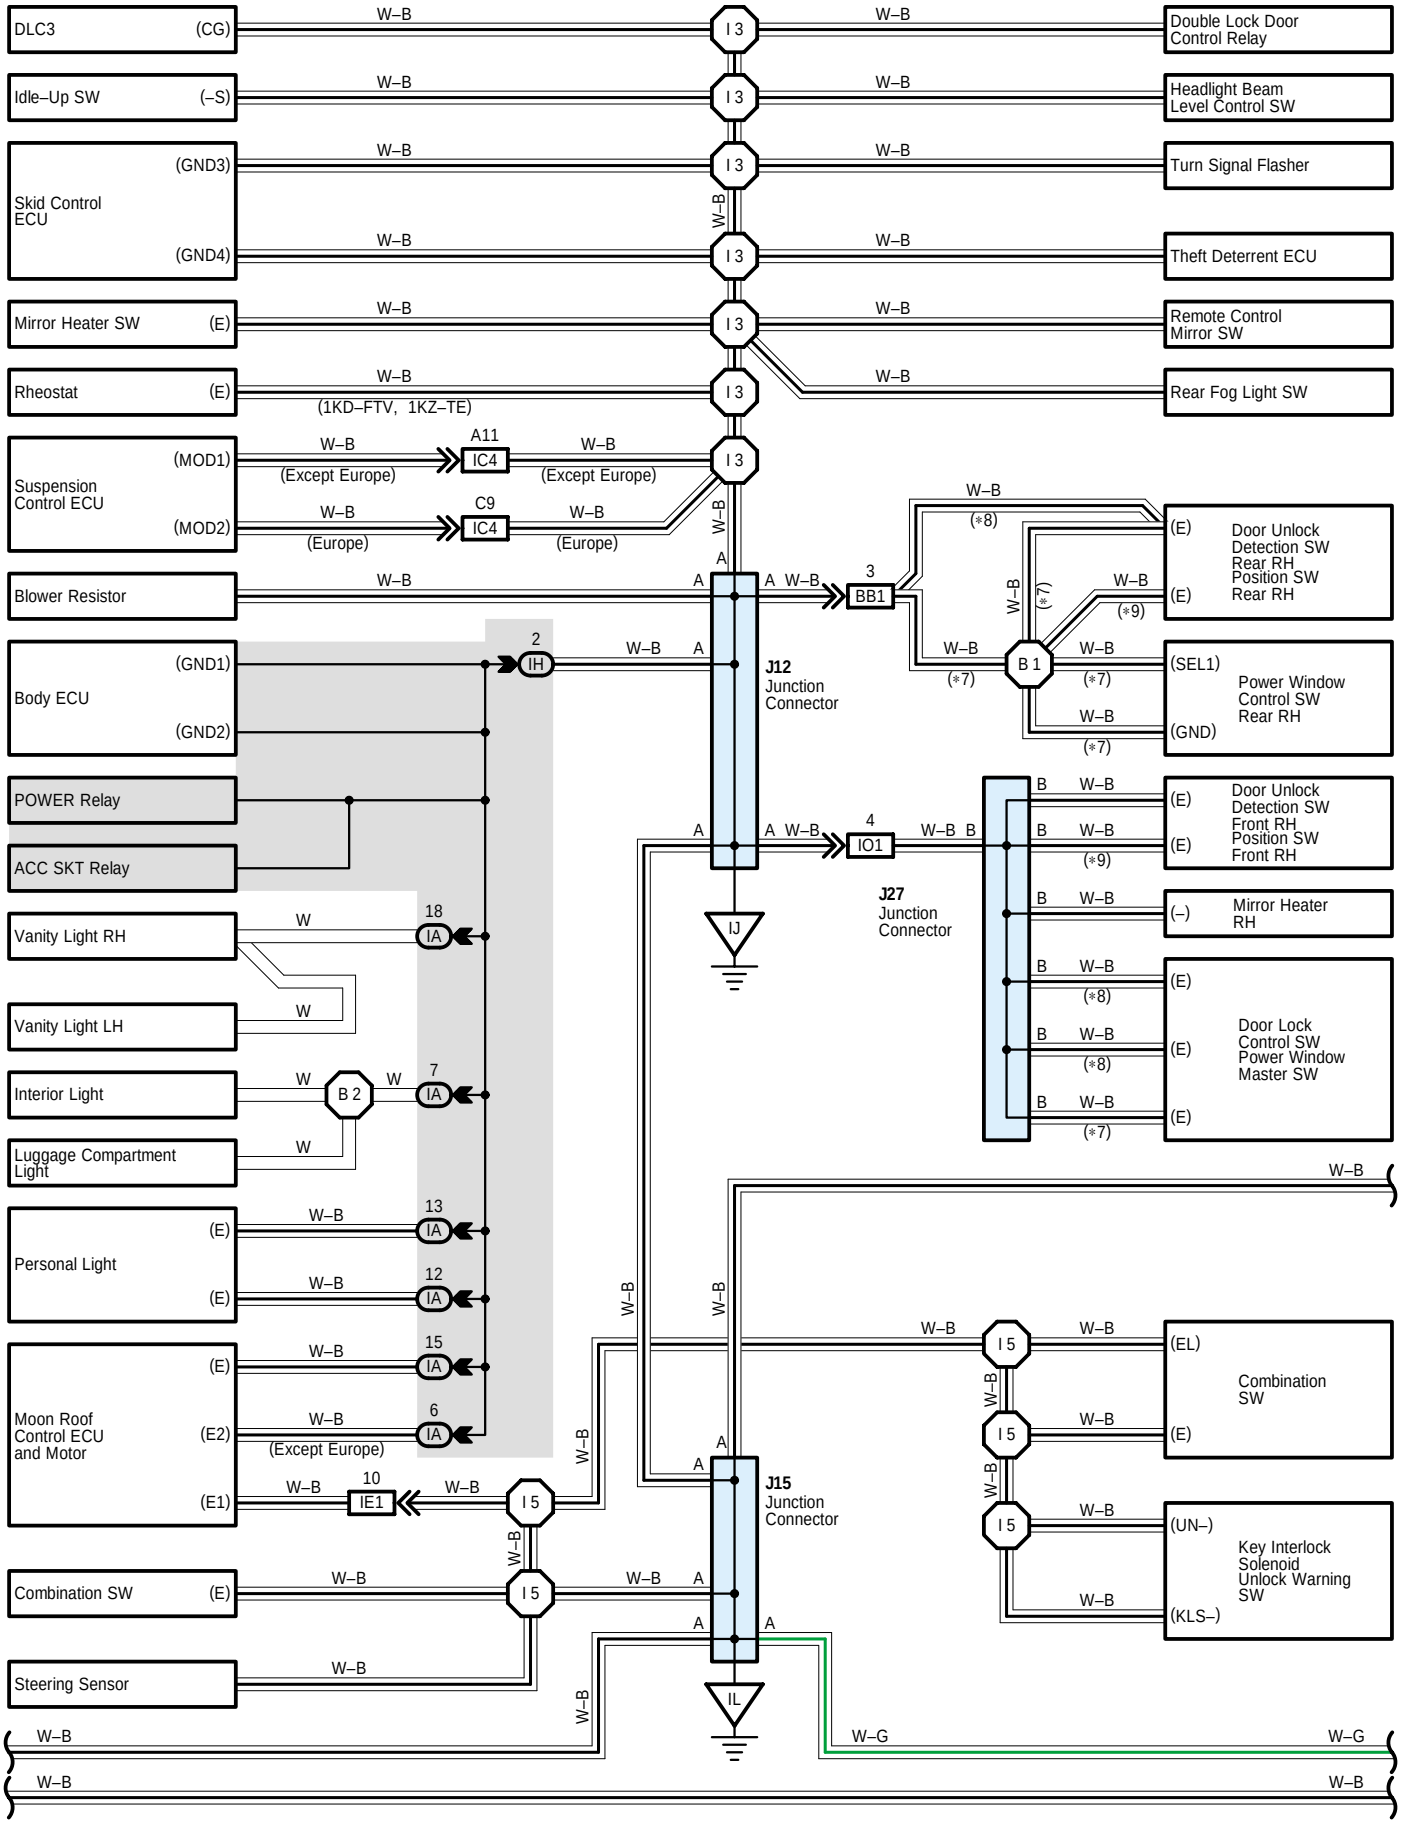

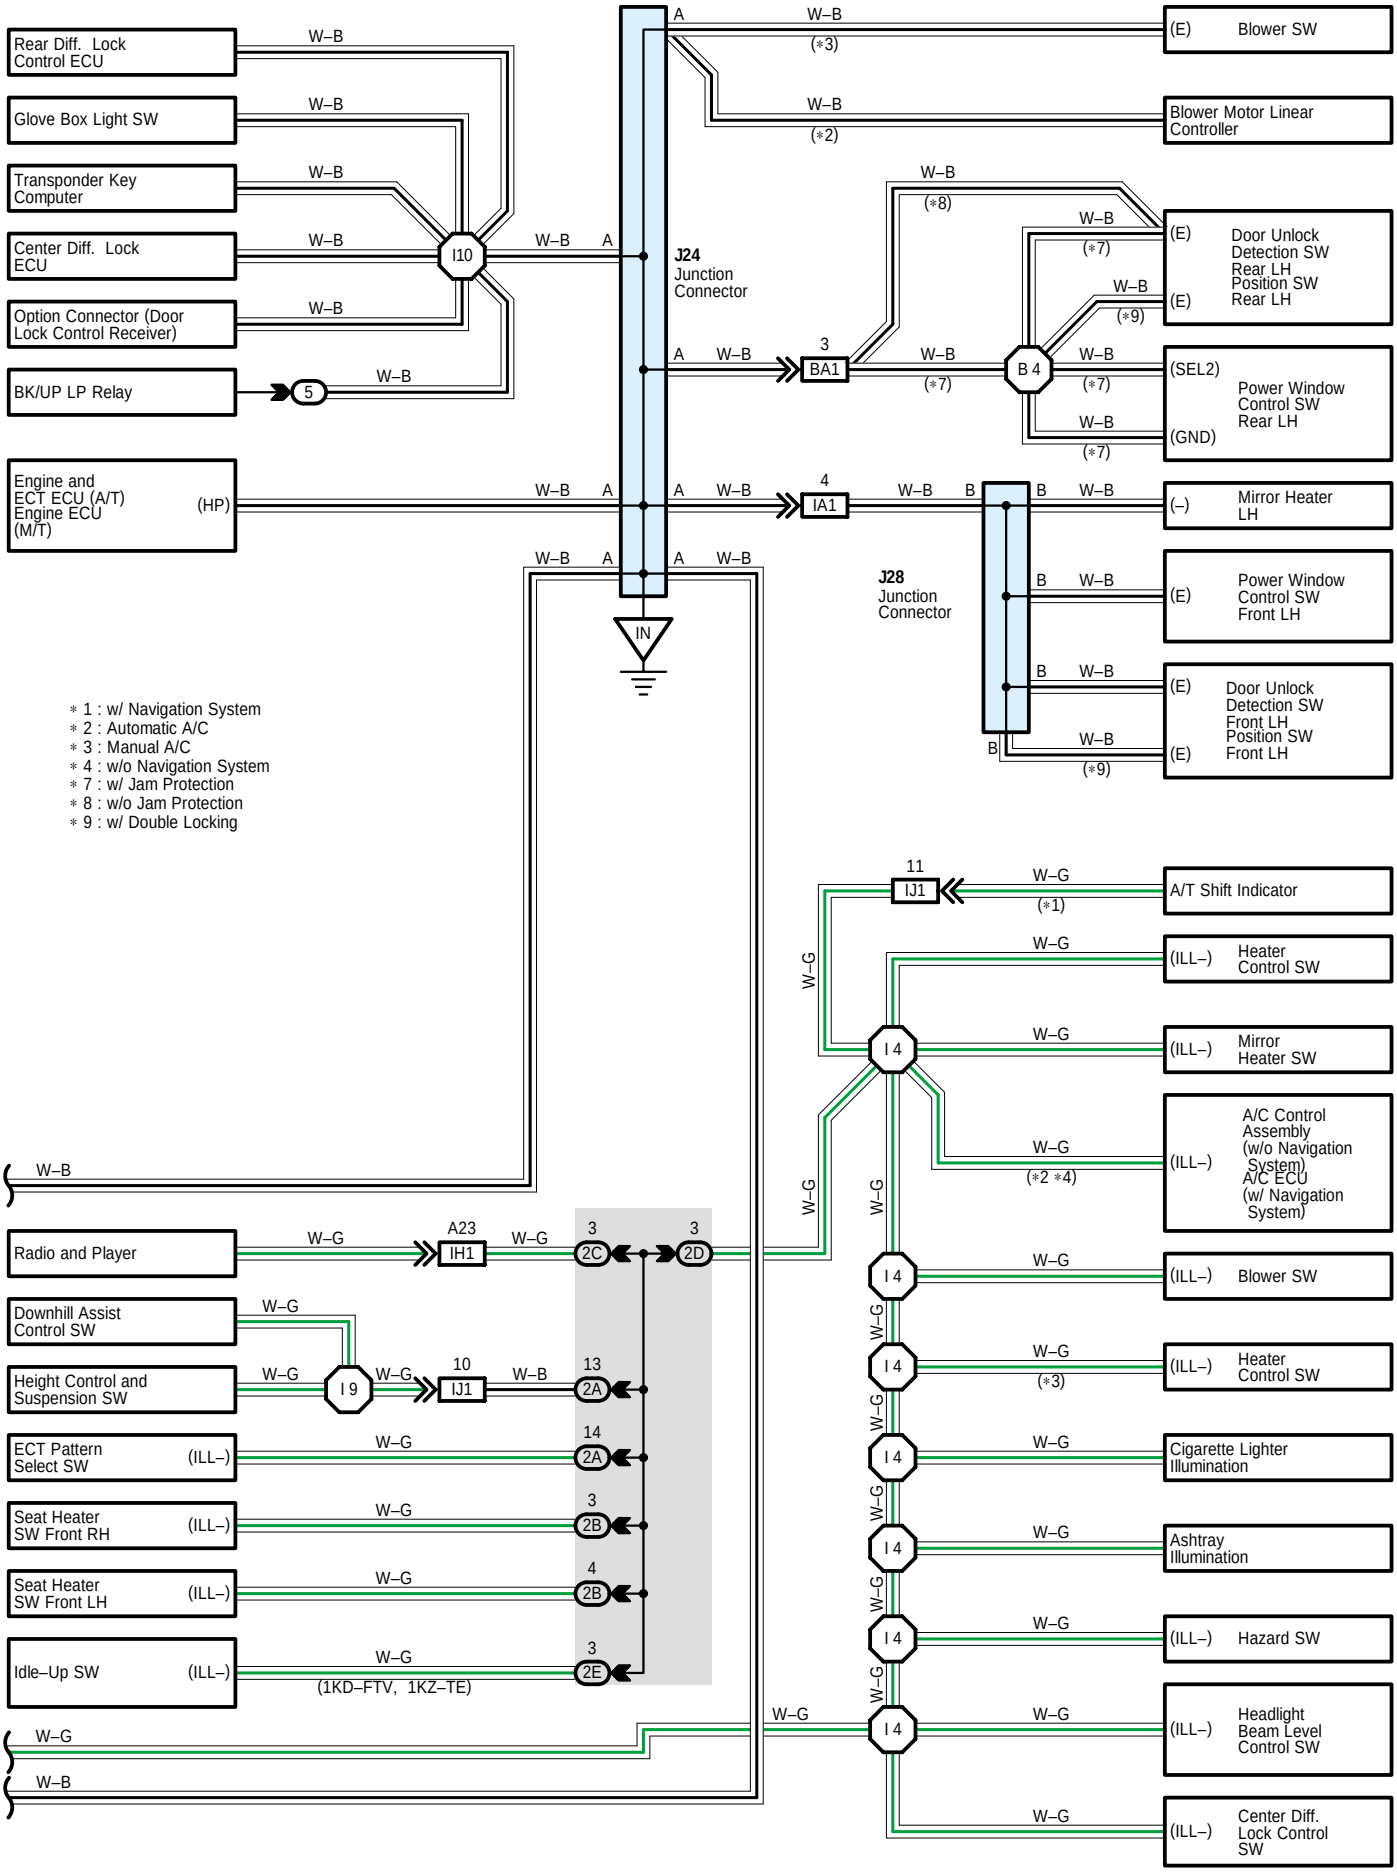
Rear Diff. Lock Control ECU
Glove Box Light SW
Transponder Key Computer
Center Diff. Lock ECU
Option Connector (Door Lock Control Receiver)
BK/UP LP Relay
Engine and ECT ECU (A/T) Engine ECU (M/T)
(HP)
W–B
I10
5
J24 Junction Connector
IN
BA1
IA1
J28 Junction Connector
B 4
(E) Blower SW
Blower Motor Linear Controller
(E) Door Unlock Detection SW Rear LH
Position SW Rear LH
(SEL2) Power Window Control SW Rear LH
(GND)
(–) Mirror Heater LH
(E) Power Window Control SW Front LH
(E) Door Unlock Detection SW Front LH
Position SW Front LH
(*8)
(*7)
(*9)
(*2)
(*3)
∗ 1 : w/ Navigation System
∗ 2 : Automatic A/C
∗ 3 : Manual A/C
∗ 4 : w/o Navigation System
∗ 7 : w/ Jam Protection
∗ 8 : w/o Jam Protection
∗ 9 : w/ Double Locking
W–G
IJ1
A/T Shift Indicator
(*1)
(ILL–) Heater Control SW
(ILL–) Mirror Heater SW
I 4
(ILL–) A/C Control Assembly (w/o Navigation System) A/C ECU (w/ Navigation System)
(*2 *4)
(ILL–) Blower SW
(ILL–) Heater Control SW
(*3)
Cigarette Lighter Illumination
Ashtray Illumination
(ILL–) Hazard SW
(ILL–) Headlight Beam Level Control SW
(ILL–) Center Diff. Lock Control SW
Radio and Player
IH1
A23
2C
2D
Downhill Assist Control SW
Height Control and Suspension SW
I 9
2A
2B
2E
ECT Pattern Select SW (ILL–)
Seat Heater SW Front RH (ILL–)
Seat Heater SW Front LH (ILL–)
Idle–Up SW (ILL–)
(1KD–FTV, 1KZ–TE)

I GROUND POINT (RHD)

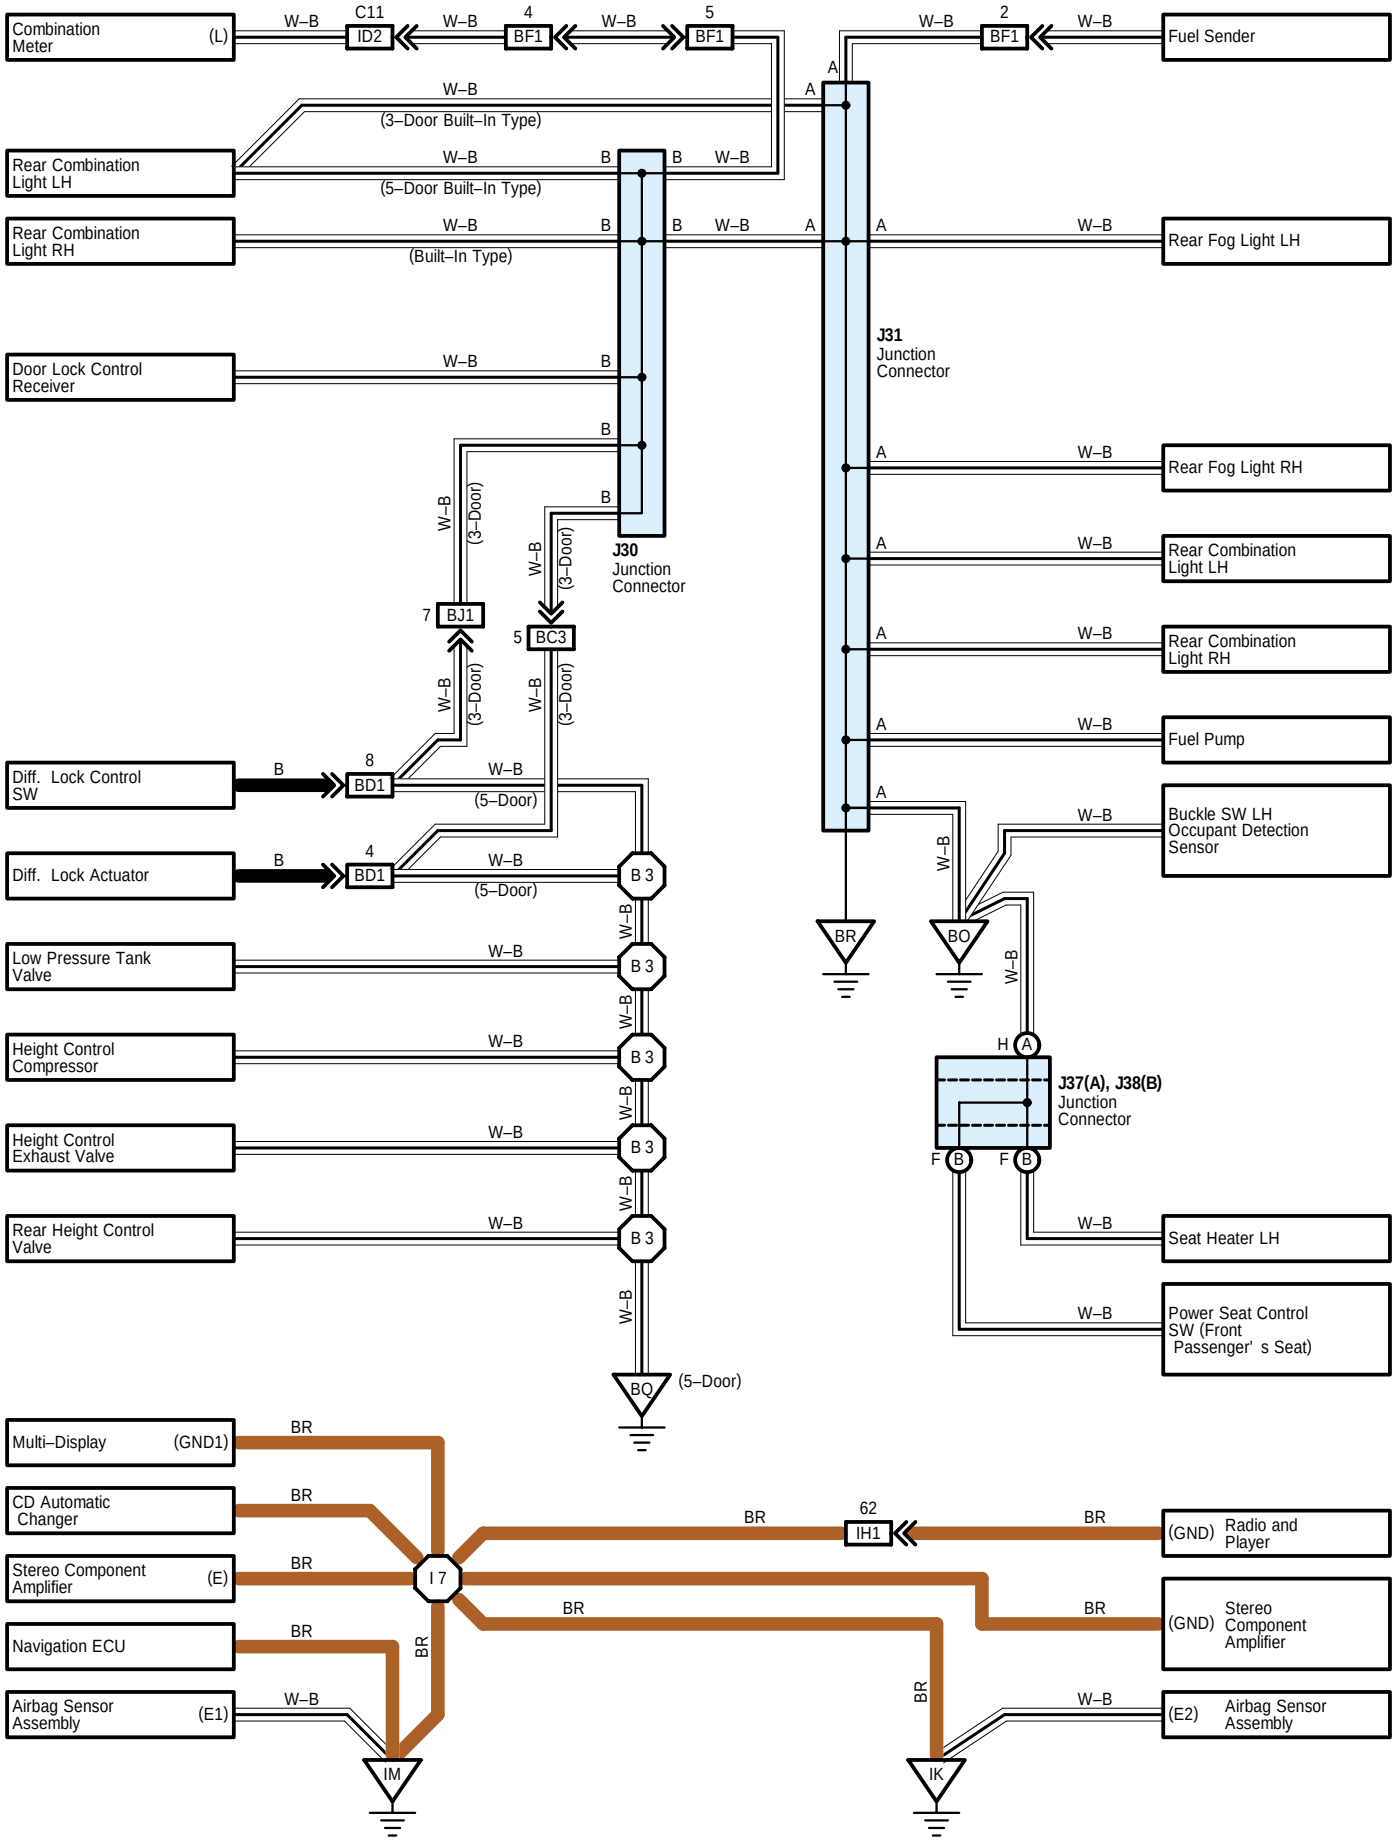

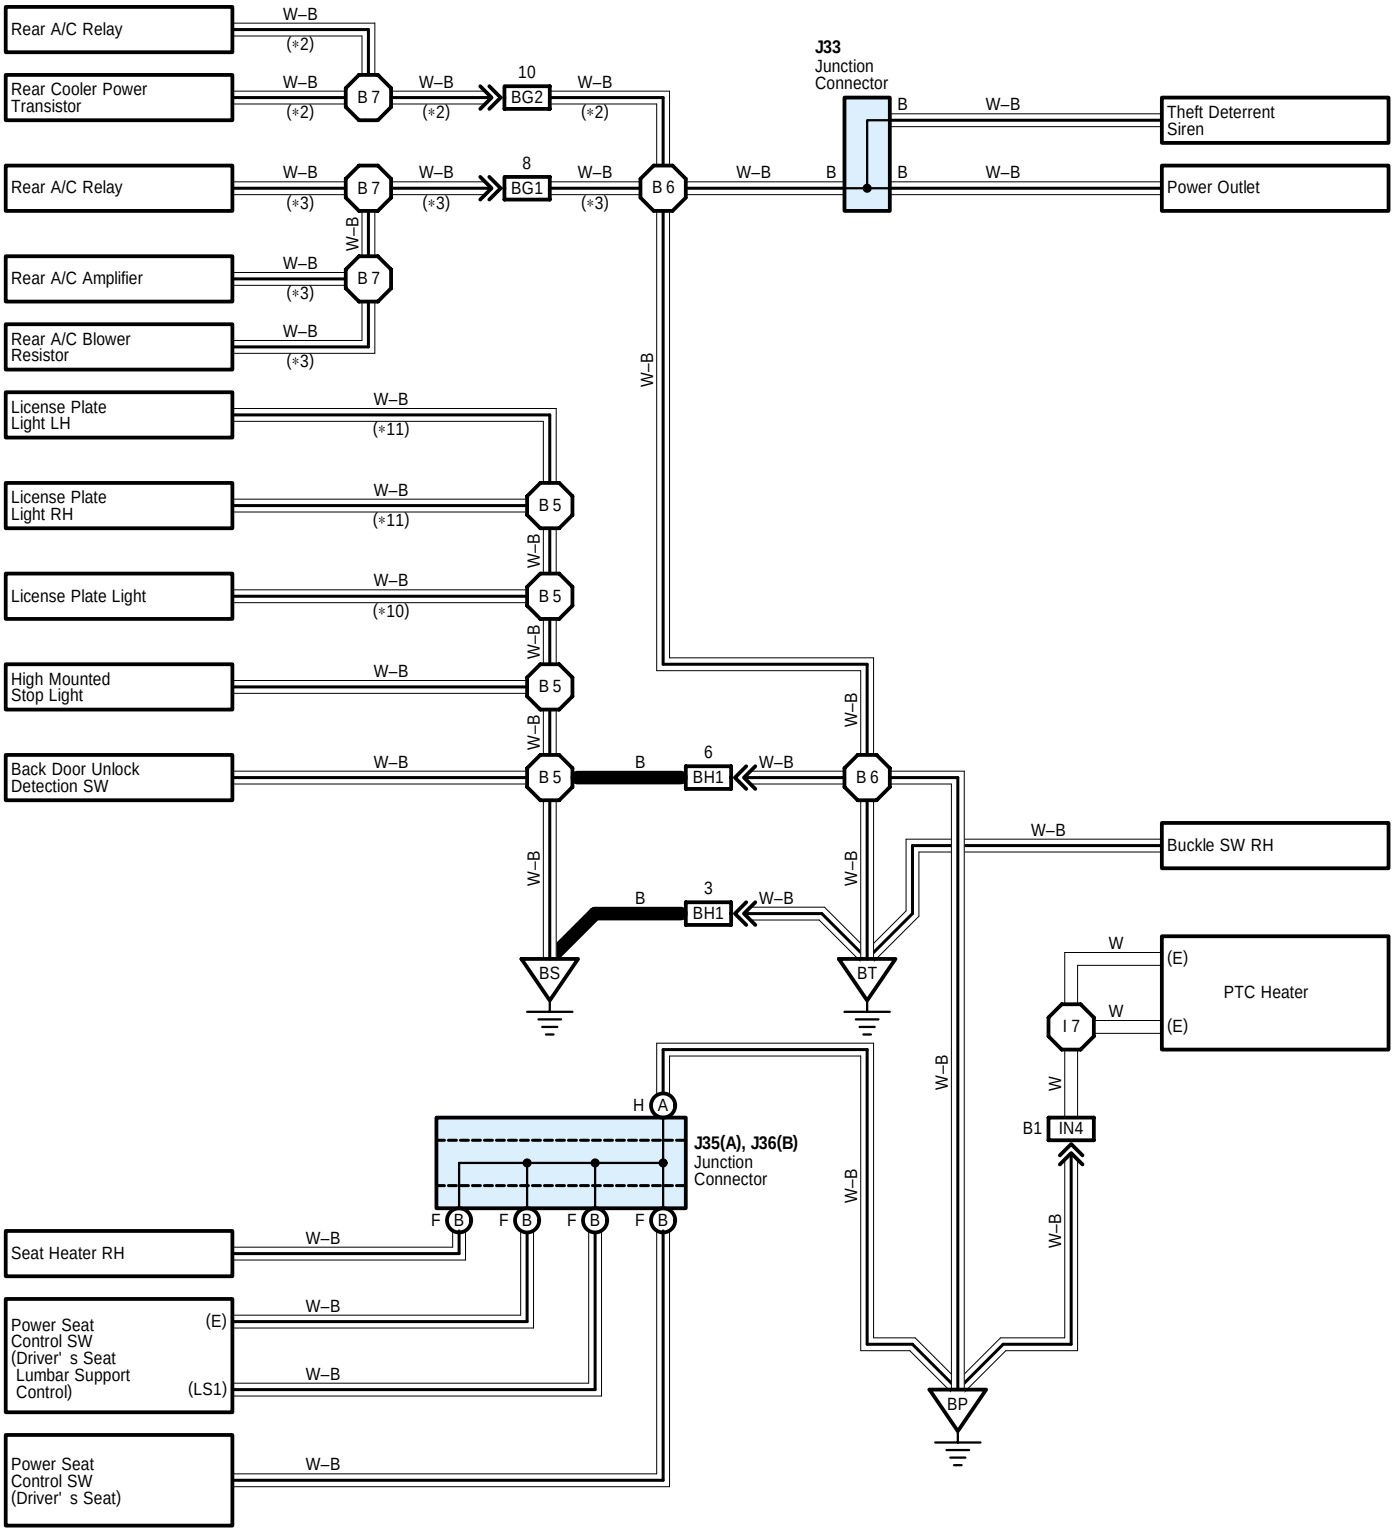

∗ 2 : Automatic A/C
∗ 3 : Manual A/C
∗10 : Spare Tire–Back Door Mounted
∗11 : Spare Tire–Under Floor Mounted

I GROUND POINT (RHD)

