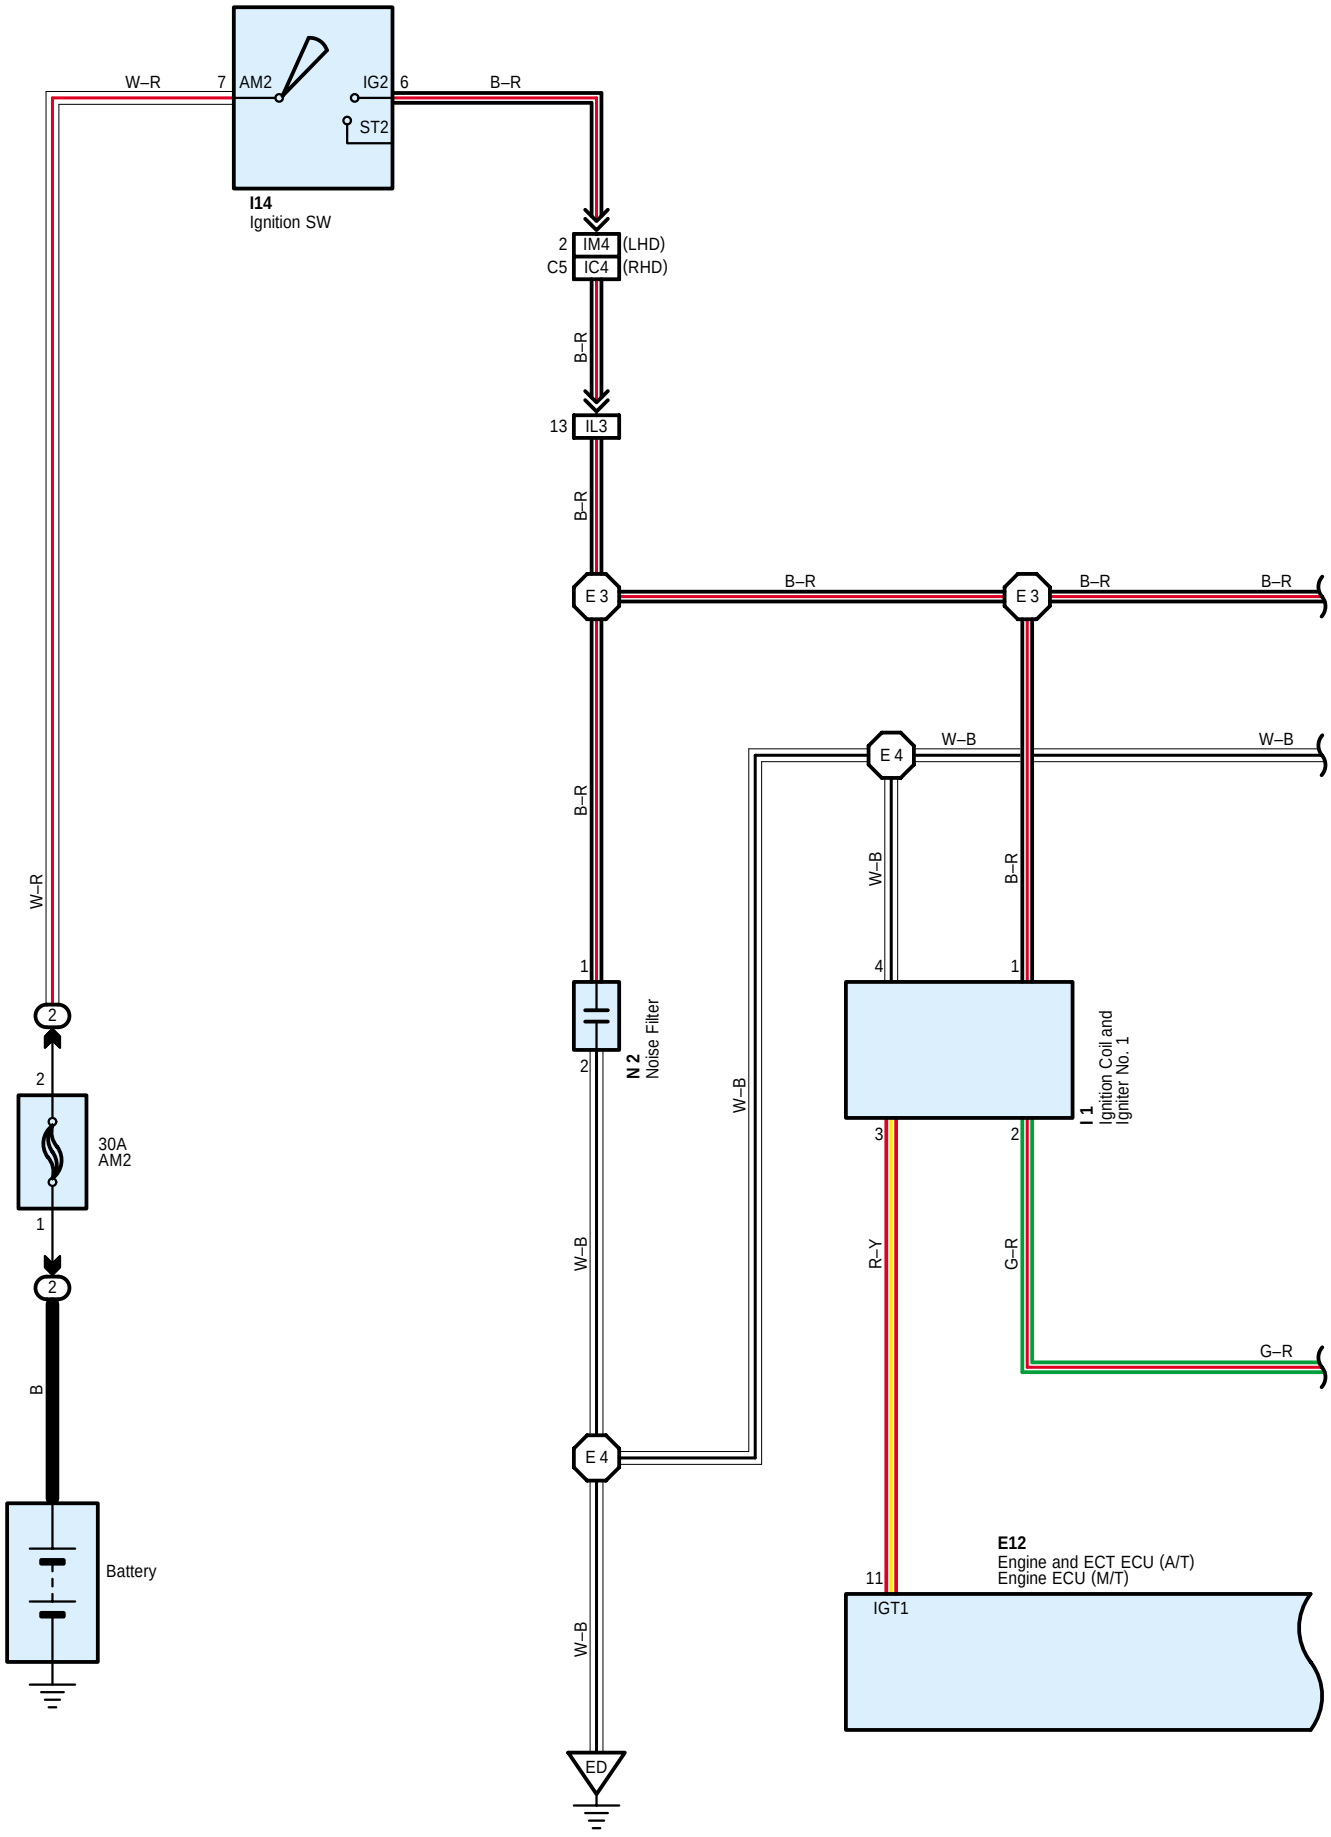
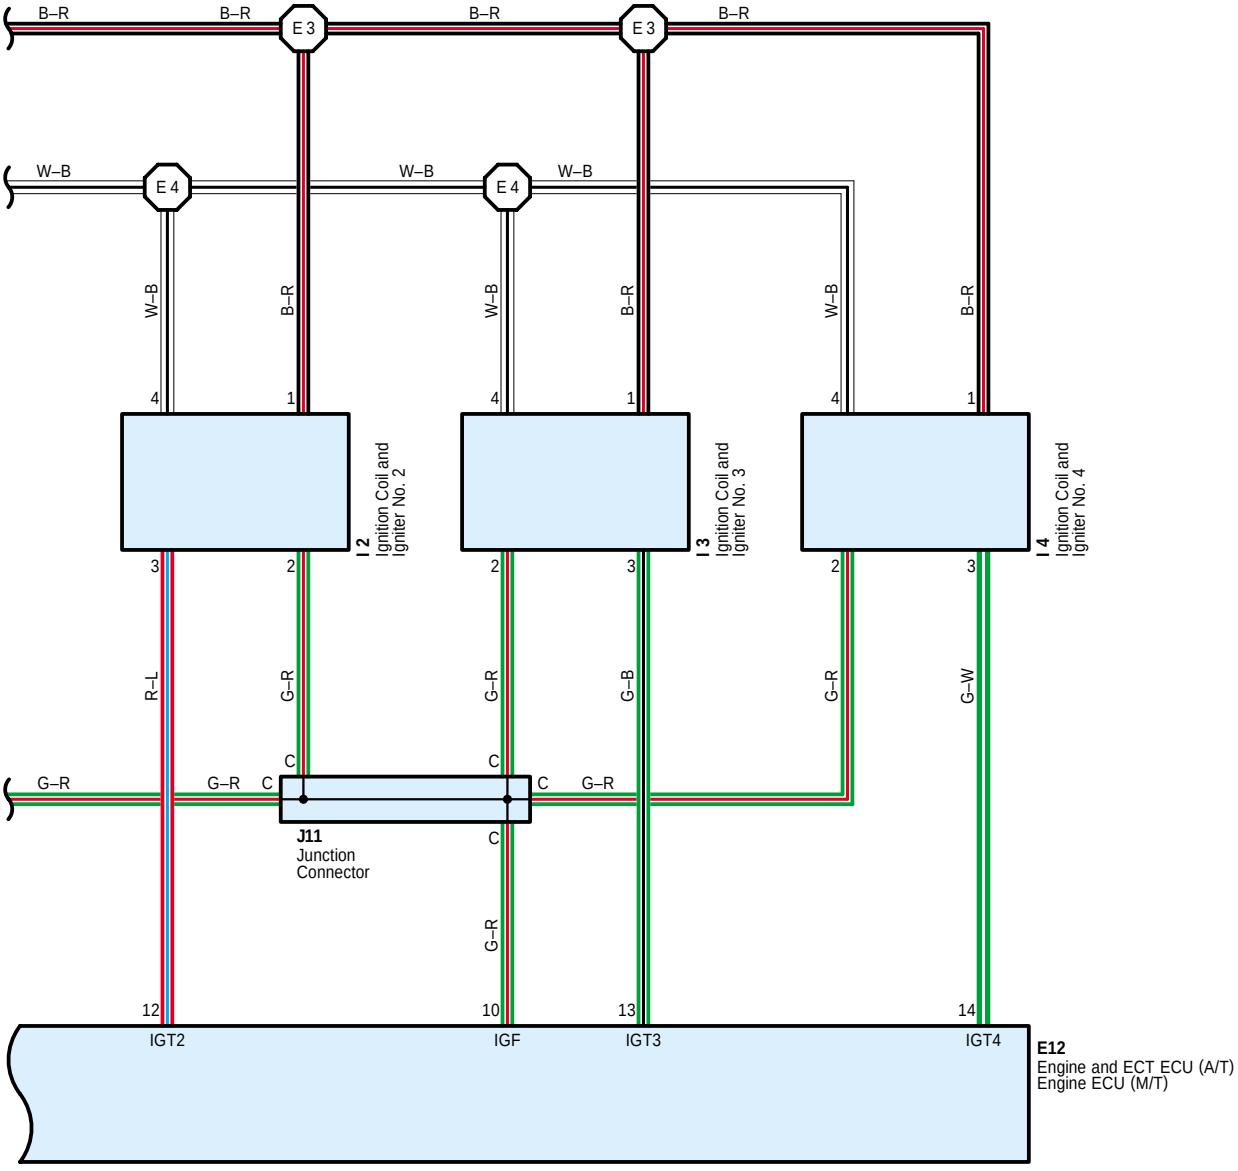

W–R
7
AM2
IG2
6
B–R
ST2
I14
Ignition SW
2
IM4
(LHD)
C5
IC4
(RHD)
B–R
13
IL3
B–R
E 3
B–R
E 3
B–R
B–R
E 4
W–B
W–B
B–R
W–B
B–R
W–R
1
2
N 2
Noise Filter
W–B
4
1
I 1
Ignition Coil and
Igniter No. 1
2
30A
AM2
1
2
3
2
B
R–Y
G–R
G–R
E 4
E12
Engine and ECT ECU (A/T)
Engine ECU (M/T)
11
IGT1
Battery
W–B
ED


B–R
B–R
E 3
B–R
E 3
B–R
W–B
E 4
W–B
E 4
W–B
W–B
B–R
W–B
B–R
W–B
B–R
4
1
4
1
4
1
I 2
Ignition Coil and Igniter No. 2
I 3
Ignition Coil and Igniter No. 3
I 4
Ignition Coil and Igniter No. 4
3
2
2
3
2
3
R–L
G–R
G–R
G–B
G–R
G–W
C
C
G–R
G–R
C
C
C
G–R
J11
Junction Connector
C
G–R
12
10
13
14
IGT2
IGF
IGT3
IGT4
E12
Engine and ECT ECU (A/T)
Engine ECU (M/T)