

Key Reminder and Seat Belt Warning

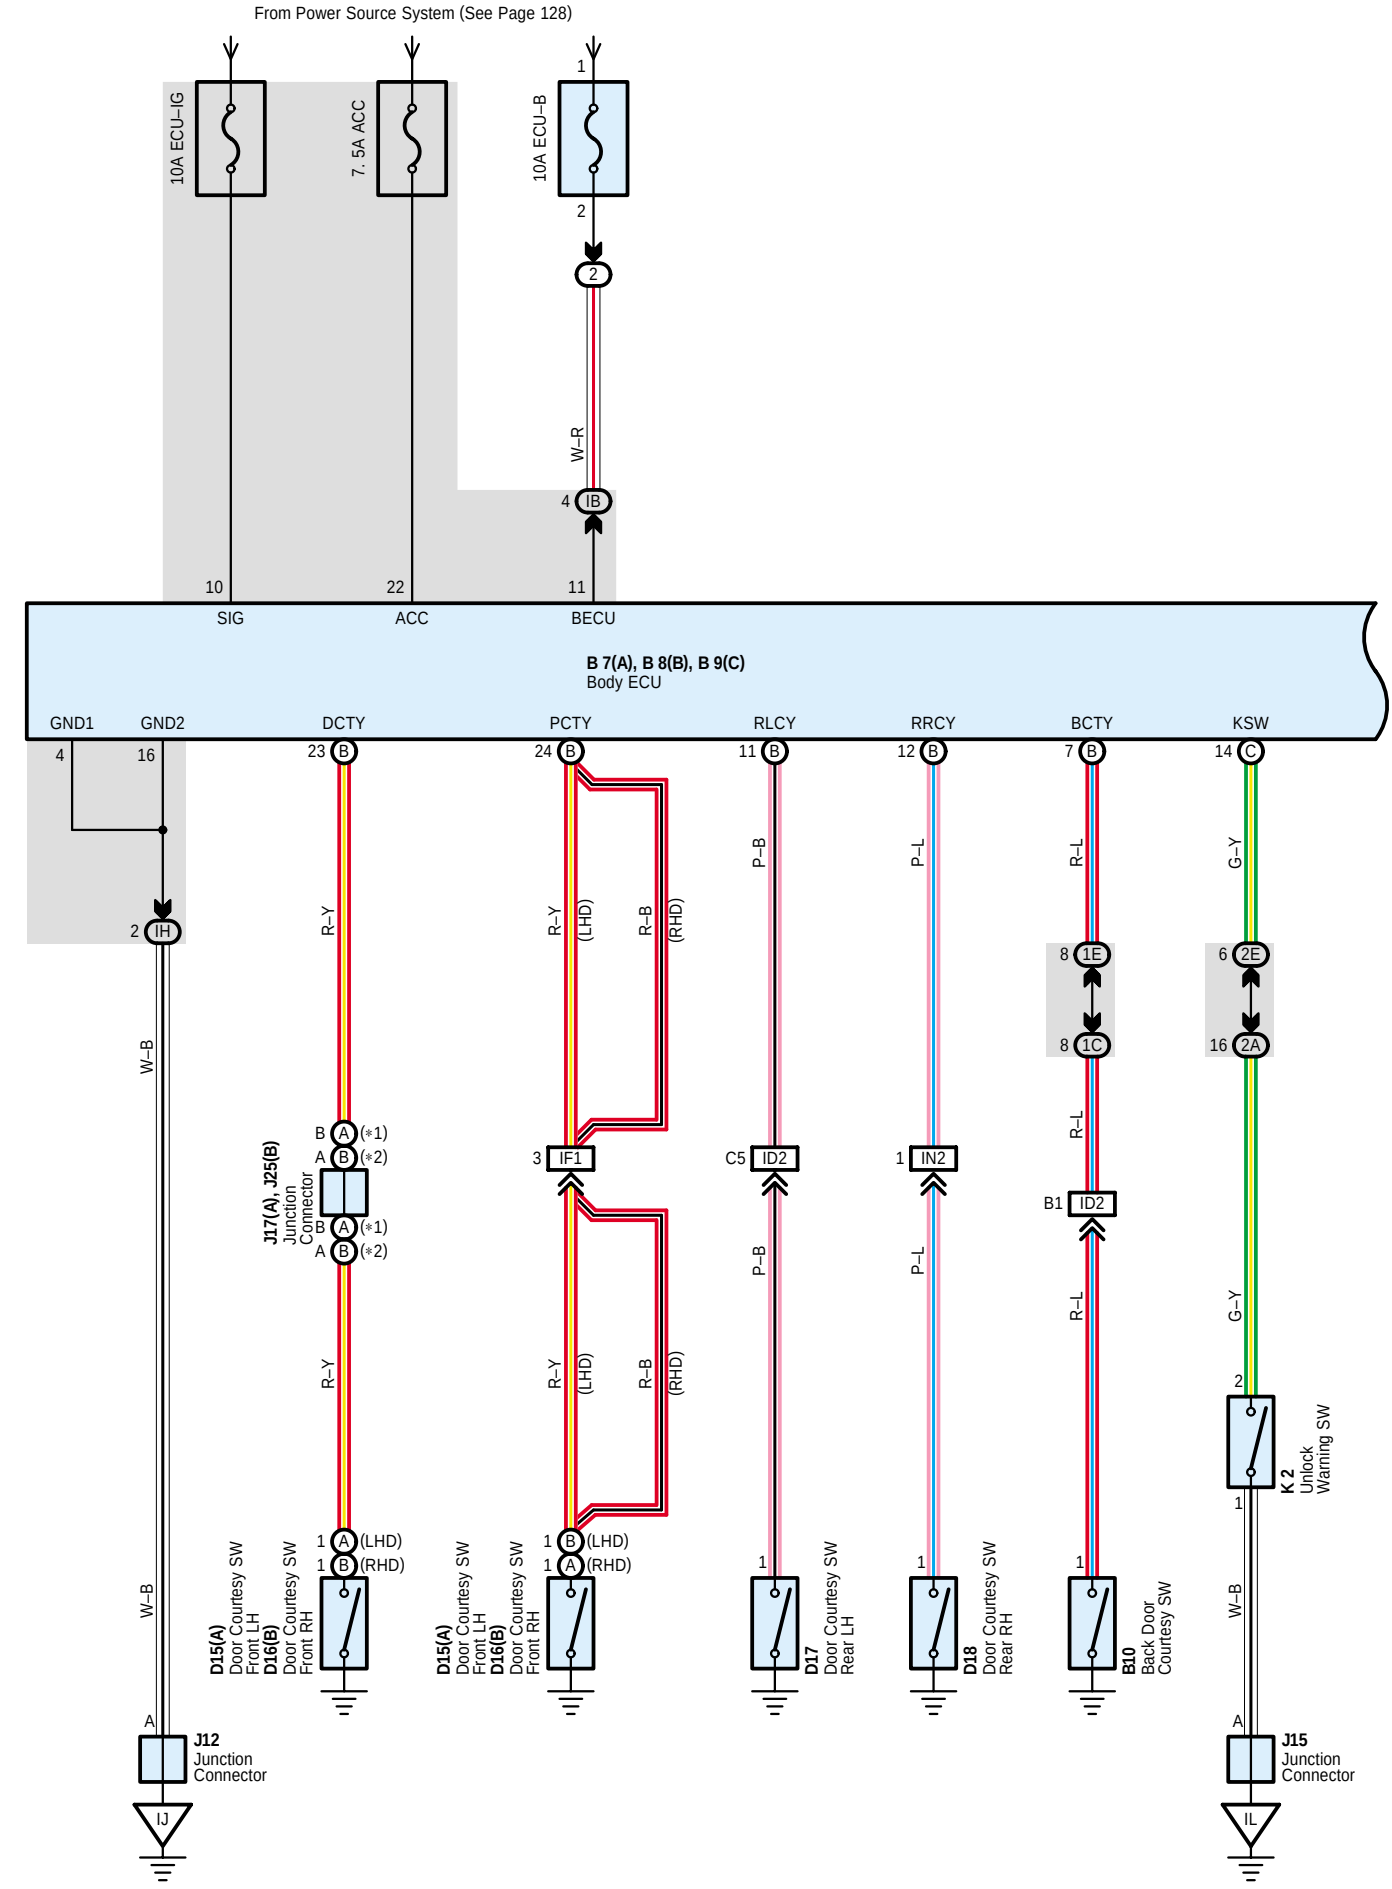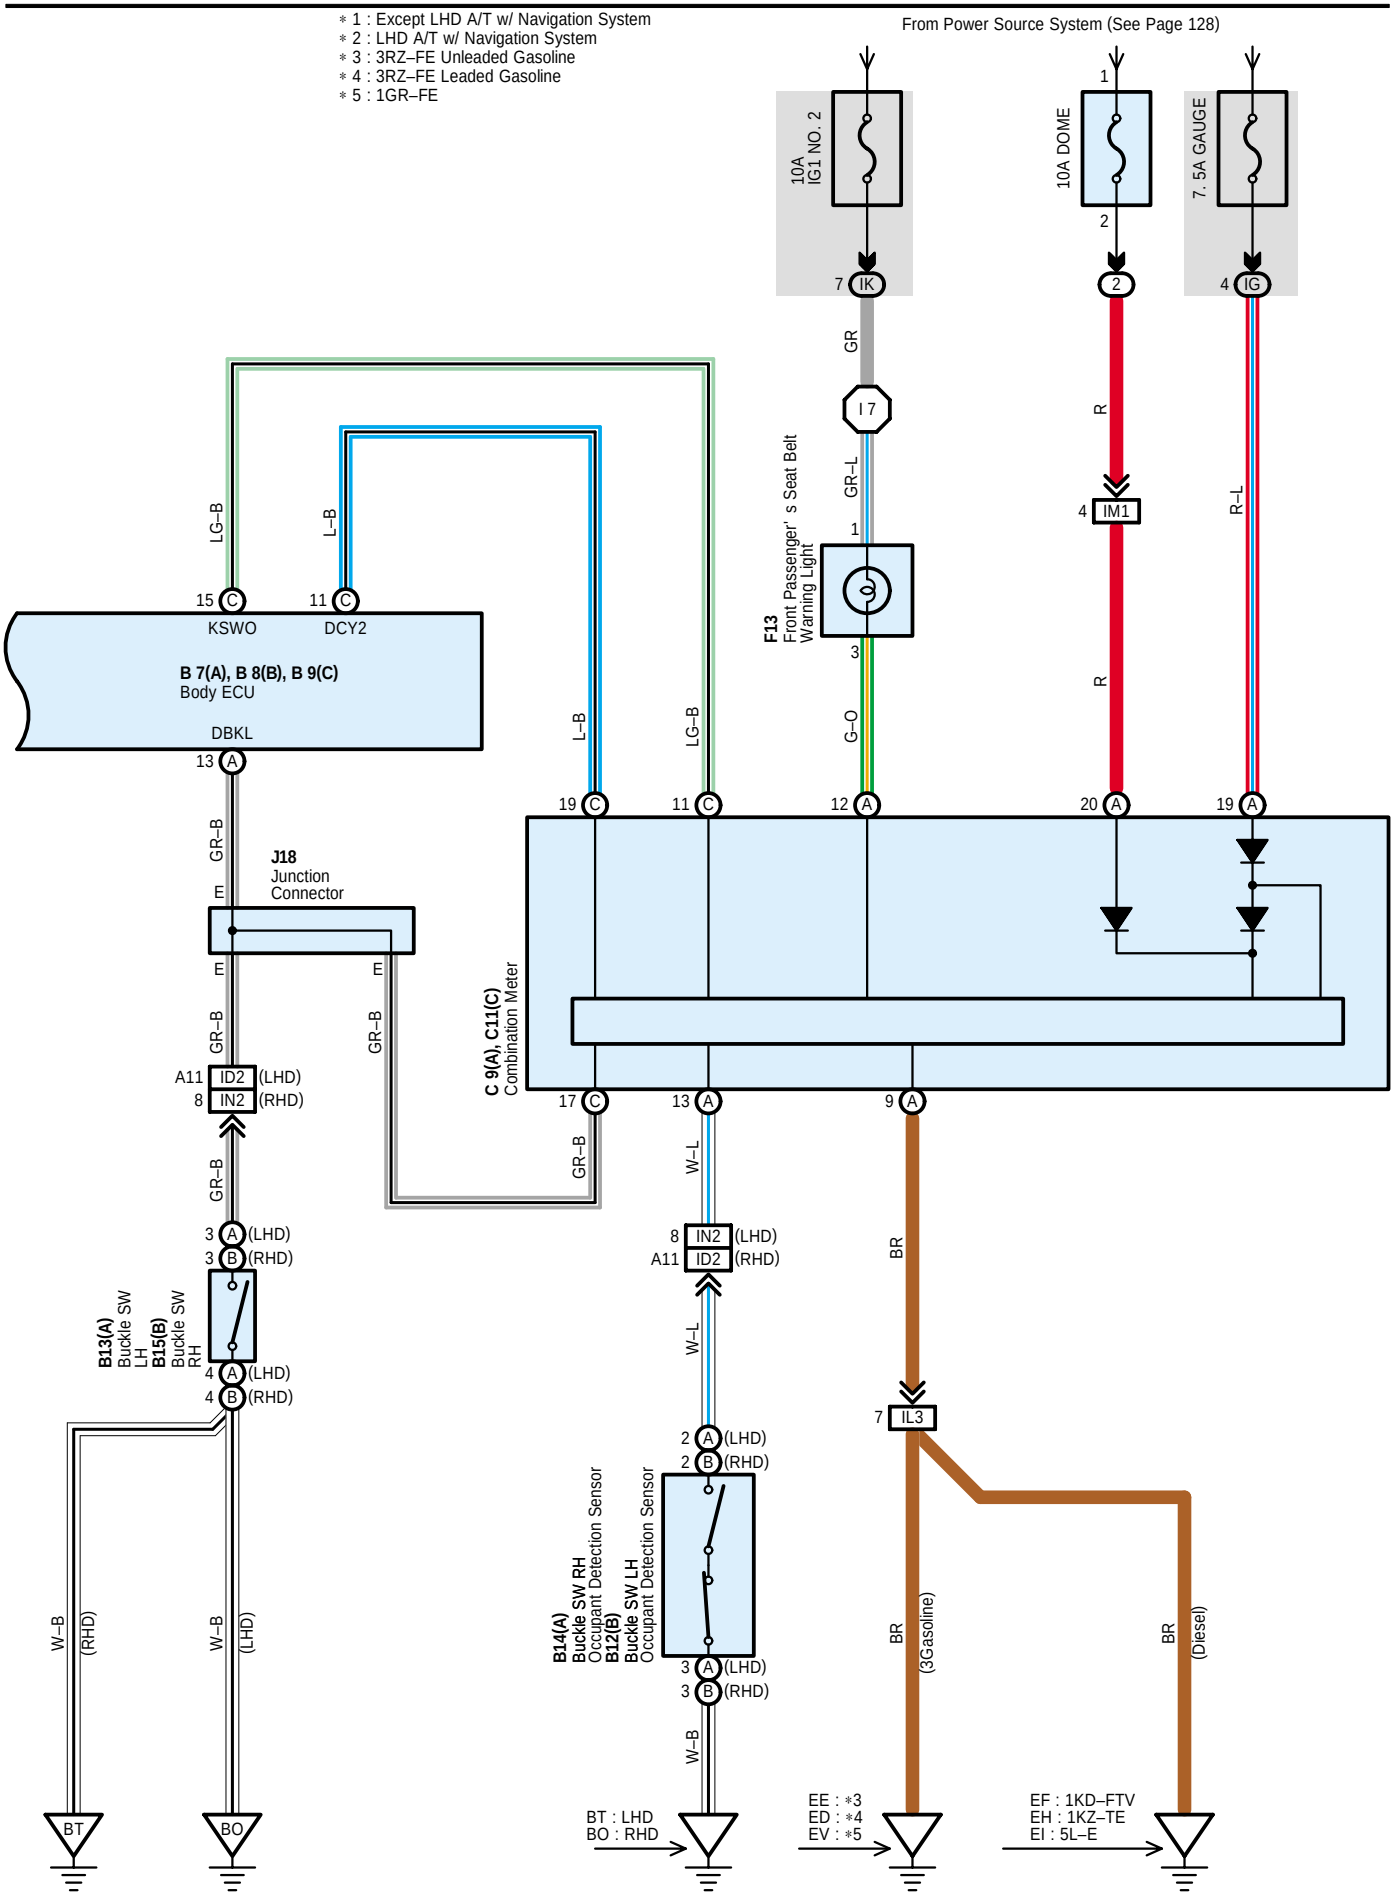


∗ 1 : Except LHD A/T w/ Navigation System
∗ 2 : LHD A/T w/ Navigation System
∗ 3 : 3RZ–FE Unleaded Gasoline
∗ 4 : 3RZ–FE Leaded Gasoline
∗ 5 : 1GR–FE
From Power Source System (See Page 128)
10A IG1 NO. 2
10A DOME
7. 5A GAUGE
7 IK
2
4 IG
GR
R
R–L
I 7
GR–L
4 IM1
F13 Front Passenger' s Seat Belt Warning Light
1
3
G–O
LG–B
L–B
15 C
11 C
KSWO
DCY2
B 7(A), B 8(B), B 9(C)
Body ECU
DBKL
13 A
19 C
11 C
12 A
20 A
19 A
GR–B
J18
Junction Connector
E
C 9(A), C11(C)
Combination Meter
A11 ID2 (LHD)
8 IN2 (RHD)
17 C
13 A
9 A
W–L
BR
3 A (LHD)
3 B (RHD)
8 IN2 (LHD)
A11 ID2 (RHD)
B13(A) Buckle SW LH
B15(B) Buckle SW RH
4 A (LHD)
4 B (RHD)
7 IL3
2 A (LHD)
2 B (RHD)
B14(A) Buckle SW RH
B12(B) Buckle SW LH
Occupant Detection Sensor
3 A (LHD)
3 B (RHD)
W–B
(RHD)
(LHD)
BT
BO
BT : LHD
BO : RHD
EE : ∗3
ED : ∗4
EV : ∗5
(3Gasoline)
(Diesel)
EF : 1KD–FTV
EH : 1KZ–TE
EI : 5L–E