



# Power Window (LHD w/ Jam Protection)

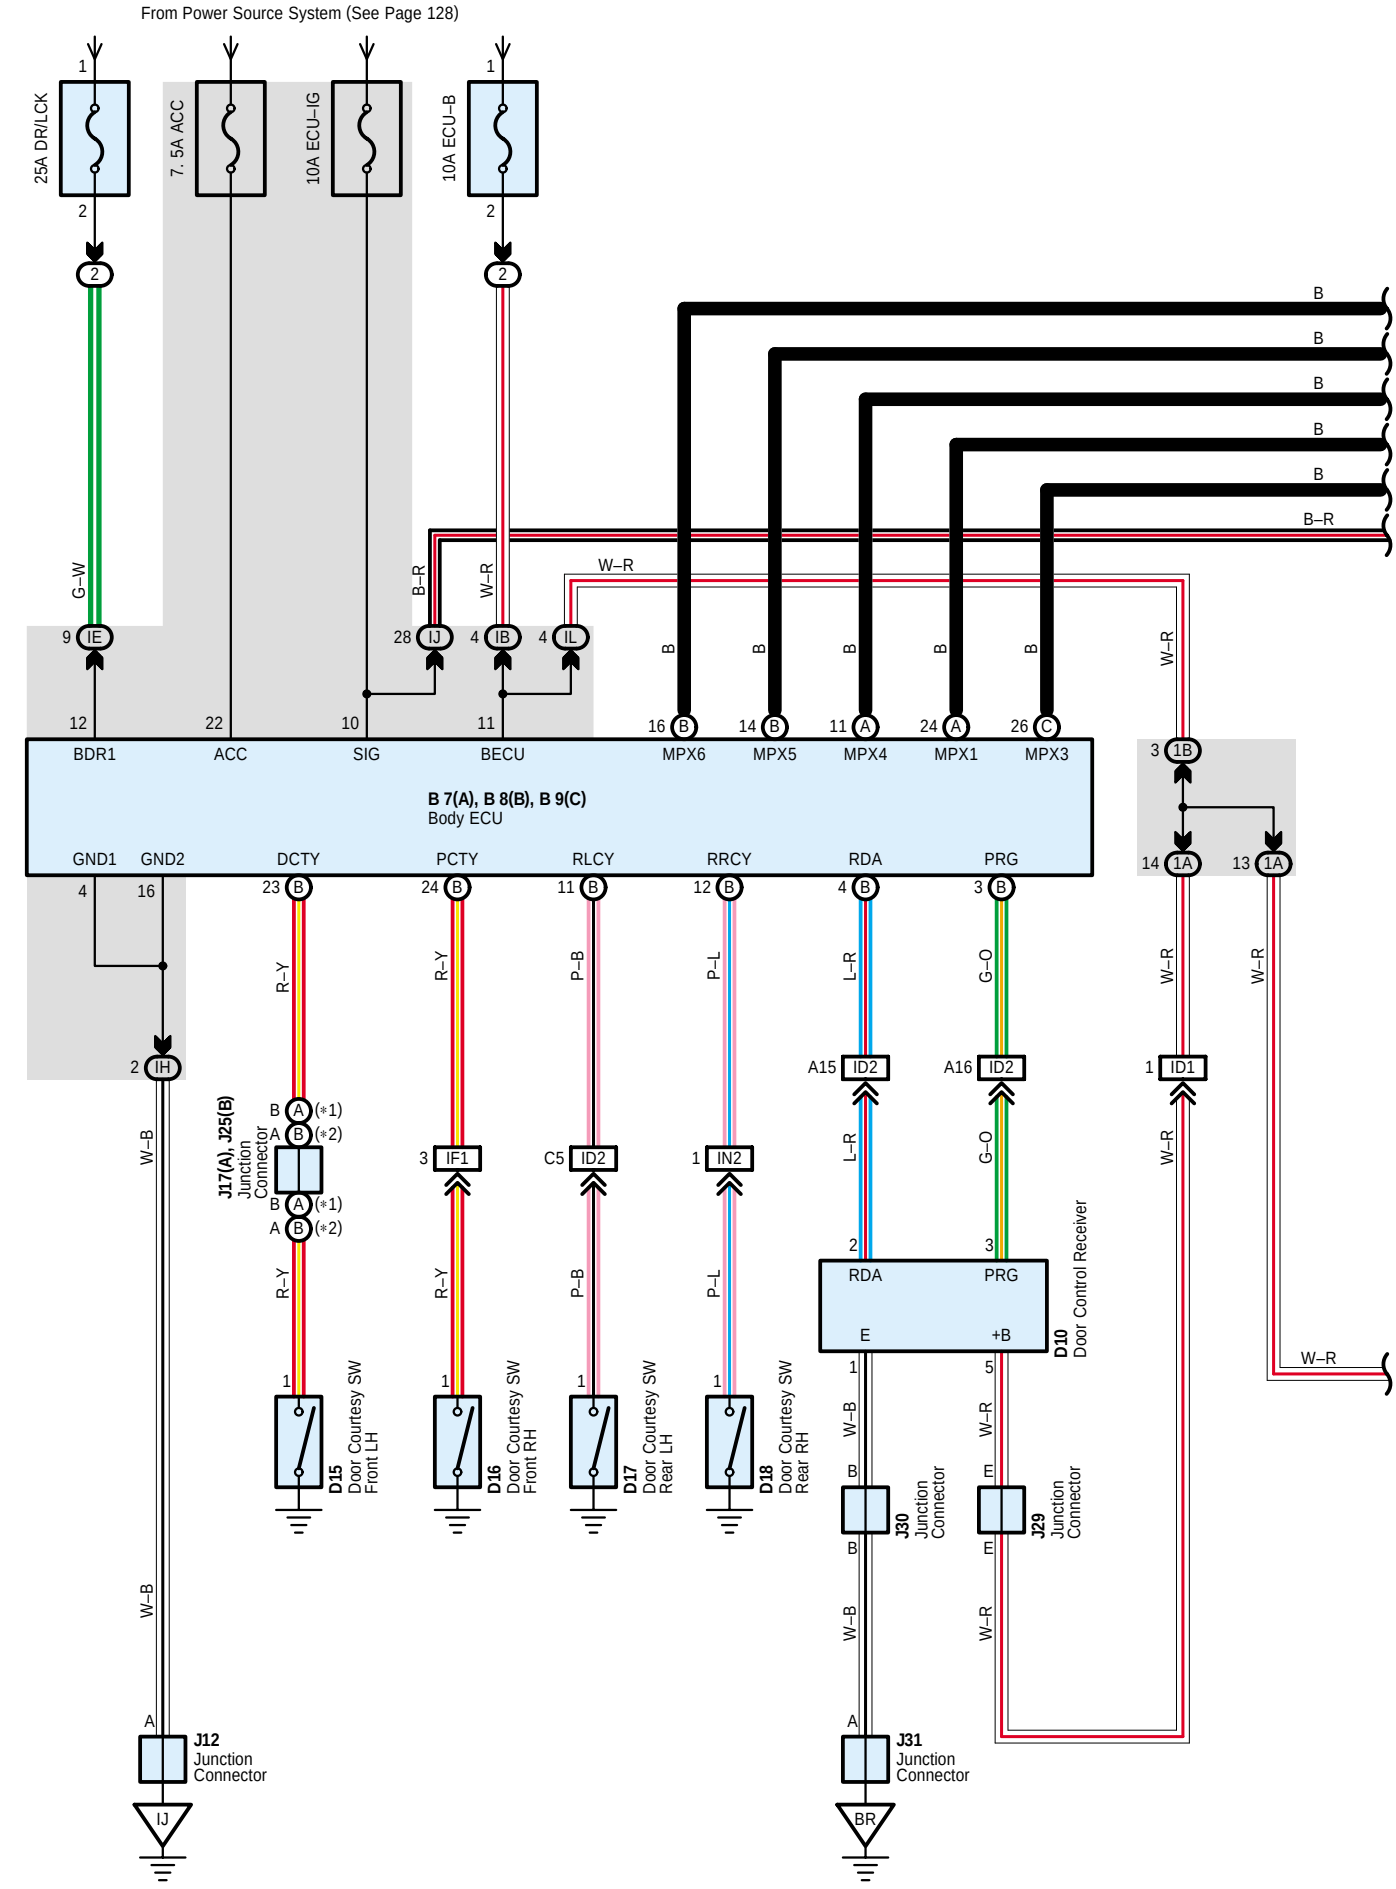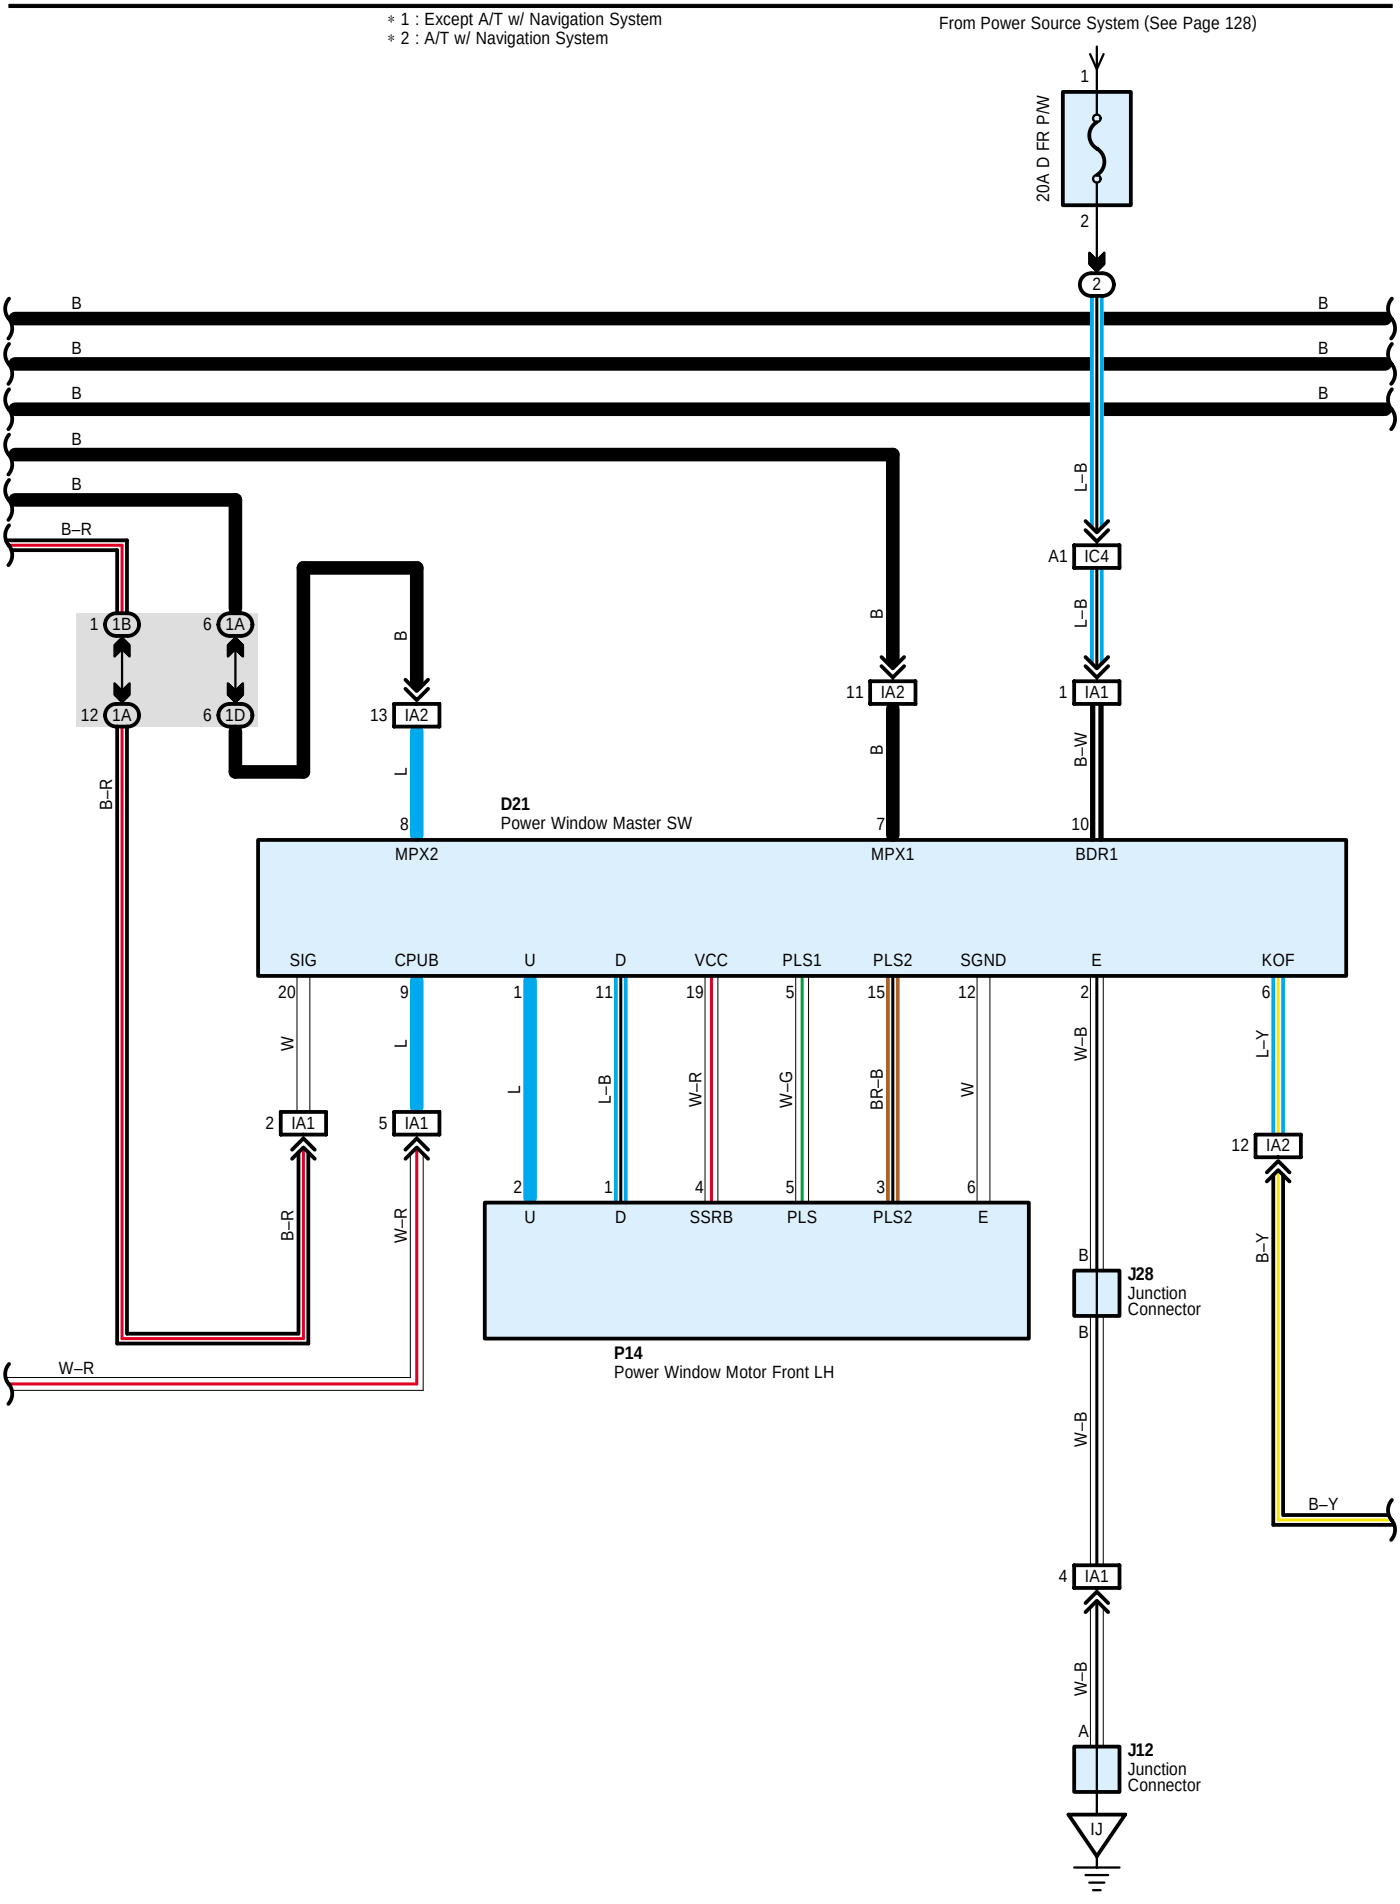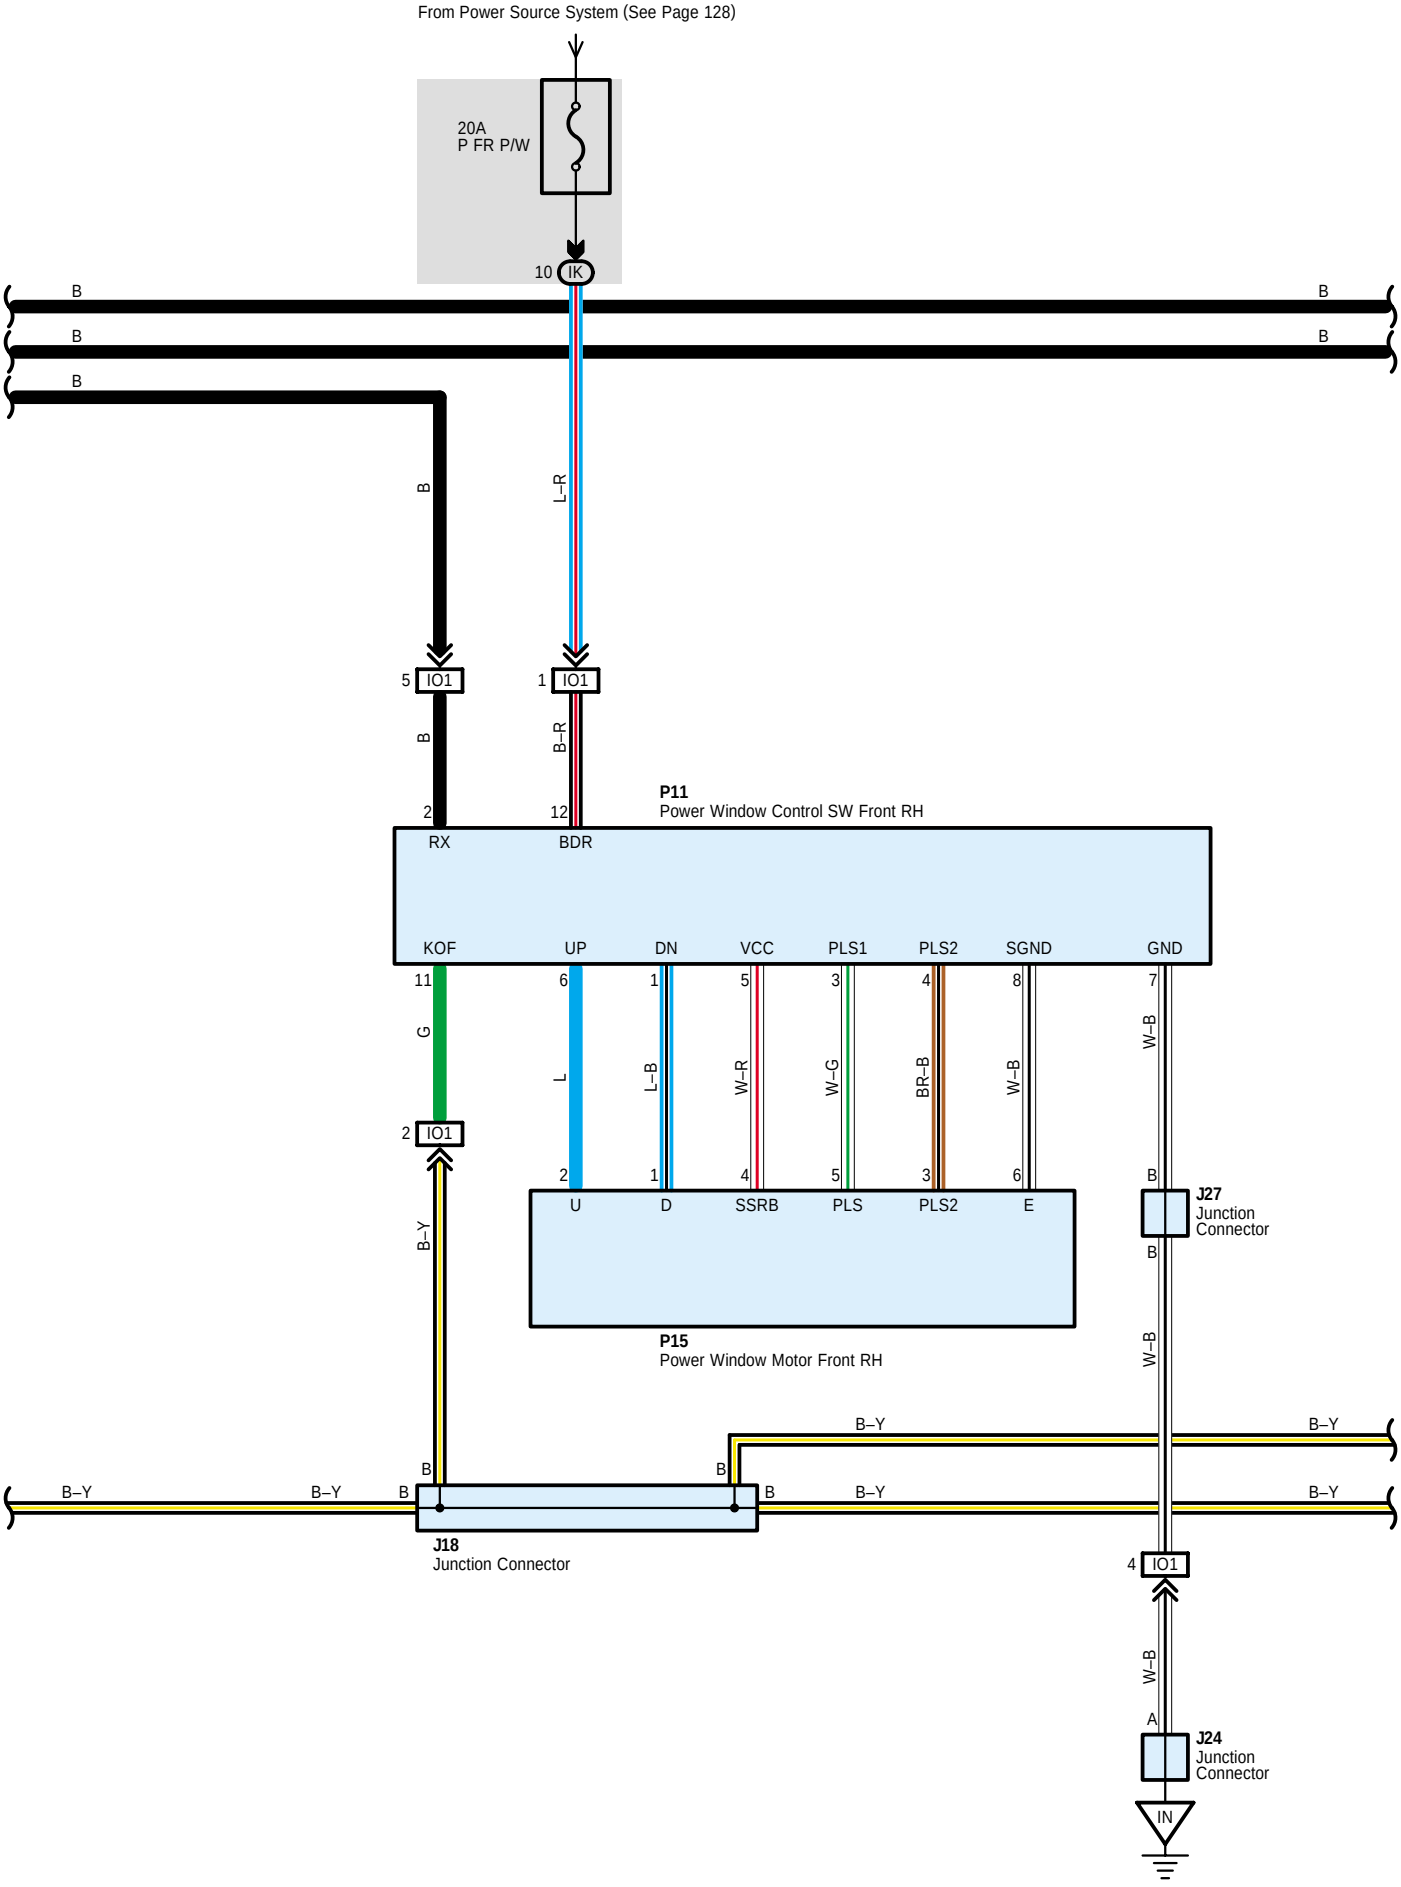


* 1 : Except A/T w/ Navigation System
* 2 : A/T w/ Navigation System
From Power Source System (See Page 128)
20A D FR P/W
1
2
2
B
B
B
B
B
B
B
B
B
B–R
L–B
A1 IC4
L–B
1 IA1
B–W
10
BDR1
11 IA2
B
7
MPX1
1 1B
6 1A
12 1A
6 1D
B–R
B
13 IA2
L
8
MPX2
D21
Power Window Master SW
SIG
CPUB
U
D
VCC
PLS1
PLS2
SGND
E
KOF
20
W
2 IA1
B–R
9
L
5 IA1
W–R
1
L
2
U
11
L–B
1
D
19
W–R
4
SSRB
5
W–G
5
PLS
15
BR–B
3
PLS2
12
W
6
E
P14
Power Window Motor Front LH
W–R
2
W–B
B
J28
Junction
Connector
B
W–B
4 IA1
W–B
A
J12
Junction
Connector
IJ
6
L–Y
12 IA2
B–Y
B–Y

# Power Window (LHD w/ Jam Protection)

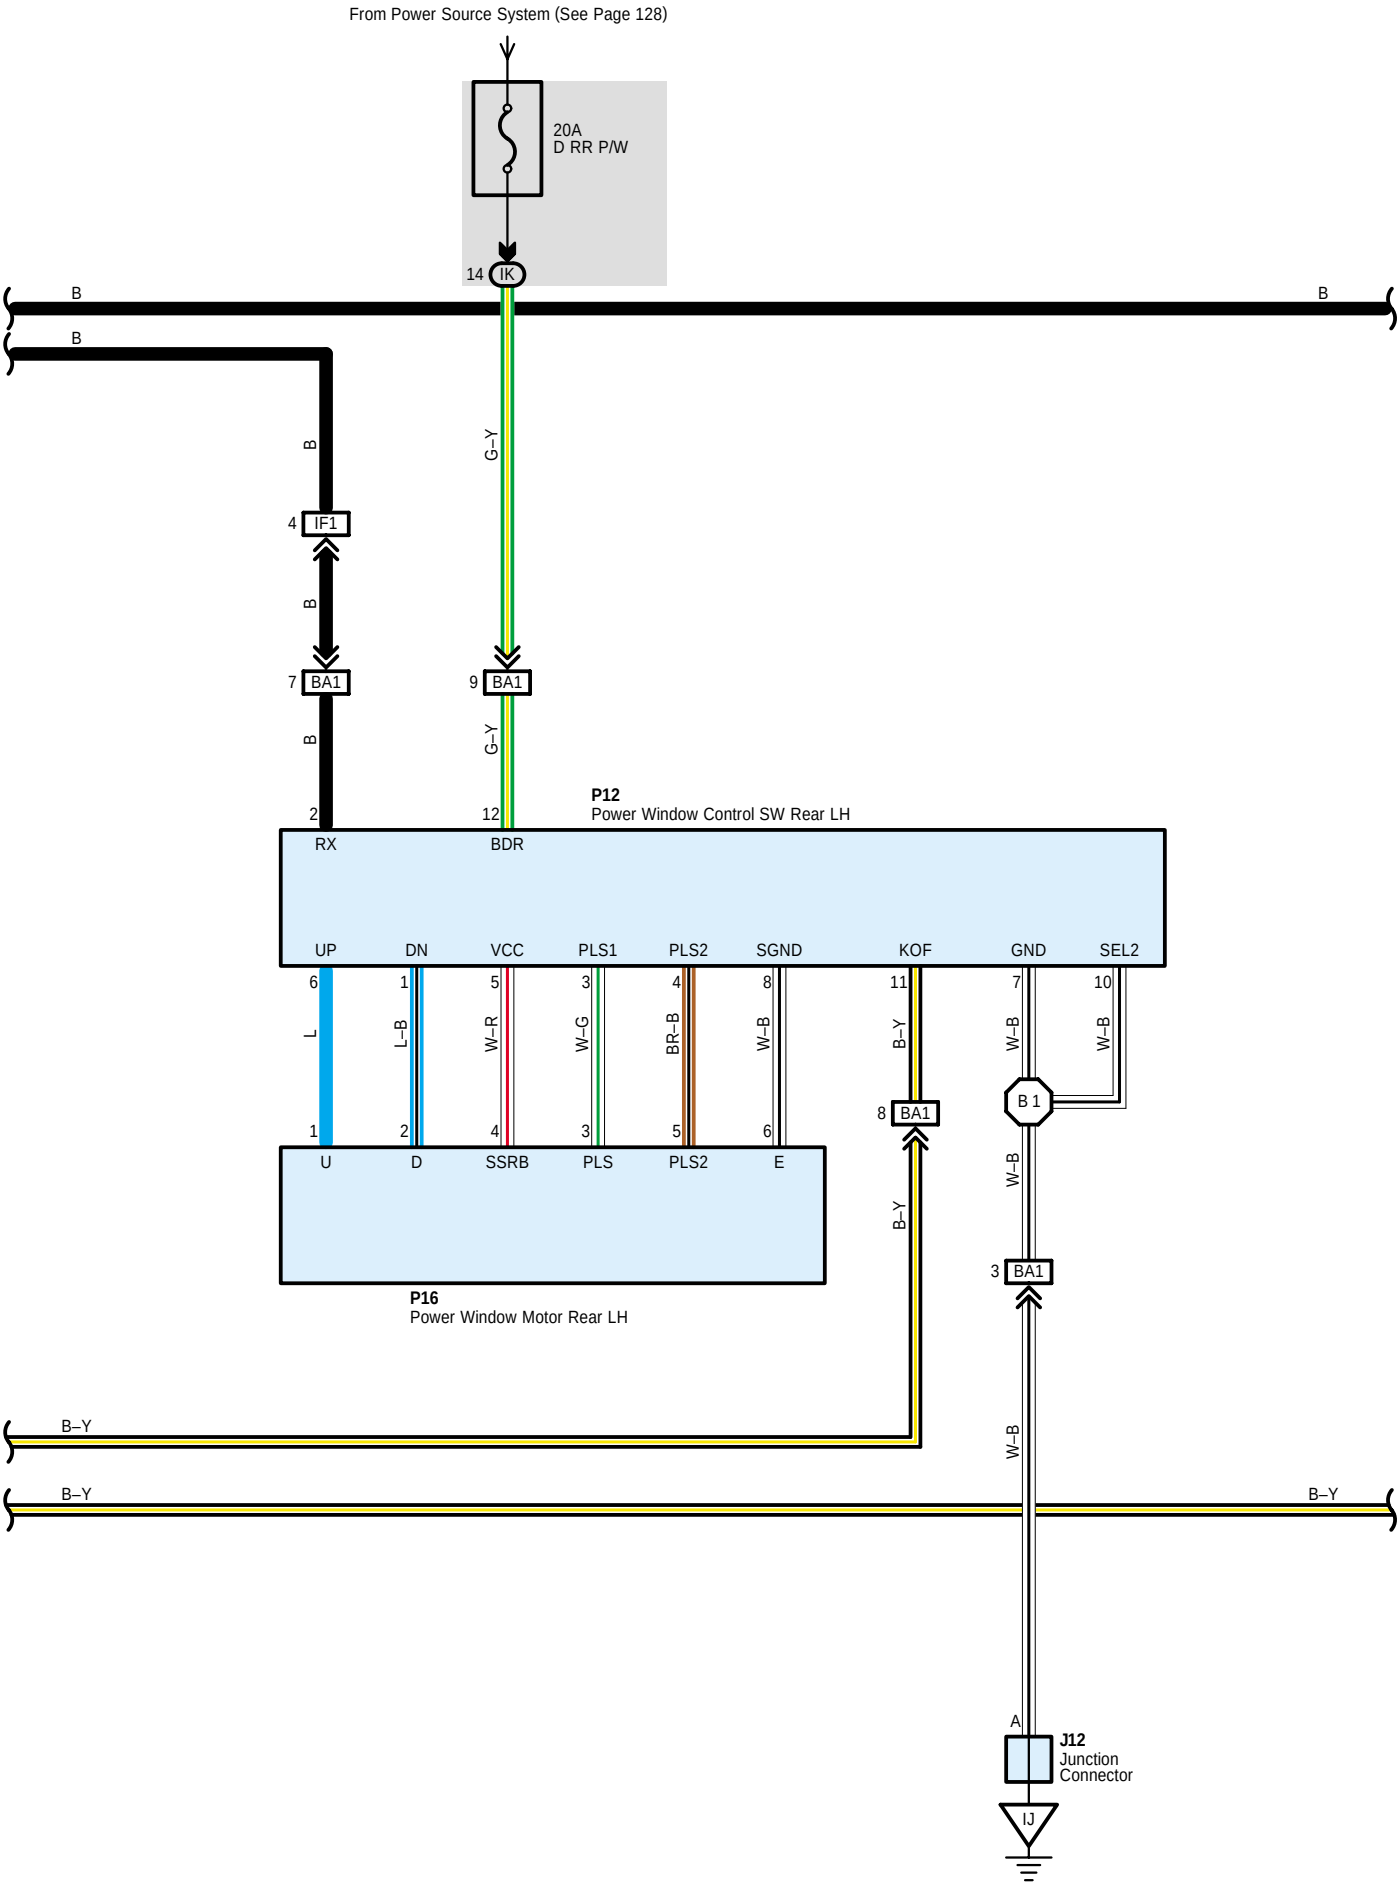


From Power Source System (See Page 128)
20A
D RR P/W
14 IK
B
B
B
G–Y
4 IF1
B
7 BA1
9 BA1
B
G–Y
2
12
P12
Power Window Control SW Rear LH
RX
BDR
UP
DN
VCC
PLS1
PLS2
SGND
KOF
GND
SEL2
6
1
5
3
4
8
11
7
10
L
L–B
W–R
W–G
BR–B
W–B
B–Y
W–B
W–B
1
2
4
3
5
6
8 BA1
B 1
U
D
SSRB
PLS
PLS2
E
B–Y
W–B
3 BA1
P16
Power Window Motor Rear LH
B–Y
B–Y
B–Y
W–B
A
J12
Junction
Connector
IJ

# Power Window (LHD w/ Jam Protection)

