

Power Window (LHD w/o Jam Protection)

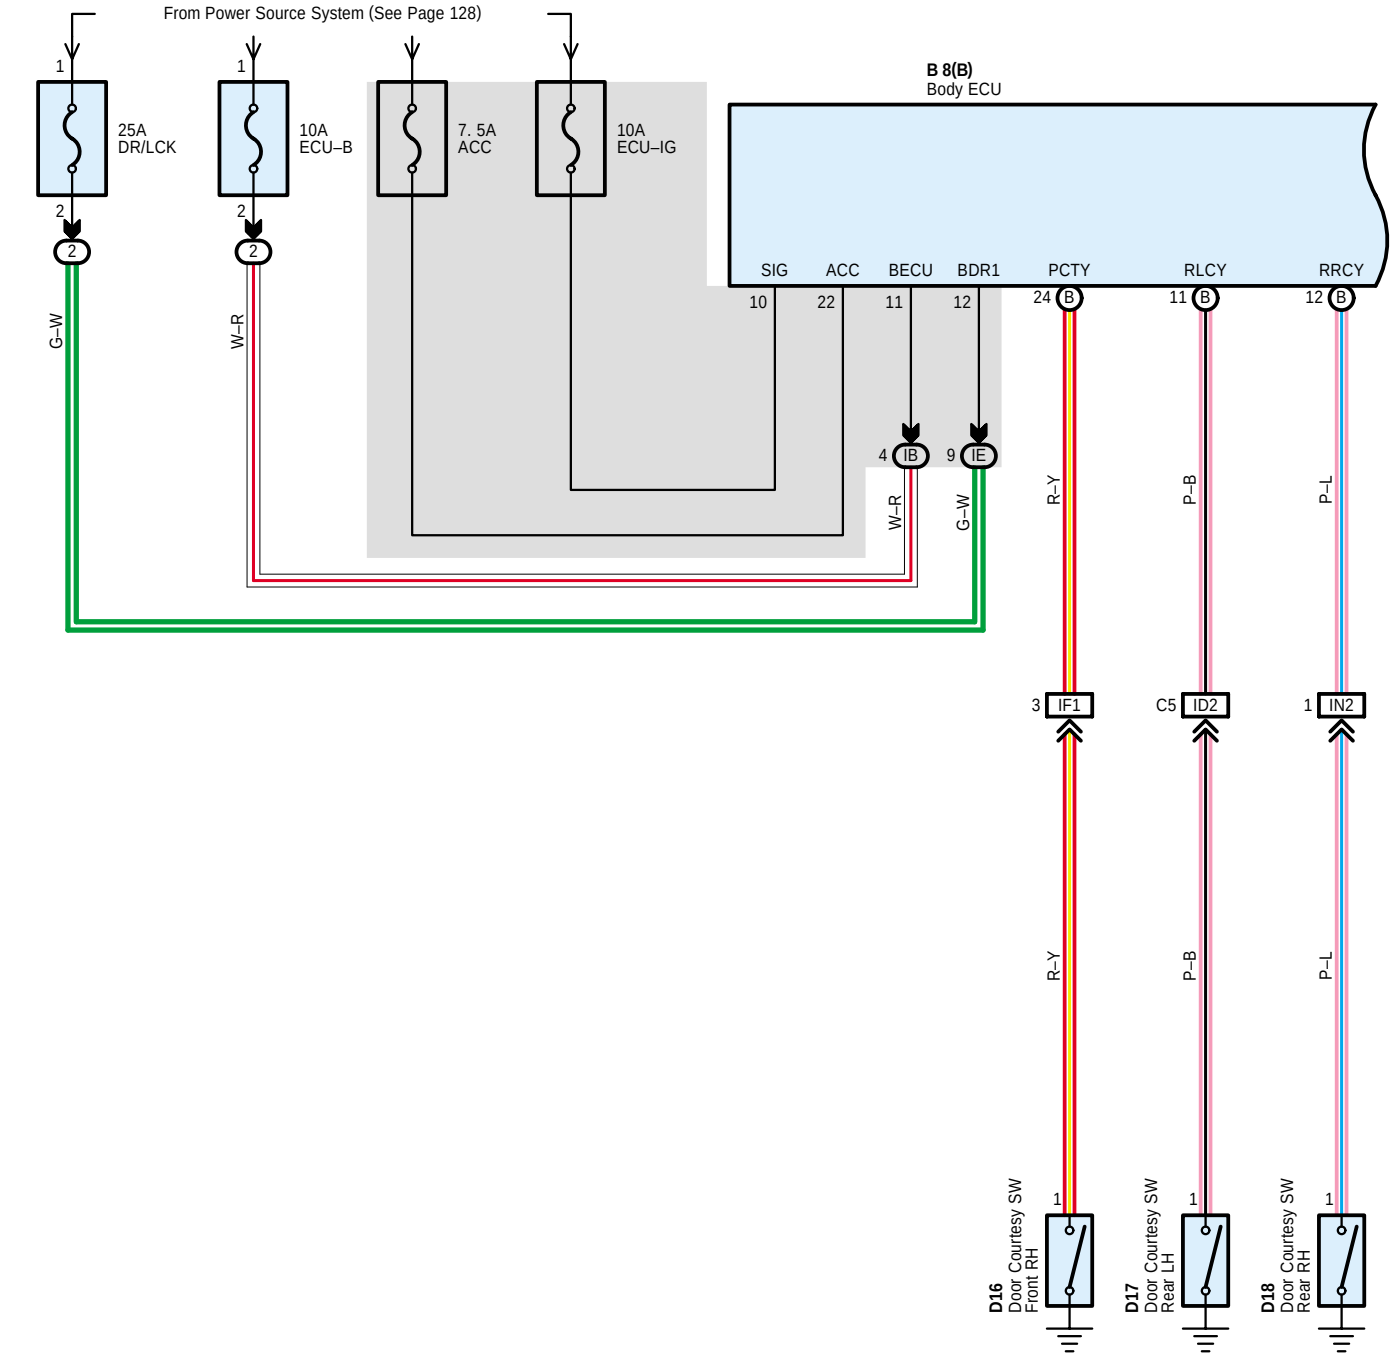


From Power Source System (See Page 128)
∗ 1 : Except A/T w/ Navigation System
∗ 2 : A/T w/ Navigation System
B 8(B)
Body ECU
DCTY
GND1
GND2
PWS
23
4
16
21
30A
POWER
POWER
Relay
R–Y
W–B
W
J17(A), J25(B)
Junction
Connector
(∗1)
(∗2)
D15
Door Courtesy SW
Front LH
J12
Junction
Connector
IJ
D21(A), (B)
Power Window Master SW
PD
PU
B
B
15
10
18
8
6
9
7
(5–Door)
(3–Door)
B–R
B–W
L–R
L–Y
R–L
R–B
IA1
IO1
J28
Junction
Connector
P11
Power Window Control SW
Front RH
P15
Power Window Motor
Front RH
M
L–B
L
I 1

Power Window (LHD w/o Jam Protection)

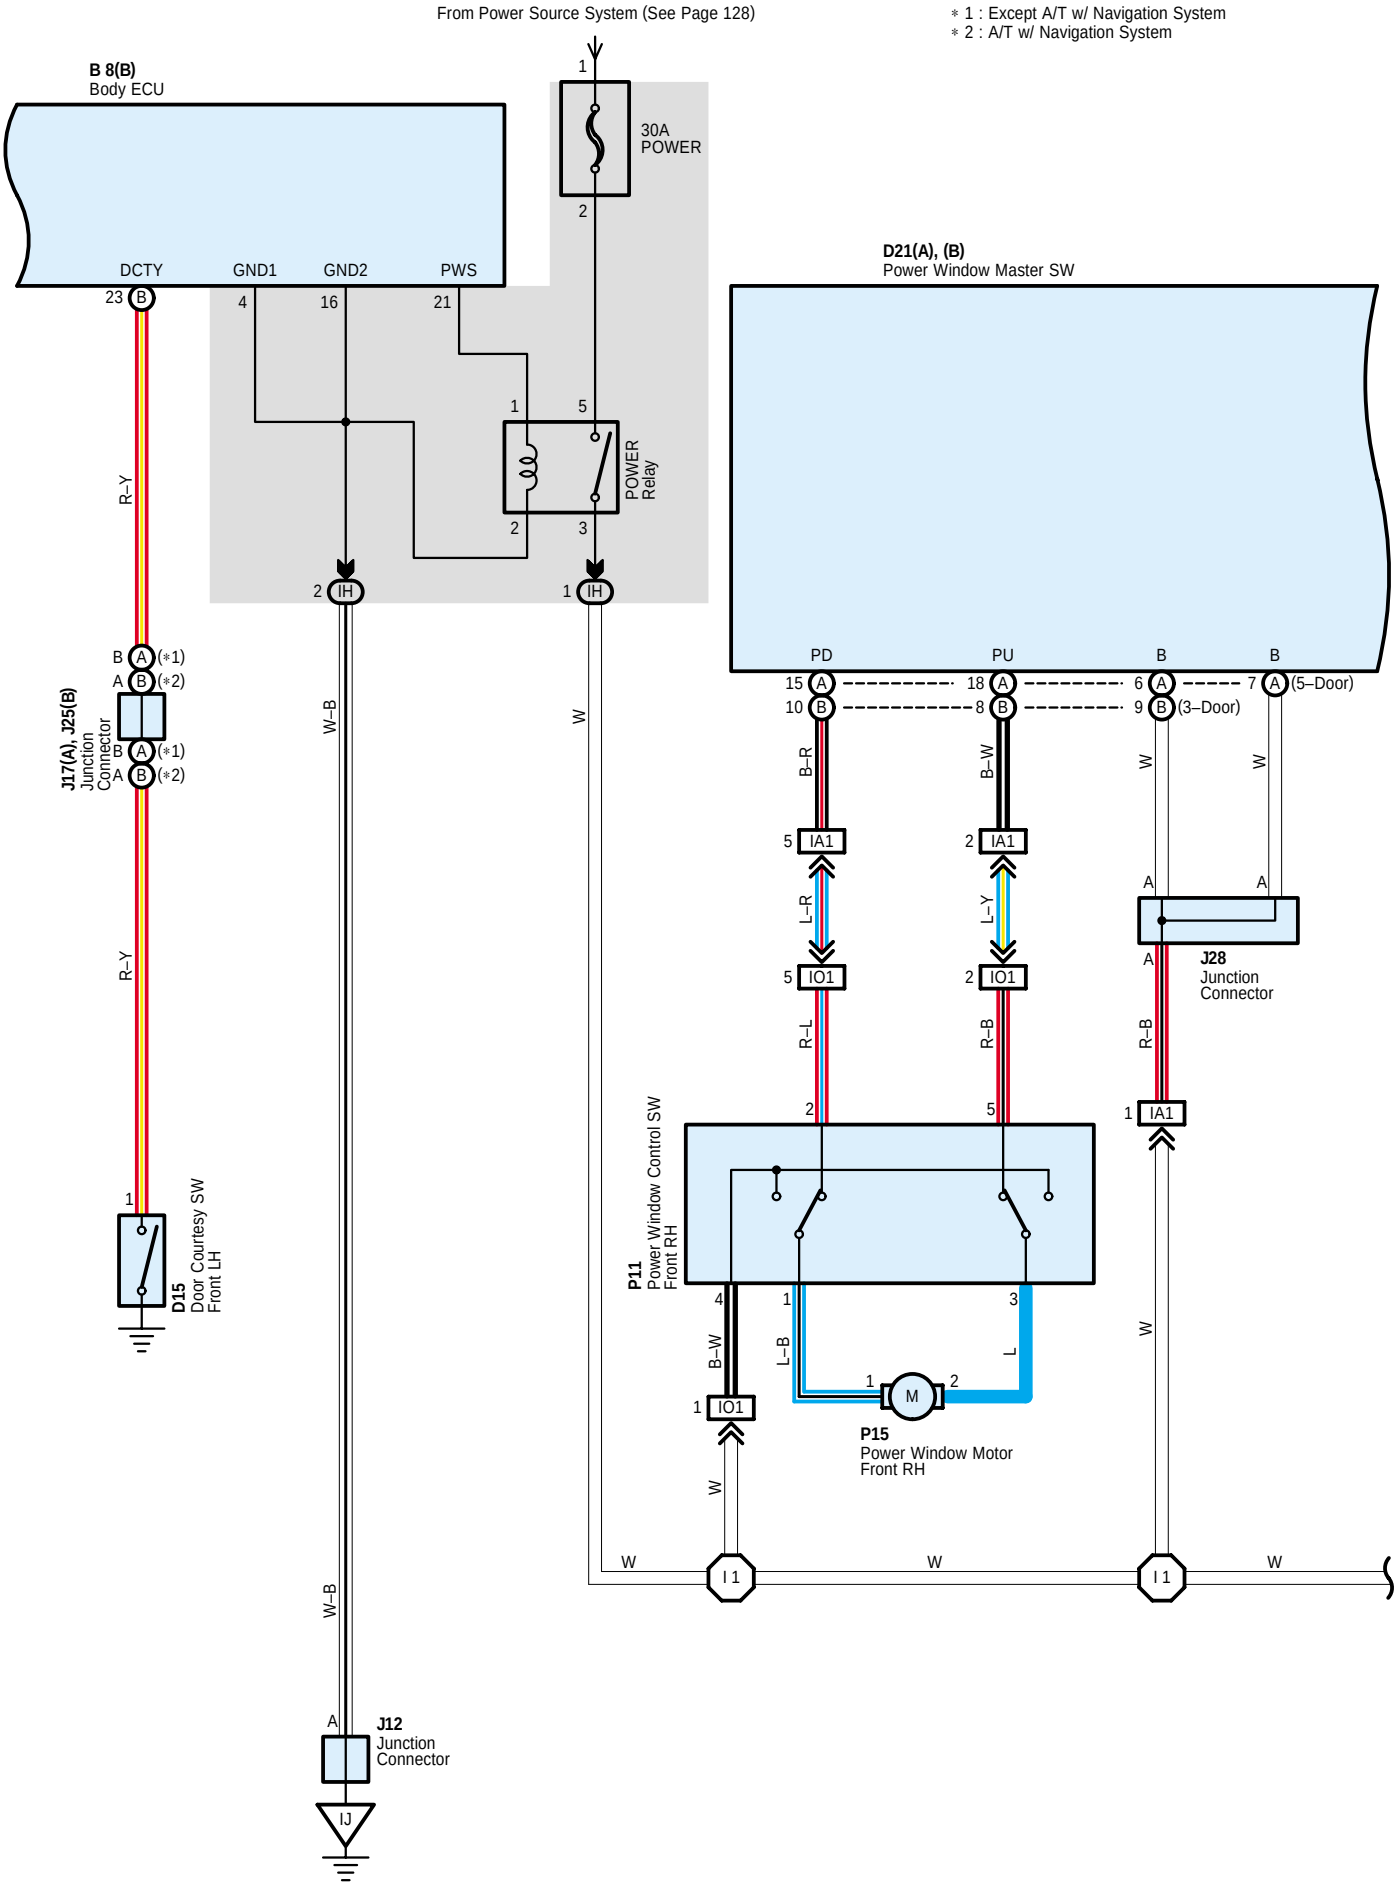