


Power Window (RHD w/ Jam Protection)

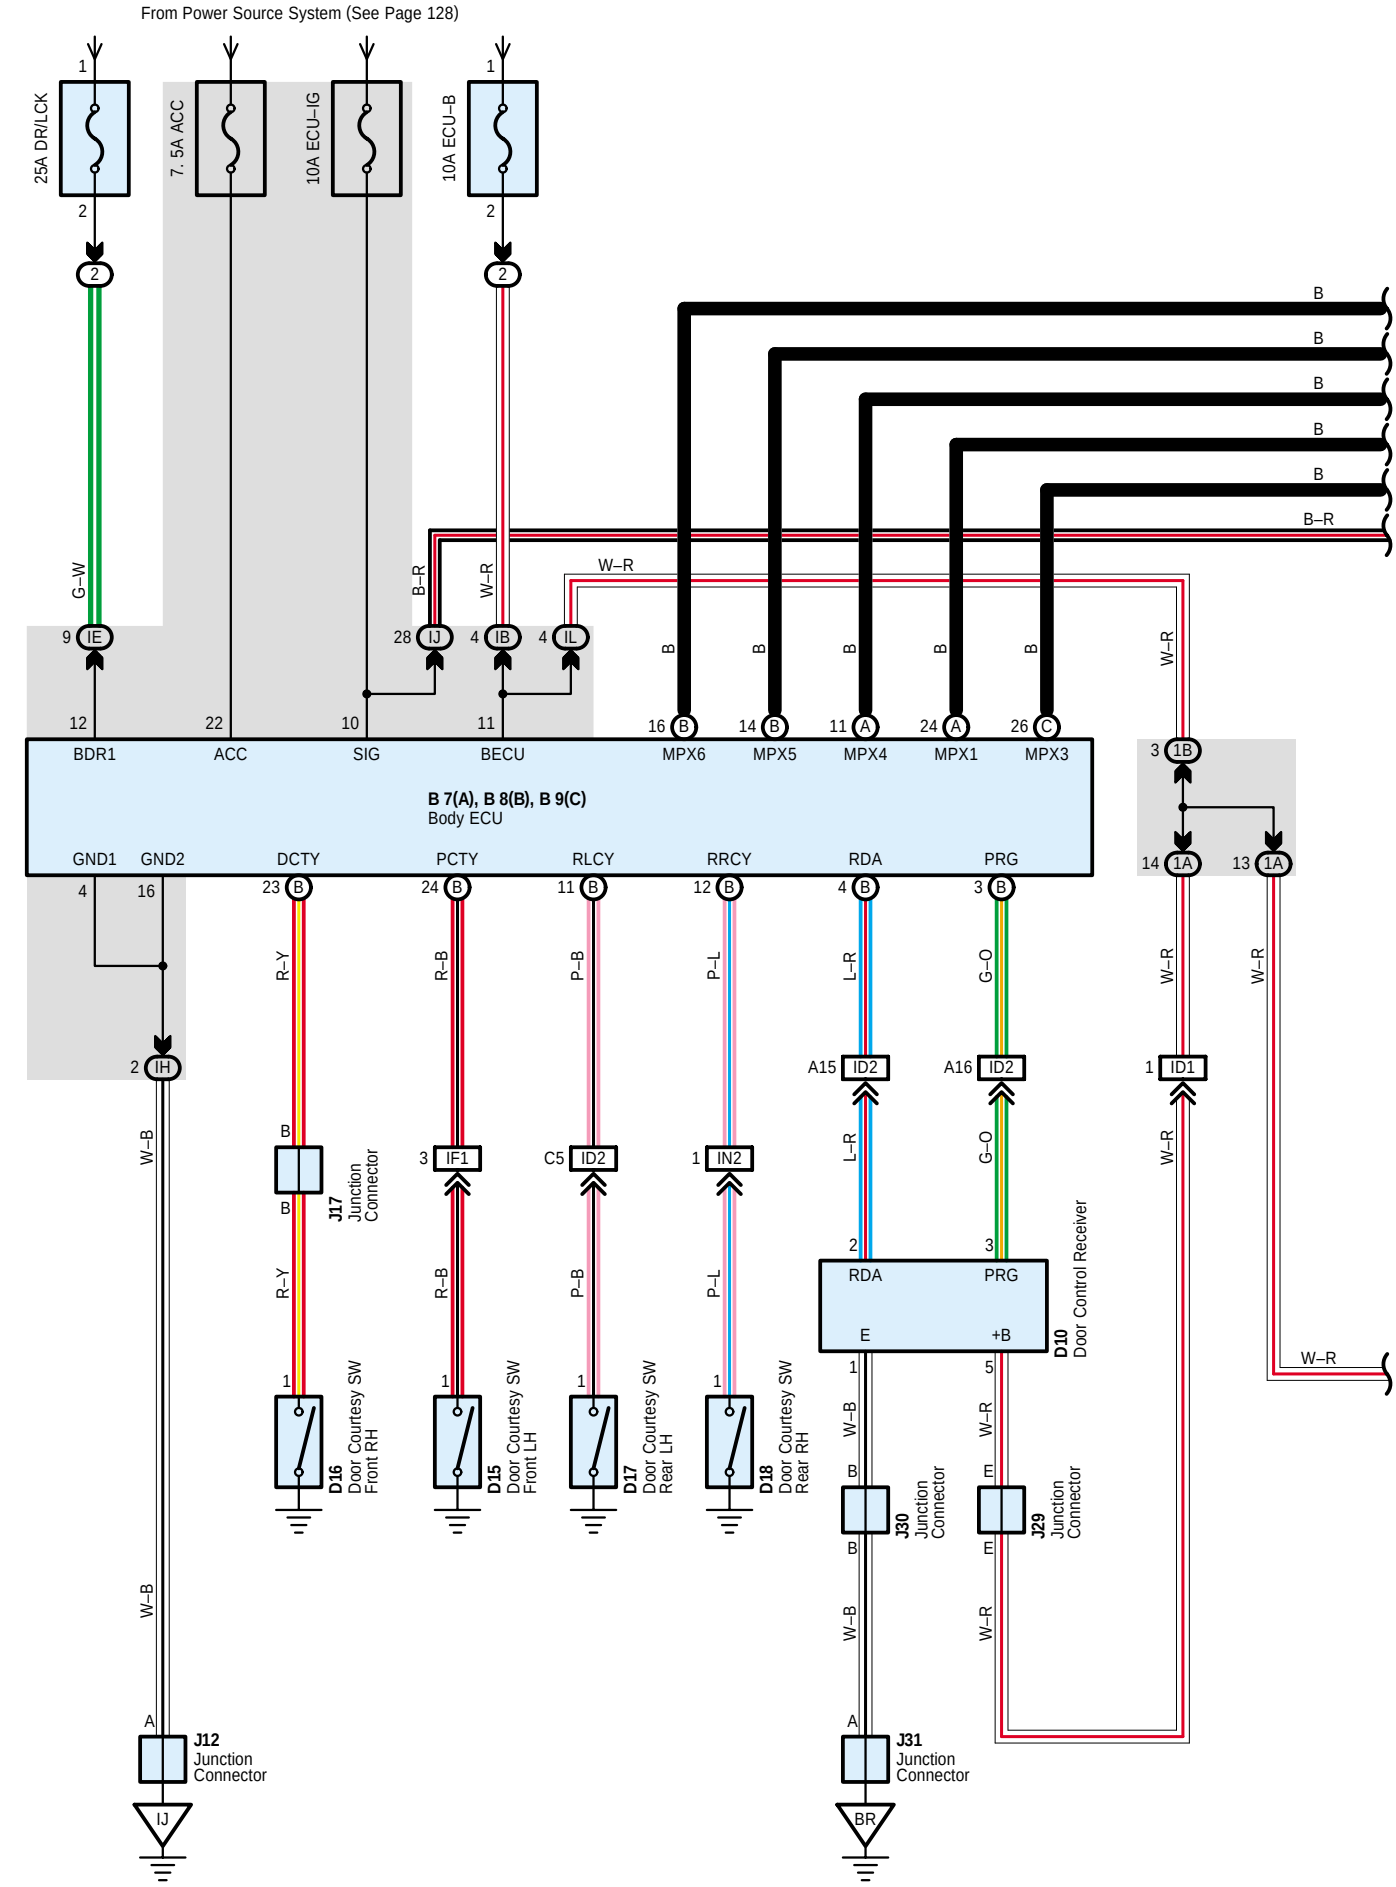


From Power Source System (See Page 128)

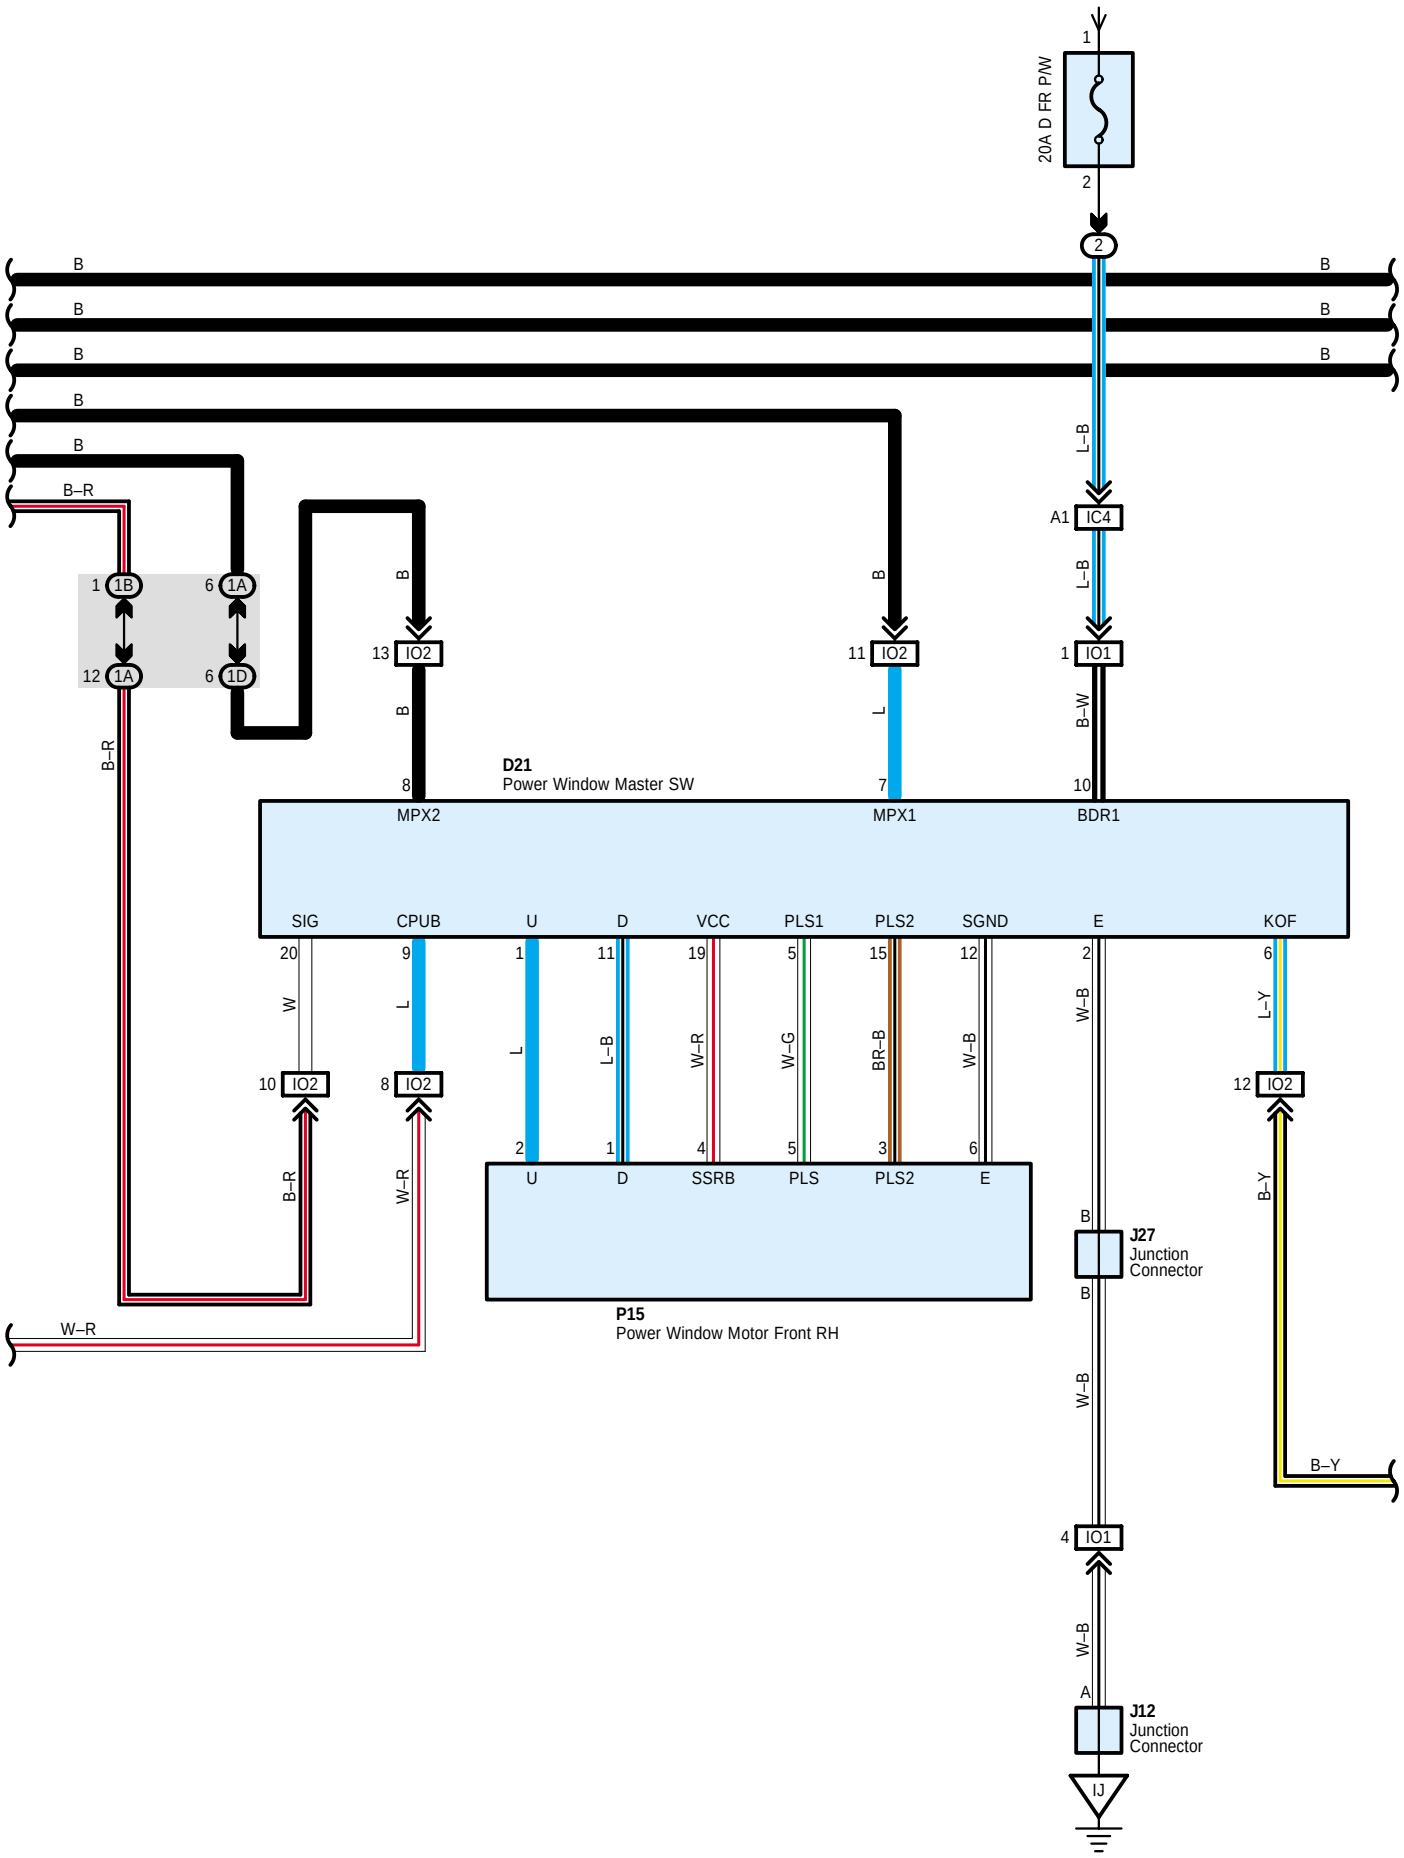

Power Window (RHD w/ Jam Protection)

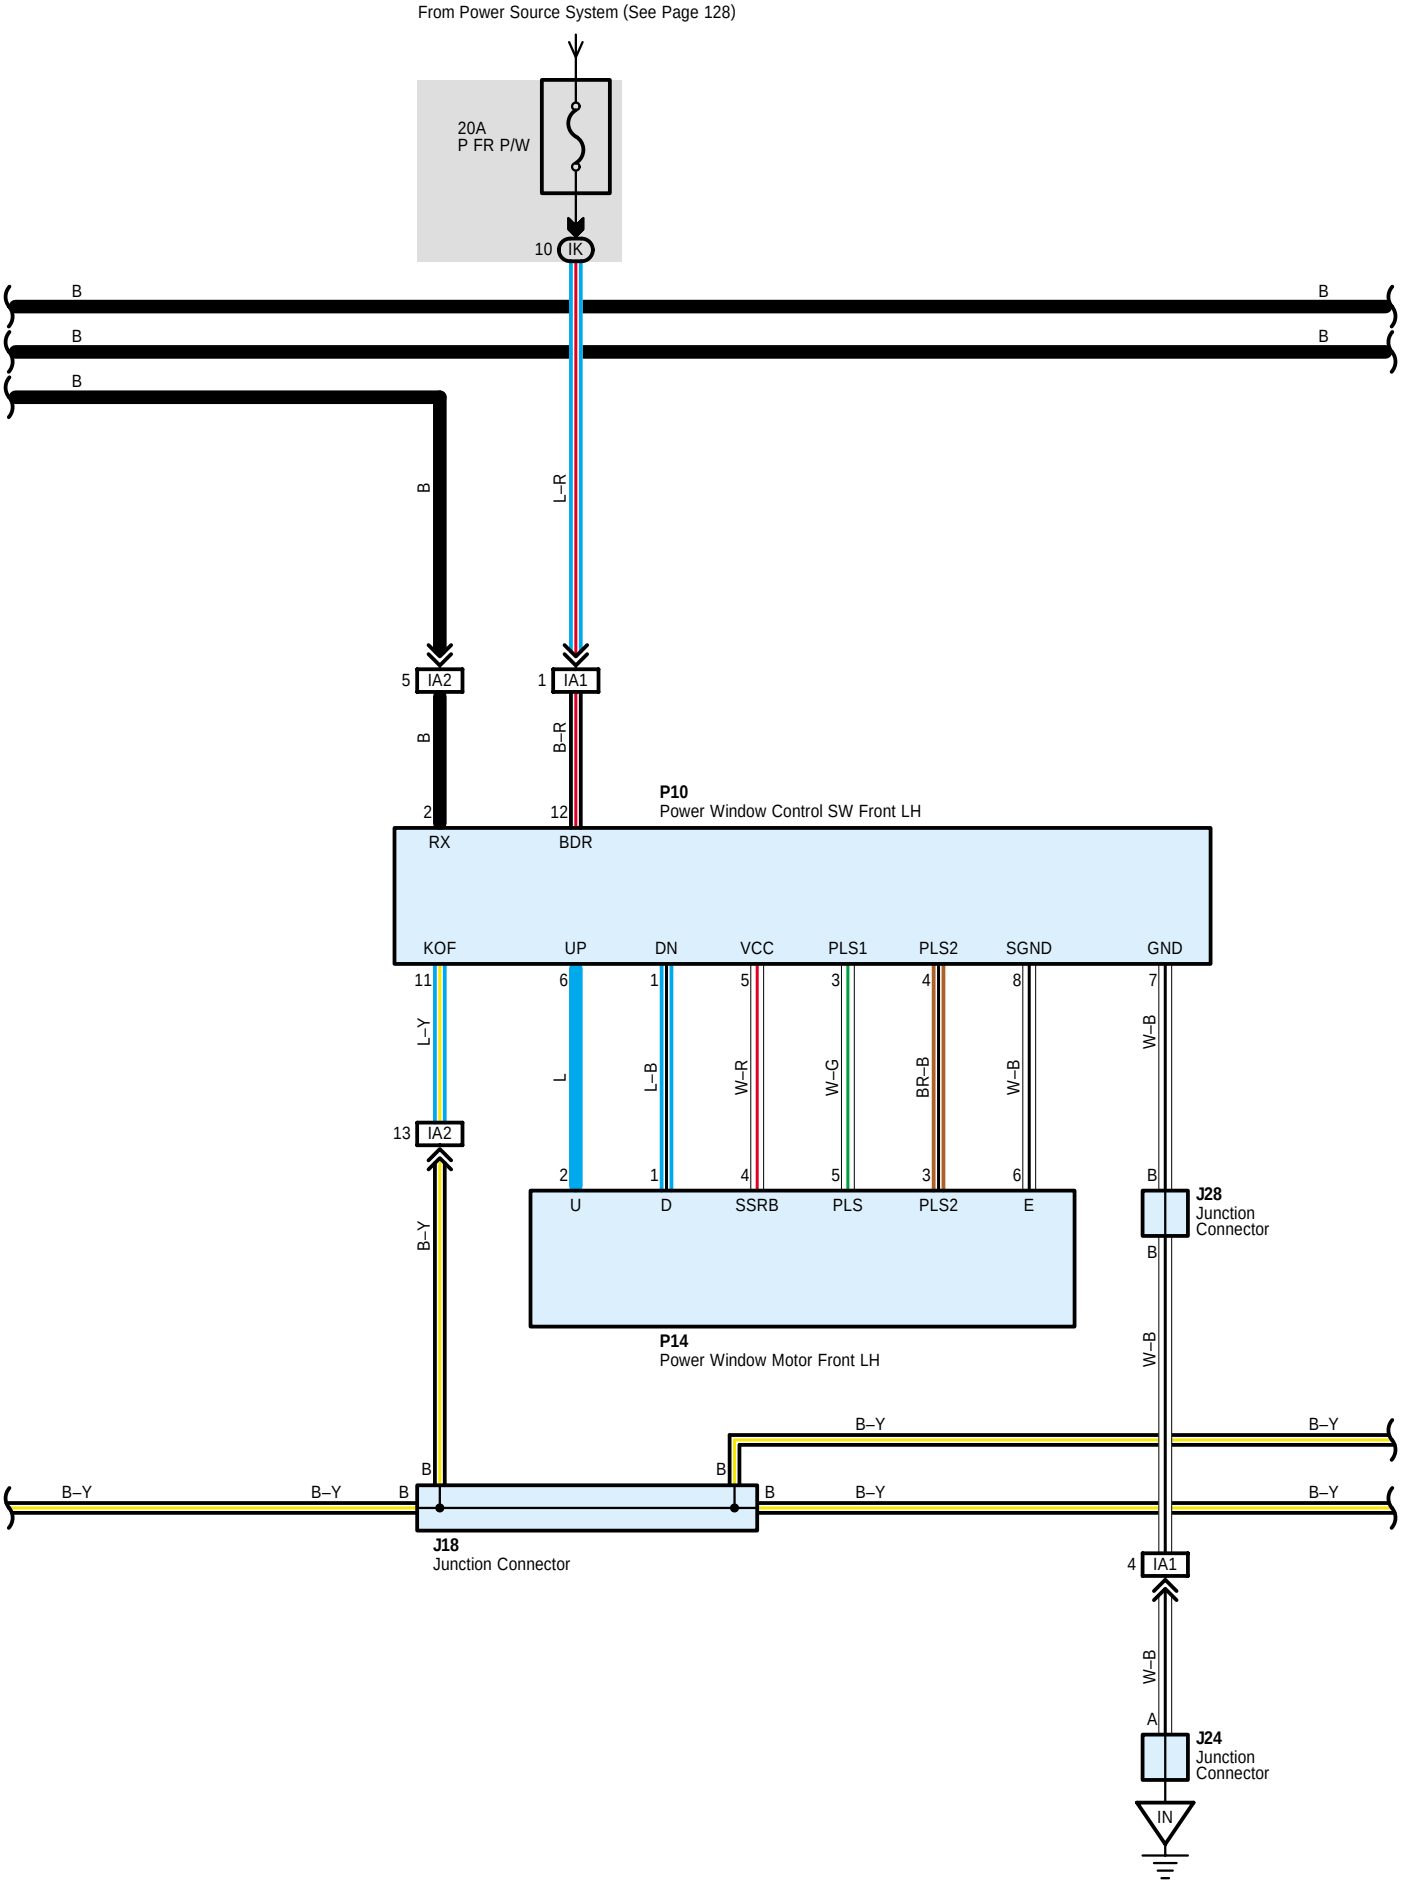

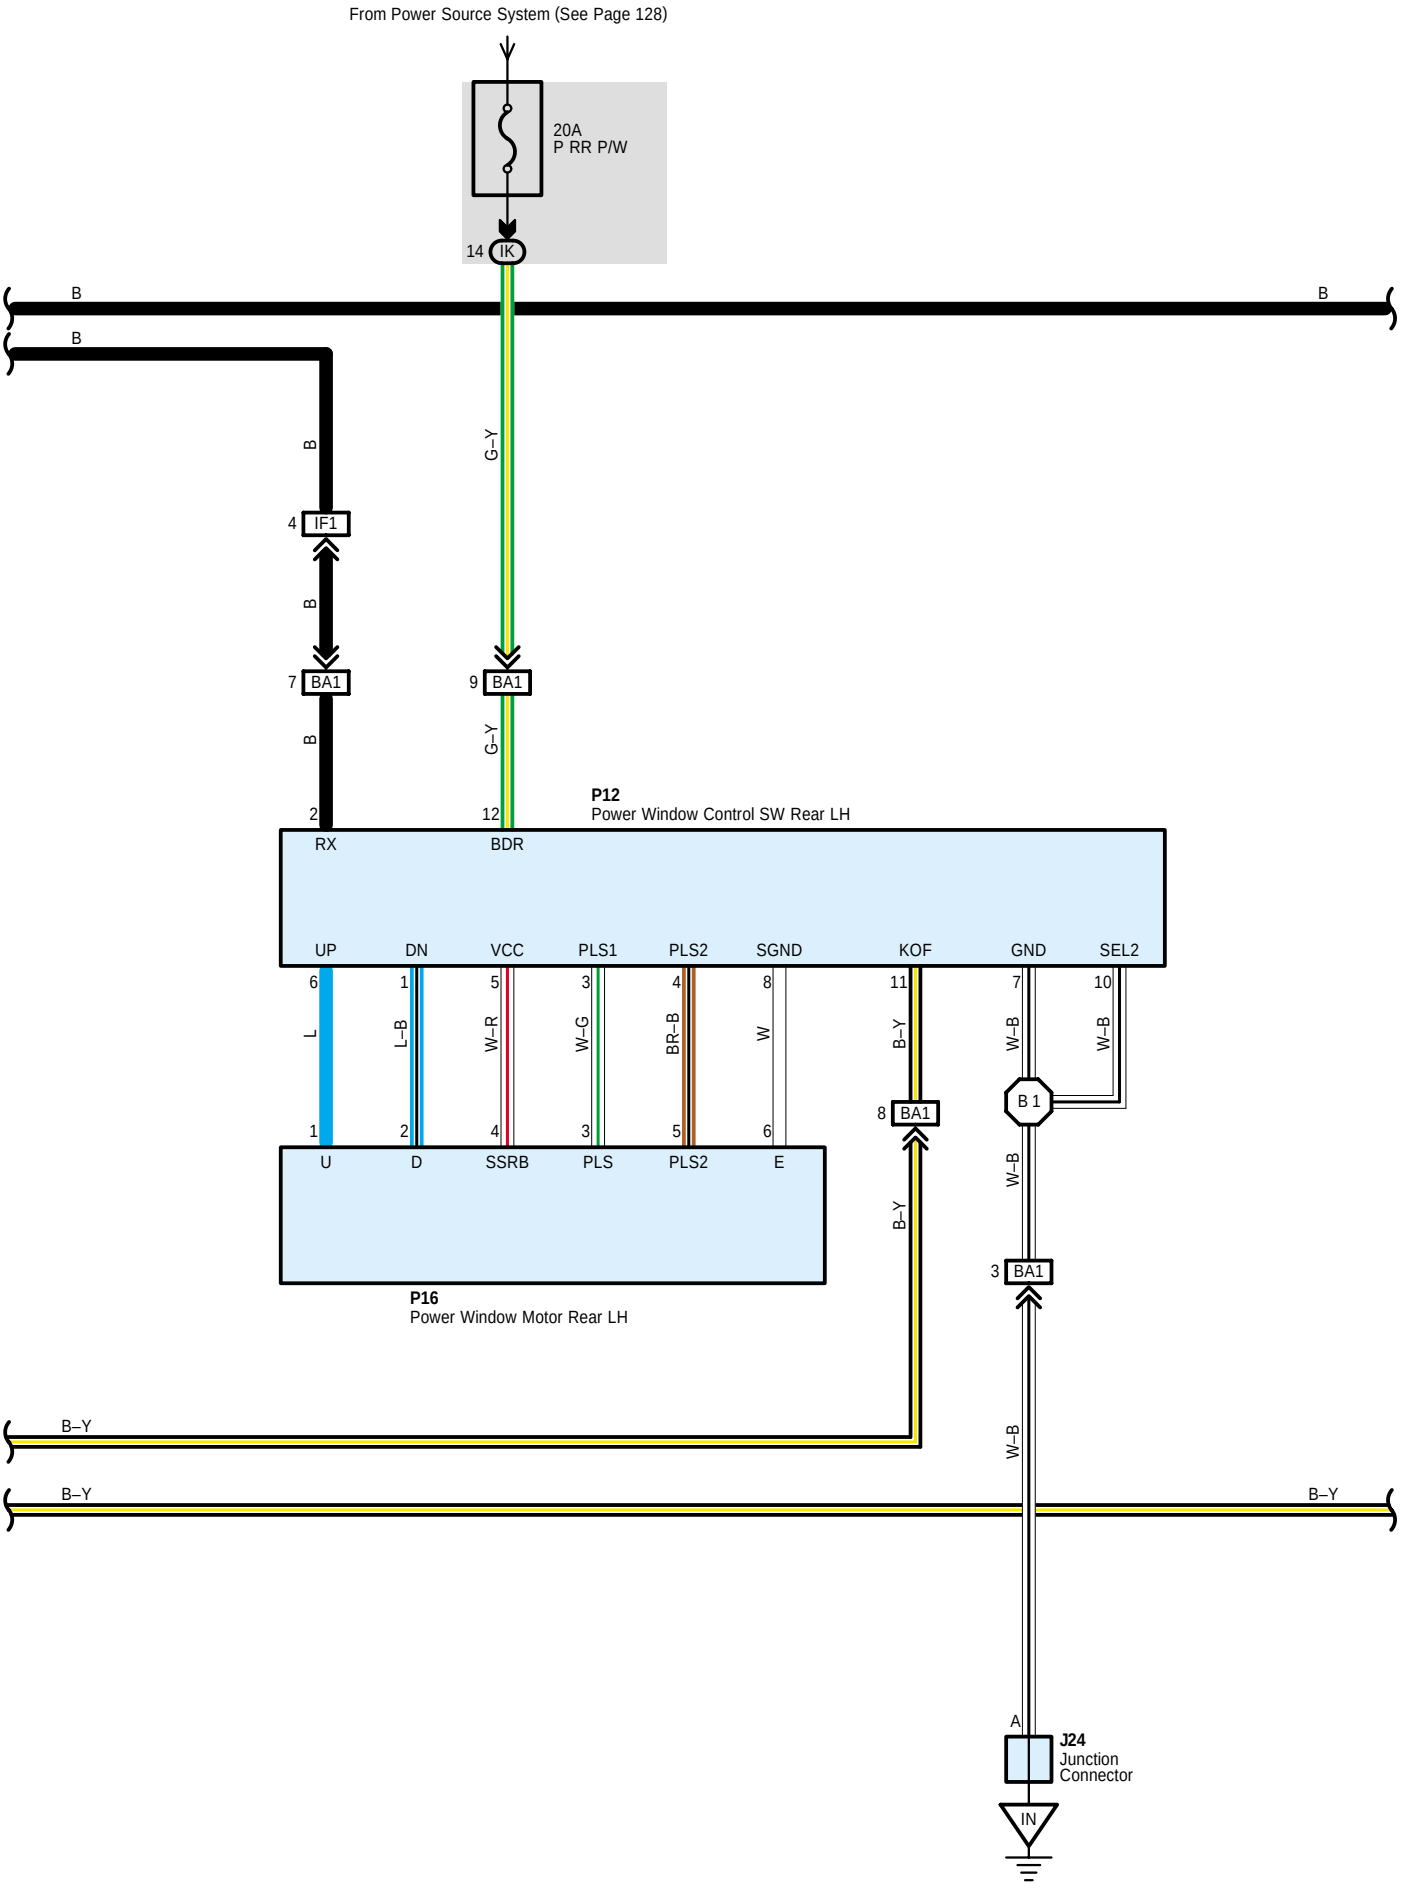
From Power Source System (See Page 128)
20A
P RR P/W
14 IK
B
B
B
G–Y
4 IF1
B
7 BA1
9 BA1
G–Y
B
2
12
P12
Power Window Control SW Rear LH
RX
BDR
UP
DN
VCC
PLS1
PLS2
SGND
KOF
GND
SEL2
6
1
5
3
4
8
11
7
10
L
L–B
W–R
W–G
BR–B
W
B–Y
W–B
W–B
1
2
4
3
5
6
8
B 1
U
D
SSRB
PLS
PLS2
E
B–Y
W–B
3 BA1
P16
Power Window Motor Rear LH
B–Y
B–Y
B–Y
W–B
A
J24
Junction
Connector
IN

Power Window (RHD w/ Jam Protection)

