


Power Window (RHD w/o Jam Protection)

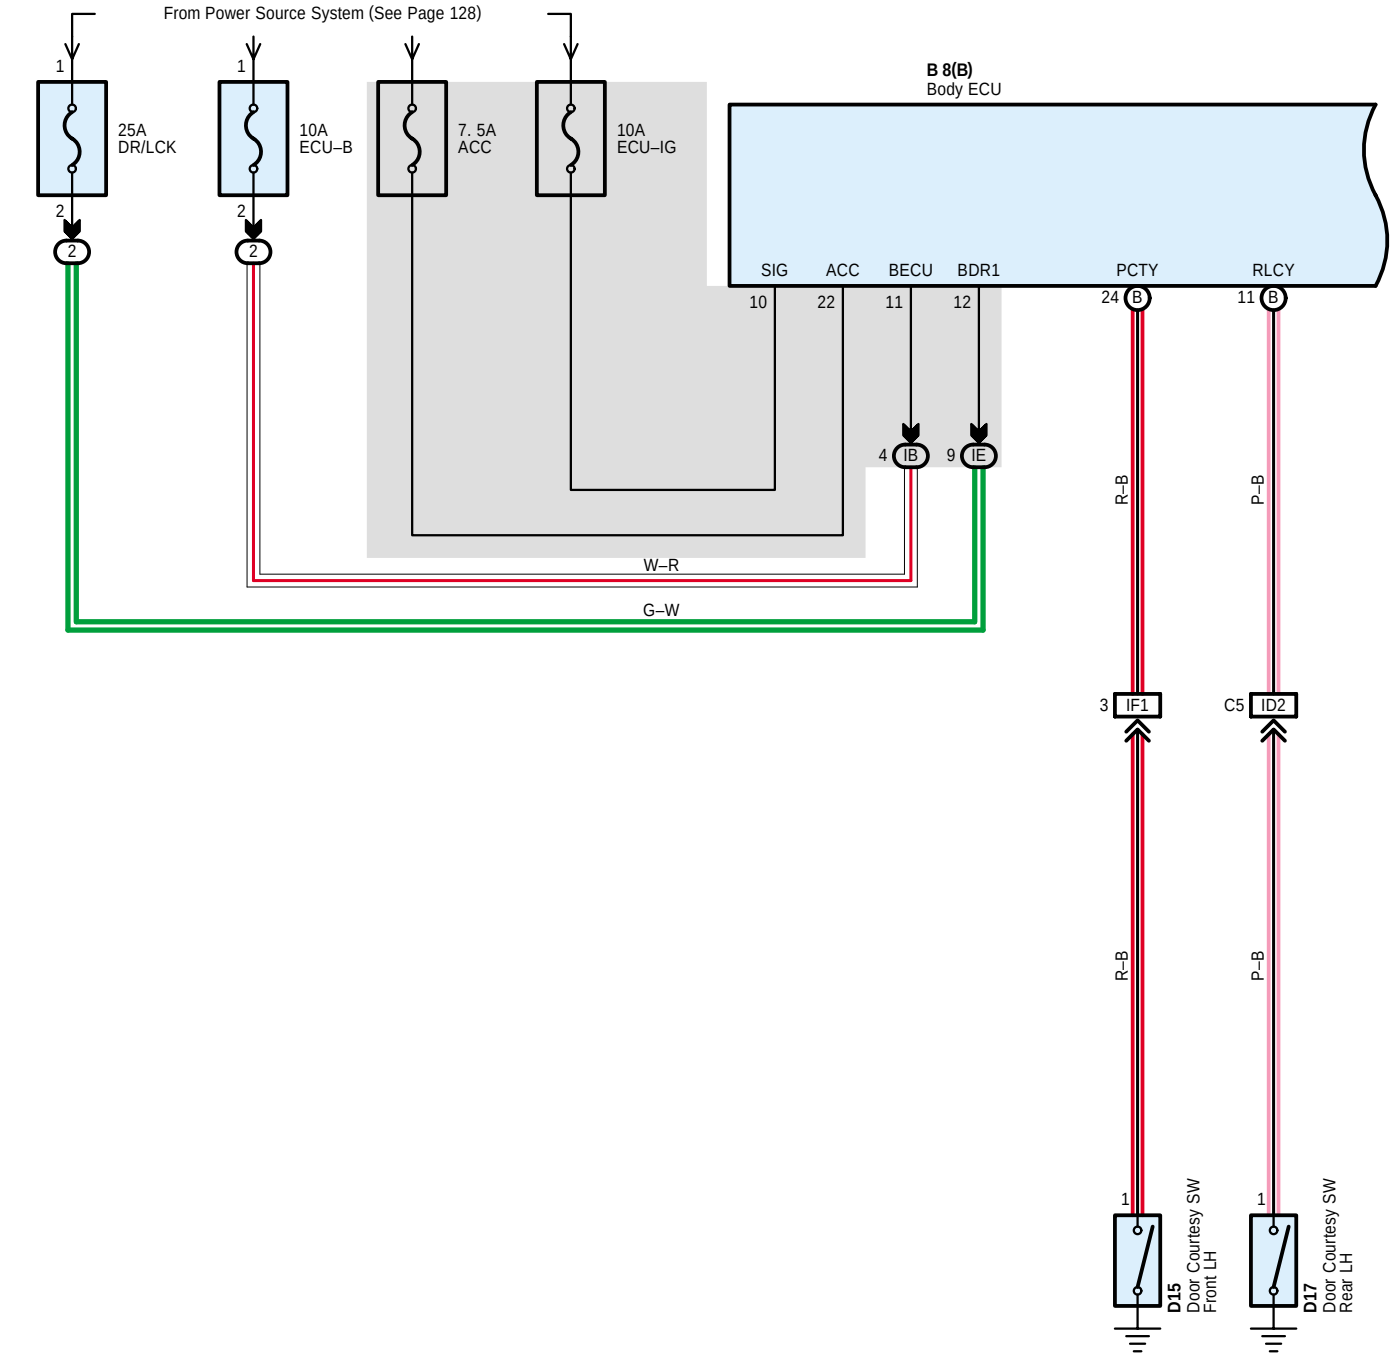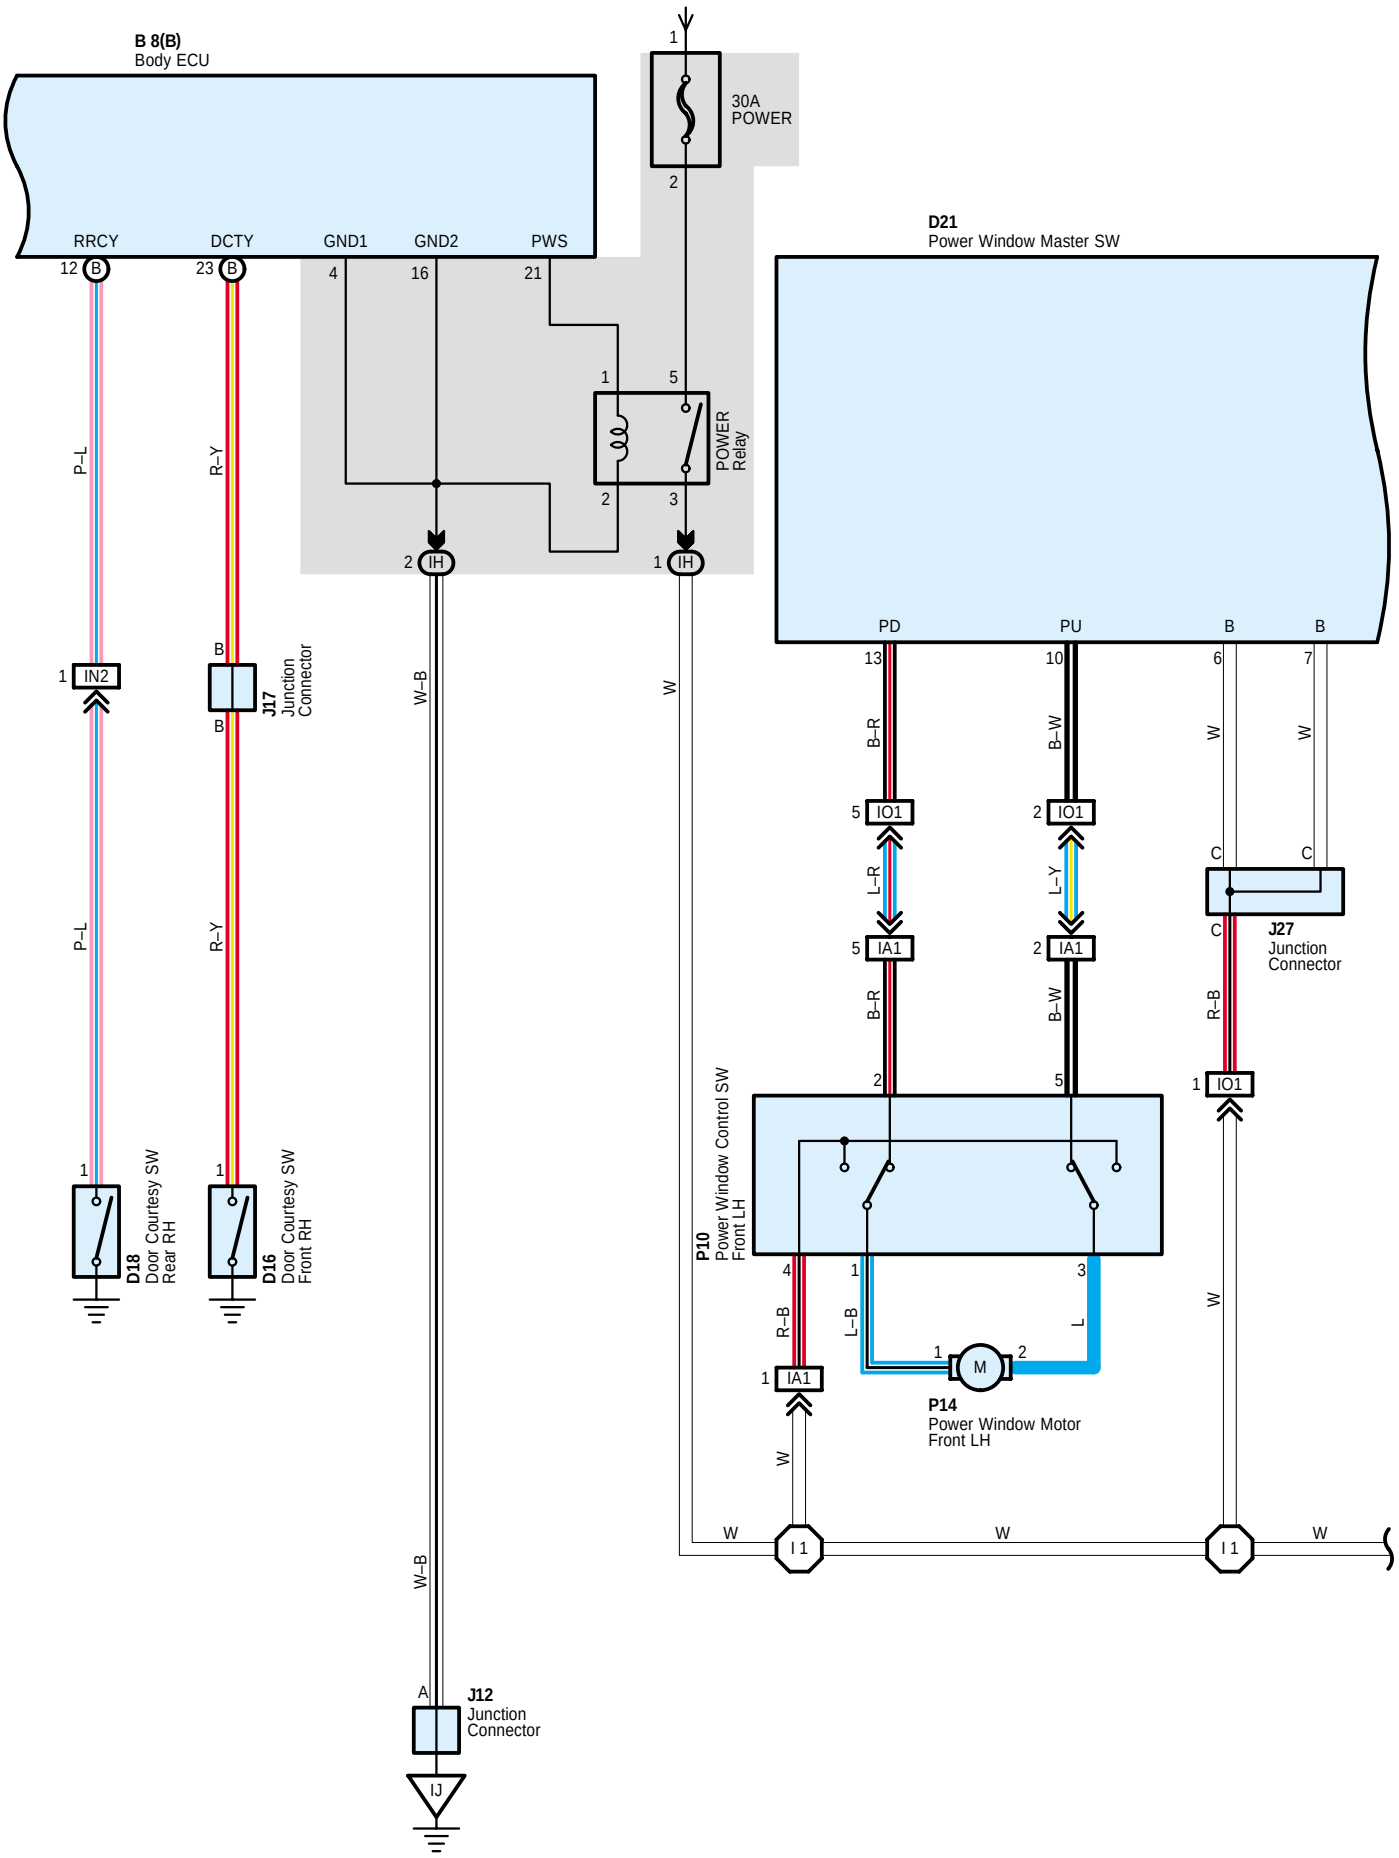

From Power Source System (See Page 128)

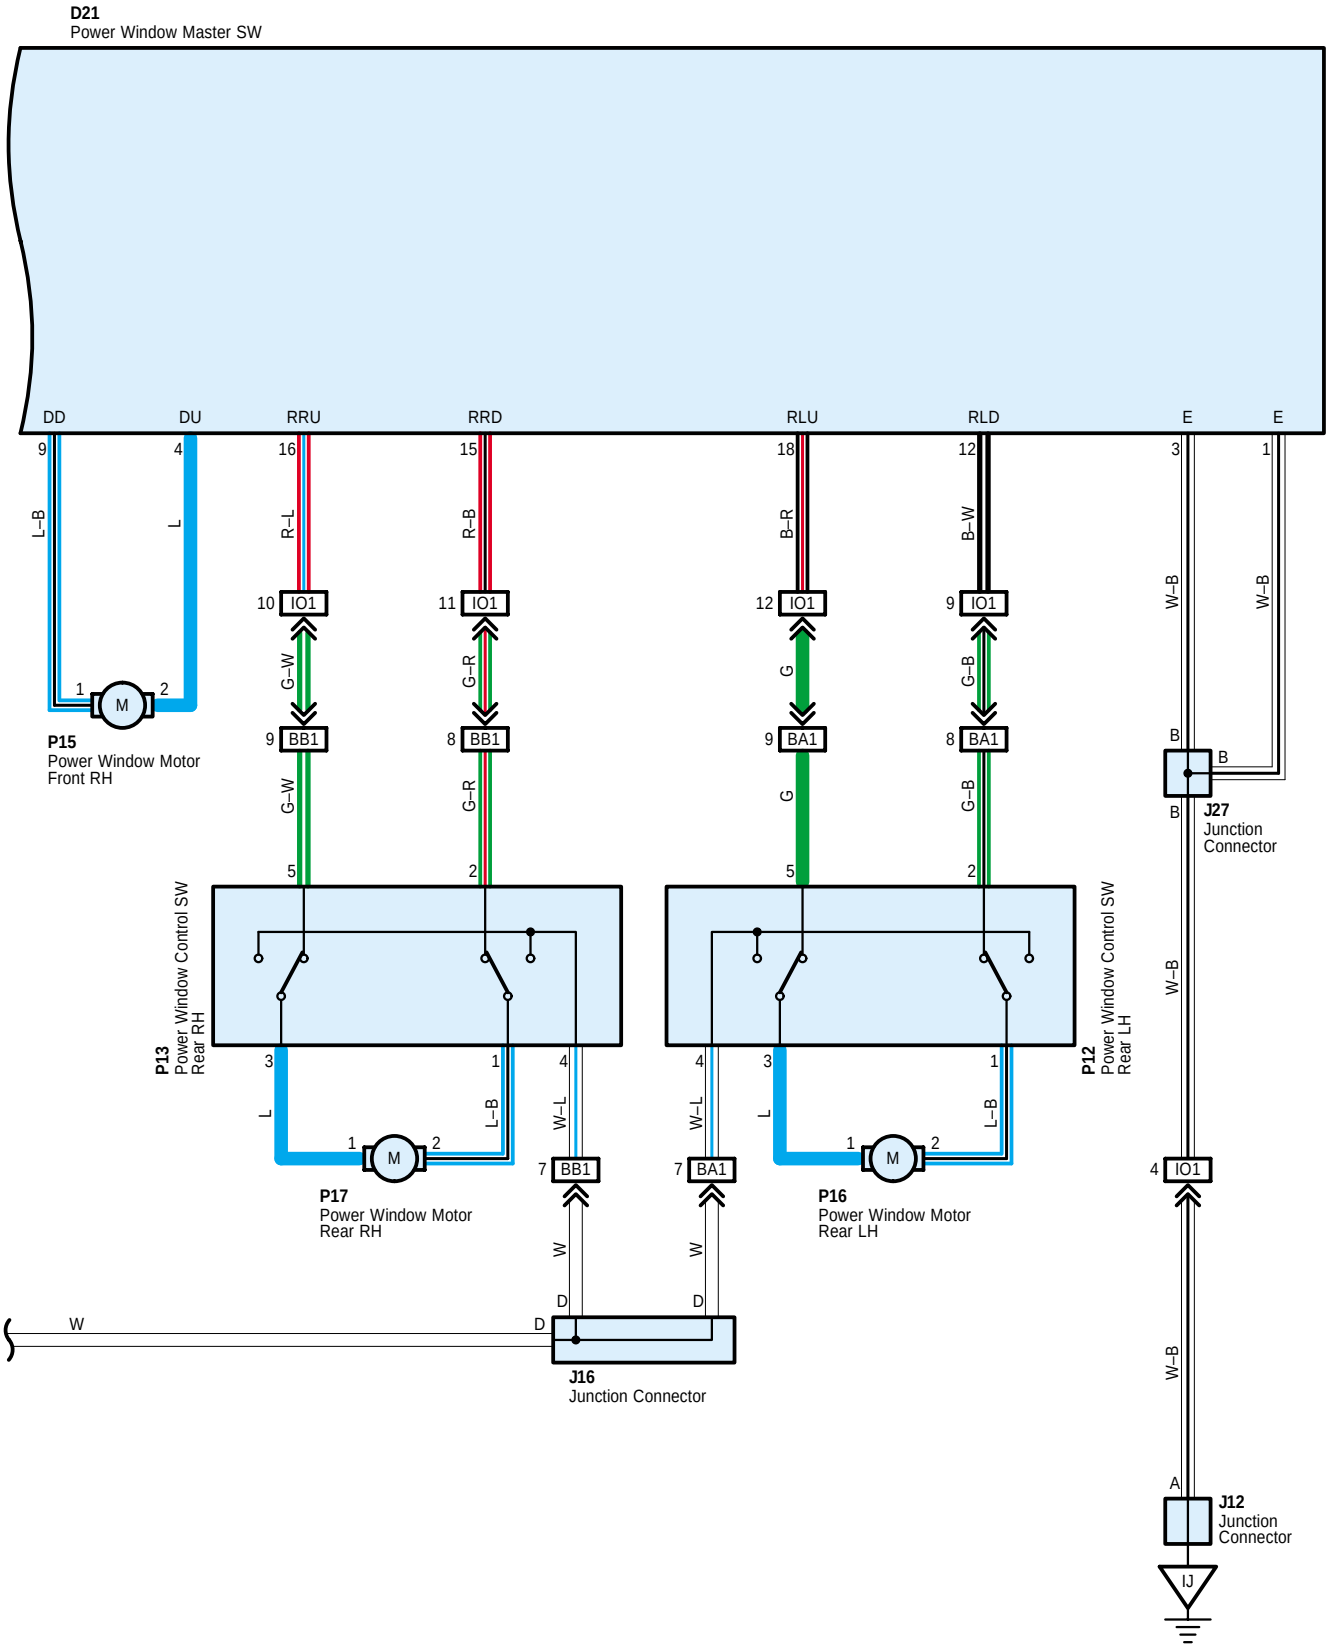


D21
Power Window Master SW
DD
DU
RRU
RRD
RLU
RLD
E
E
P15
Power Window Motor
Front RH
P17
Power Window Motor
Rear RH
P16
Power Window Motor
Rear LH
P13
Power Window Control SW
Rear RH
P12
Power Window Control SW
Rear LH
J16
Junction Connector
J27
Junction
Connector
J12
Junction
Connector
IJ
IO1
BB1
BA1
M
L–B
L
R–L
R–B
B–R
B–W
G–W
G–R
G
G–B
W–L
W
W–B