

Rear Air Conditioner (Automatic A/C)

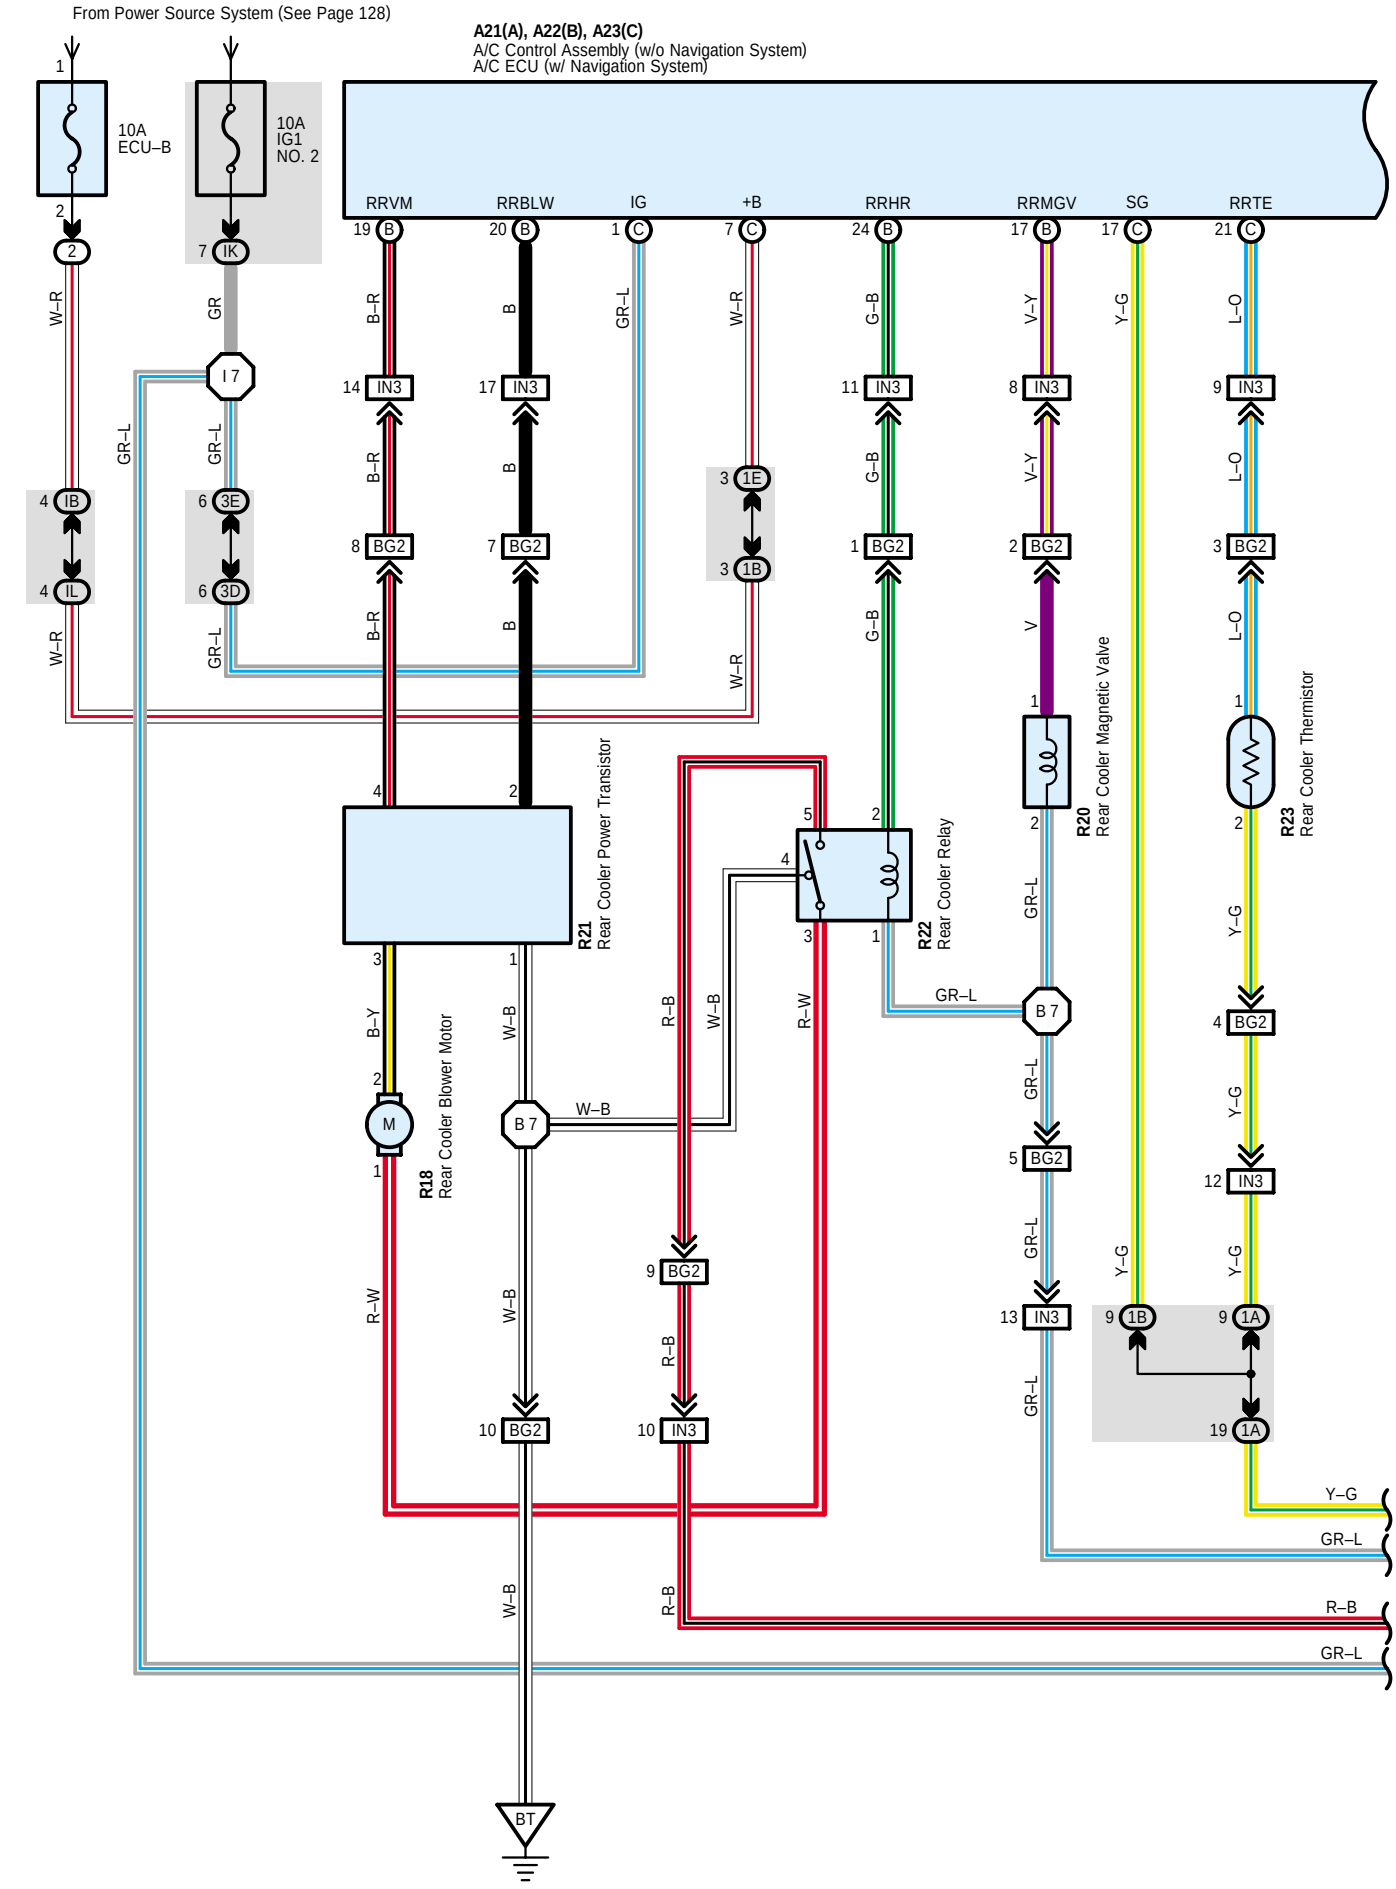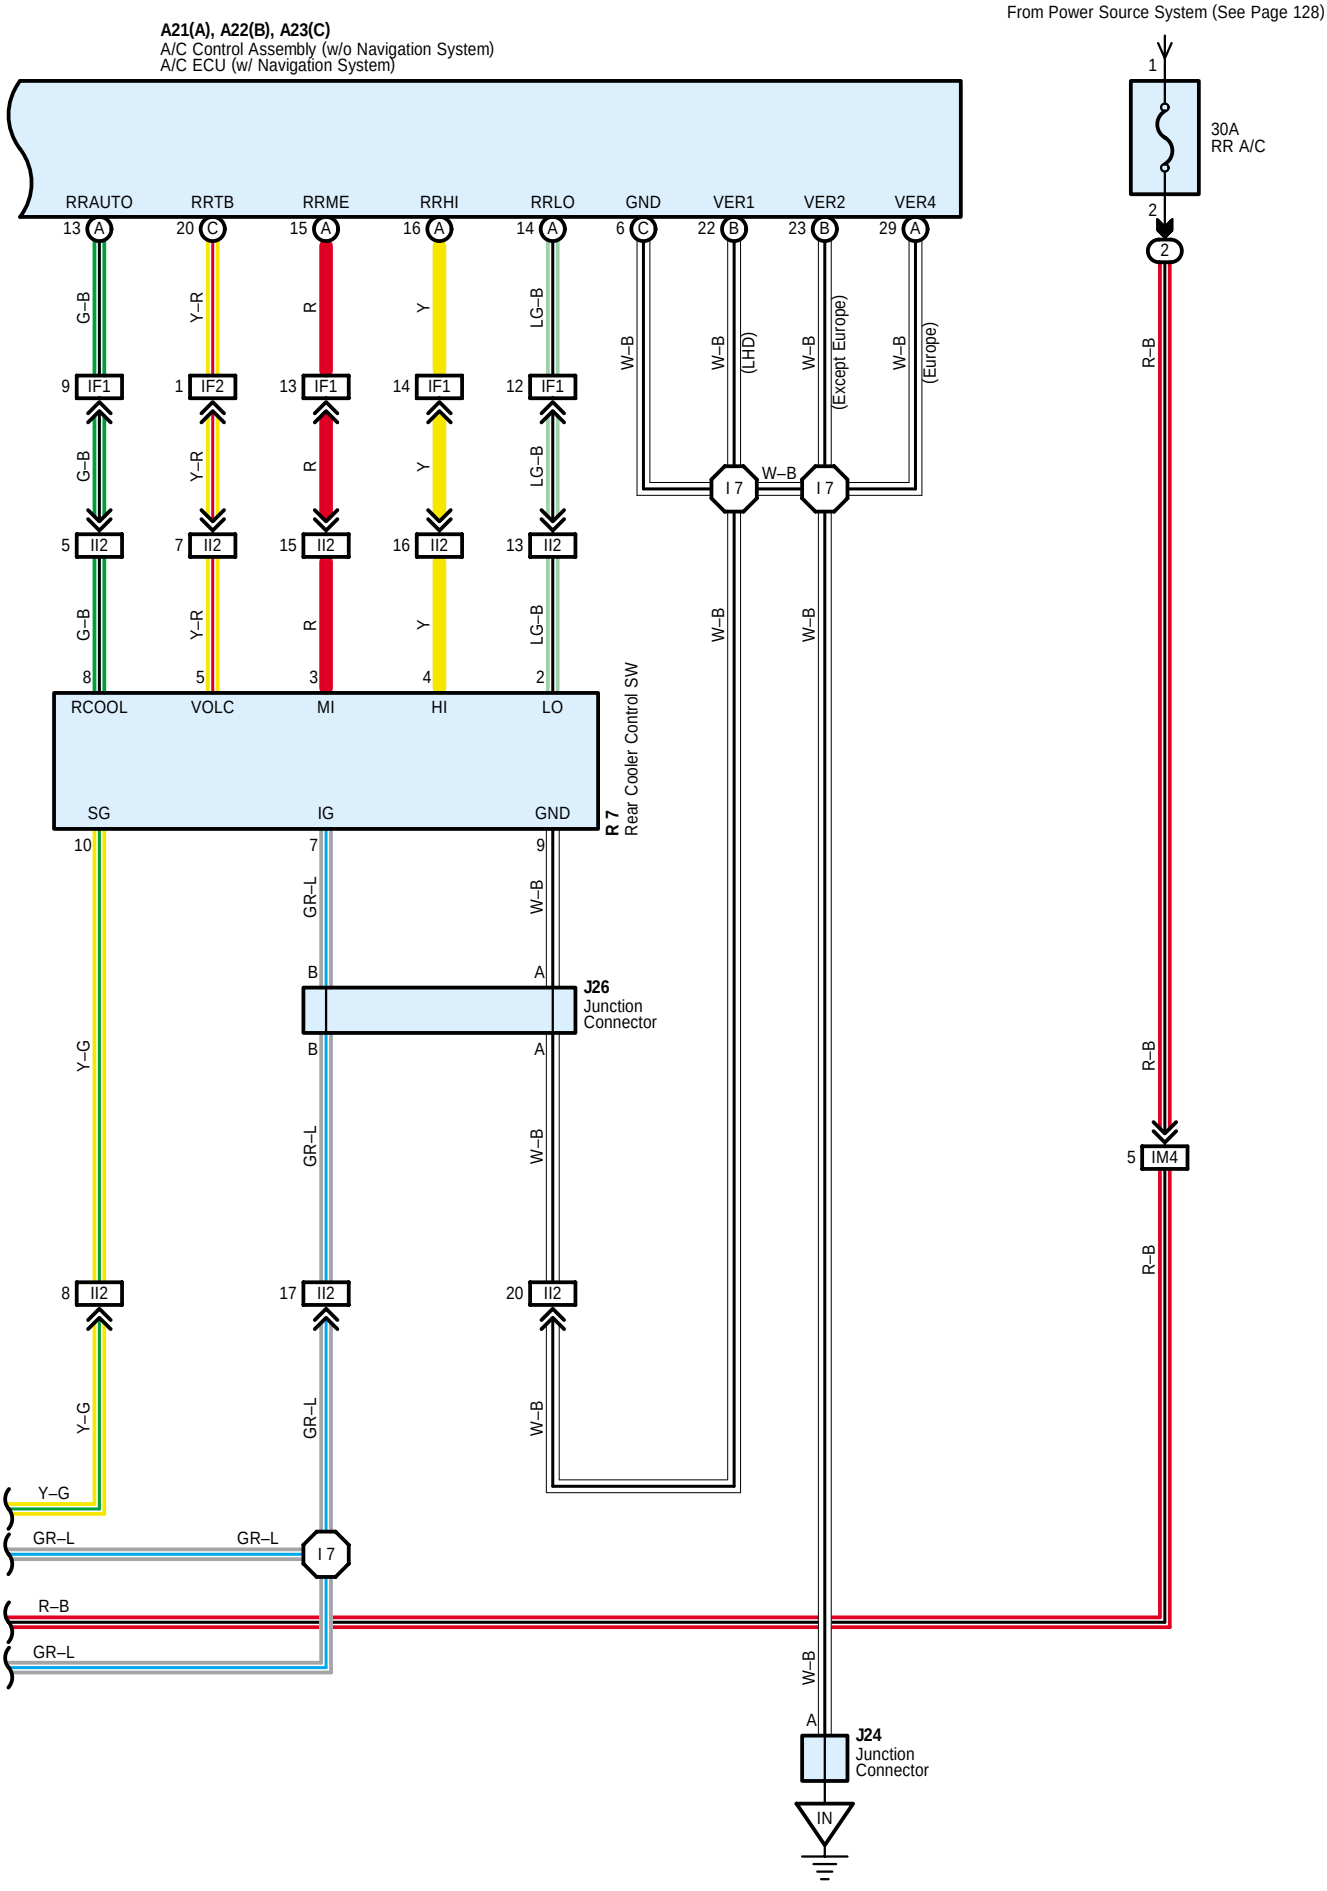


From Power Source System (See Page 128)
A21(A), A22(B), A23(C)
A/C Control Assembly (w/o Navigation System)
A/C ECU (w/ Navigation System)
RRAUTO
RRTB
RRME
RRHI
RRLO
GND
VER1
VER2
VER4
RCOOL
VOLC
MI
HI
LO
SG
IG
GND
R 7
Rear Cooler Control SW
J26
Junction Connector
J24
Junction Connector
30A
RR A/C
IM4
I 7
IF1
IF2
II2
IN
G–B
Y–R
R
Y
LG–B
W–B
(LHD)
(Except Europe)
(Europe)
Y–G
GR–L
R–B