

Rear Air Conditioner (Manual A/C)

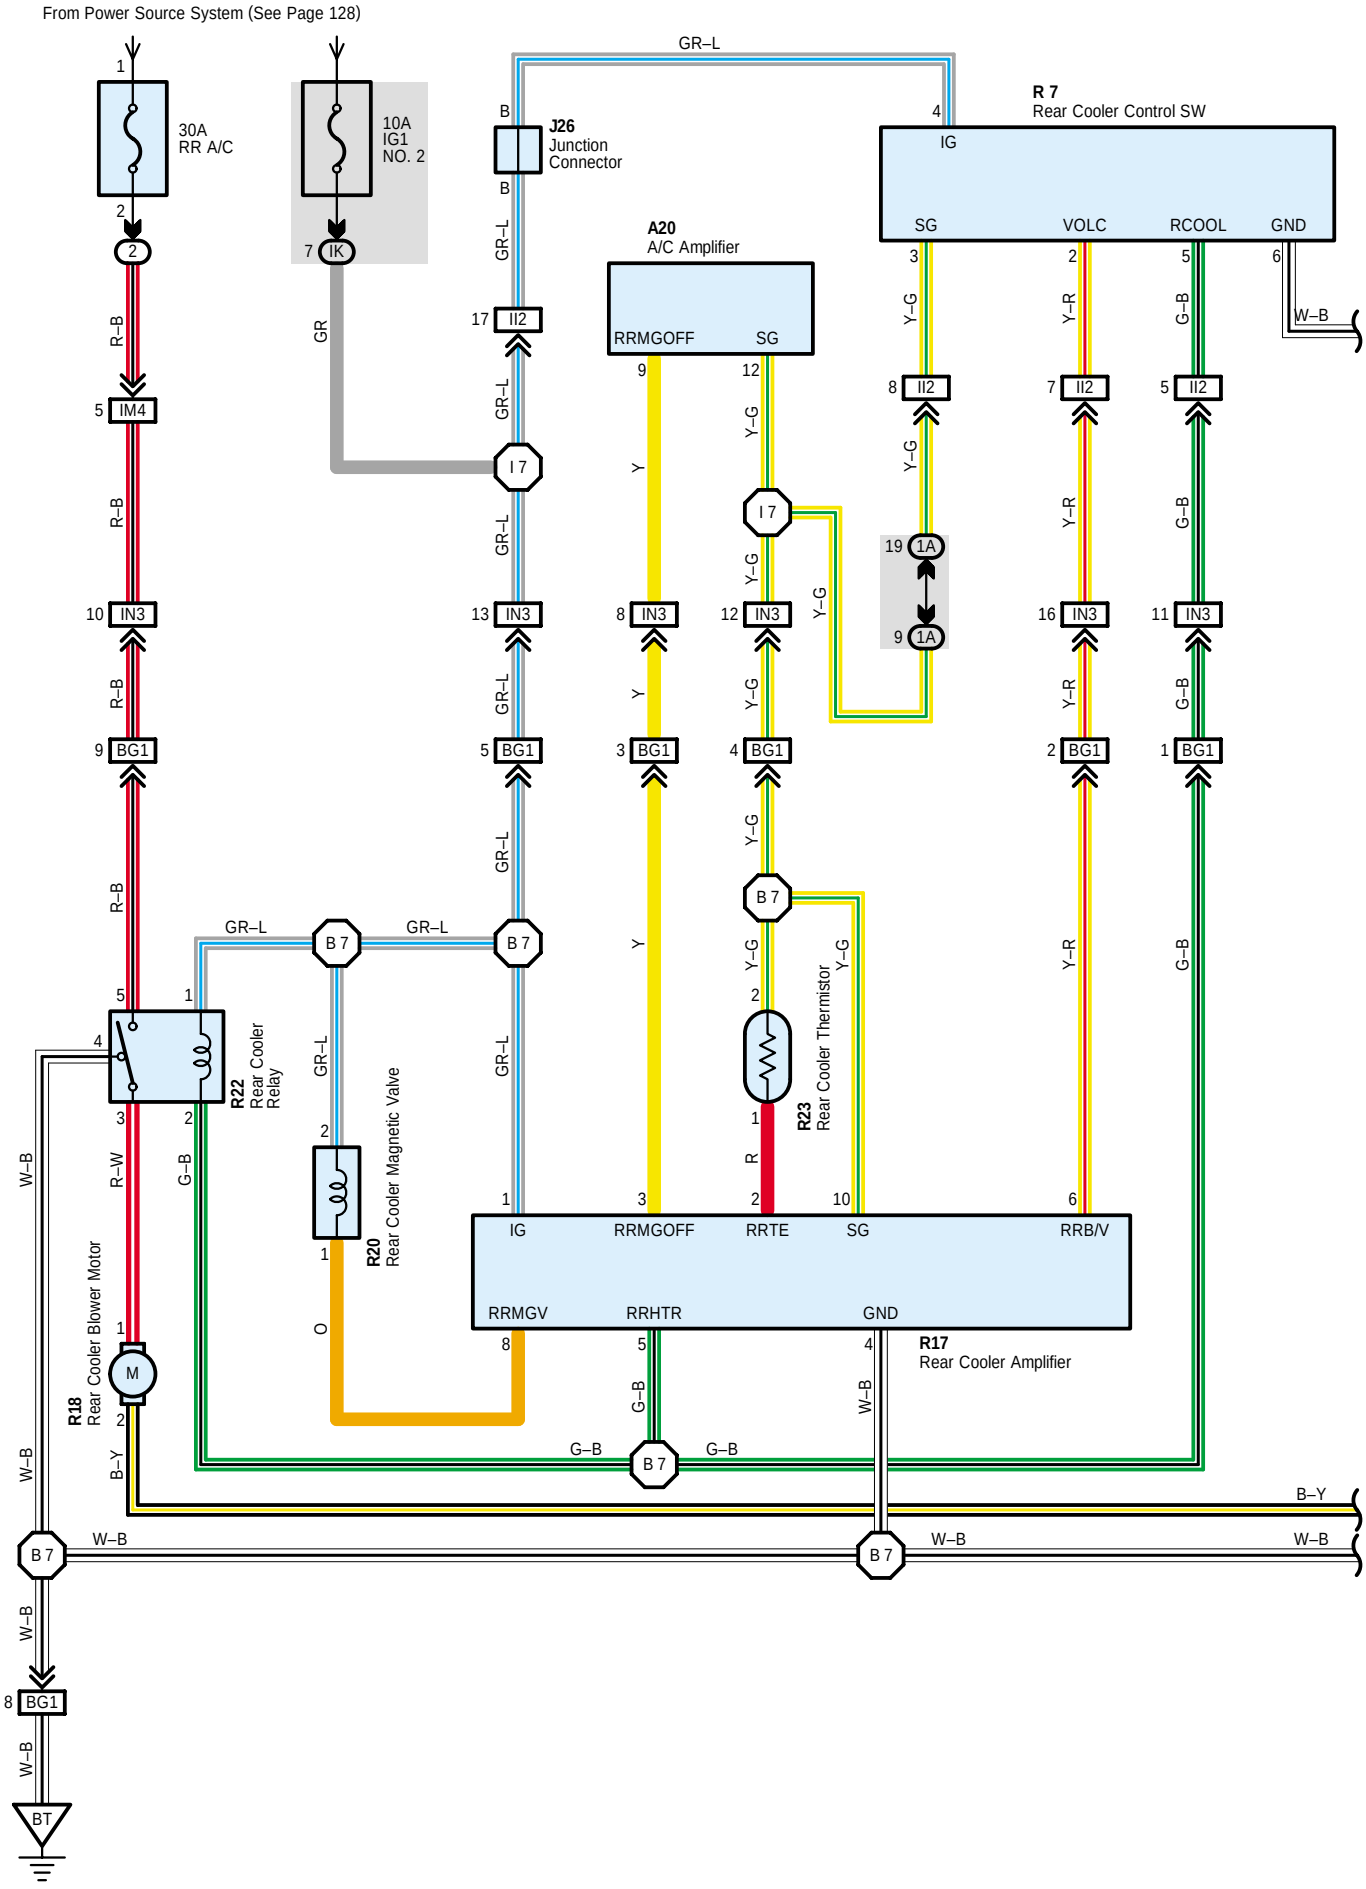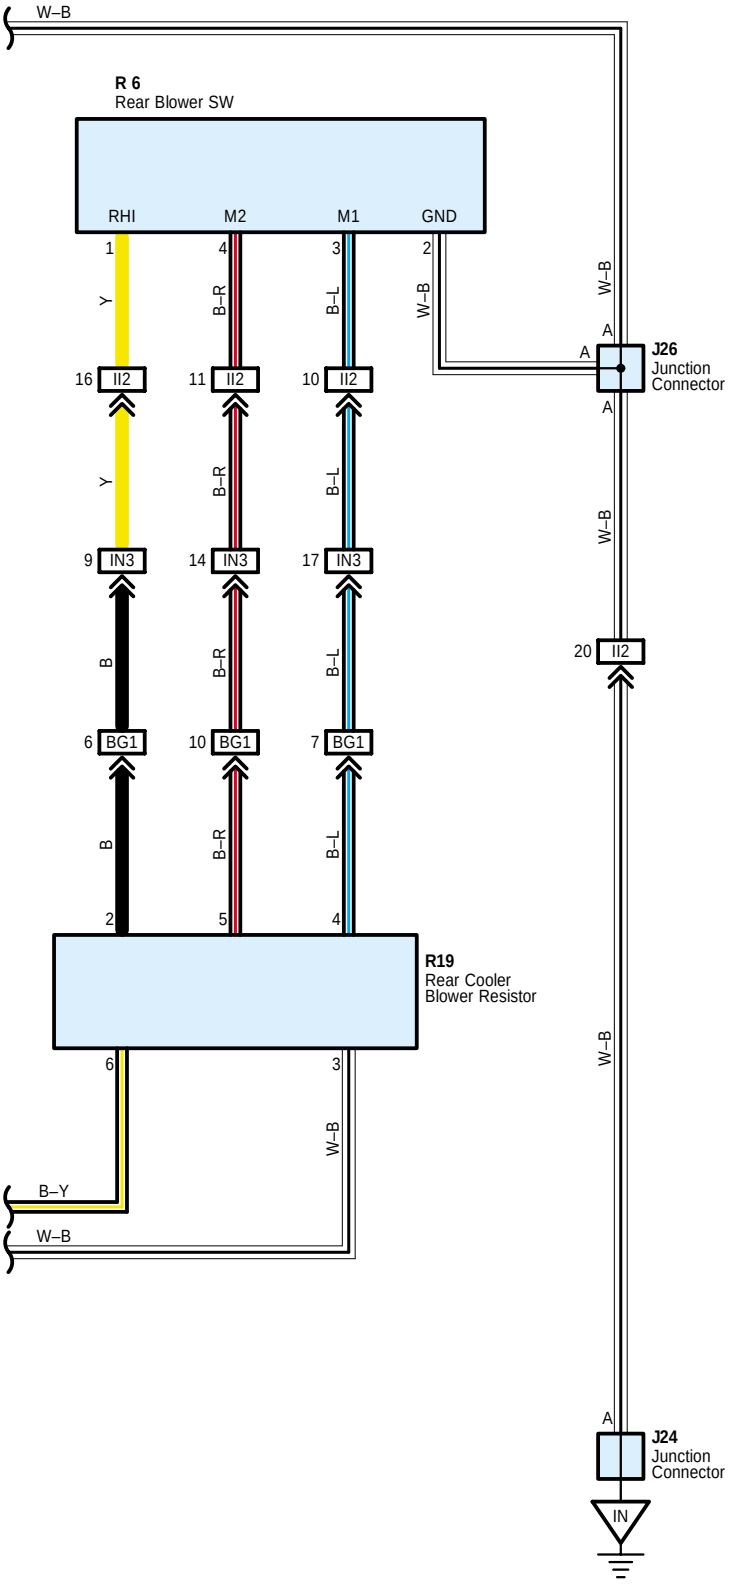


W–B
R 6
Rear Blower SW
RHI
M2
M1
GND
1
4
3
2
Y
B–R
B–L
W–B
16 II2
11 II2
10 II2
J26
Junction
Connector
A
9 IN3
14 IN3
17 IN3
B
6 BG1
10 BG1
7 BG1
20 II2
2
5
4
R19
Rear Cooler
Blower Resistor
6
3
B–Y
W–B
J24
Junction
Connector
IN