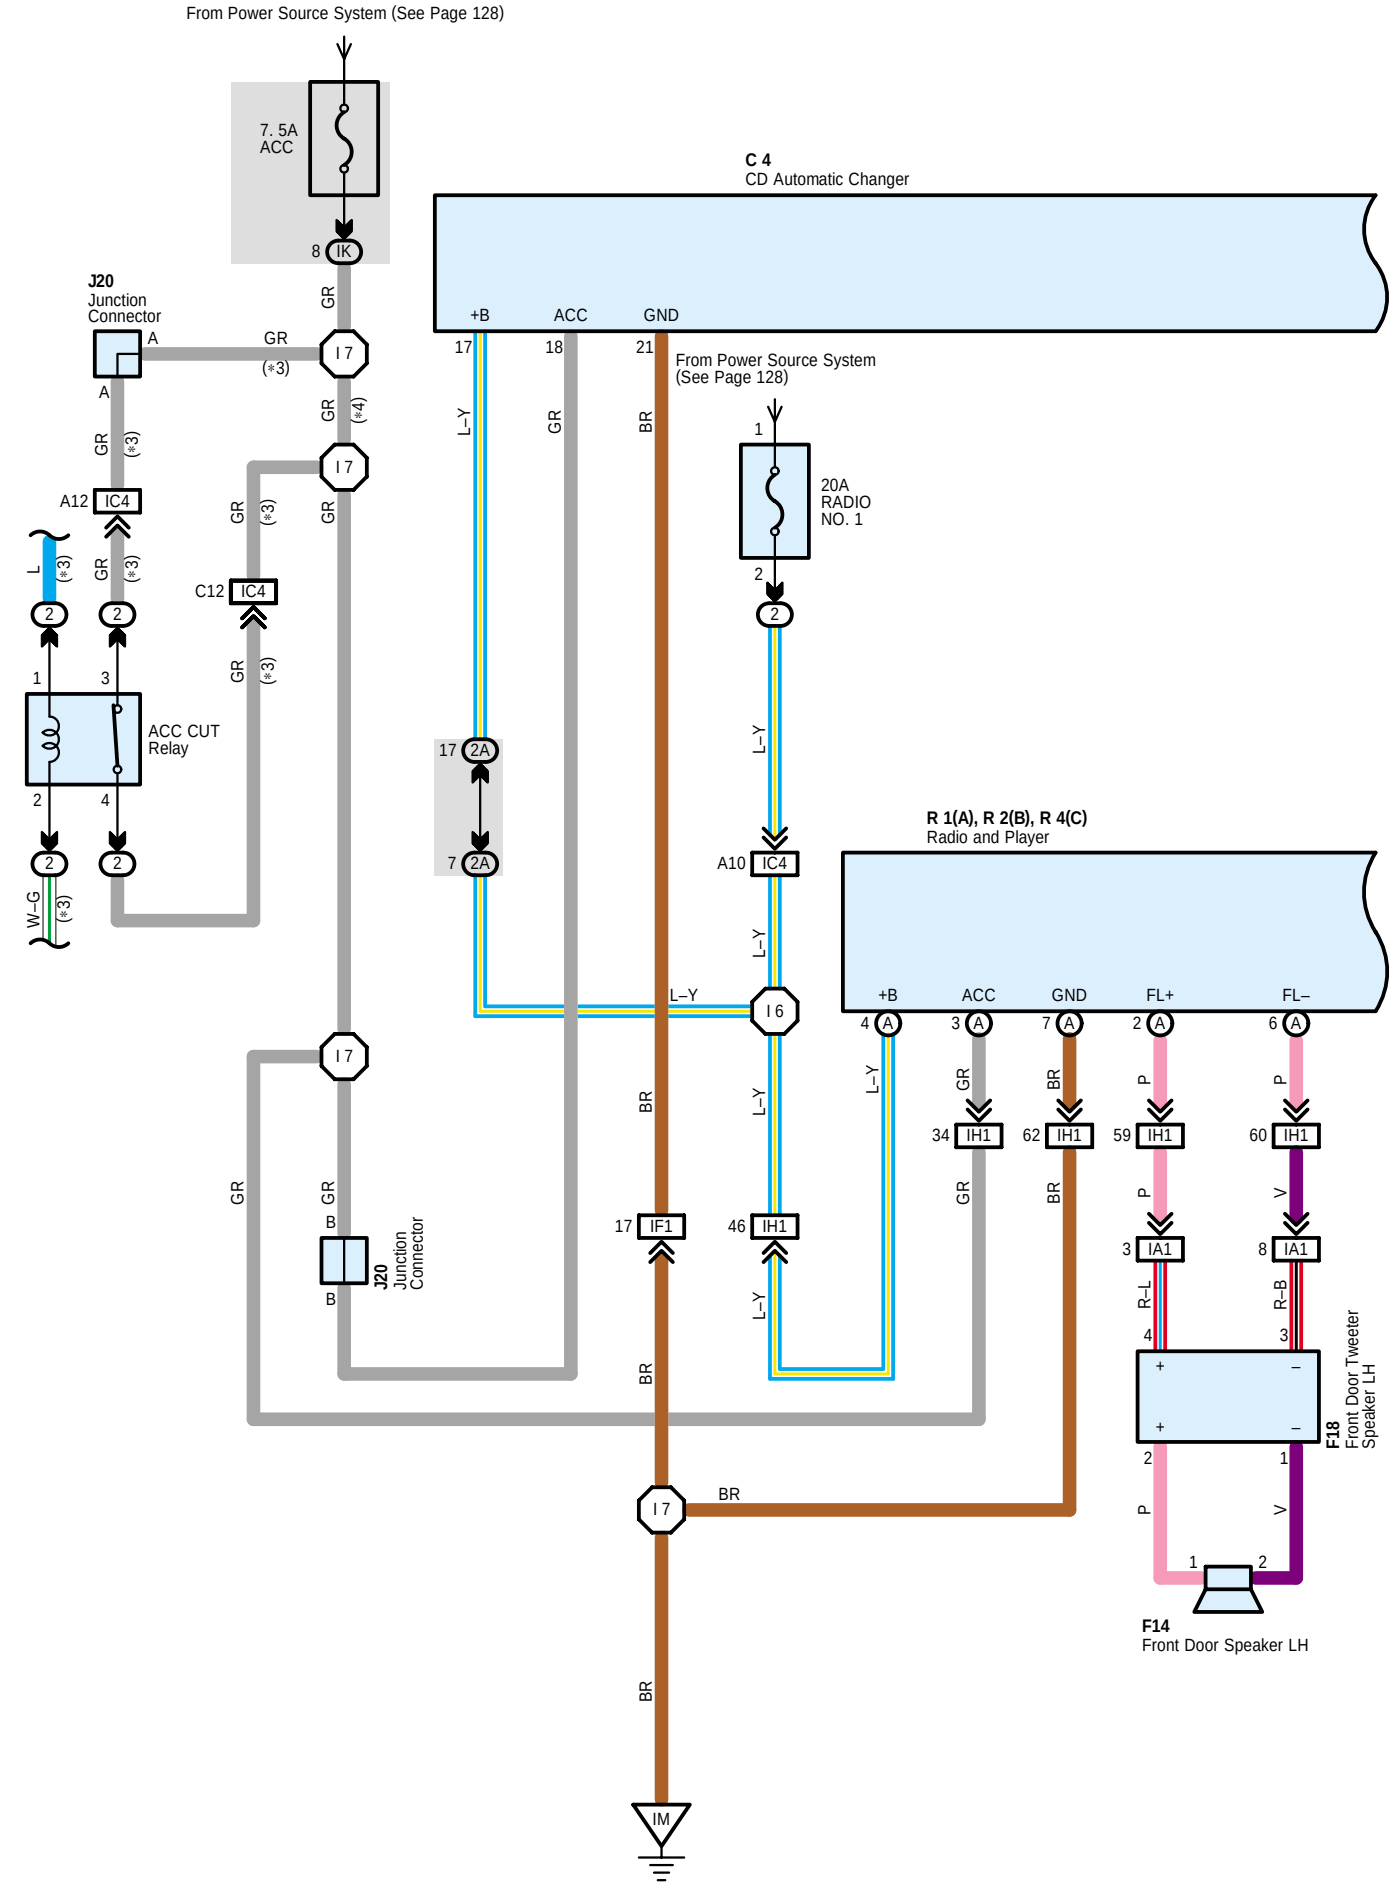
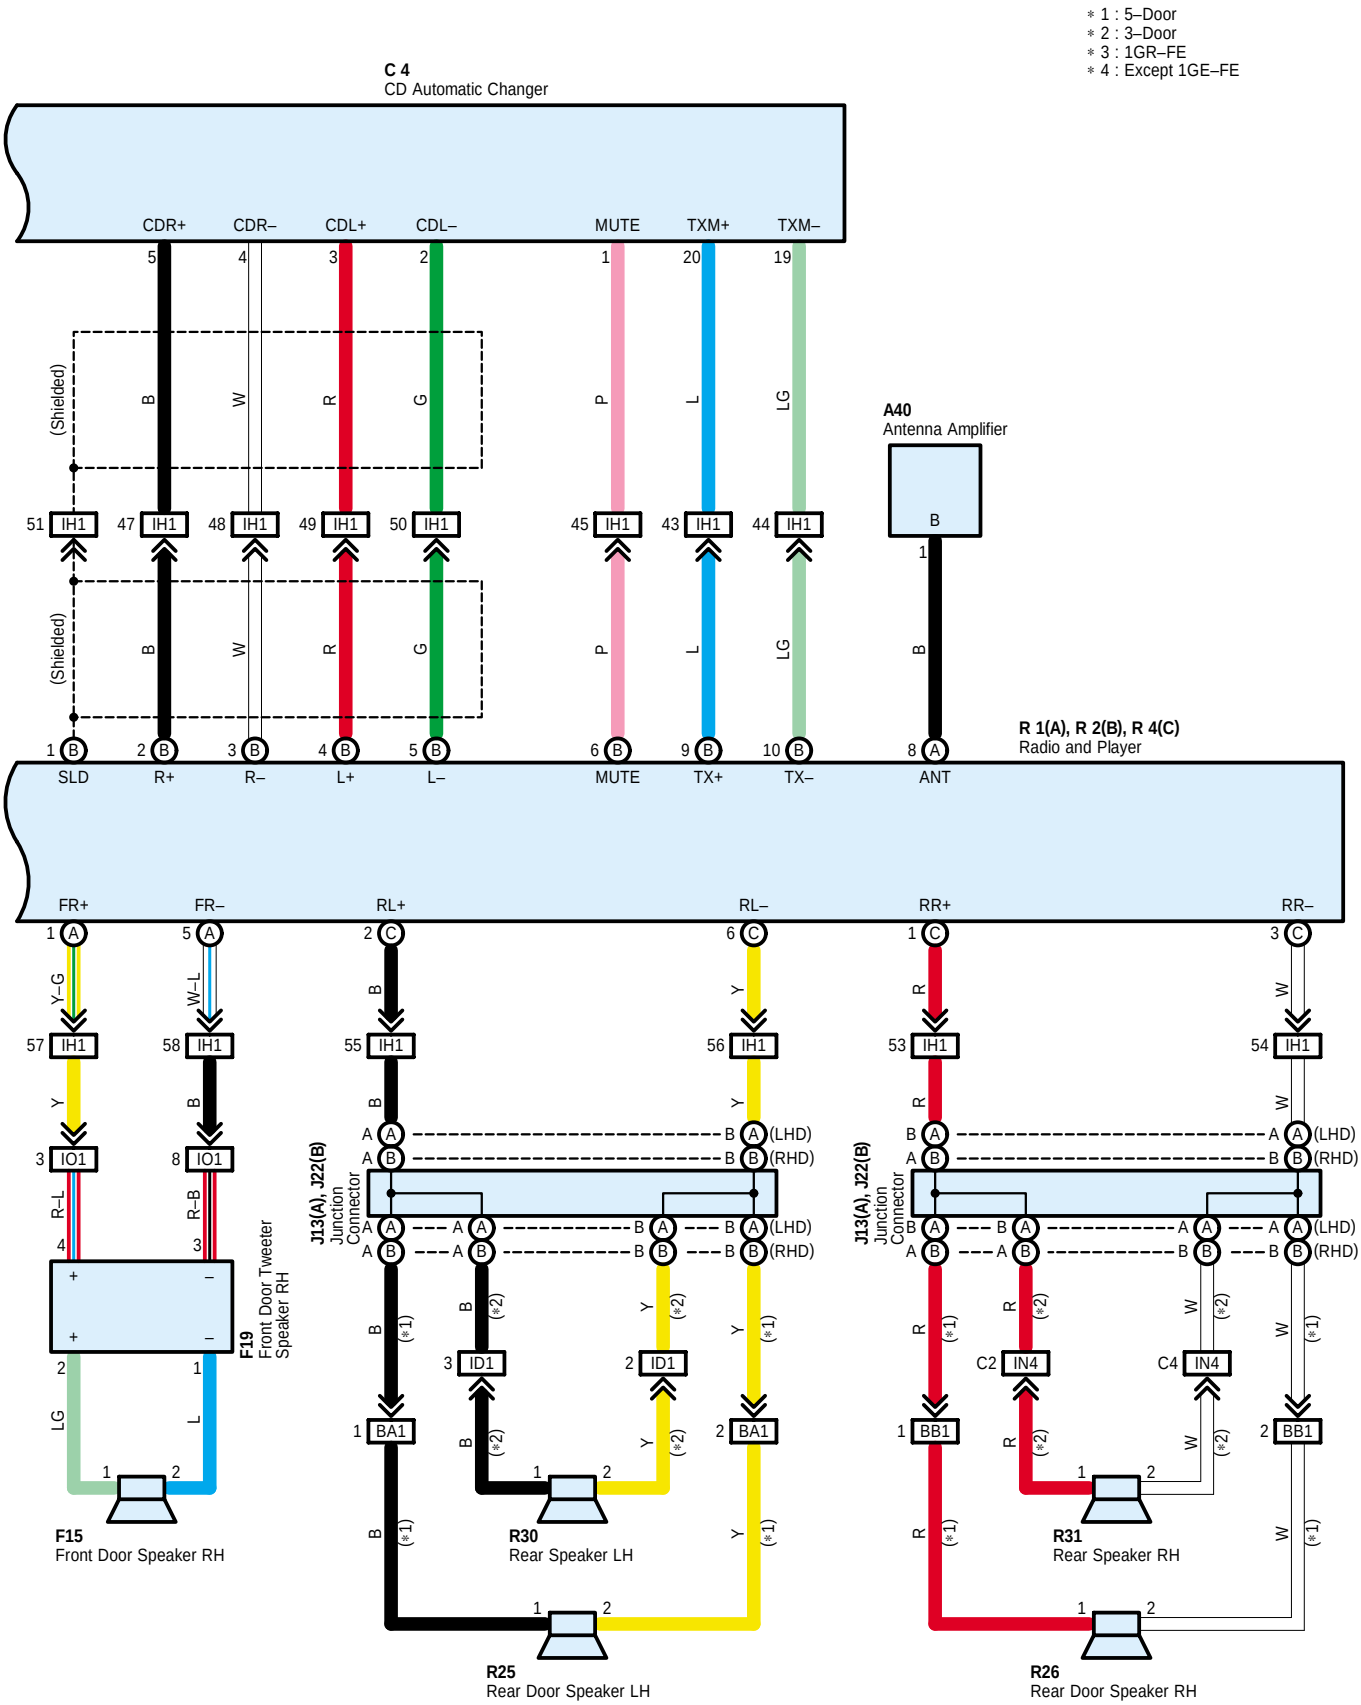

From Power Source System (See Page 128)
7. 5A
ACC
8 IK
C 4
CD Automatic Changer
+B
ACC
GND
17
18
21
From Power Source System
(See Page 128)
20A
RADIO
NO. 1
J20
Junction
Connector
A12 IC4
C12 IC4
ACC CUT
Relay
17 2A
7 2A
A10 IC4
R 1(A), R 2(B), R 4(C)
Radio and Player
FL+
FL–
I 6
I 7
IF1
IH1
IA1
J20
Junction
Connector
F18
Front Door Tweeter
Speaker LH
F14
Front Door Speaker LH
IM


∗ 1 : 5–Door
∗ 2 : 3–Door
∗ 3 : 1GR–FE
∗ 4 : Except 1GE–FE
C 4
CD Automatic Changer
CDR+
CDR–
CDL+
CDL–
MUTE
TXM+
TXM–
(Shielded)
A40
Antenna Amplifier
R 1(A), R 2(B), R 4(C)
Radio and Player
SLD
R+
R–
L+
L–
MUTE
TX+
TX–
ANT
FR+
FR–
RL+
RL–
RR+
RR–
F19
Front Door Tweeter Speaker RH
F15
Front Door Speaker RH
J13(A), J22(B)
Junction Connector
R30
Rear Speaker LH
R31
Rear Speaker RH
R25
Rear Door Speaker LH
R26
Rear Door Speaker RH