



Radio and Player (Separate Type Amplifier)

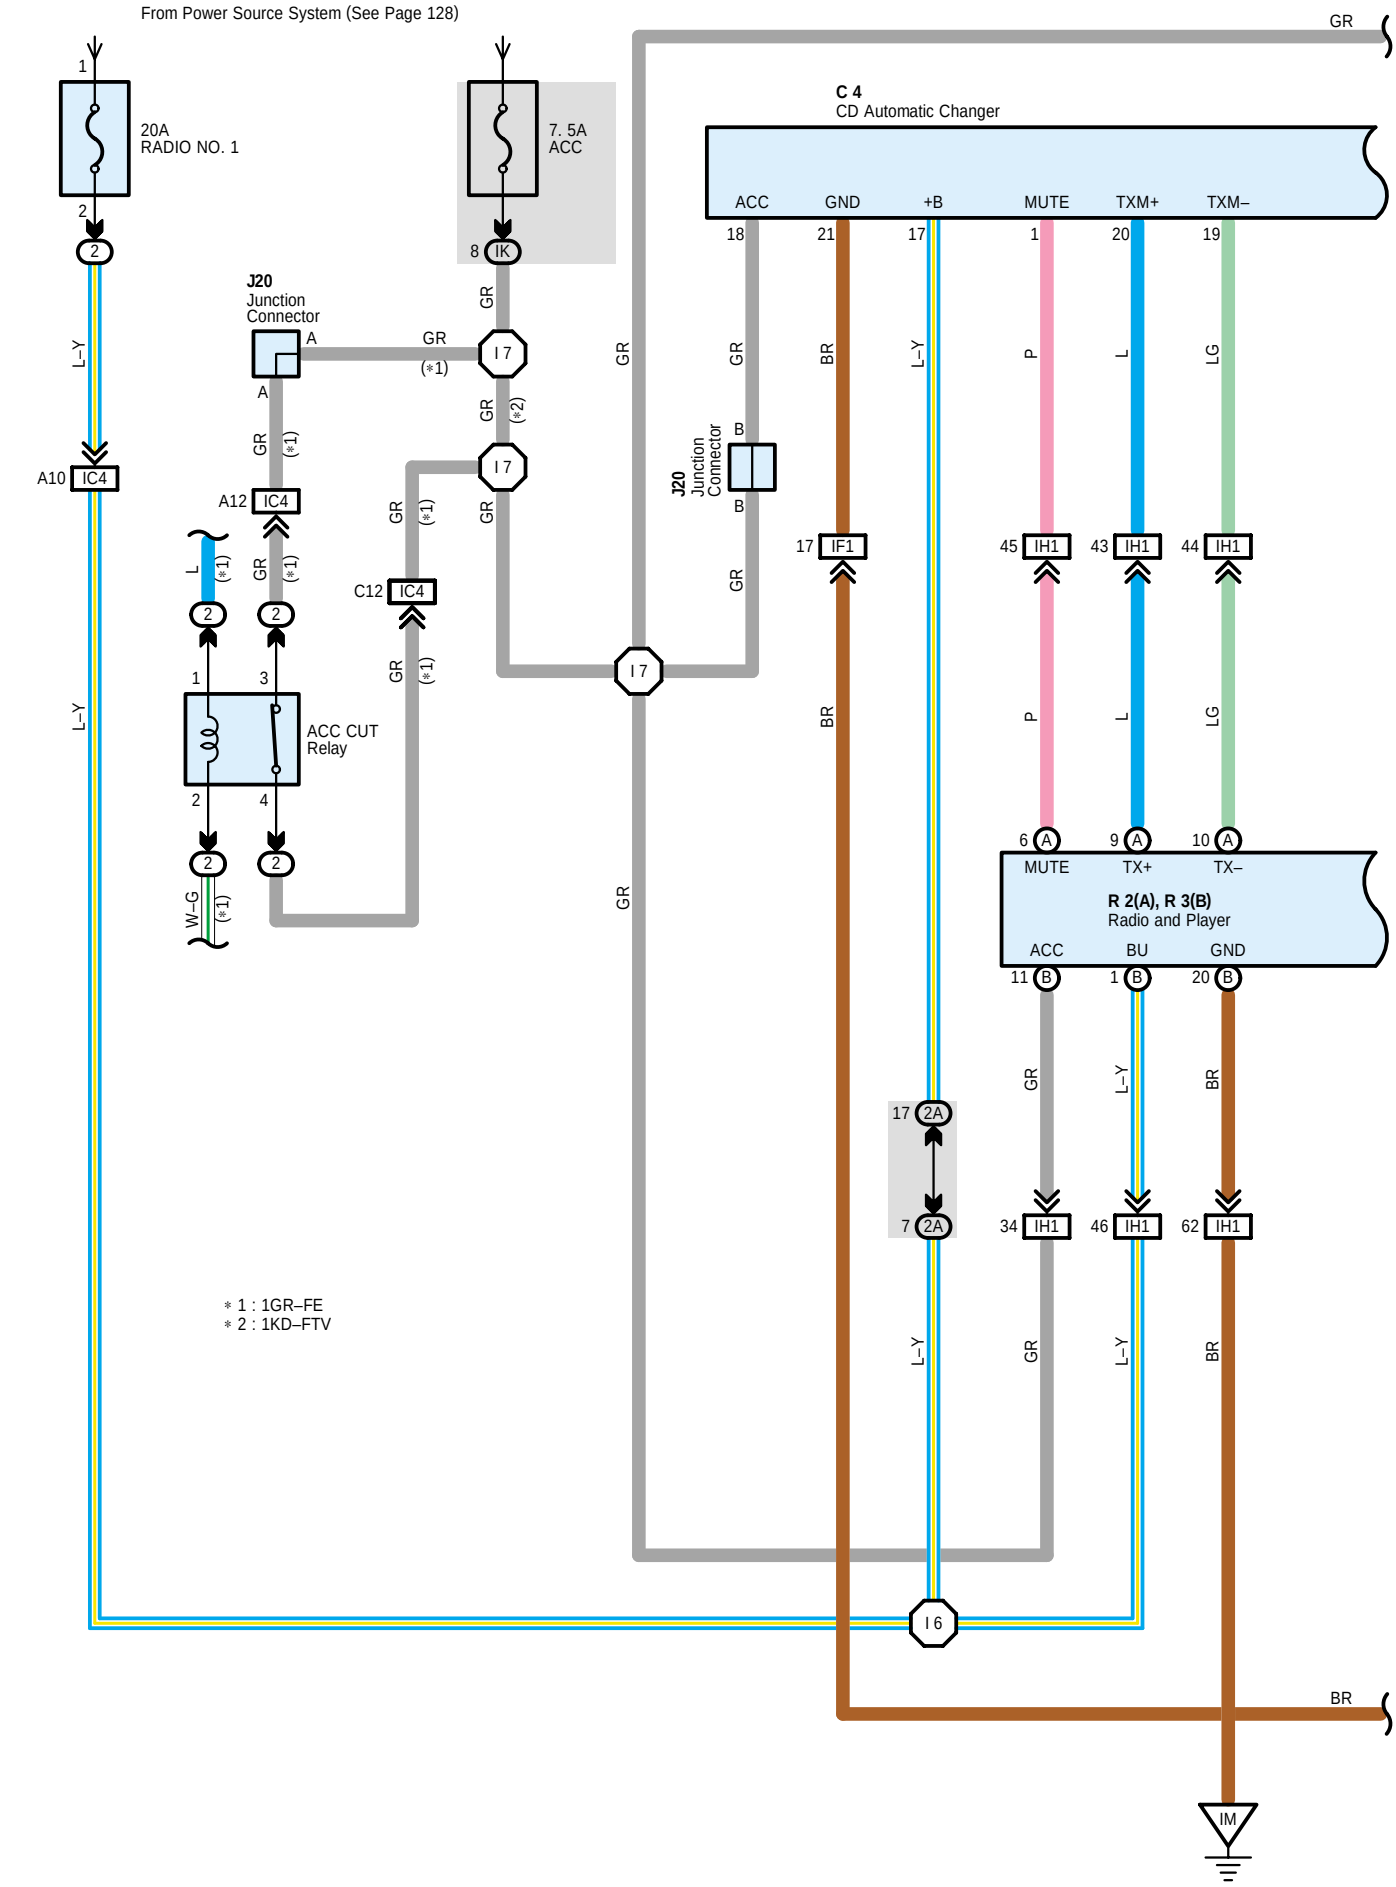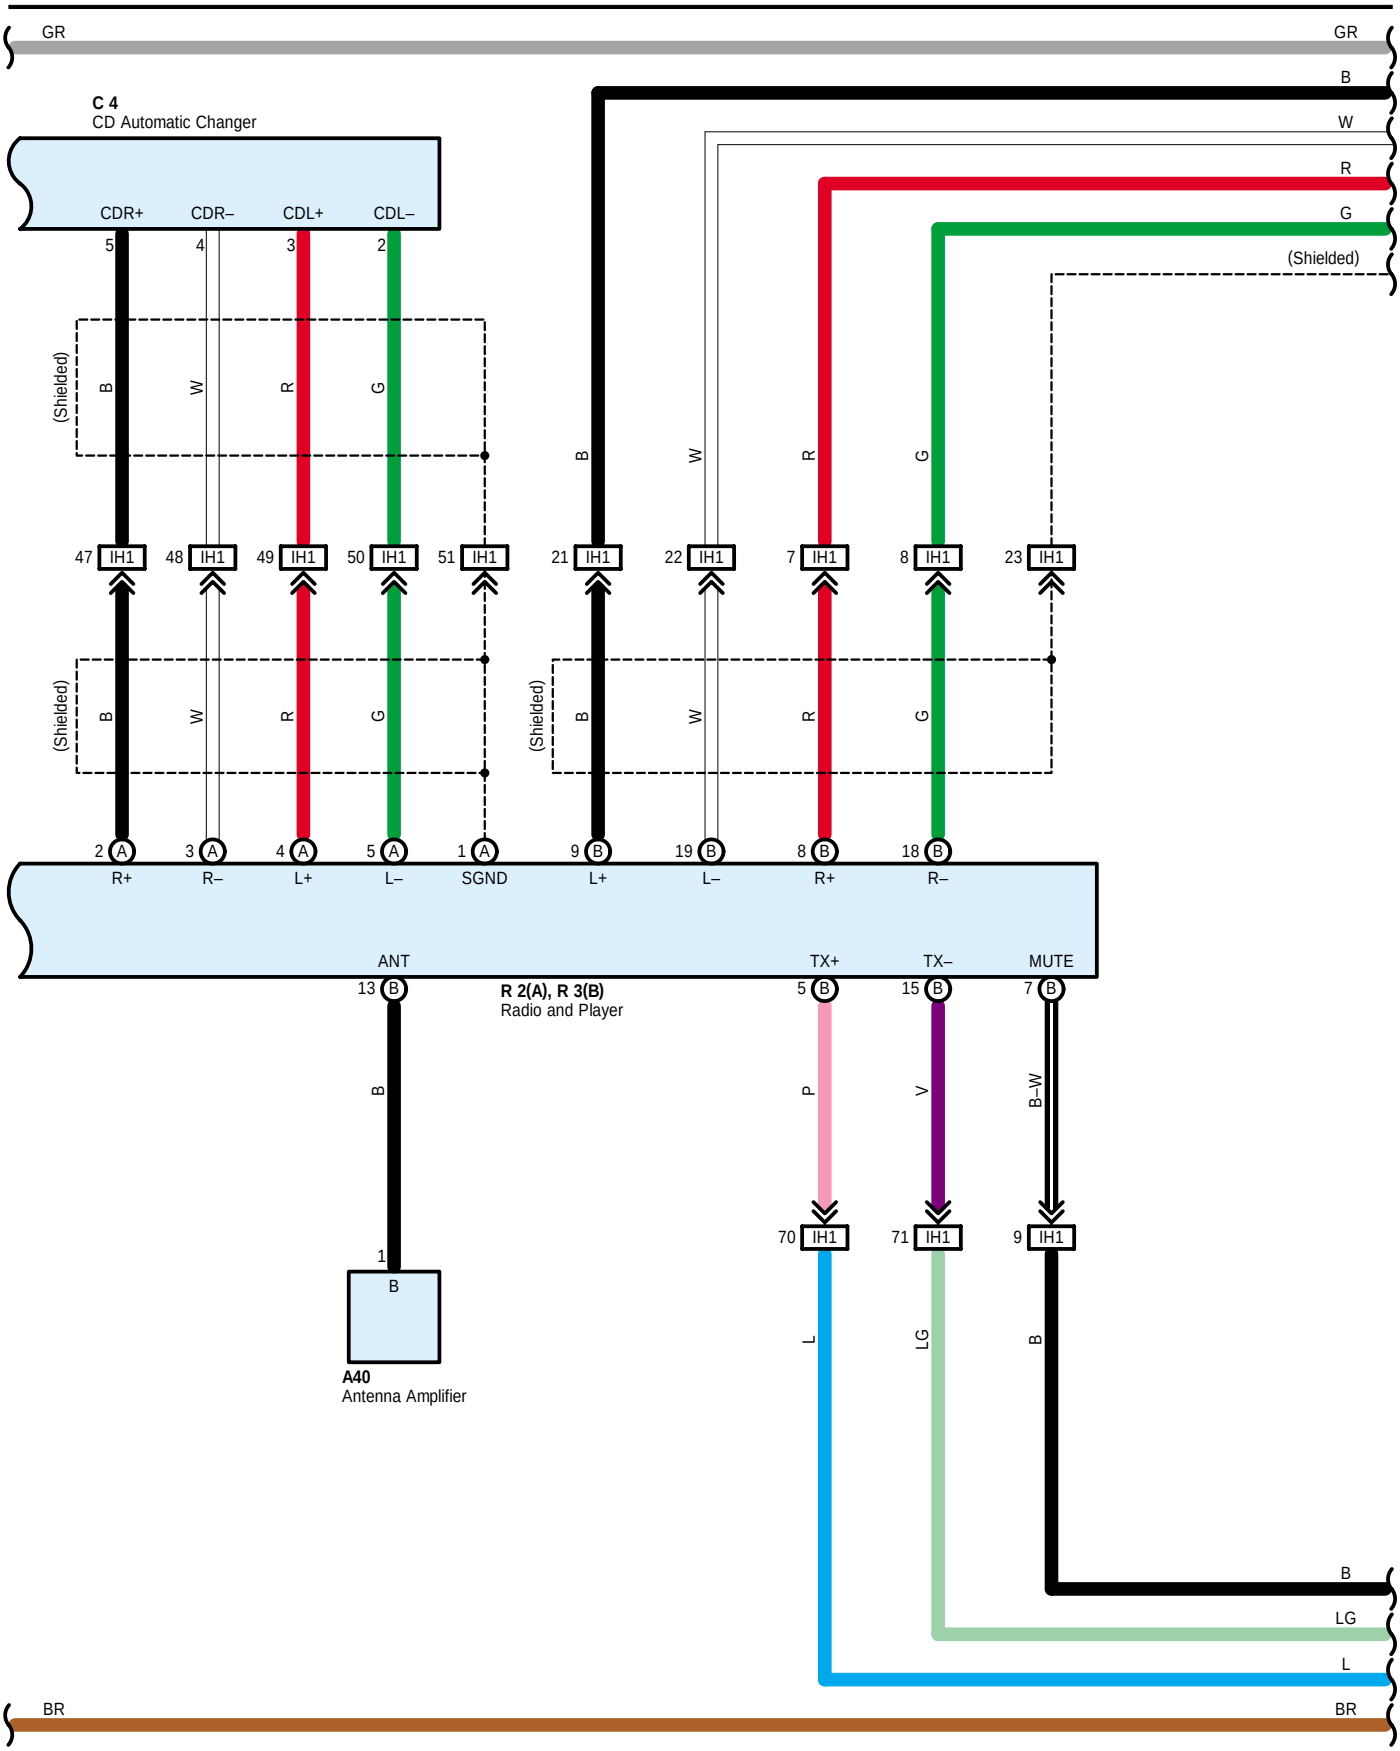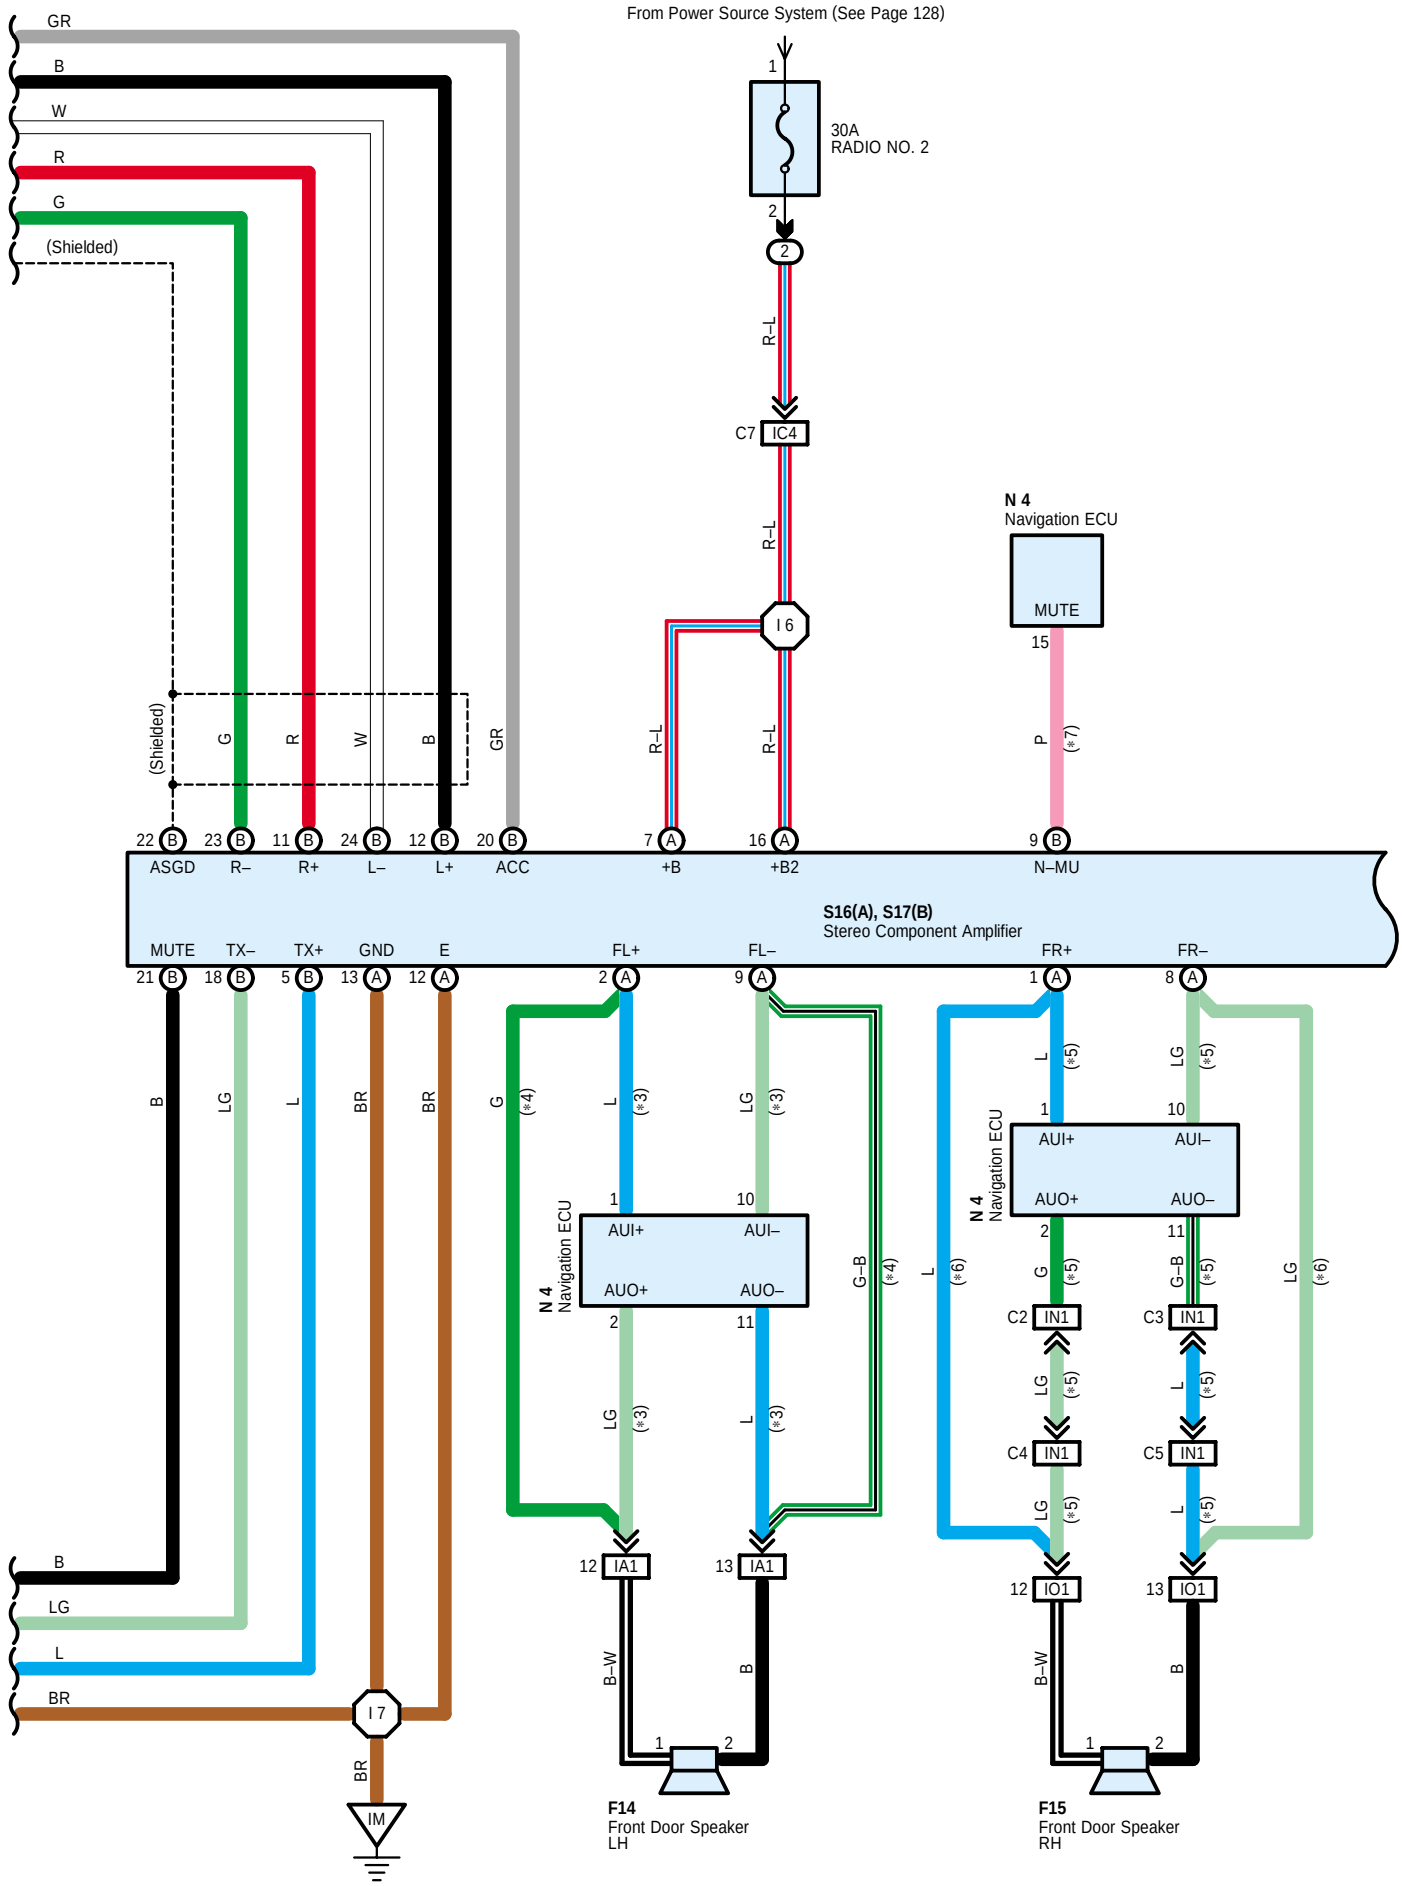


GR
GR
B
W
R
G
(Shielded)
C 4
CD Automatic Changer
CDR+
CDR–
CDL+
CDL–
5
4
3
2
(Shielded)
B
W
R
G
47 IH1
48 IH1
49 IH1
50 IH1
51 IH1
21 IH1
22 IH1
7 IH1
8 IH1
23 IH1
2 A
3 A
4 A
5 A
1 A
9 B
19 B
8 B
18 B
R+
R–
L+
L–
SGND
L+
L–
R+
R–
ANT
13 B
B
1
B
A40
Antenna Amplifier
R 2(A), R 3(B)
Radio and Player
TX+
TX–
MUTE
5 B
15 B
7 B
P
V
B–W
70 IH1
71 IH1
9 IH1
L
LG
B
B
LG
L
BR
BR

Radio and Player (Separate Type Amplifier)

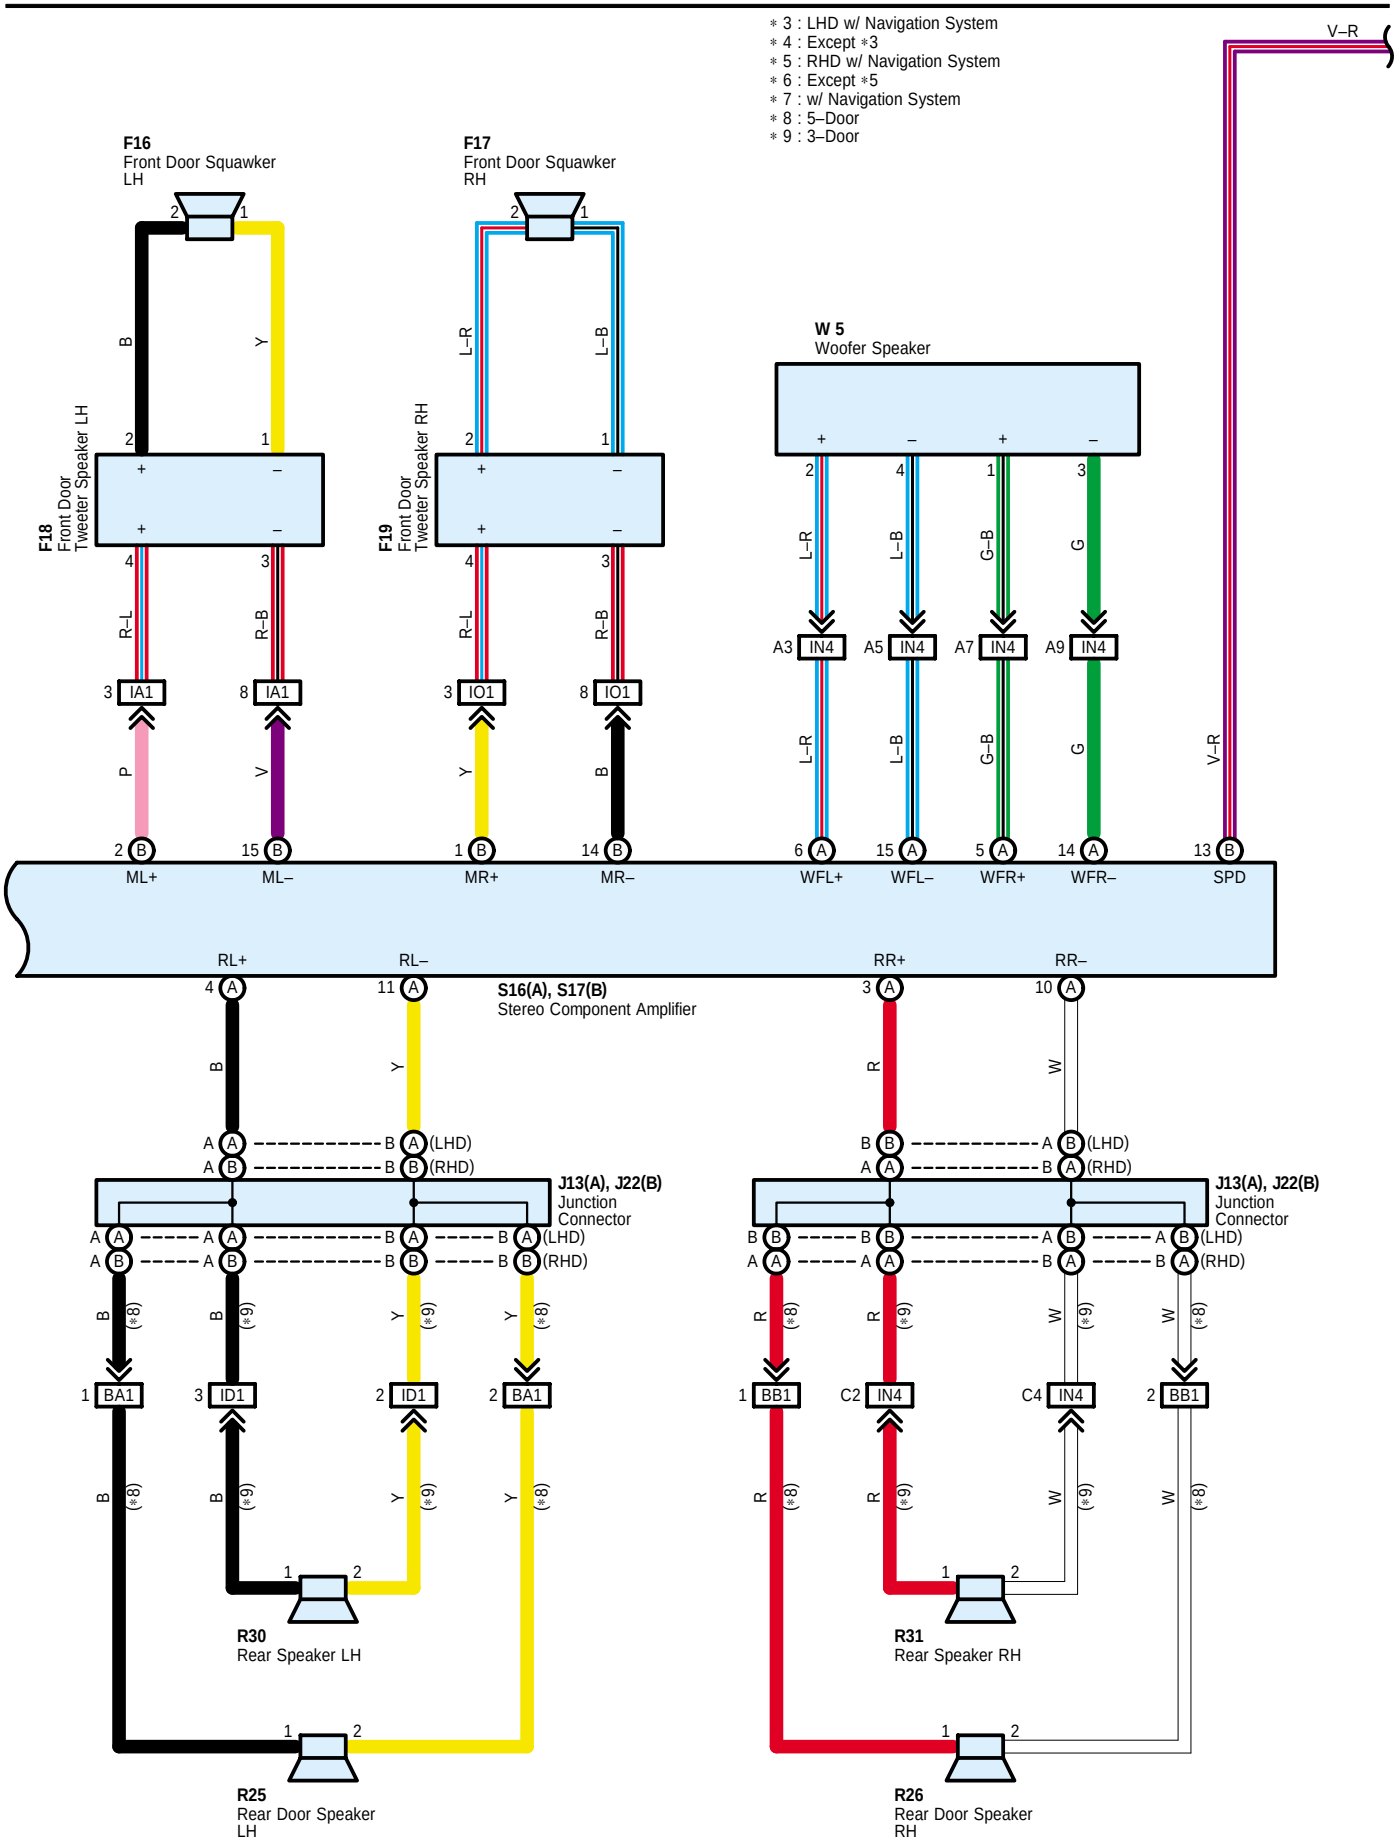


∗ 3 : LHD w/ Navigation System
∗ 4 : Except ∗3
∗ 5 : RHD w/ Navigation System
∗ 6 : Except ∗5
∗ 7 : w/ Navigation System
∗ 8 : 5–Door
∗ 9 : 3–Door
V–R
F16
Front Door Squawker LH
F17
Front Door Squawker RH
F18
Front Door Tweeter Speaker LH
F19
Front Door Tweeter Speaker RH
W 5
Woofer Speaker
IA1
IO1
IN4
ML+
ML–
MR+
MR–
WFL+
WFL–
WFR+
WFR–
SPD
RL+
RL–
RR+
RR–
S16(A), S17(B)
Stereo Component Amplifier
J13(A), J22(B)
Junction Connector
(LHD)
(RHD)
BA1
ID1
BB1
R30
Rear Speaker LH
R31
Rear Speaker RH
R25
Rear Door Speaker LH
R26
Rear Door Speaker RH

Radio and Player (Separate Type Amplifier)

