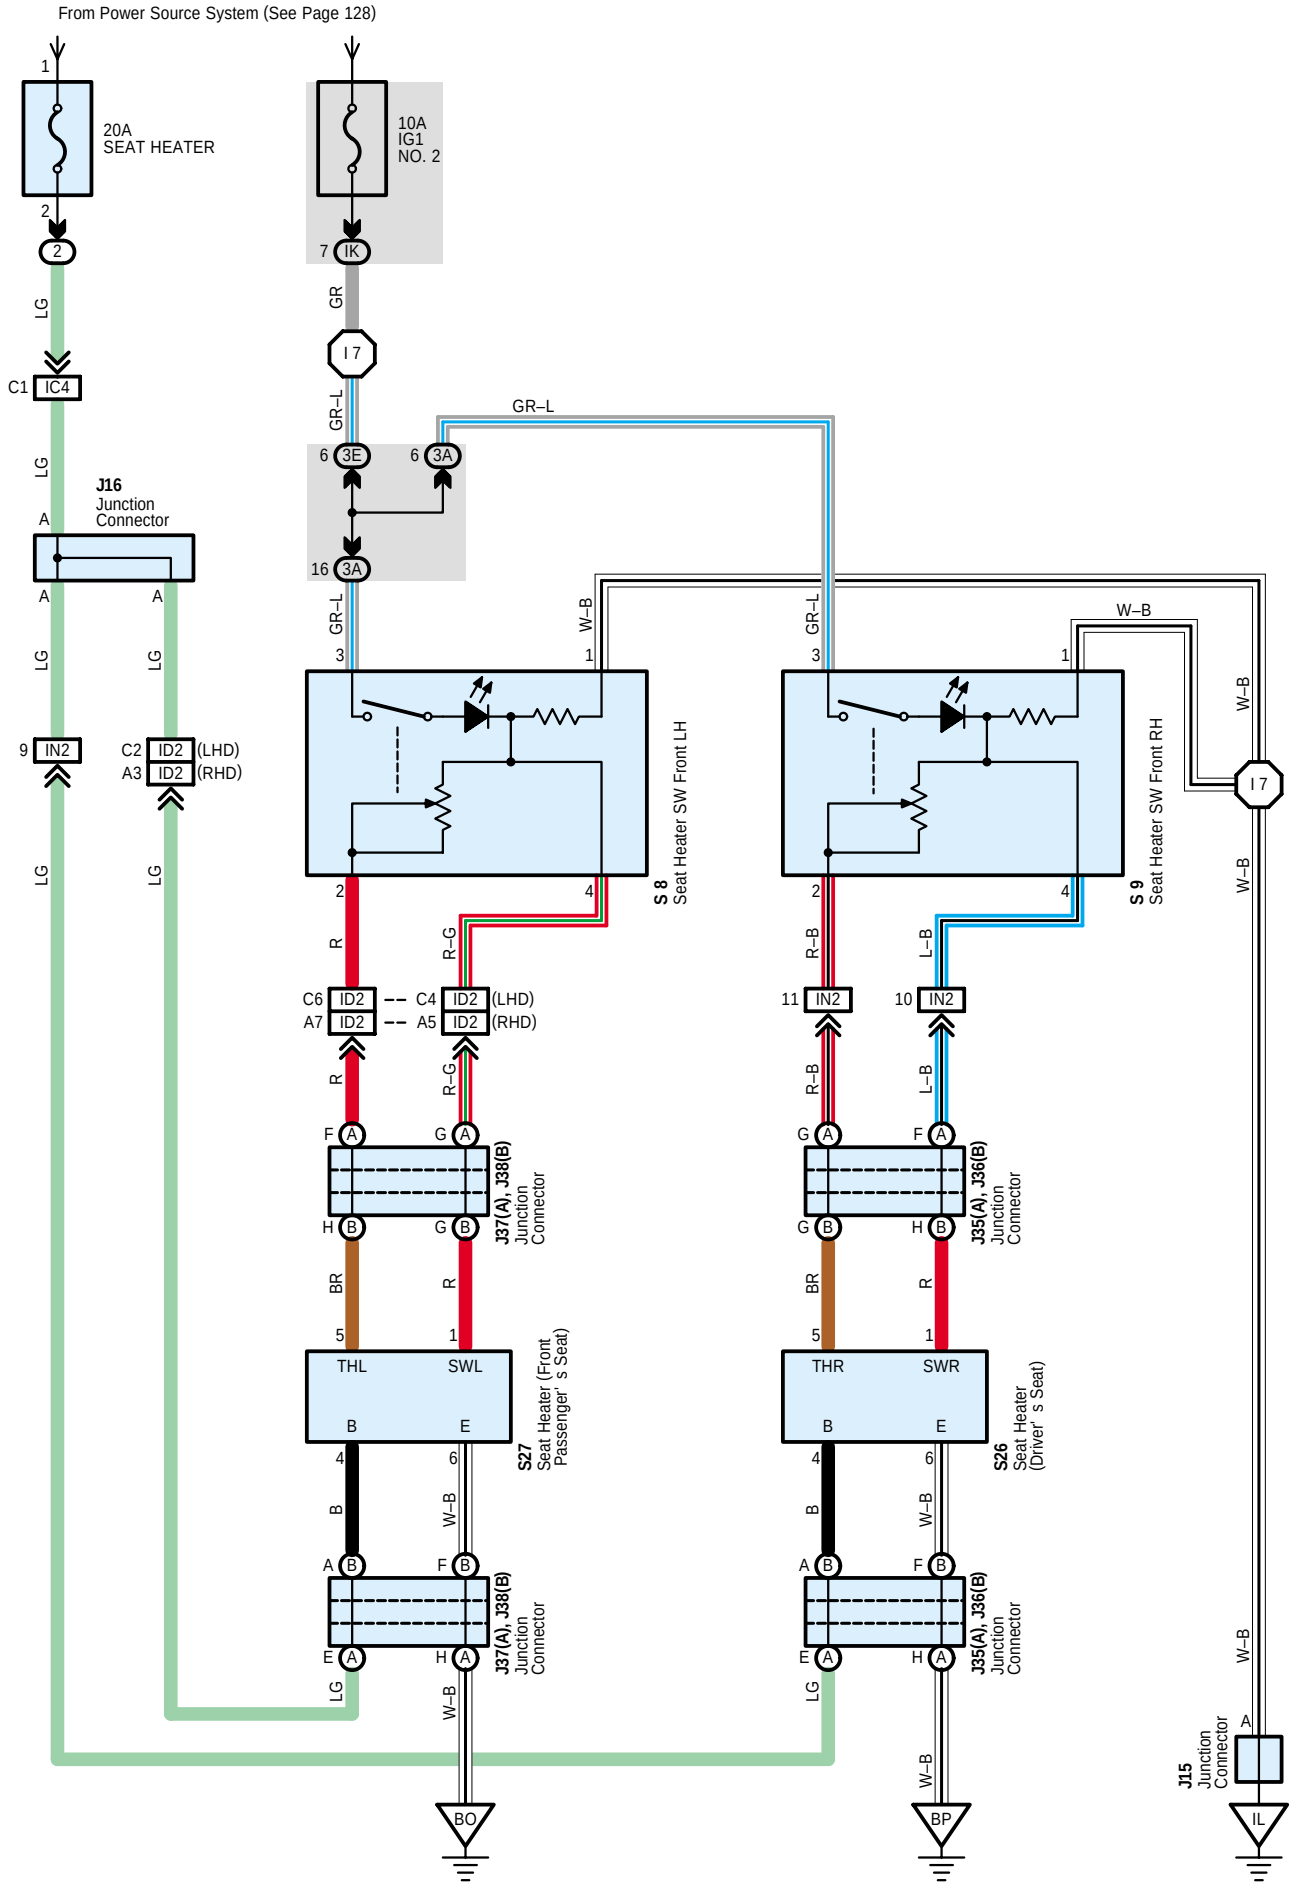

From Power Source System (See Page 128)
20A
SEAT HEATER
10A
IG1
NO. 2
J16
Junction
Connector
IC4
IN2
ID2 (LHD)
ID2 (RHD)
I 7
3E
3A
GR–L
W–B
LG
R
R–G
R–B
L–B
BR
B
S 8
Seat Heater SW Front LH
S 9
Seat Heater SW Front RH
J37(A), J38(B)
Junction
Connector
J35(A), J36(B)
Junction
Connector
S27
Seat Heater (Front
Passenger's Seat)
S26
Seat Heater
(Driver's Seat)
THL
SWL
THR
SWR
J15
Junction
Connector
BO
BP
IL