
Stop Light


From Power Source System (See Page 128)
10A
STOP
10A
ECU–IG
12 IE
G–R
(w/ VSC)
G–R
(w/o VSC)
B–R
(w/ VSC)
J 1
Junction
Connector
S20
Suspension Control ECU
STP
12
S18
Stop Light SW
DAC
Relay
G–Y
(w/o VSC)
G–Y
(w/ VSC)
J 7(A), J 8(B)
Junction
Connector
J 9
Junction
Connector
LG
(A/T)
G
(w/ VSC)
G–Y
(w/ ABS)
20 D
STPO
STP2
STP
14 A
10 B
S11(A), S12(B), S14(D)
Skid Control ECU
18 IM1
(*2)
(*1)
J17
Junction
Connector
15 A (*3)
6 B (*4)
14 A (1KD–FTV)
14 B (1KZ–TE)
19 B (5L–E)
19 A (1GR–FE)
(LHD M/T)
(LHD A/T, RHD)
E 9(A), E10(B)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
S10
Shift Lock
Control ECU
S 1
Skid Control ECU
with Actuator

∗ 1 : LHD 5L–E Bench Seat Type, RHD 5L–E
∗ 2 : Except ∗1
∗ 3 : 3RZ–FE Unleaded Gasoline
∗ 4 : 3RZ–FE Leaded Gasoline

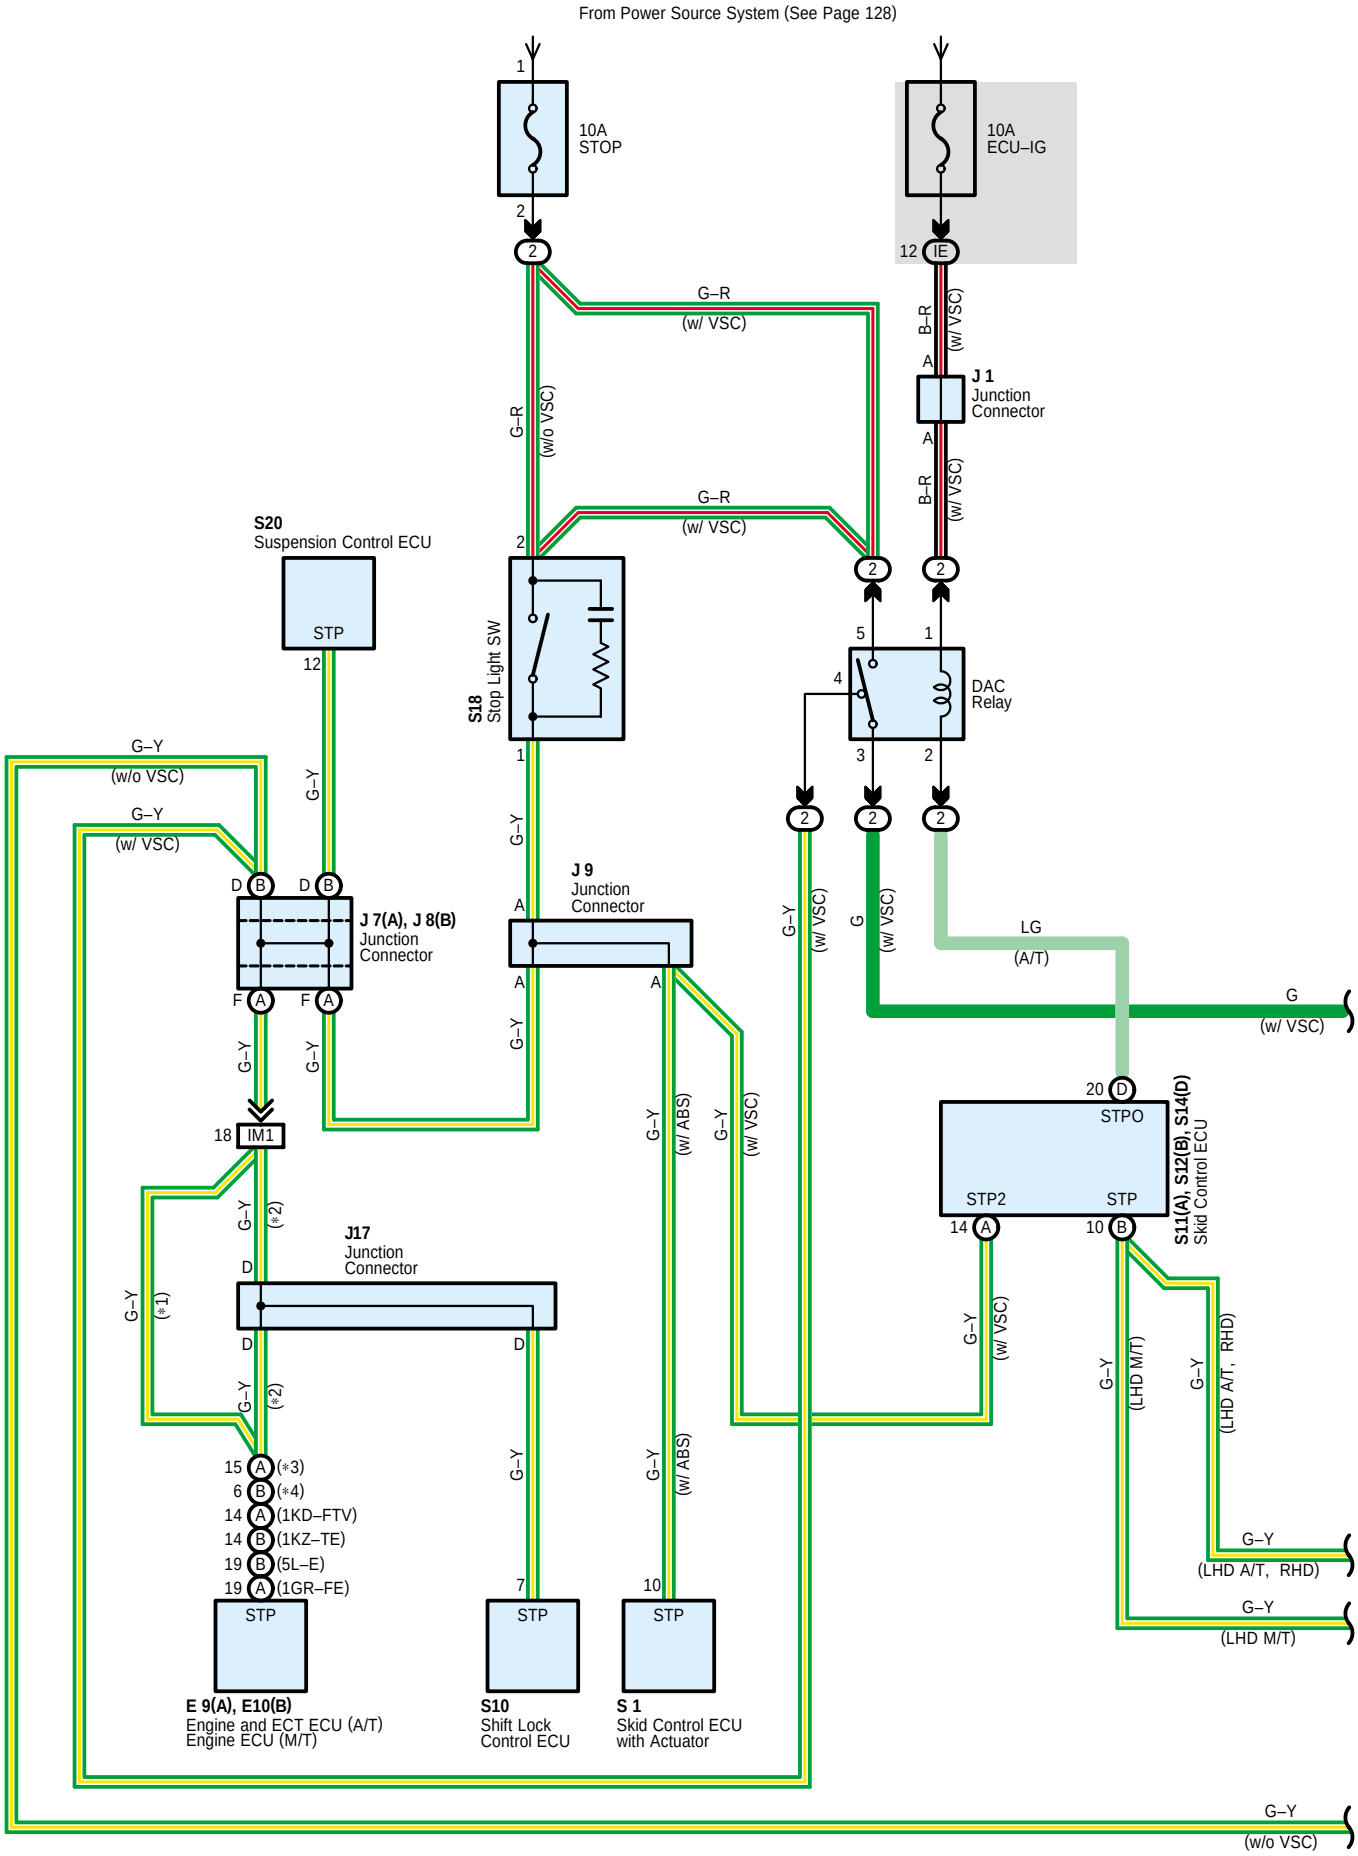