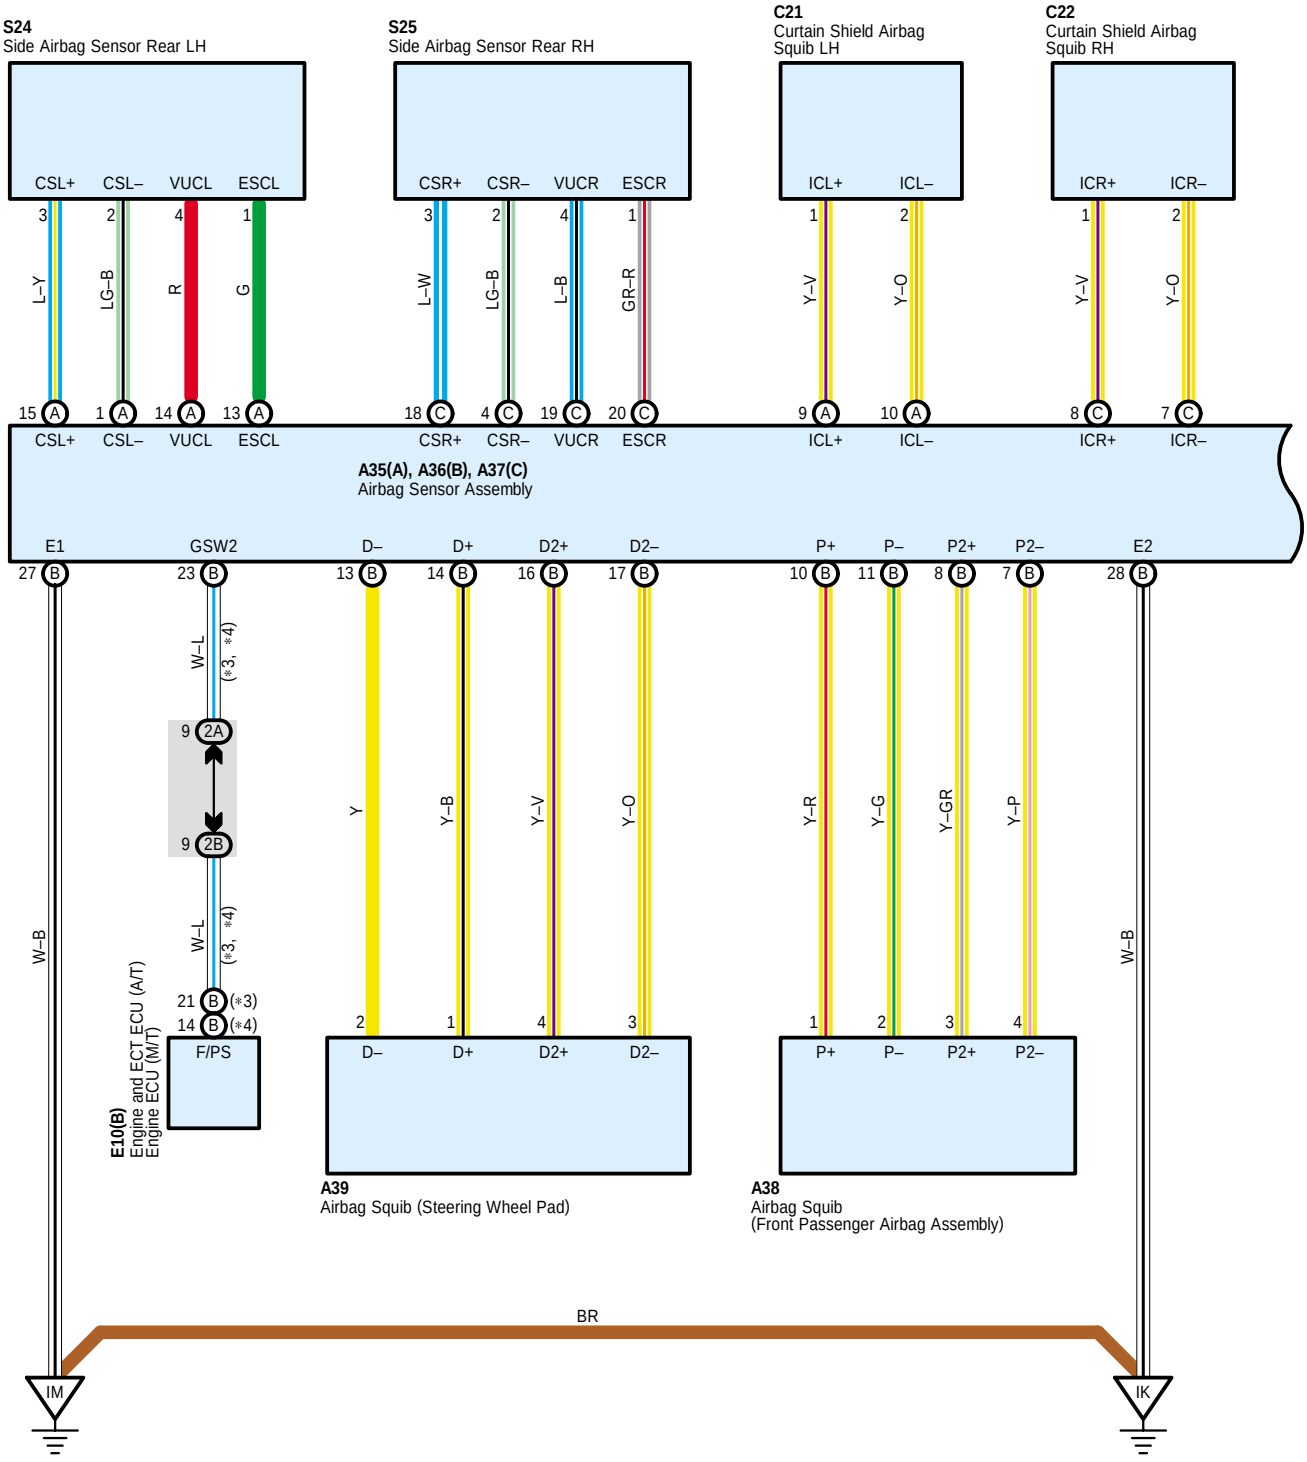
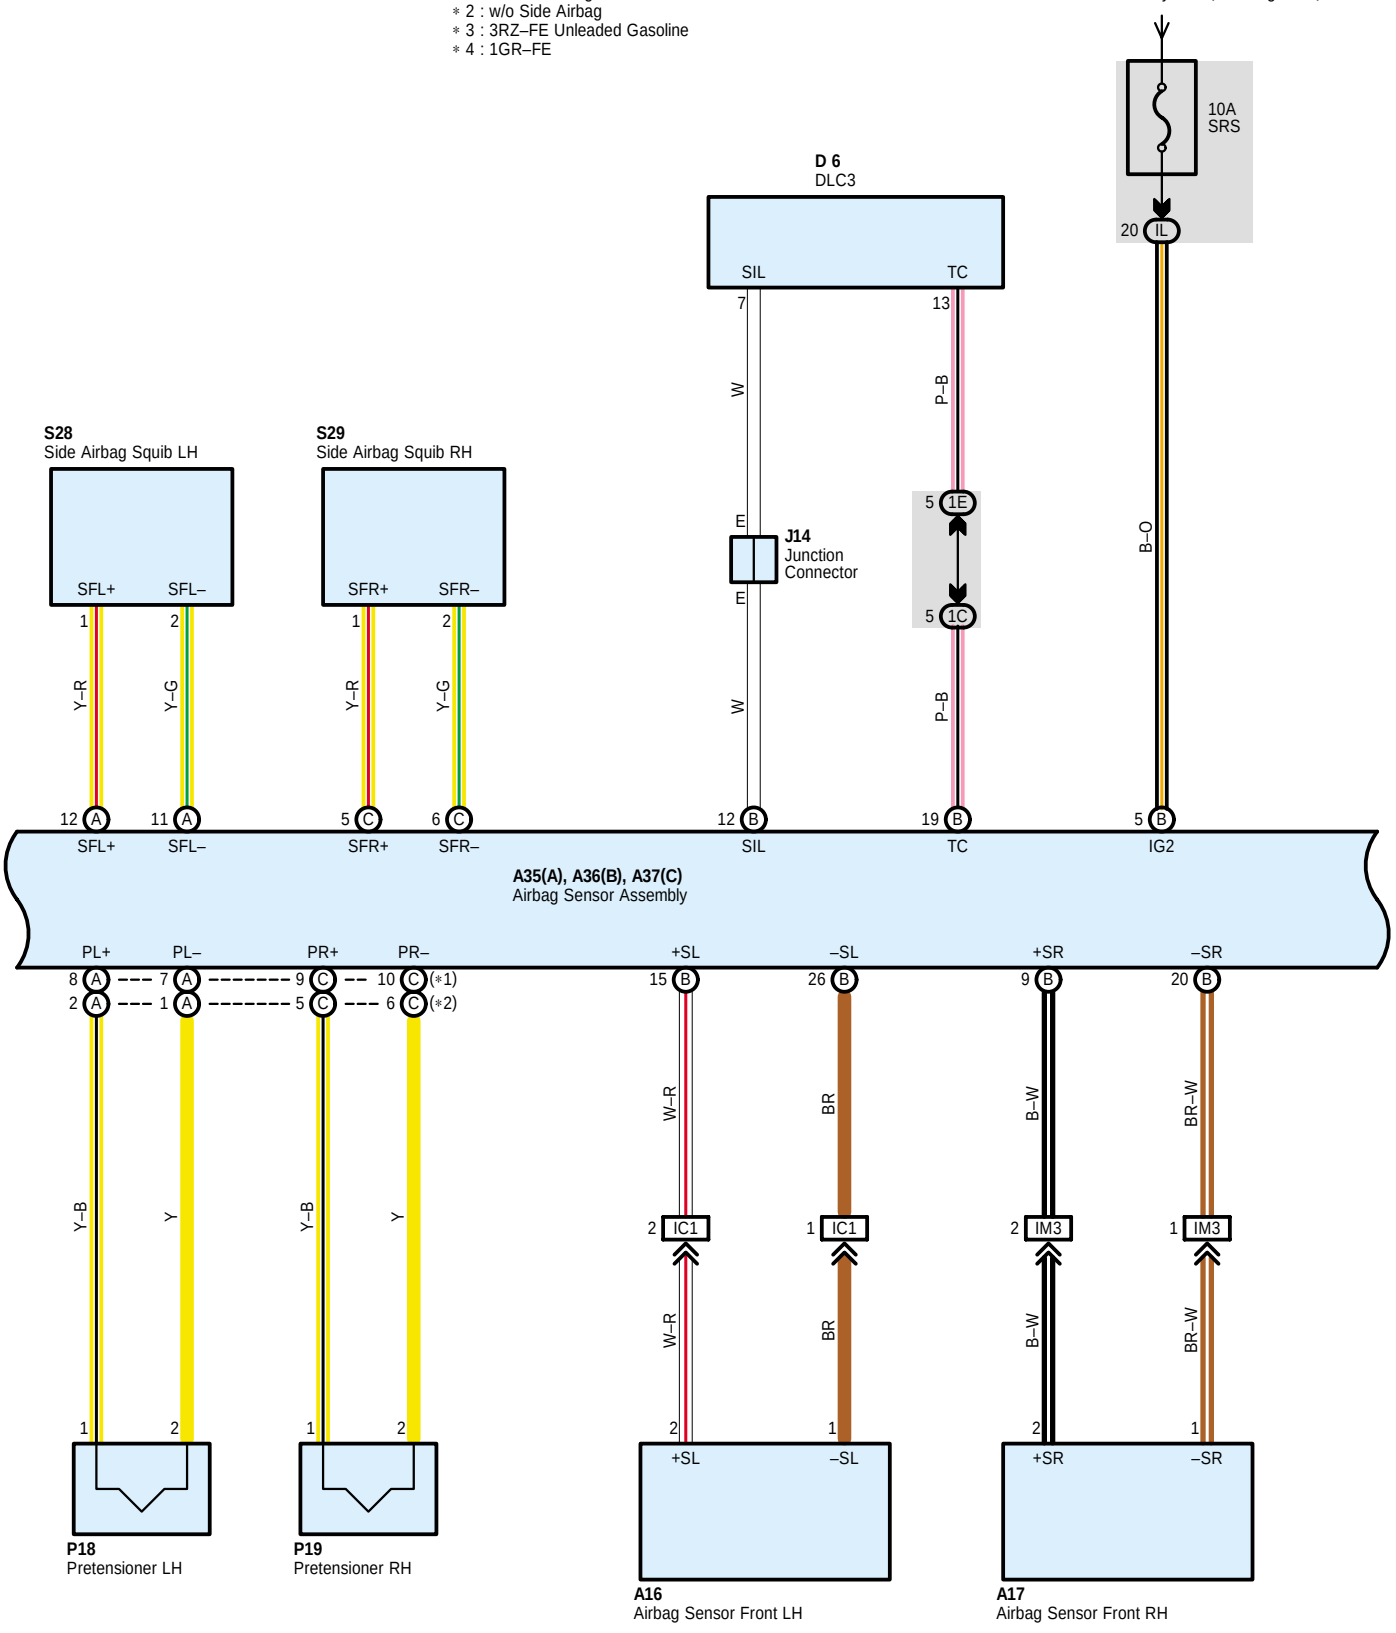
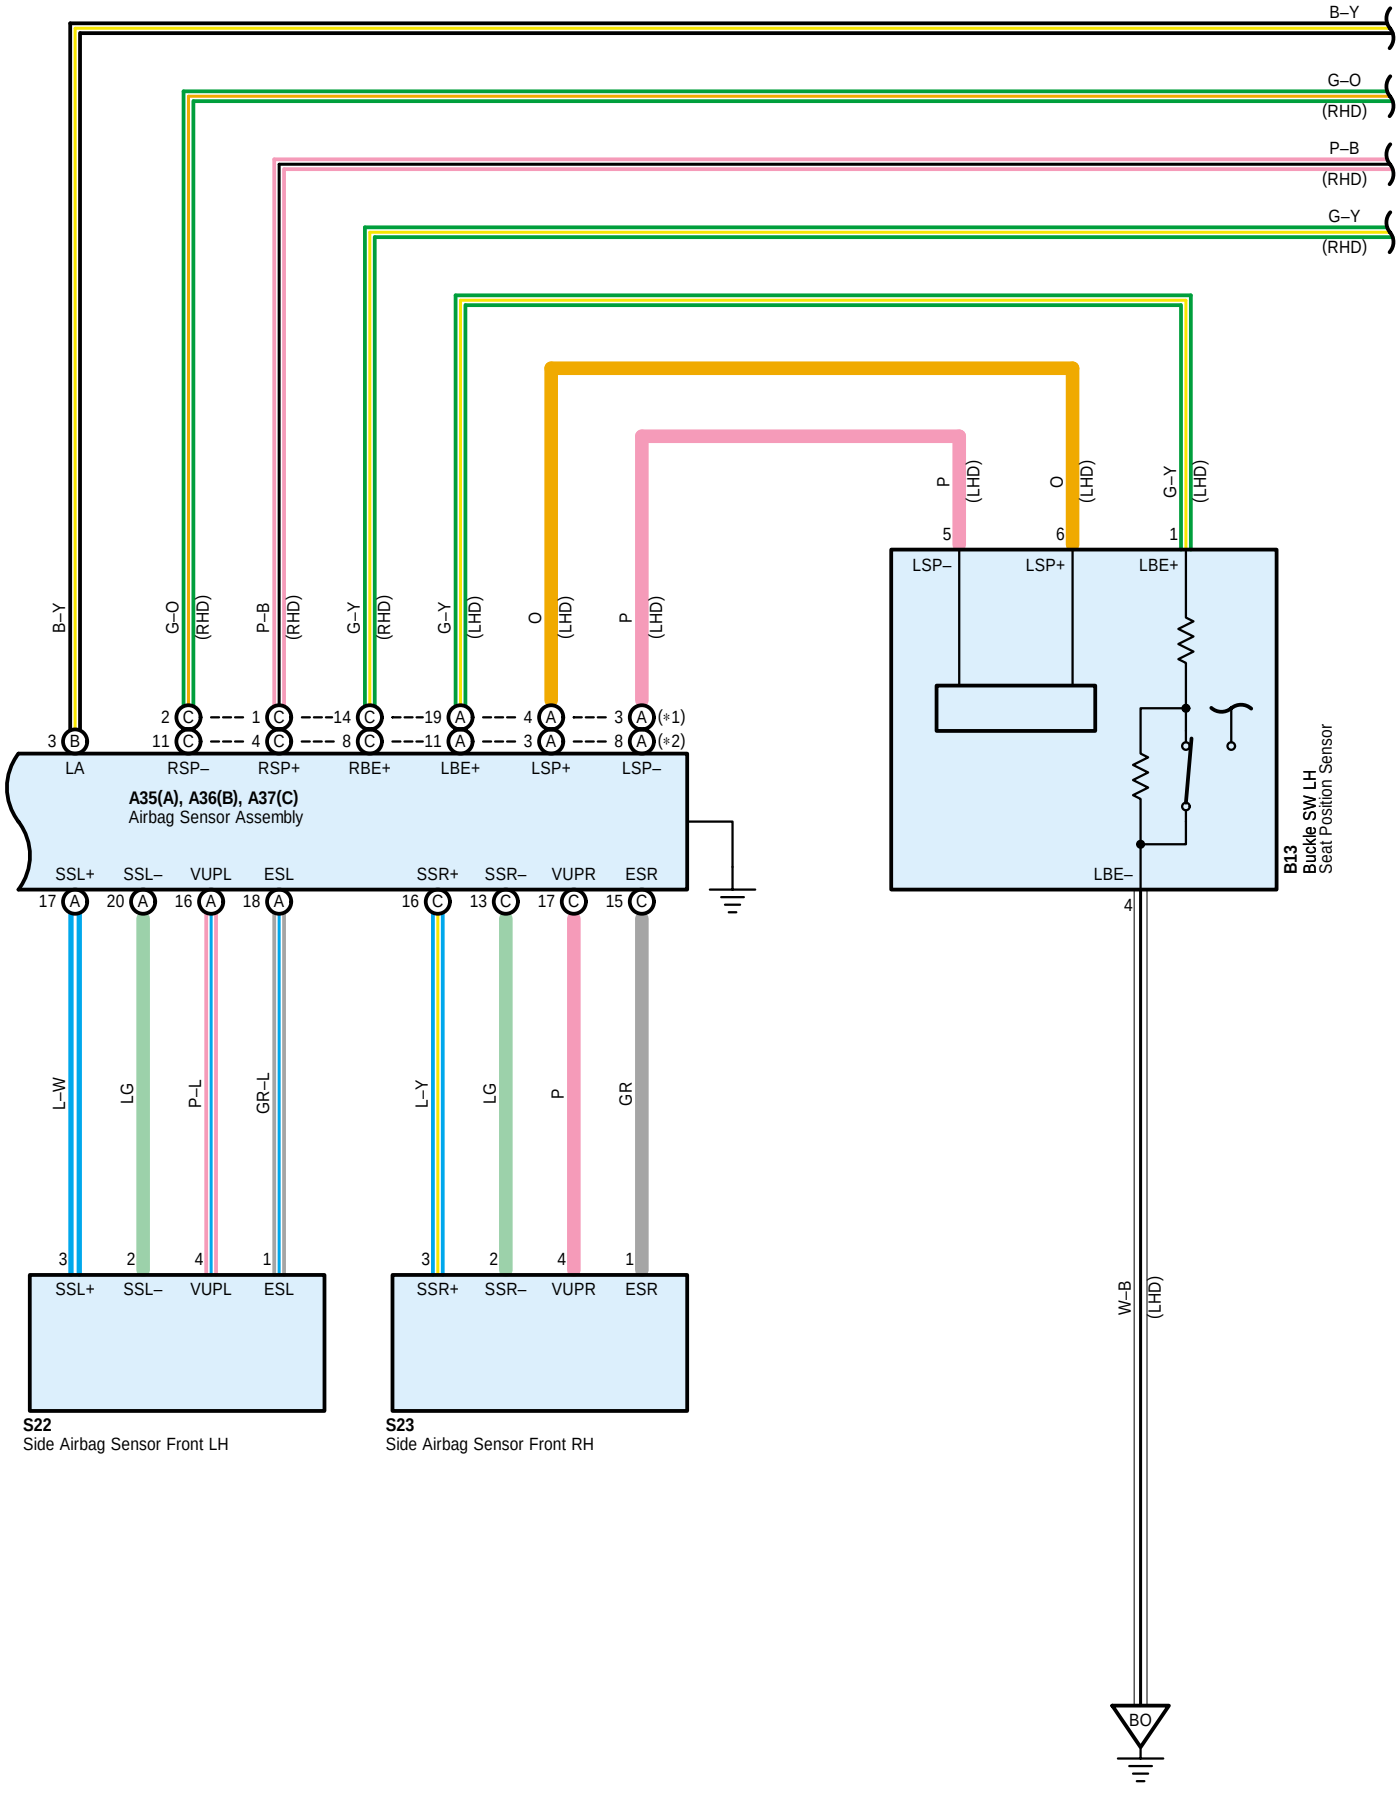
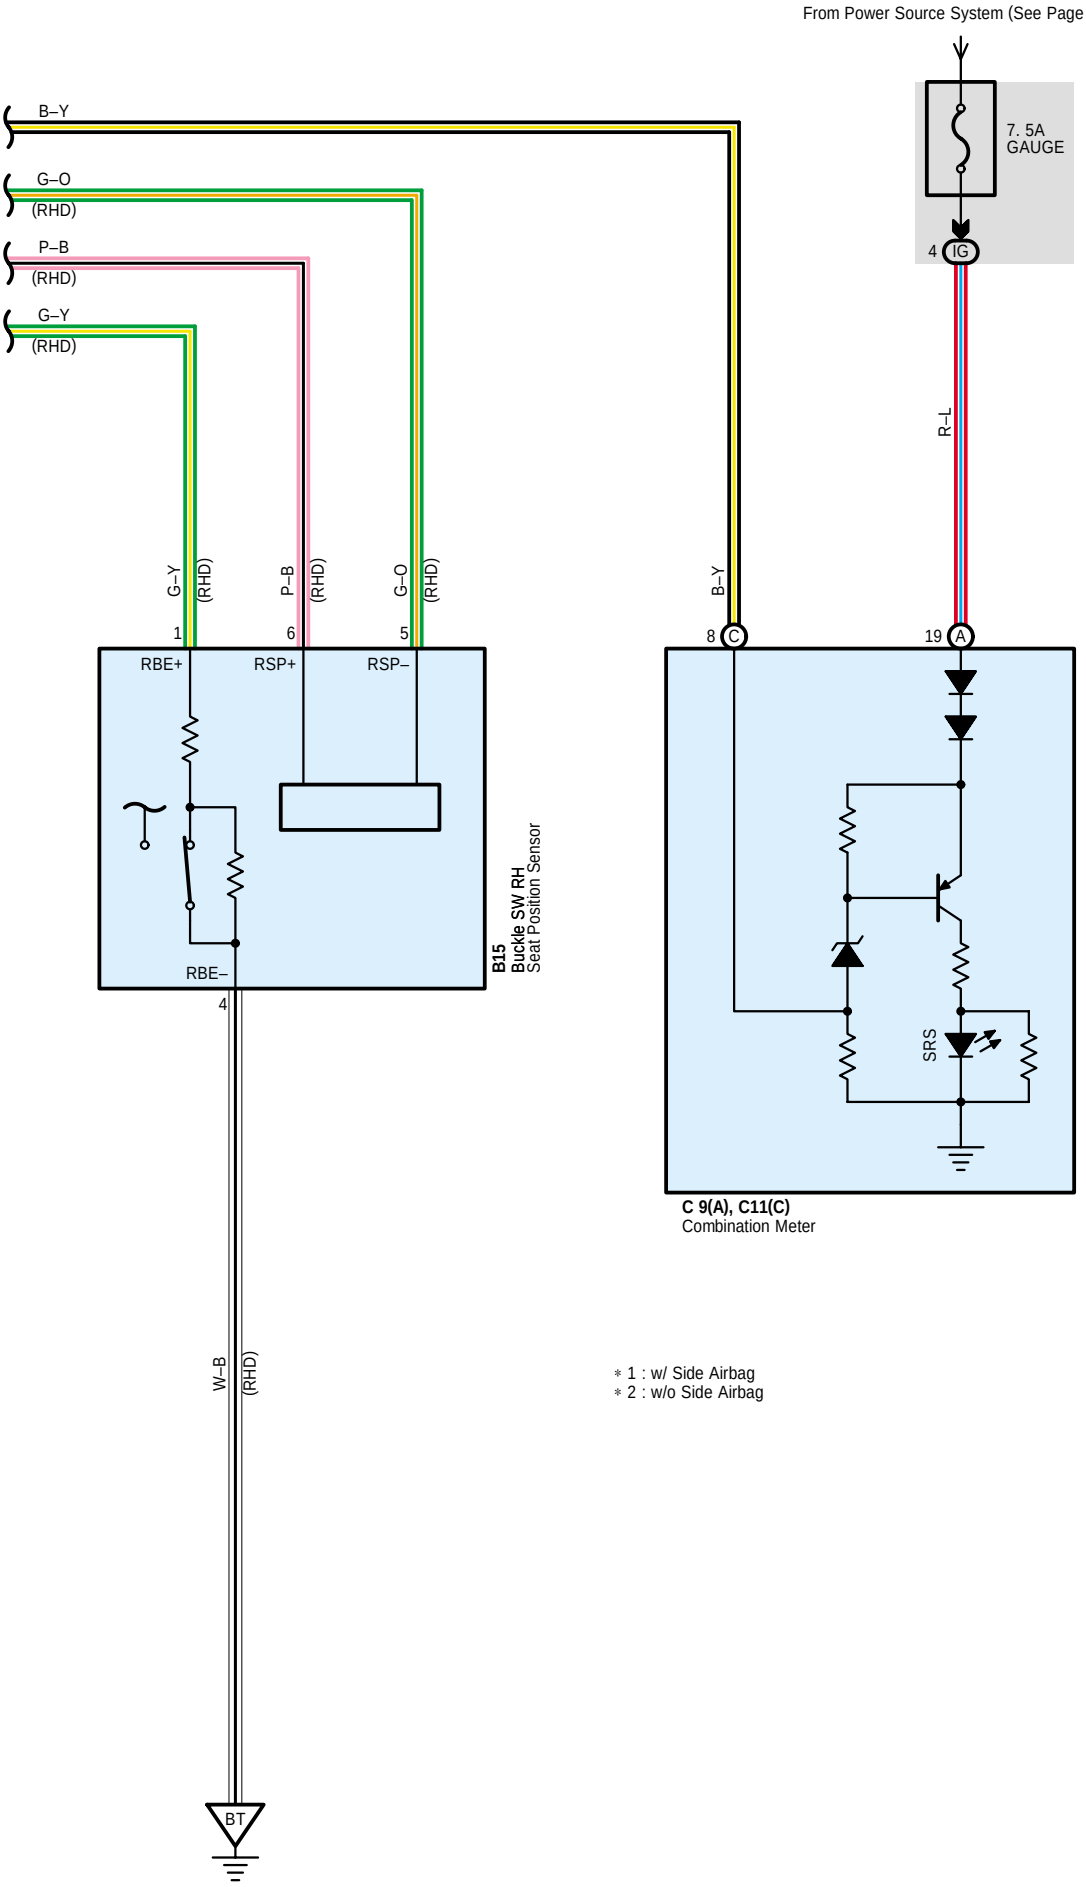

S24
Side Airbag Sensor Rear LH
CSL+ CSL– VUCL ESCL
3 2 4 1
L–Y LG–B R G
15 A 1 A 14 A 13 A
CSL+ CSL– VUCL ESCL
S25
Side Airbag Sensor Rear RH
CSR+ CSR– VUCR ESCR
3 2 4 1
L–W LG–B L–B GR–R
18 C 4 C 19 C 20 C
CSR+ CSR– VUCR ESCR
C21
Curtain Shield Airbag
Squib LH
ICL+ ICL–
1 2
Y–V Y–O
9 A 10 A
ICL+ ICL–
C22
Curtain Shield Airbag
Squib RH
ICR+ ICR–
1 2
Y–V Y–O
8 C 7 C
ICR+ ICR–
A35(A), A36(B), A37(C)
Airbag Sensor Assembly
E1 GSW2 D– D+ D2+ D2–
27 B 23 B 13 B 14 B 16 B 17 B
W–L (*3, *4)
9 2A
9 2B
W–L (*3, *4)
21 B (*3)
14 B (*4)
F/PS
E10(B)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
W–B
Y Y–B Y–V Y–O
2 1 4 3
D– D+ D2+ D2–
A39
Airbag Squib (Steering Wheel Pad)
P+ P– P2+ P2– E2
10 B 11 B 8 B 7 B 28 B
Y–R Y–G Y–GR Y–P
1 2 3 4
P+ P– P2+ P2–
A38
Airbag Squib
(Front Passenger Airbag Assembly)
W–B
BR
IM
IK

∗ 1 : w/ Side Airbag
∗ 2 : w/o Side Airbag
∗ 3 : 3RZ–FE Unleaded Gasoline
∗ 4 : 1GR–FE

From Power Source System (See Page 128)




B–Y
G–O (RHD)
P–B (RHD)
G–Y (RHD)
G–Y (LHD)
O (LHD)
P (LHD)
P (LHD)
O (LHD)
G–Y (LHD)
LSP–
LSP+
LBE+
LBE–
B13
Buckle SW LH
Seat Position Sensor
A35(A), A36(B), A37(C)
Airbag Sensor Assembly
LA
RSP–
RSP+
RBE+
LBE+
LSP+
LSP–
(*1)
(*2)
SSL+
SSL–
VUPL
ESL
SSR+
SSR–
VUPR
ESR
L–W
LG
P–L
GR–L
L–Y
LG
P
GR
W–B (LHD)
BO
S22
Side Airbag Sensor Front LH
S23
Side Airbag Sensor Front RH


From Power Source System (See Page 128)
B–Y
G–O
(RHD)
P–B
(RHD)
G–Y
(RHD)
7. 5A
GAUGE
4 IG
R–L
G–Y (RHD)
P–B (RHD)
G–O (RHD)
B–Y
1
6
5
8 C
19 A
RBE+
RSP+
RSP–
RBE–
4
B15
Buckle SW RH
Seat Position Sensor
SRS
C 9(A), C11(C)
Combination Meter
W–B (RHD)
BT
* 1 : w/ Side Airbag
* 2 : w/o Side Airbag