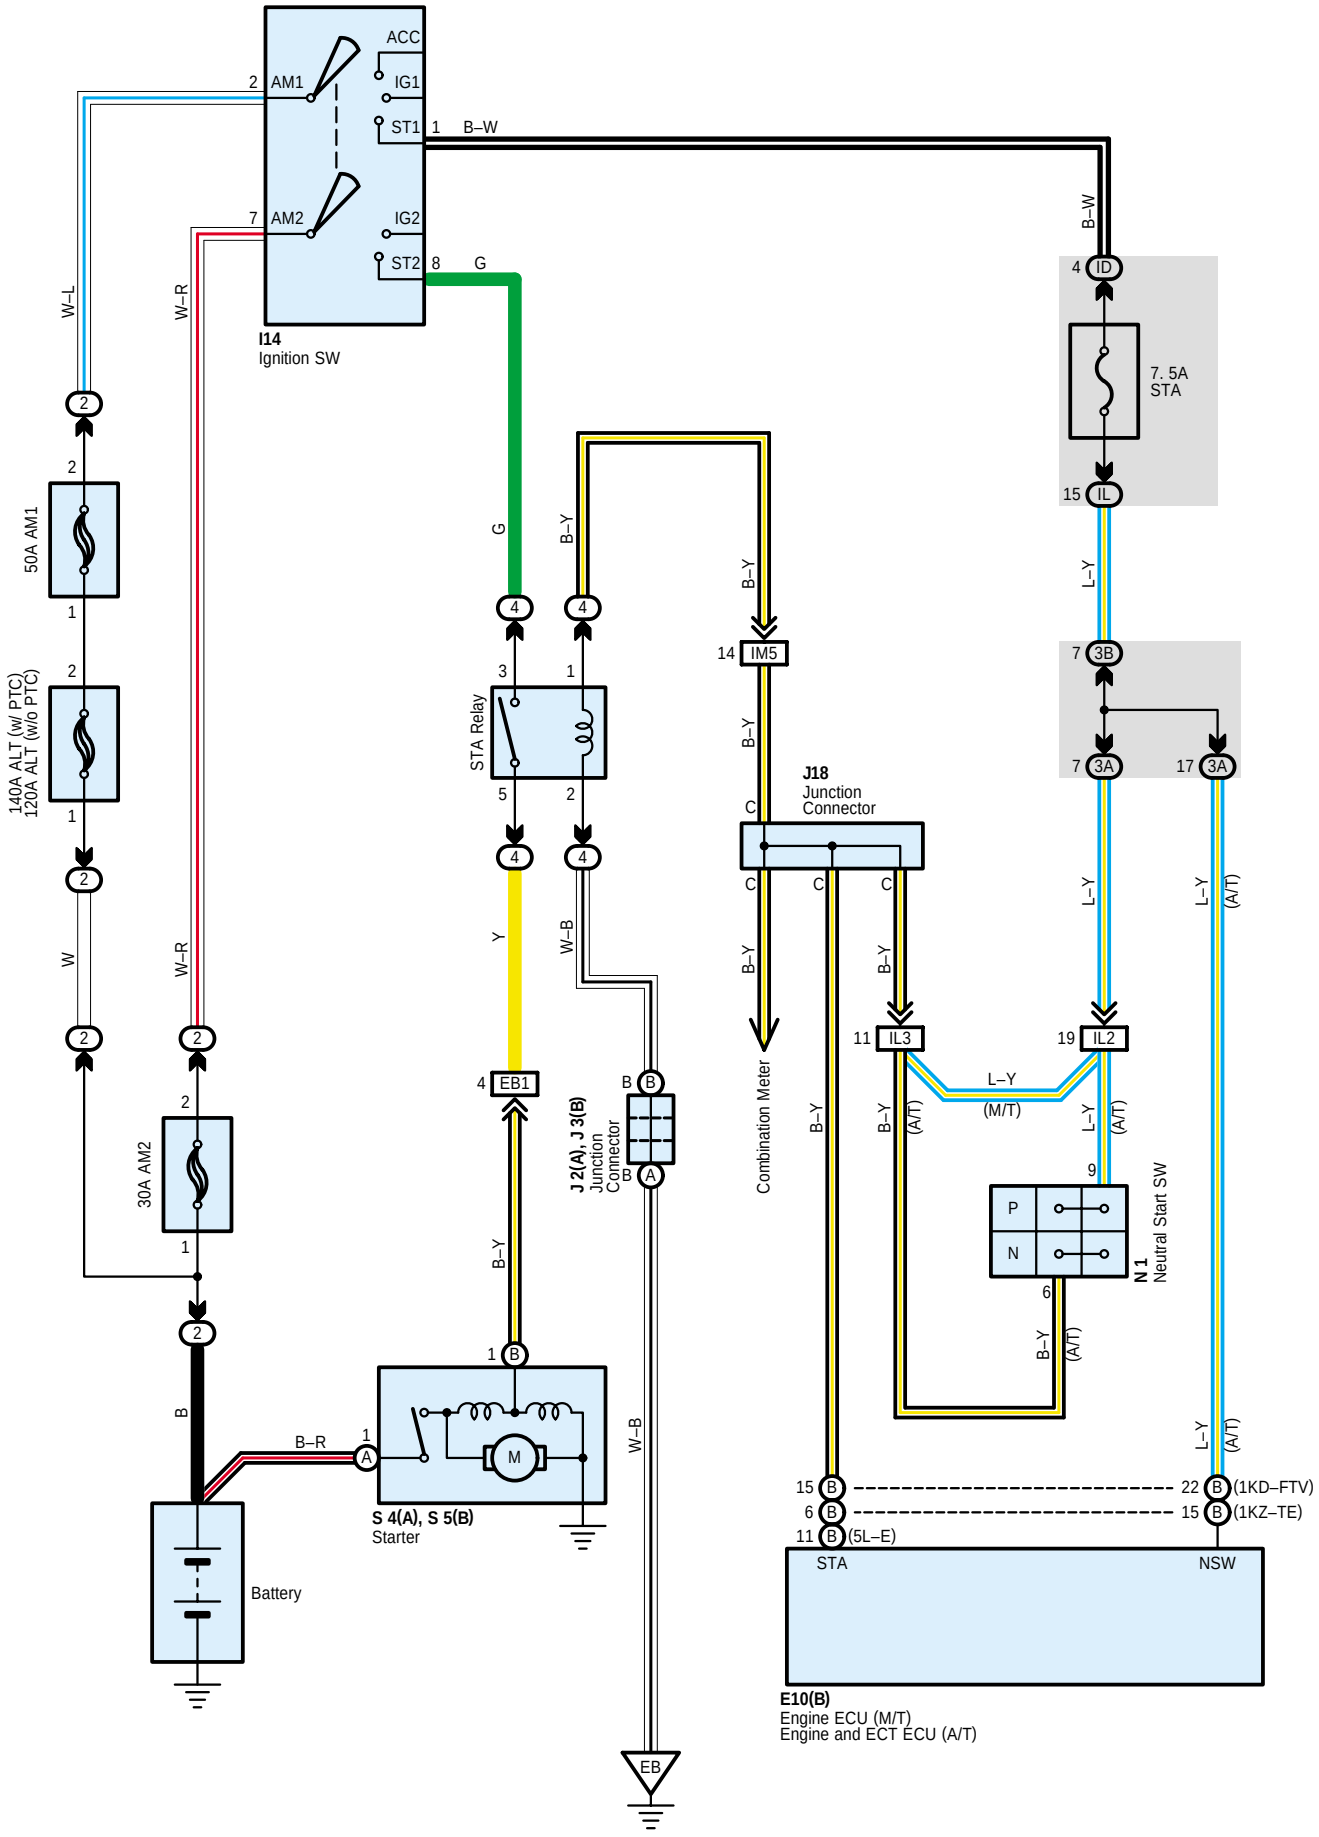

ACC
IG1
ST1
IG2
ST2
AM1
AM2
I14
Ignition SW
B–W
W–L
W–R
G
B–Y
L–Y
W
Y
W–B
B–R
B
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)
30A AM2
7. 5A
STA
STA Relay
IM5
J18
Junction
Connector
Combination Meter
IL3
IL2
(M/T)
(A/T)
P
N
N 1
Neutral Start SW
EB1
J 2(A), J 3(B)
Junction
Connector
S 4(A), S 5(B)
Starter
M
Battery
EB
(1KD–FTV)
(1KZ–TE)
(5L–E)
STA
NSW
E10(B)
Engine ECU (M/T)
Engine and ECT ECU (A/T)