


Wireless Door Lock Control (LHD)


From Power Source System (See Page 128)

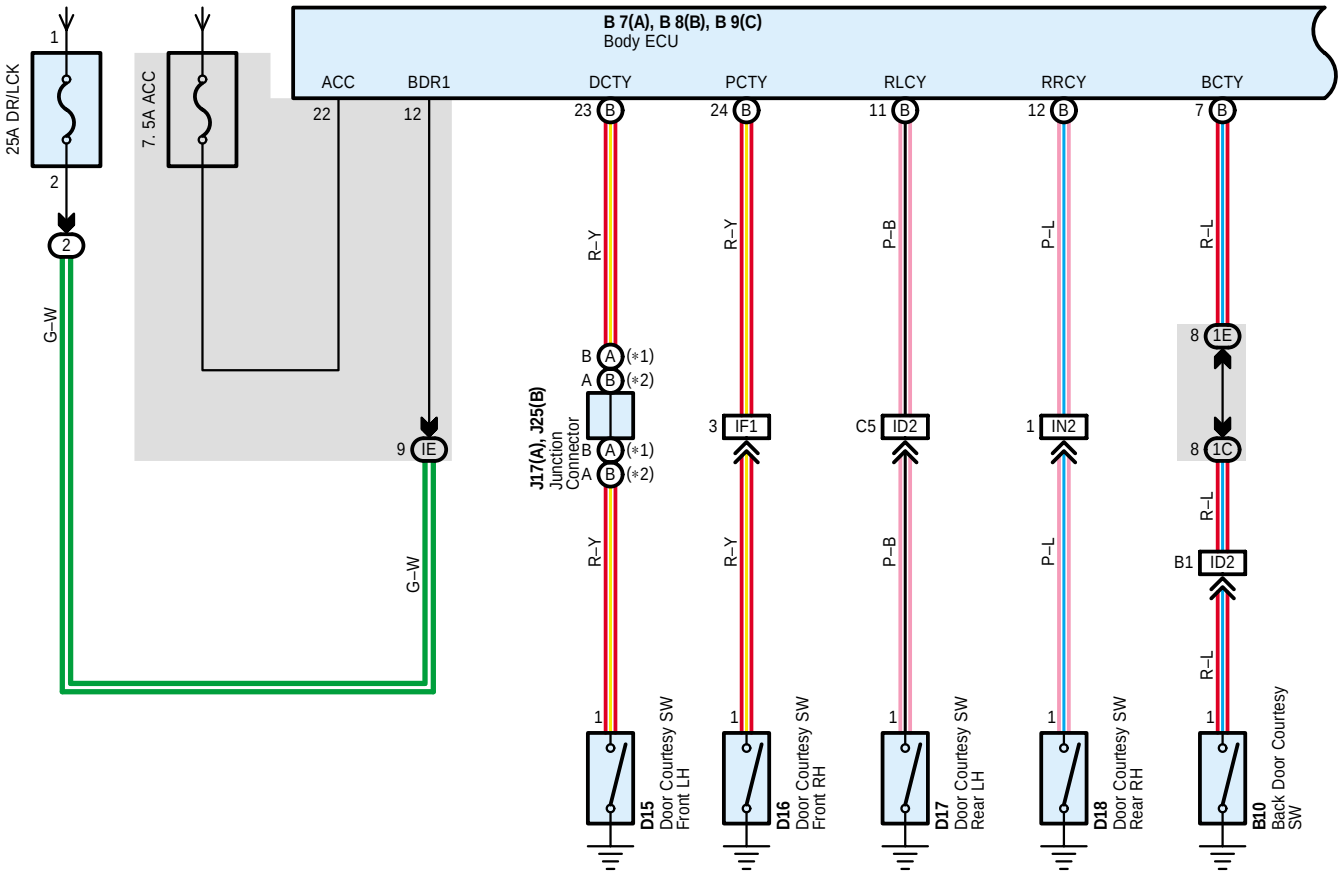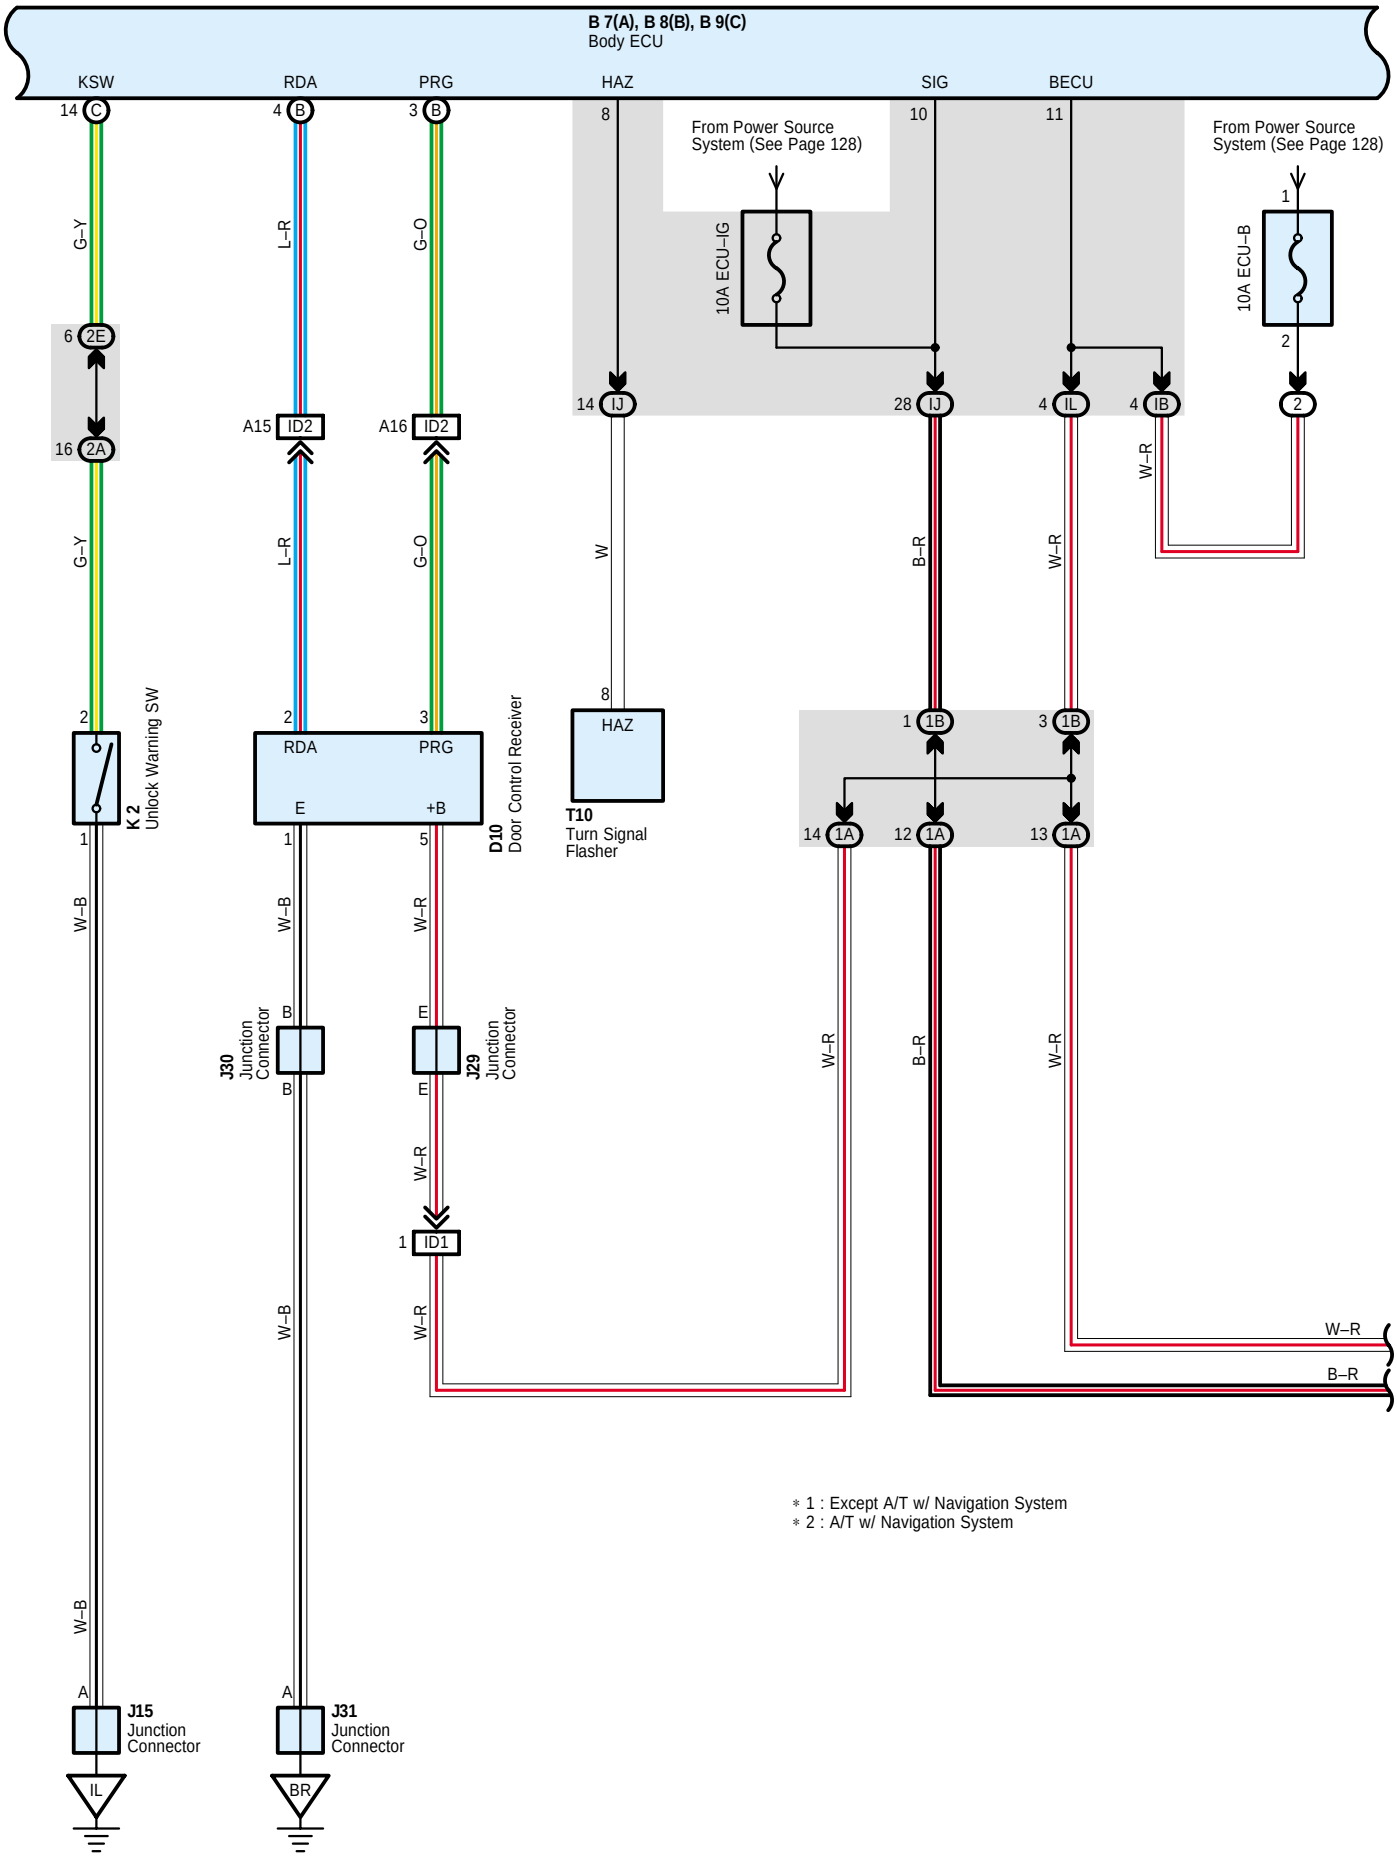



B 7(A), B 8(B), B 9(C)
Body ECU
KSW
RDA
PRG
HAZ
SIG
BECU
From Power Source System (See Page 128)
From Power Source System (See Page 128)
10A ECU-IG
10A ECU-B
K 2
Unlock Warning SW
D10
Door Control Receiver
T10
Turn Signal Flasher
J30
Junction Connector
J29
Junction Connector
J15
Junction Connector
J31
Junction Connector
HAZ
RDA
PRG
W–B
G–Y
L–R
G–O
W
B–R
W–R
B–R
＊1 : Except A/T w/ Navigation System
＊2 : A/T w/ Navigation System

Wireless Door Lock Control (LHD)

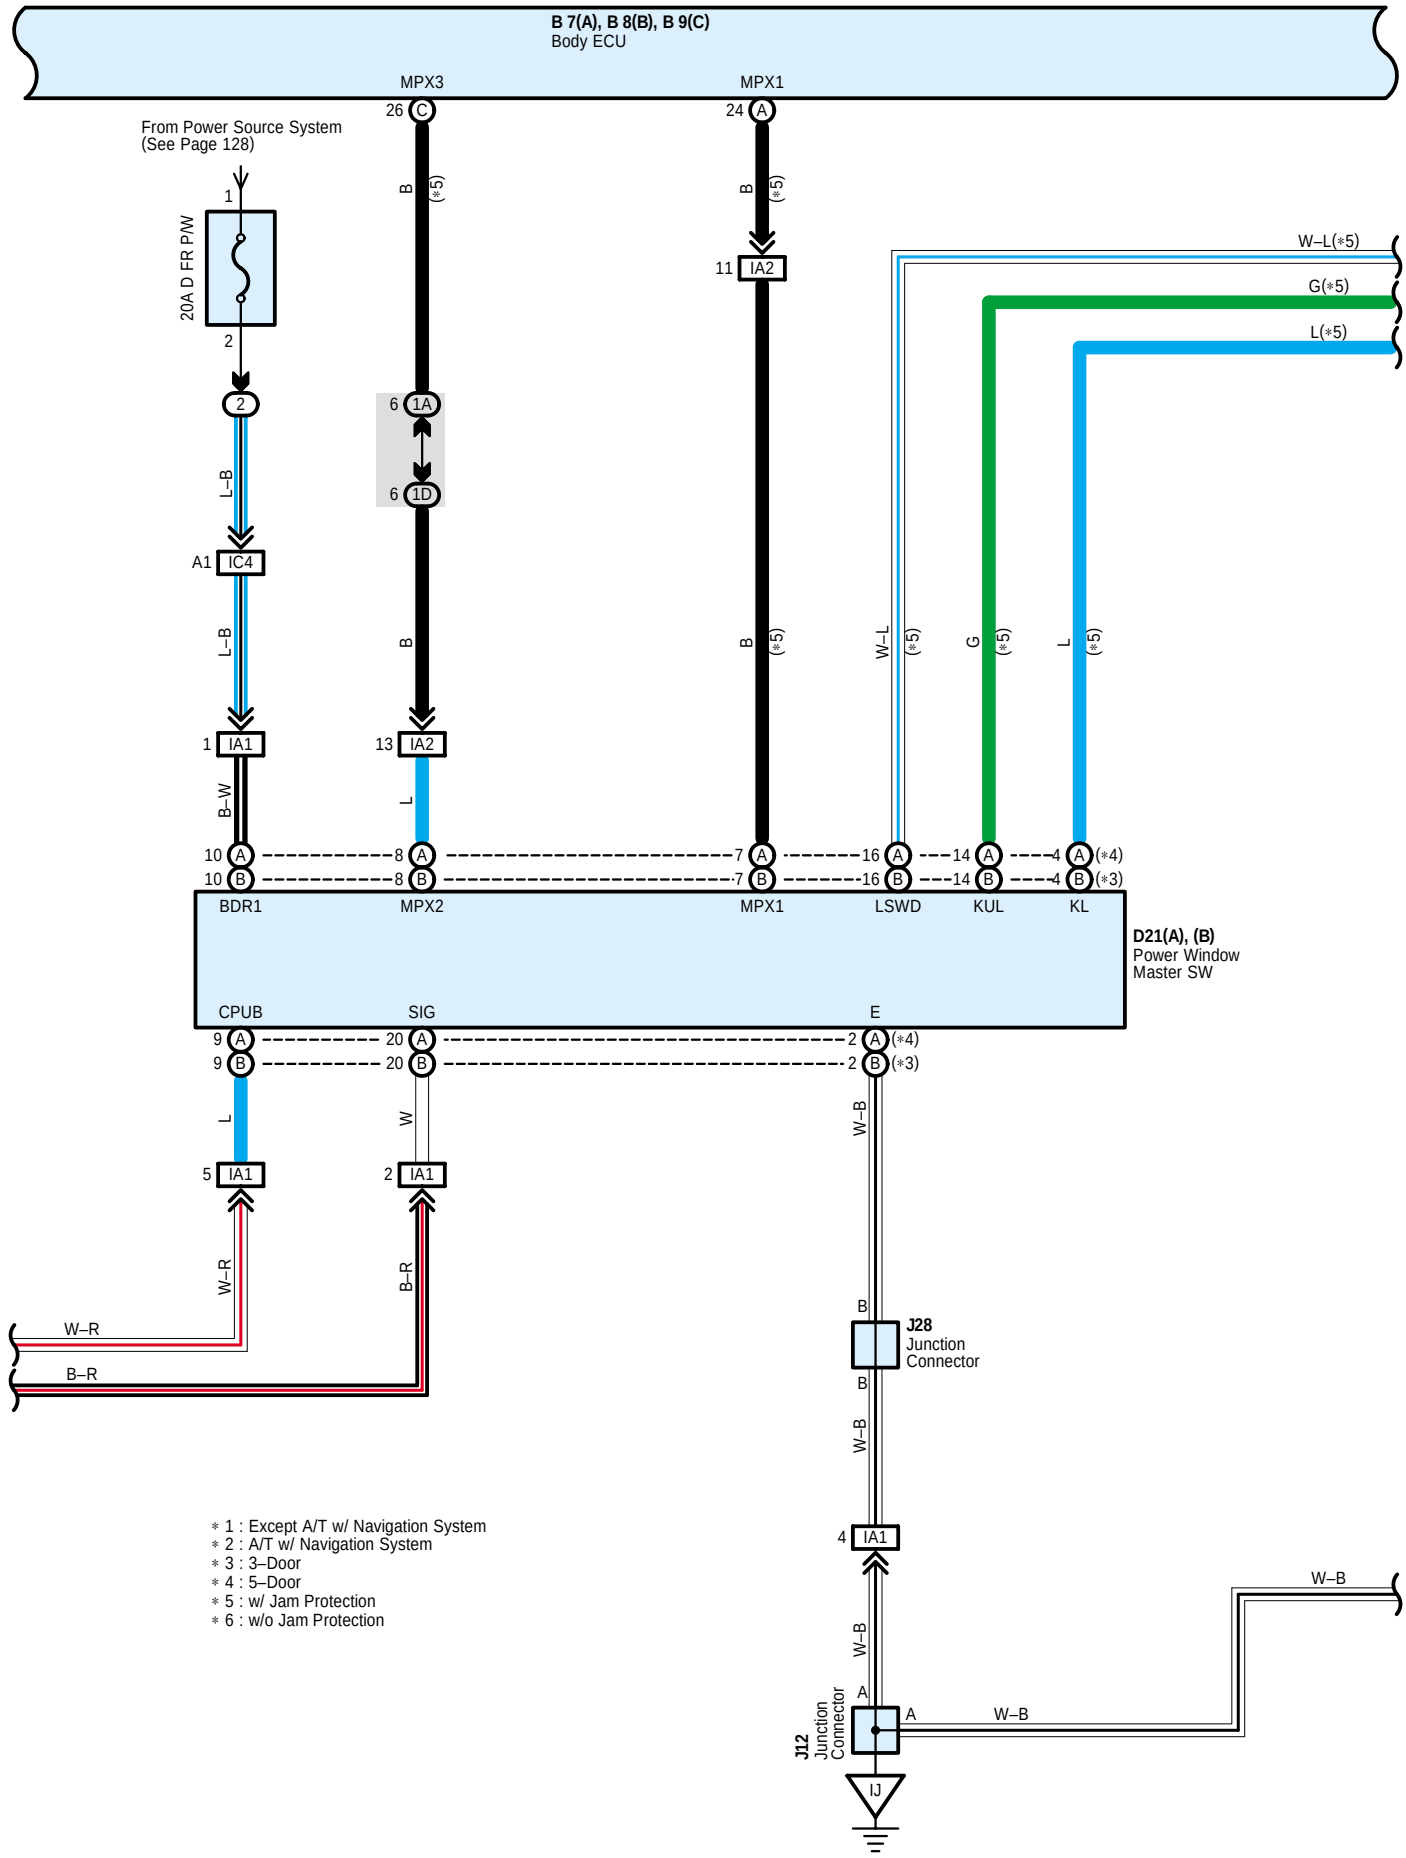

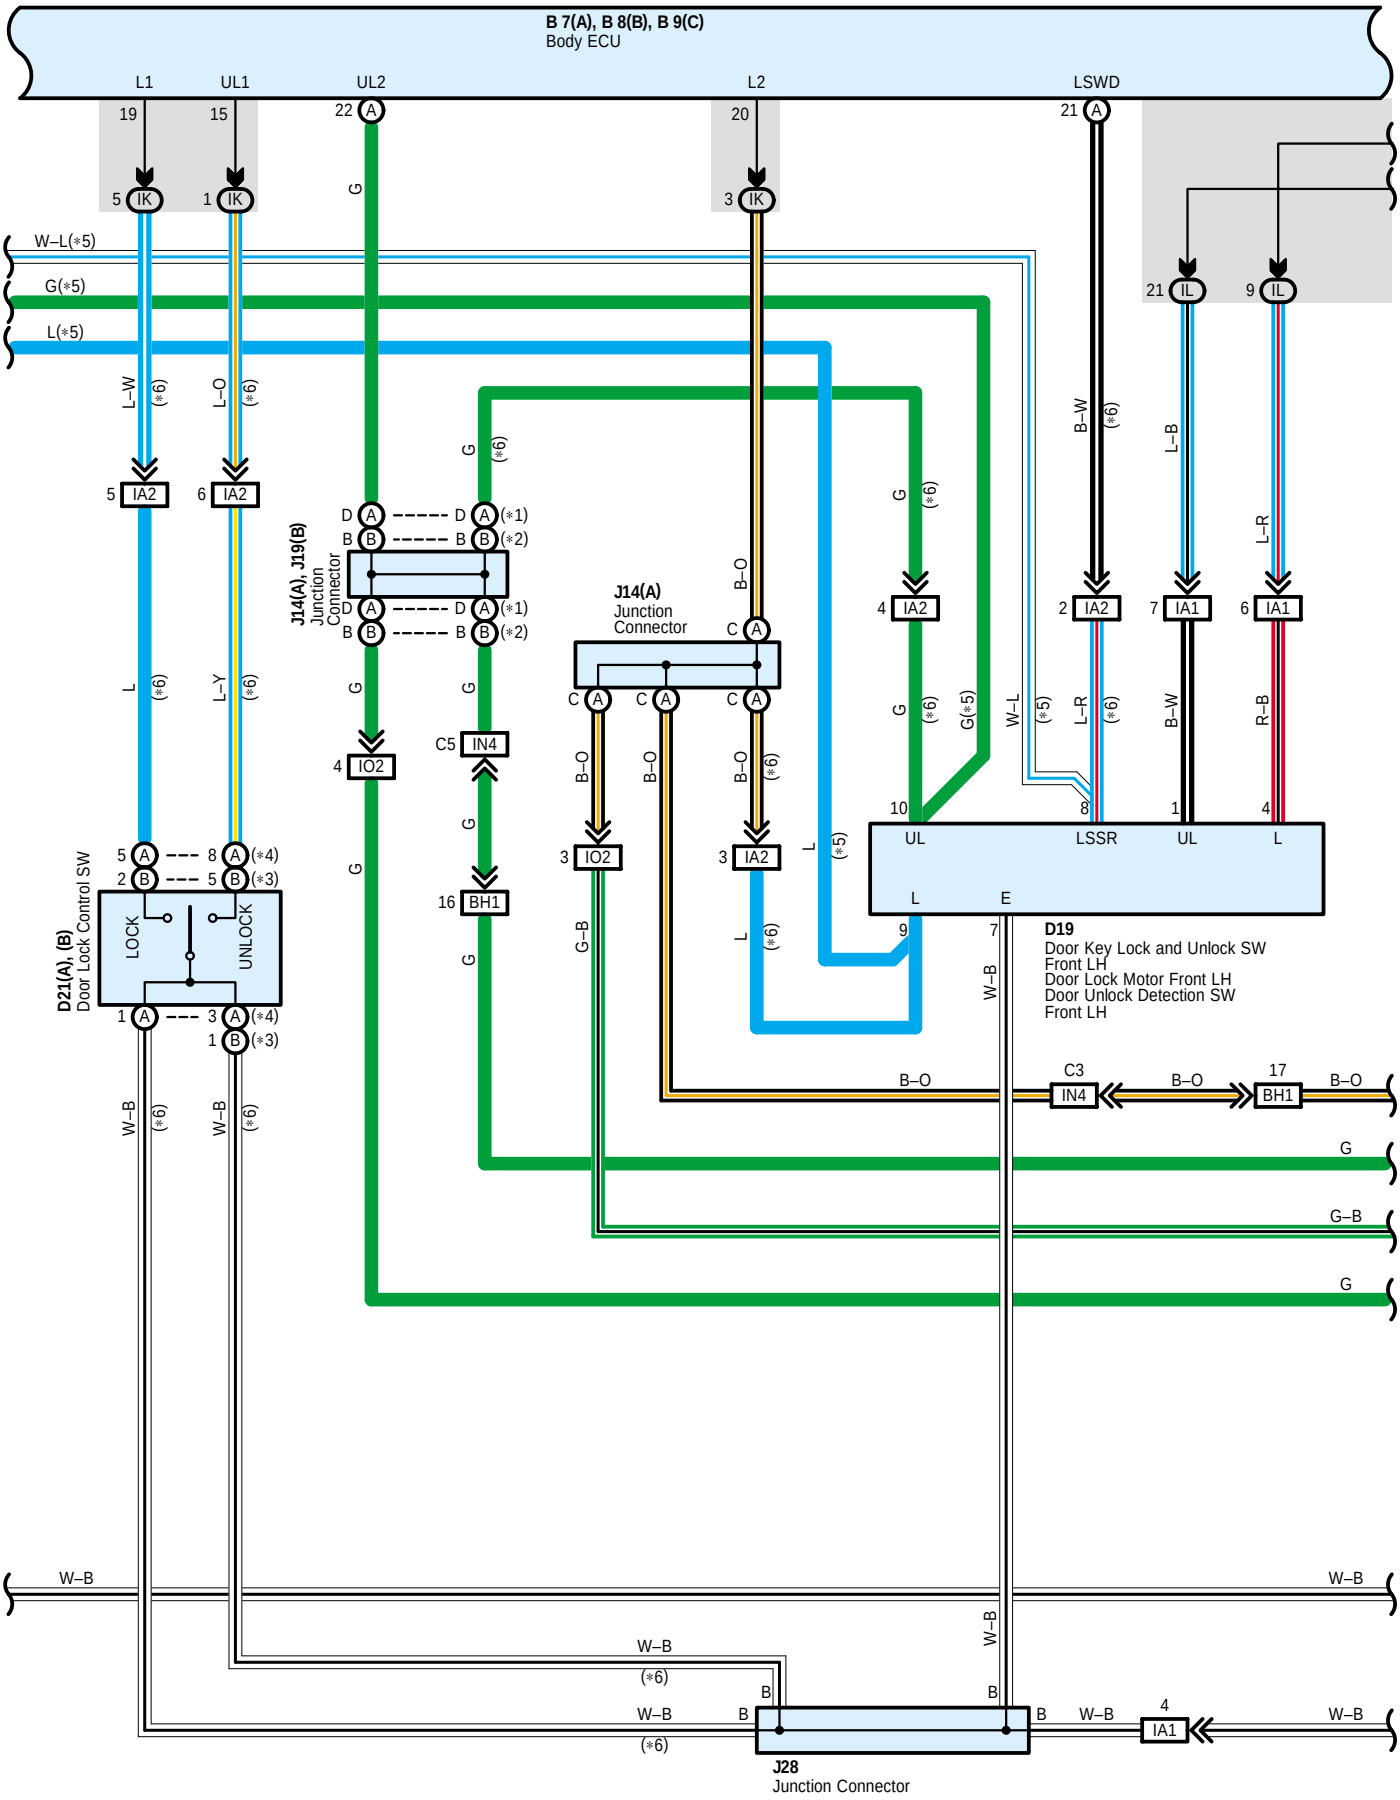
B 7(A), B 8(B), B 9(C)
Body ECU
L1
UL1
UL2
L2
LSWD
W–L(*5)
G(*5)
L(*5)
J14(A), J19(B)
Junction Connector
J14(A)
Junction Connector
D21(A), (B)
Door Lock Control SW
LOCK
UNLOCK
D19
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
J28
Junction Connector

Wireless Door Lock Control (LHD)

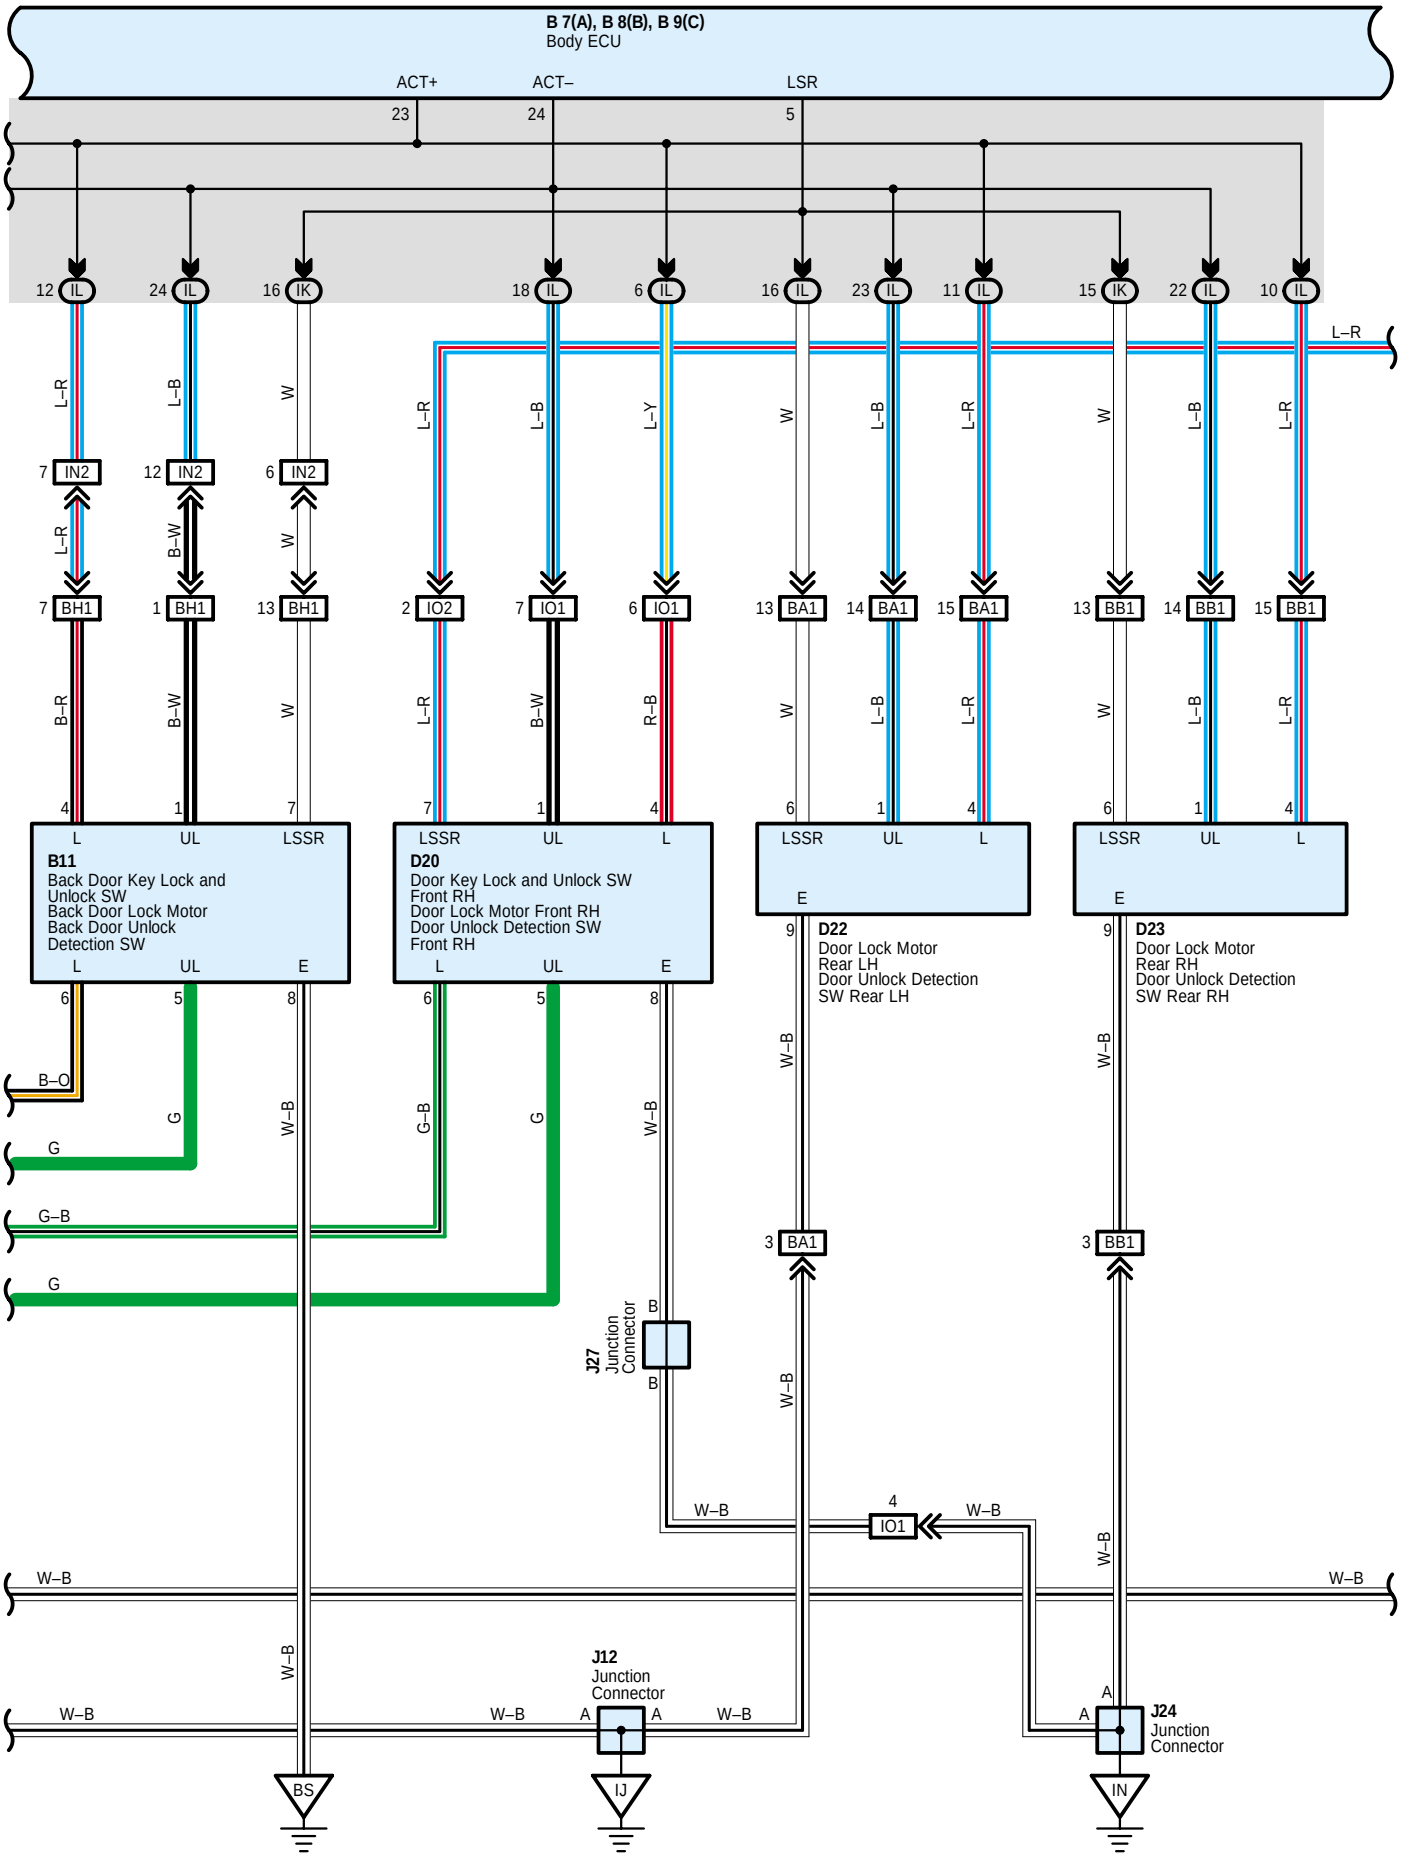

From Power Source System (See Page 128)

