


Wireless Door Lock Control (RHD)


From Power Source System (See Page 128)

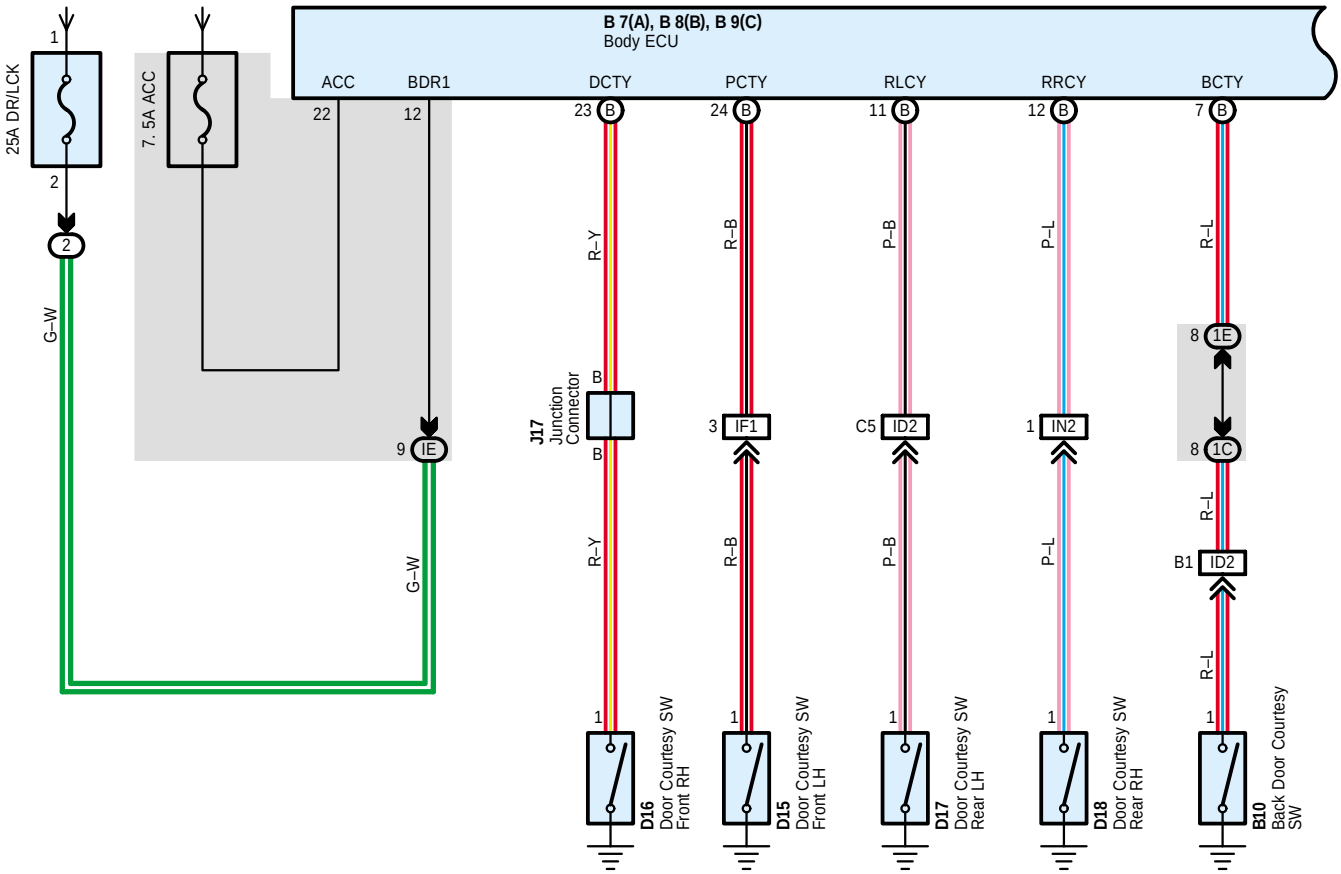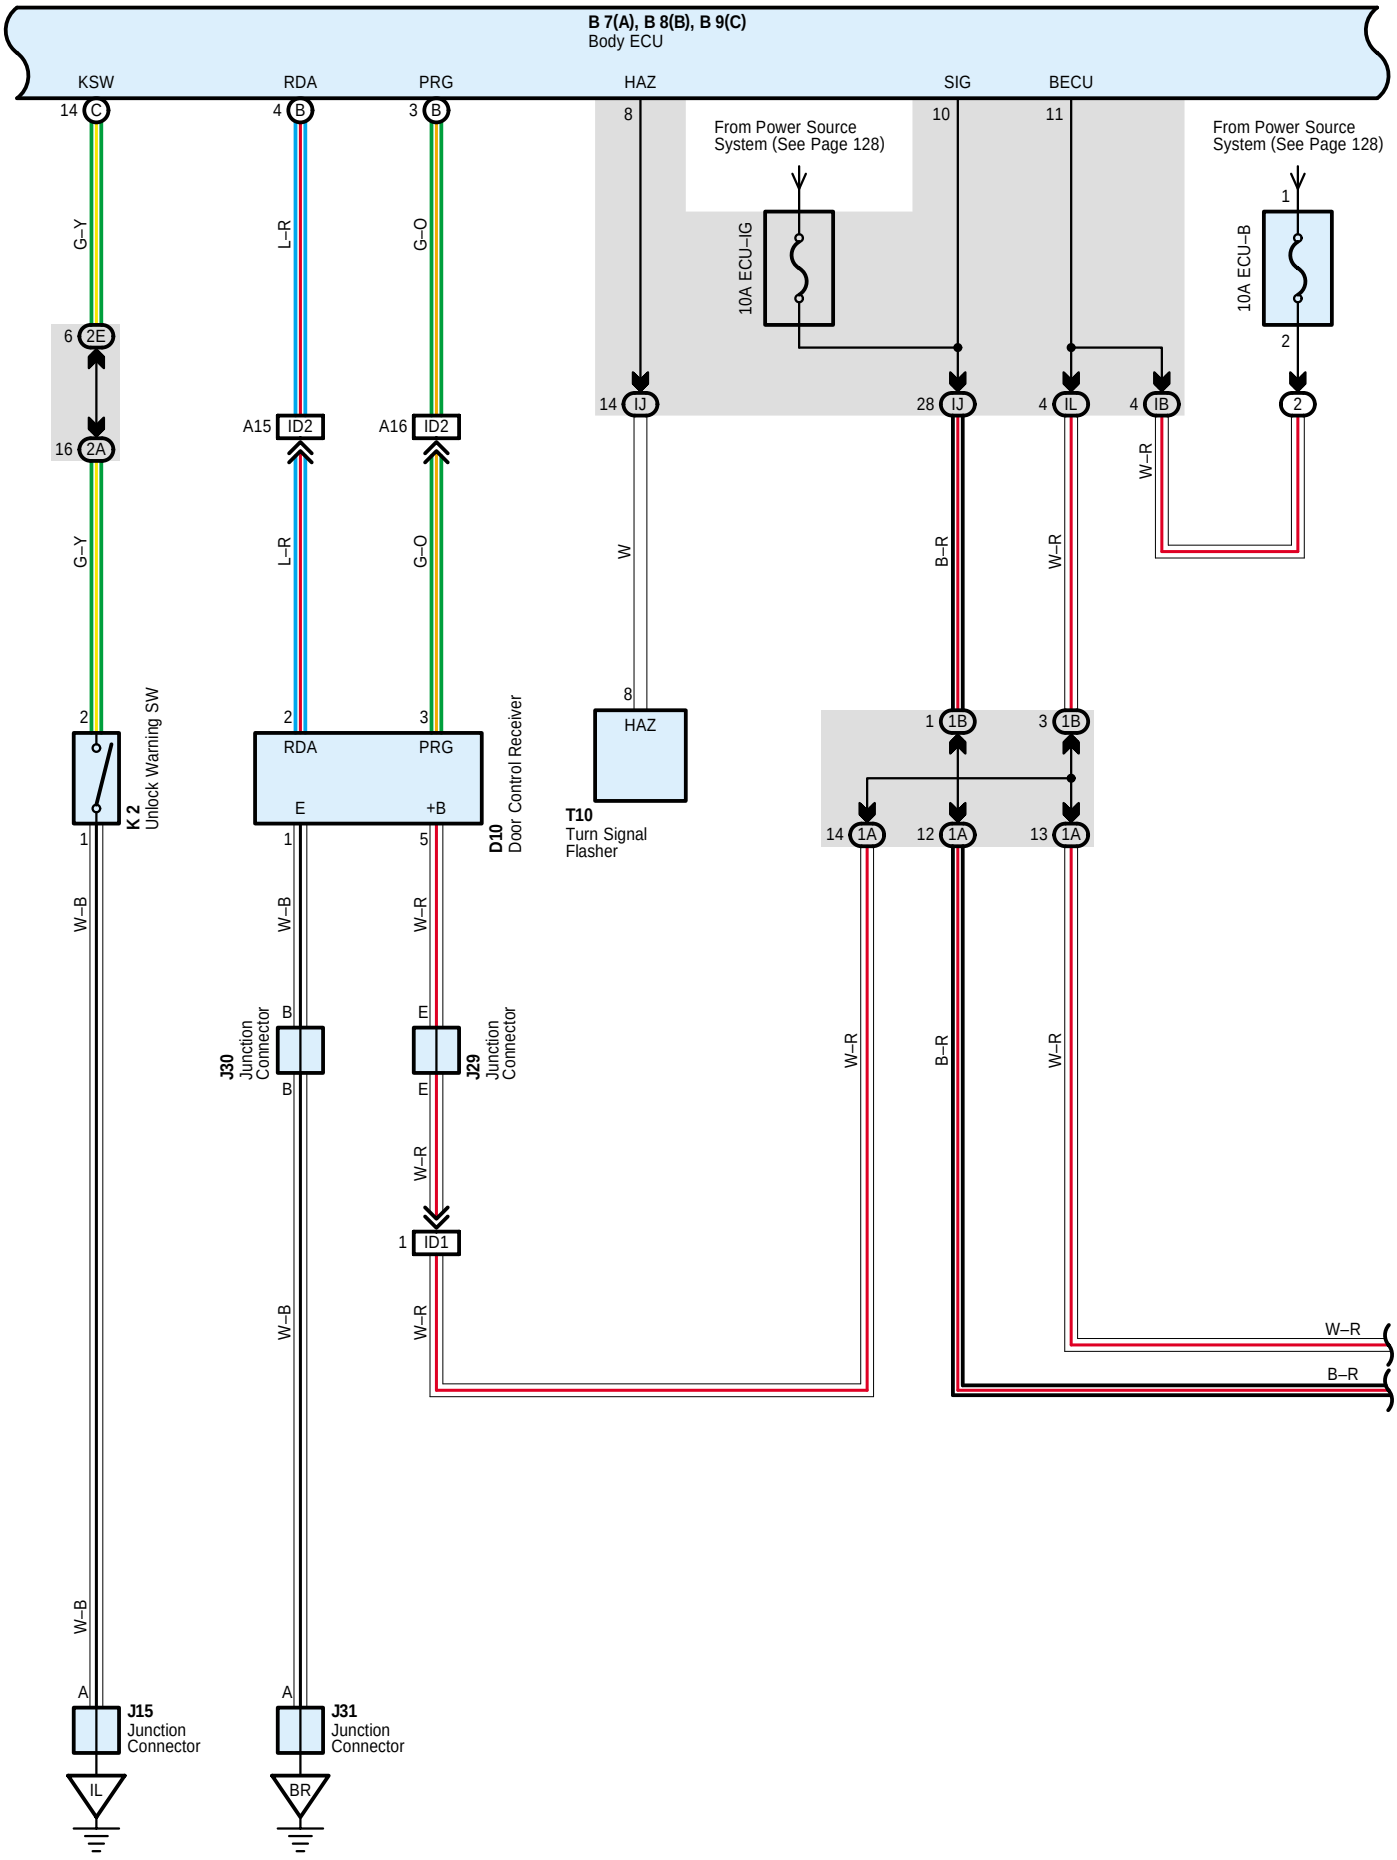



B 7(A), B 8(B), B 9(C)
Body ECU
KSW
RDA
PRG
HAZ
SIG
BECU
From Power Source System (See Page 128)
From Power Source System (See Page 128)
10A ECU–IG
10A ECU–B
K 2
Unlock Warning SW
D10
Door Control Receiver
T10
Turn Signal Flasher
J30
Junction Connector
J29
Junction Connector
J15
Junction Connector
J31
Junction Connector
G–Y
L–R
G–O
W
B–R
W–R
W–B

Wireless Door Lock Control (RHD)

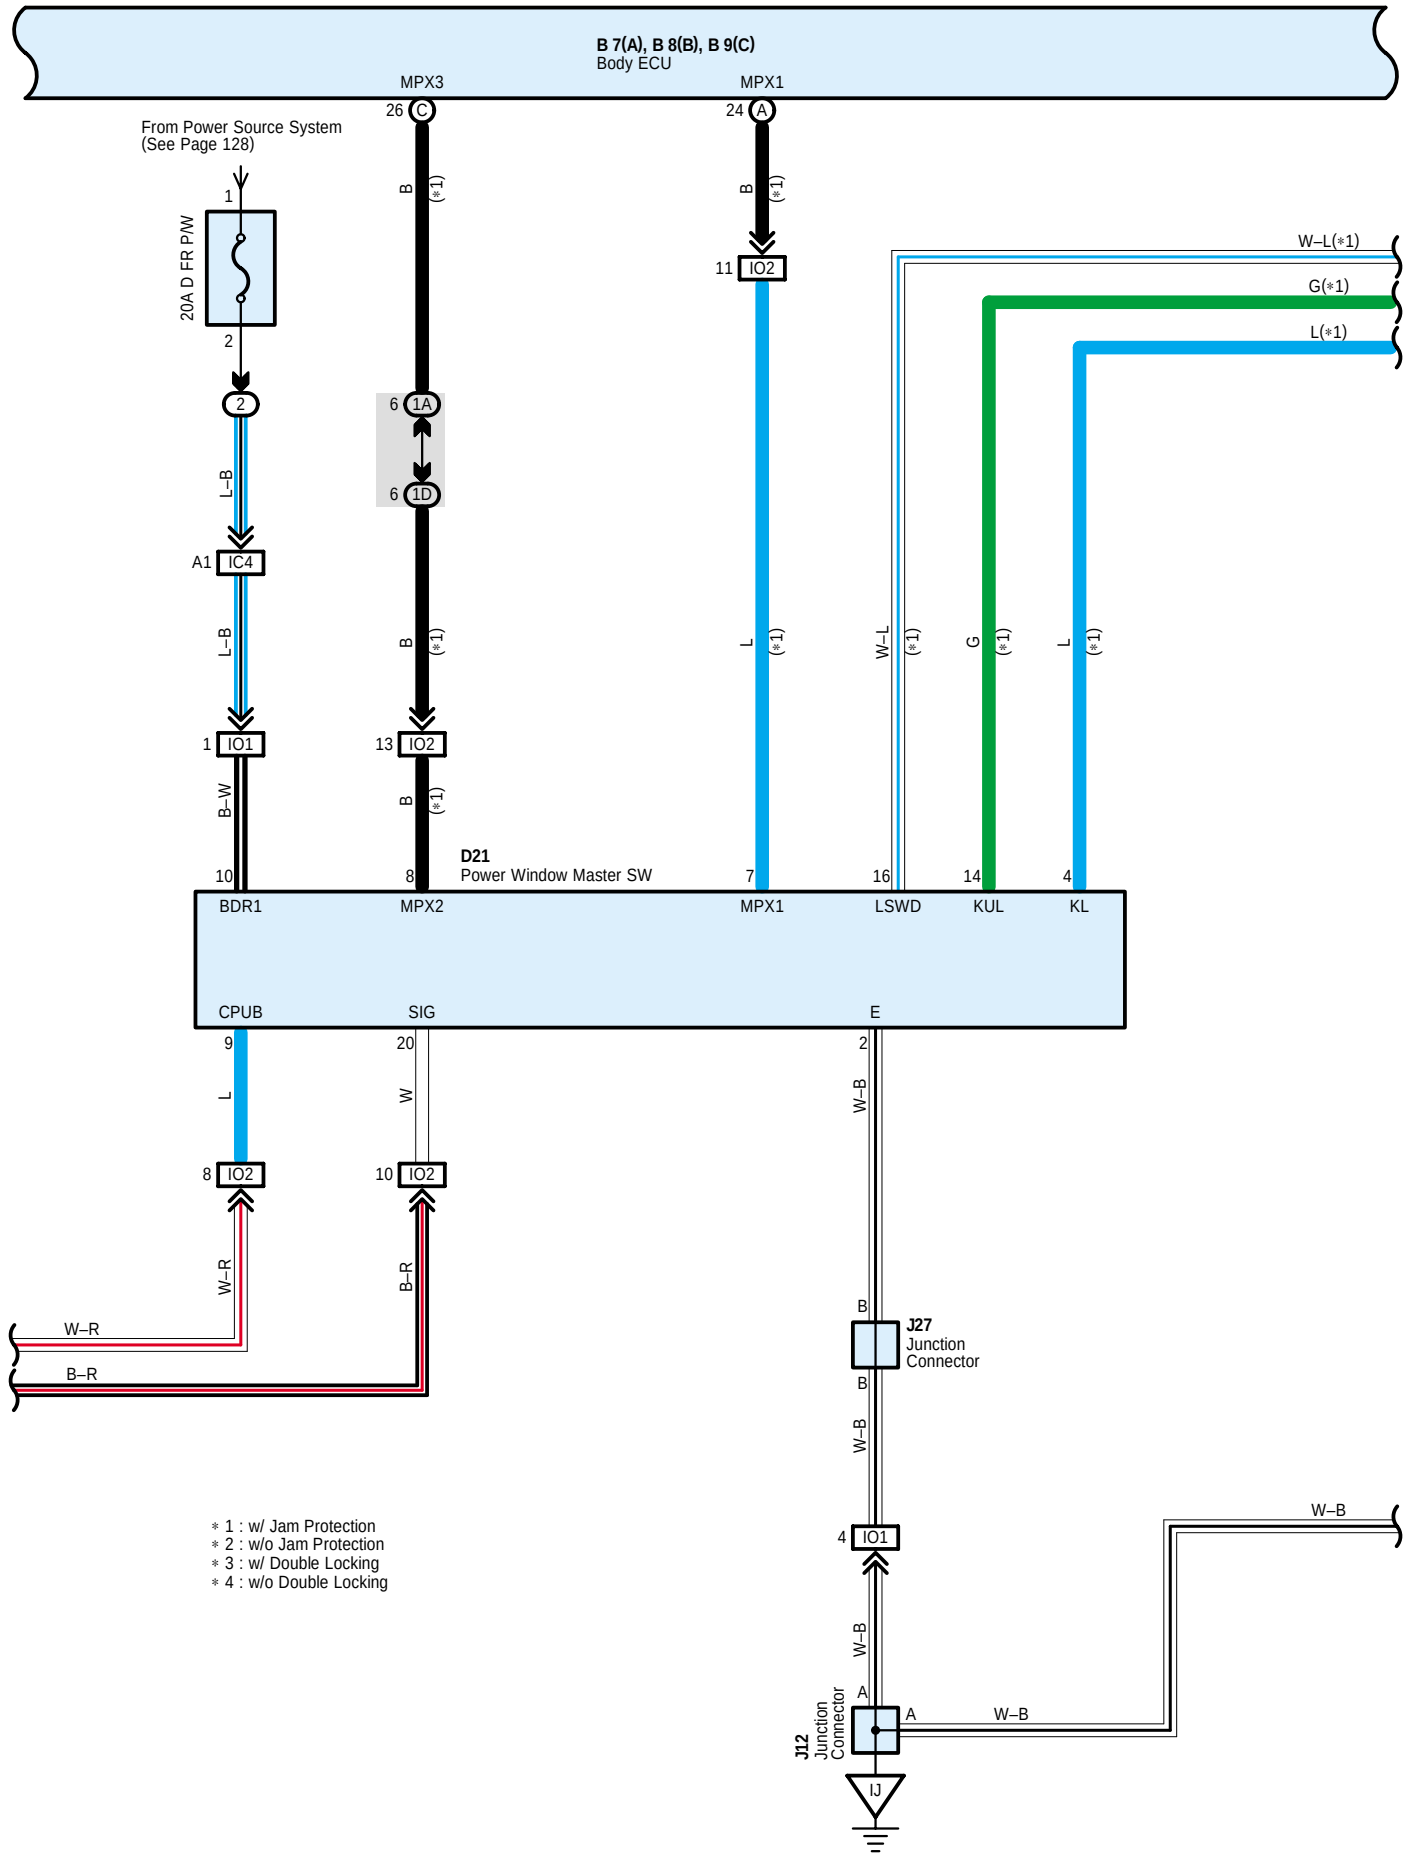

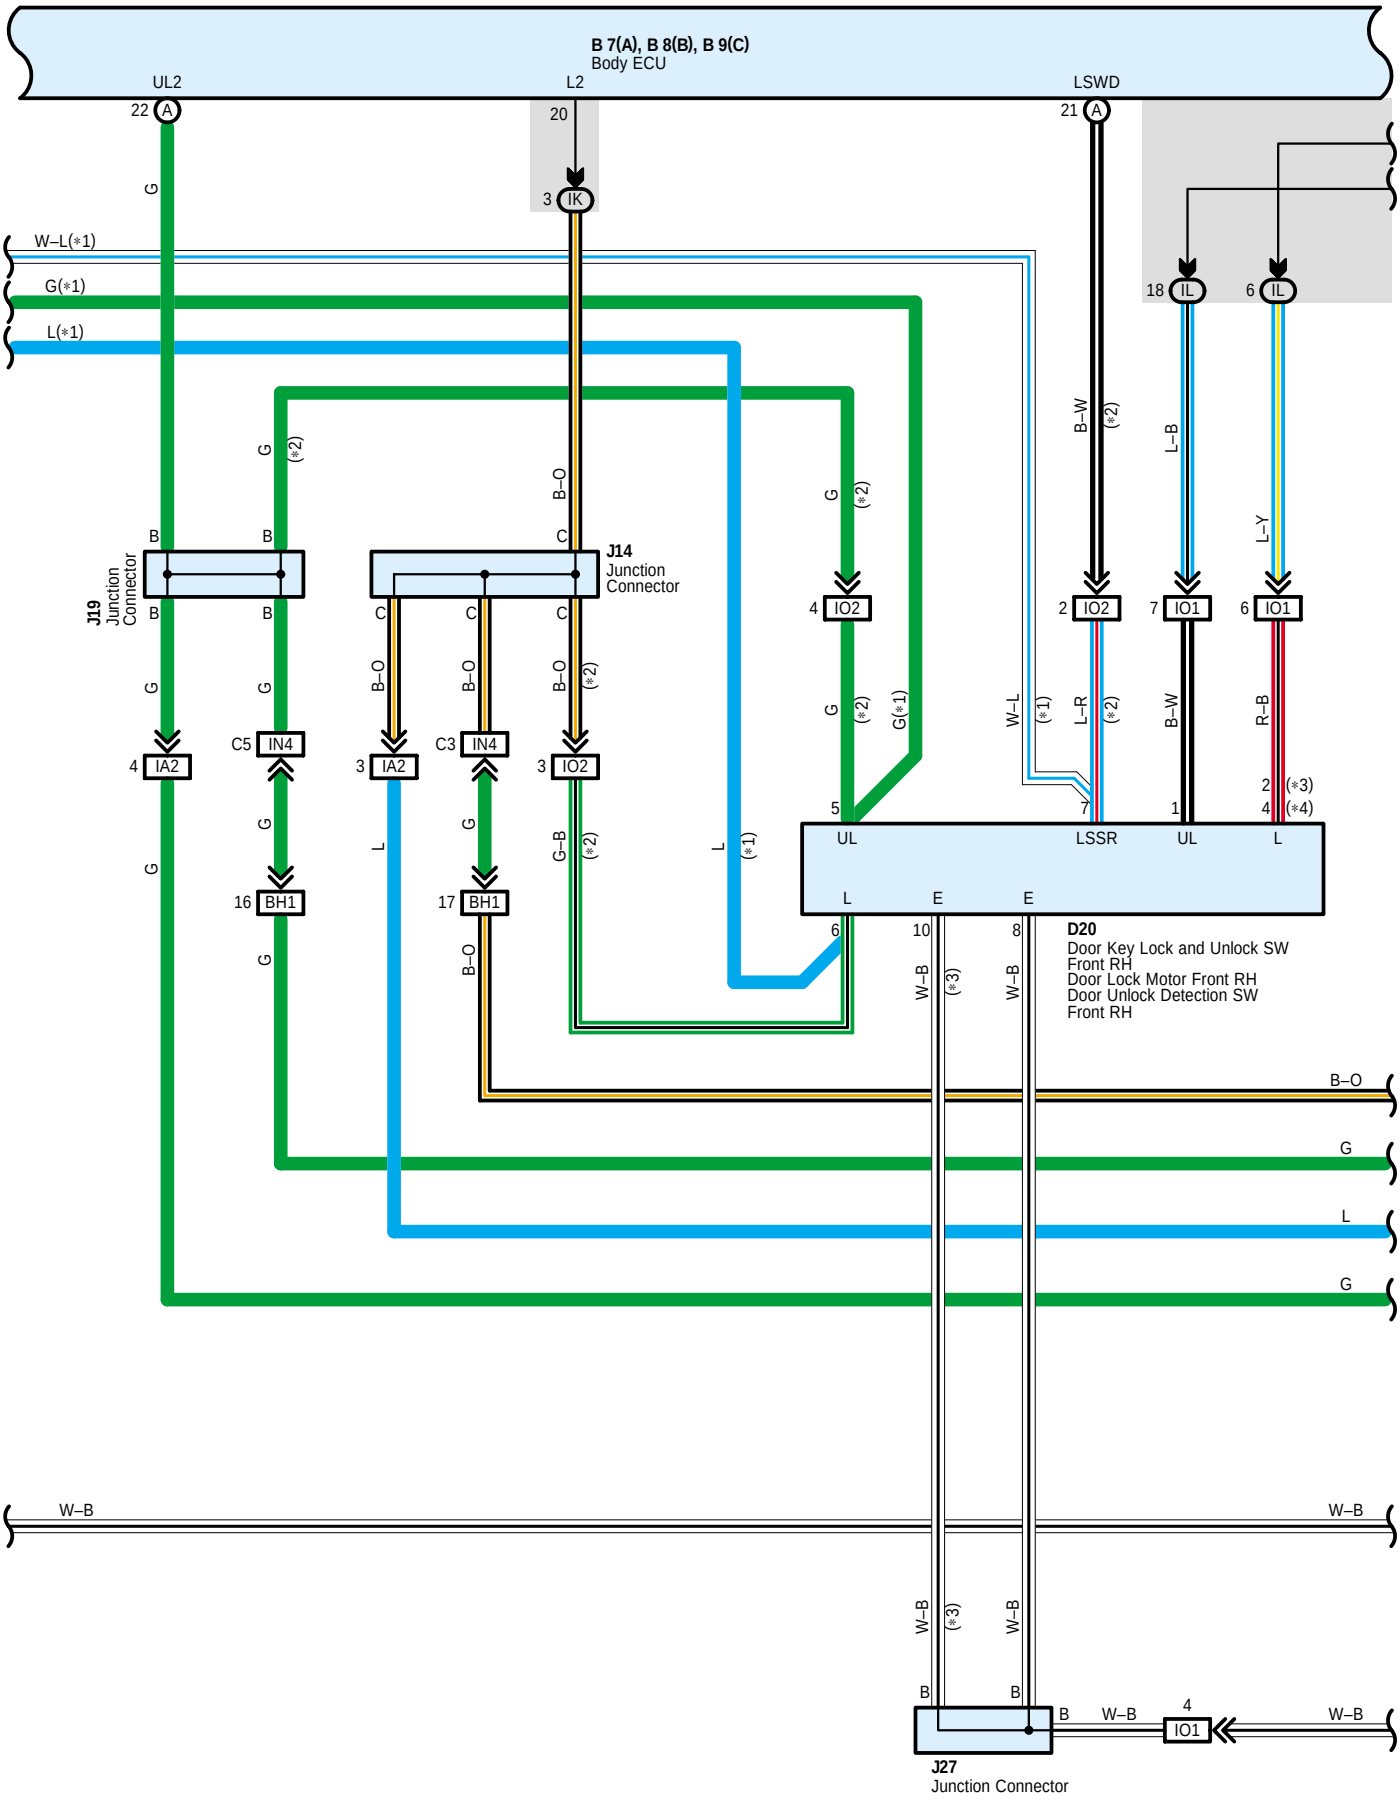
B 7(A), B 8(B), B 9(C)
Body ECU
UL2
L2
LSWD
22 A
20
21 A
3 IK
G
W–L(*1)
G(*1)
L(*1)
18 IL
6 IL
B–W (*2)
L–B
L–Y
J19
Junction
Connector
J14
Junction
Connector
4 IO2
2 IO2
7 IO1
6 IO1
4 IA2
C5 IN4
3 IA2
C3 IN4
3 IO2
16 BH1
17 BH1
W–L (*1)
L–R (*2)
B–W
R–B
5 UL
7 LSSR
1 UL
2 (*3)
4 (*4)
L
E
E
6
10
8
D20
Door Key Lock and Unlock SW
Front RH
Door Lock Motor Front RH
Door Unlock Detection SW
Front RH
B–O
G–B
W–B
J27
Junction Connector
B
W–B
4 IO1

Wireless Door Lock Control (RHD)

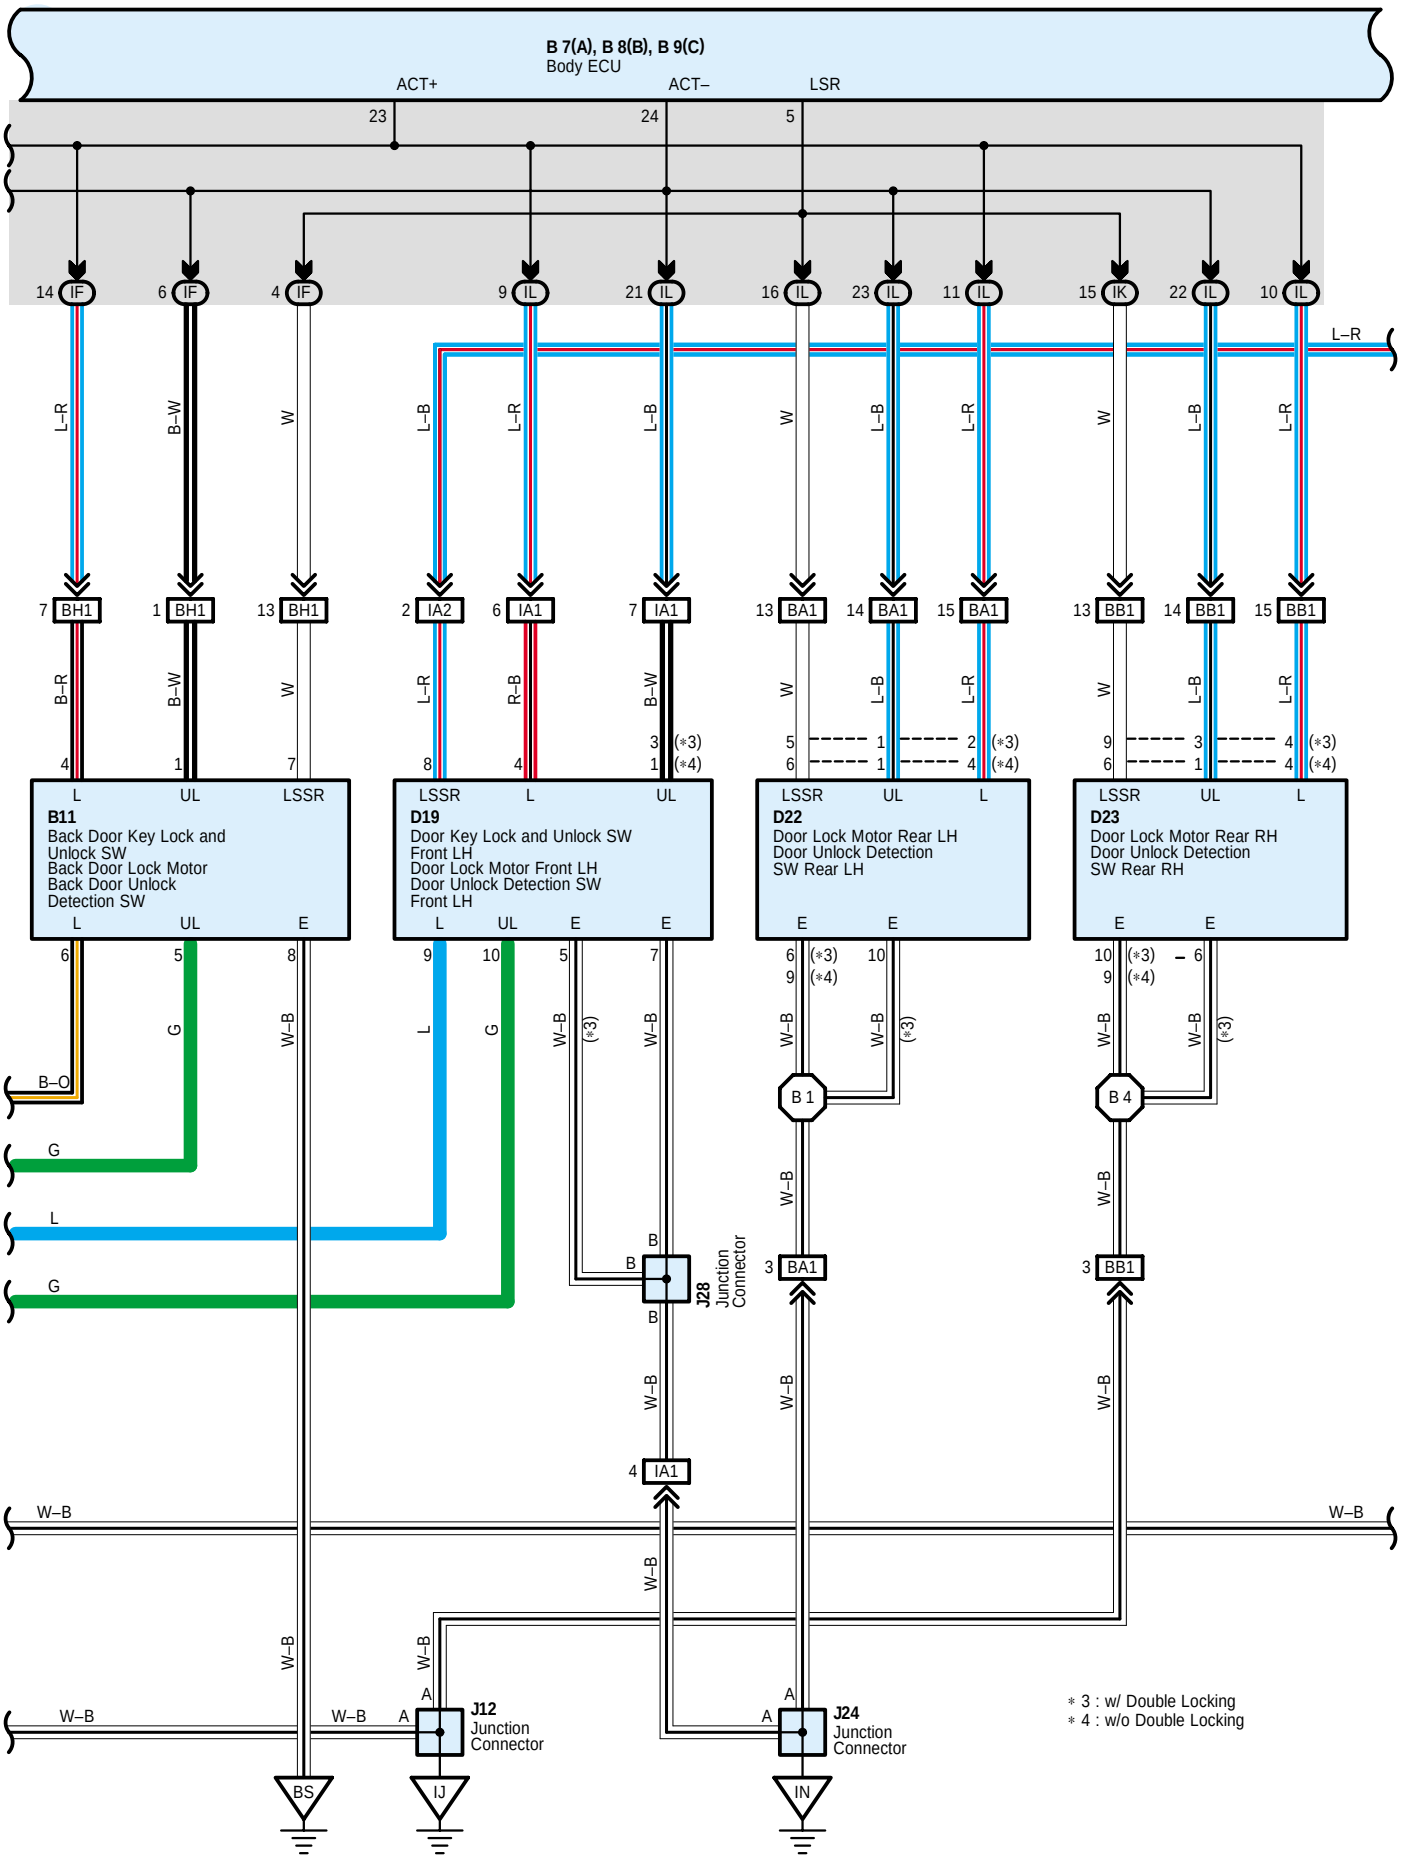

From Power Source System (See Page 128)

