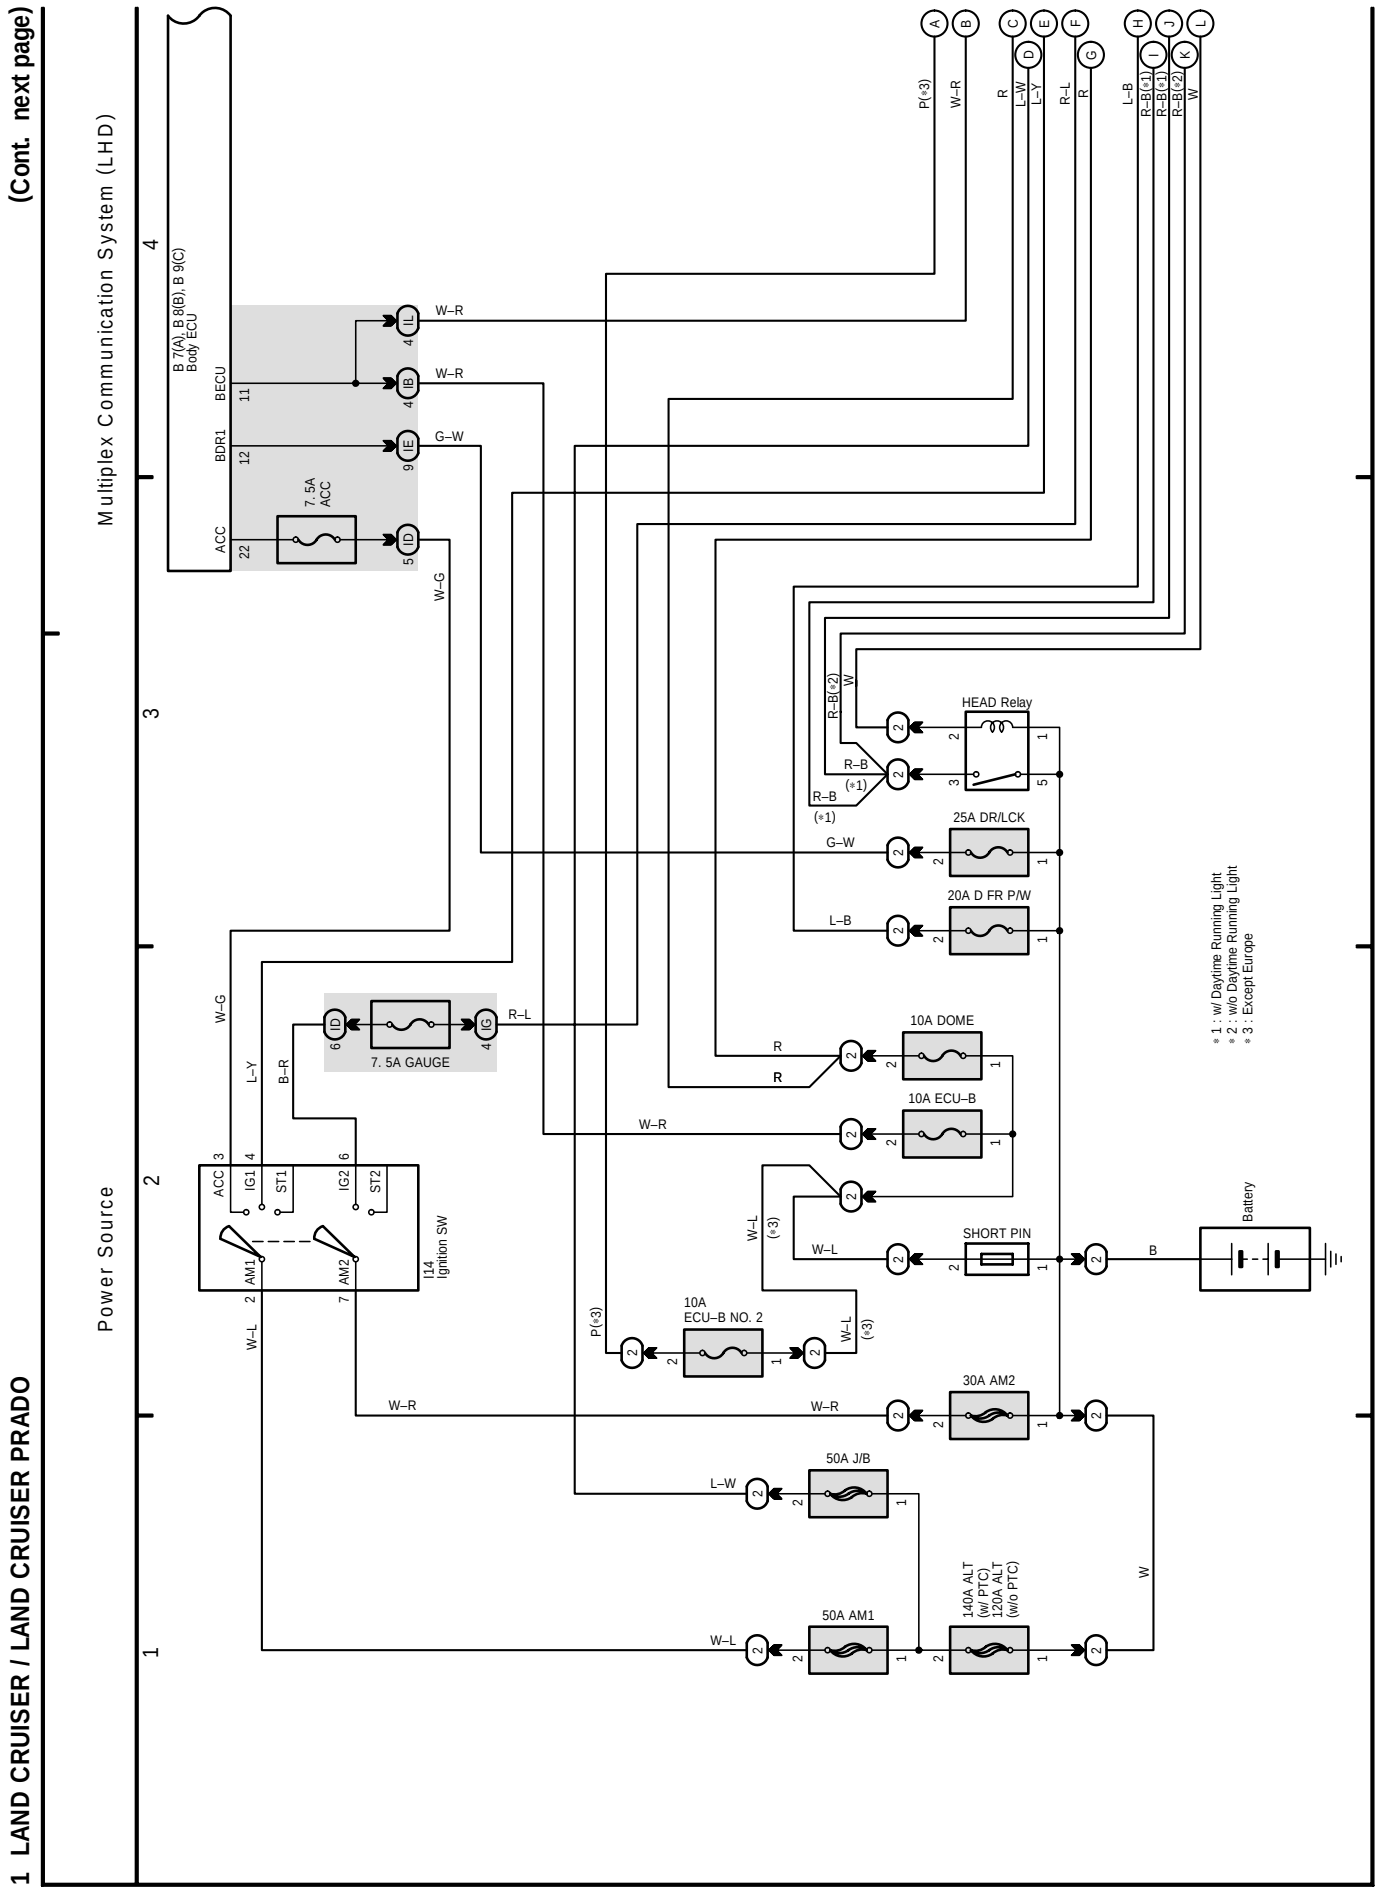
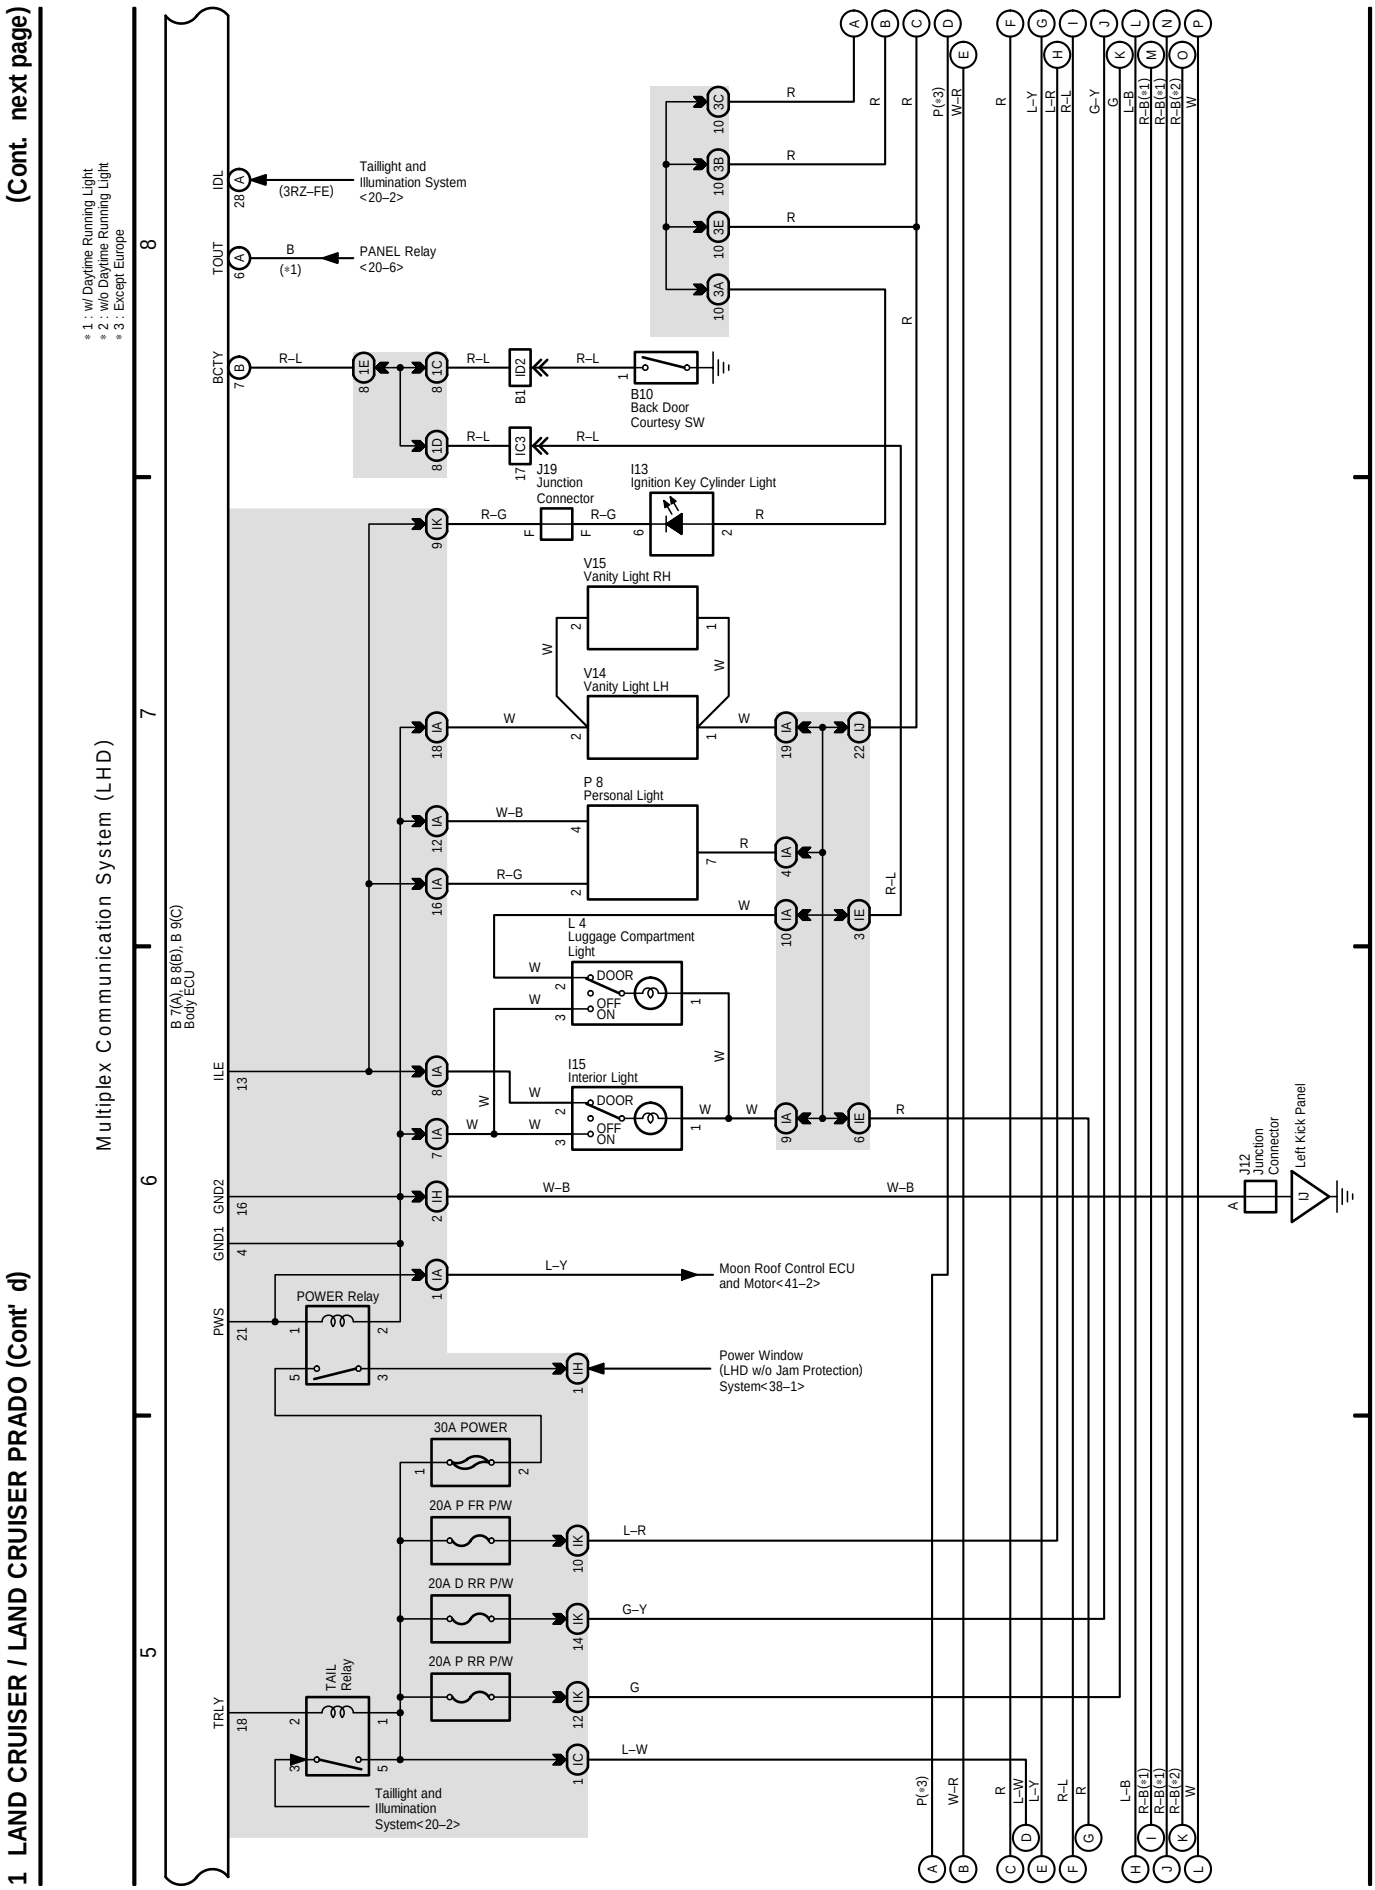
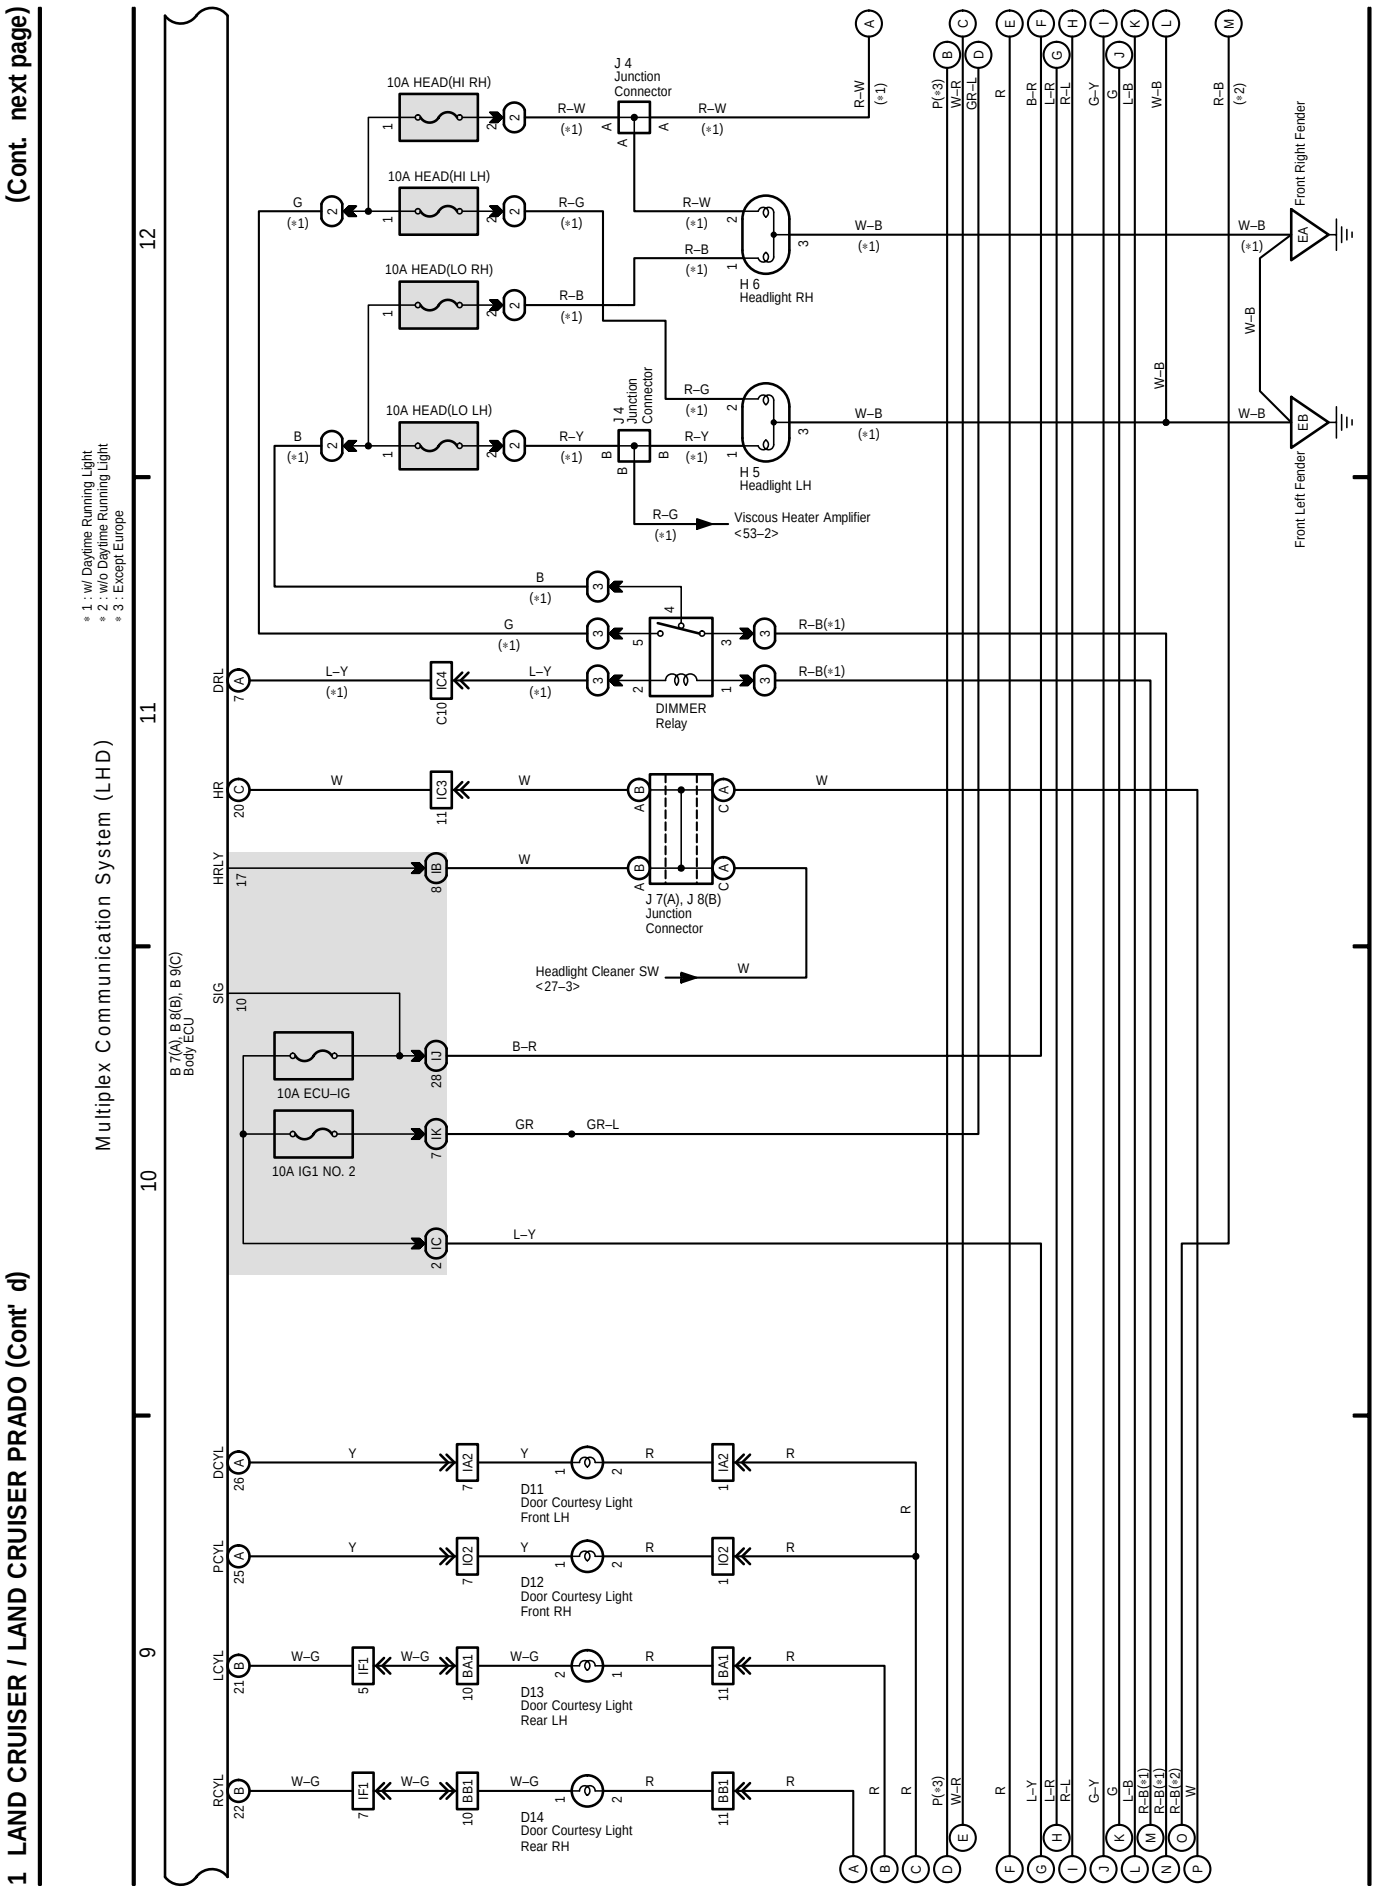
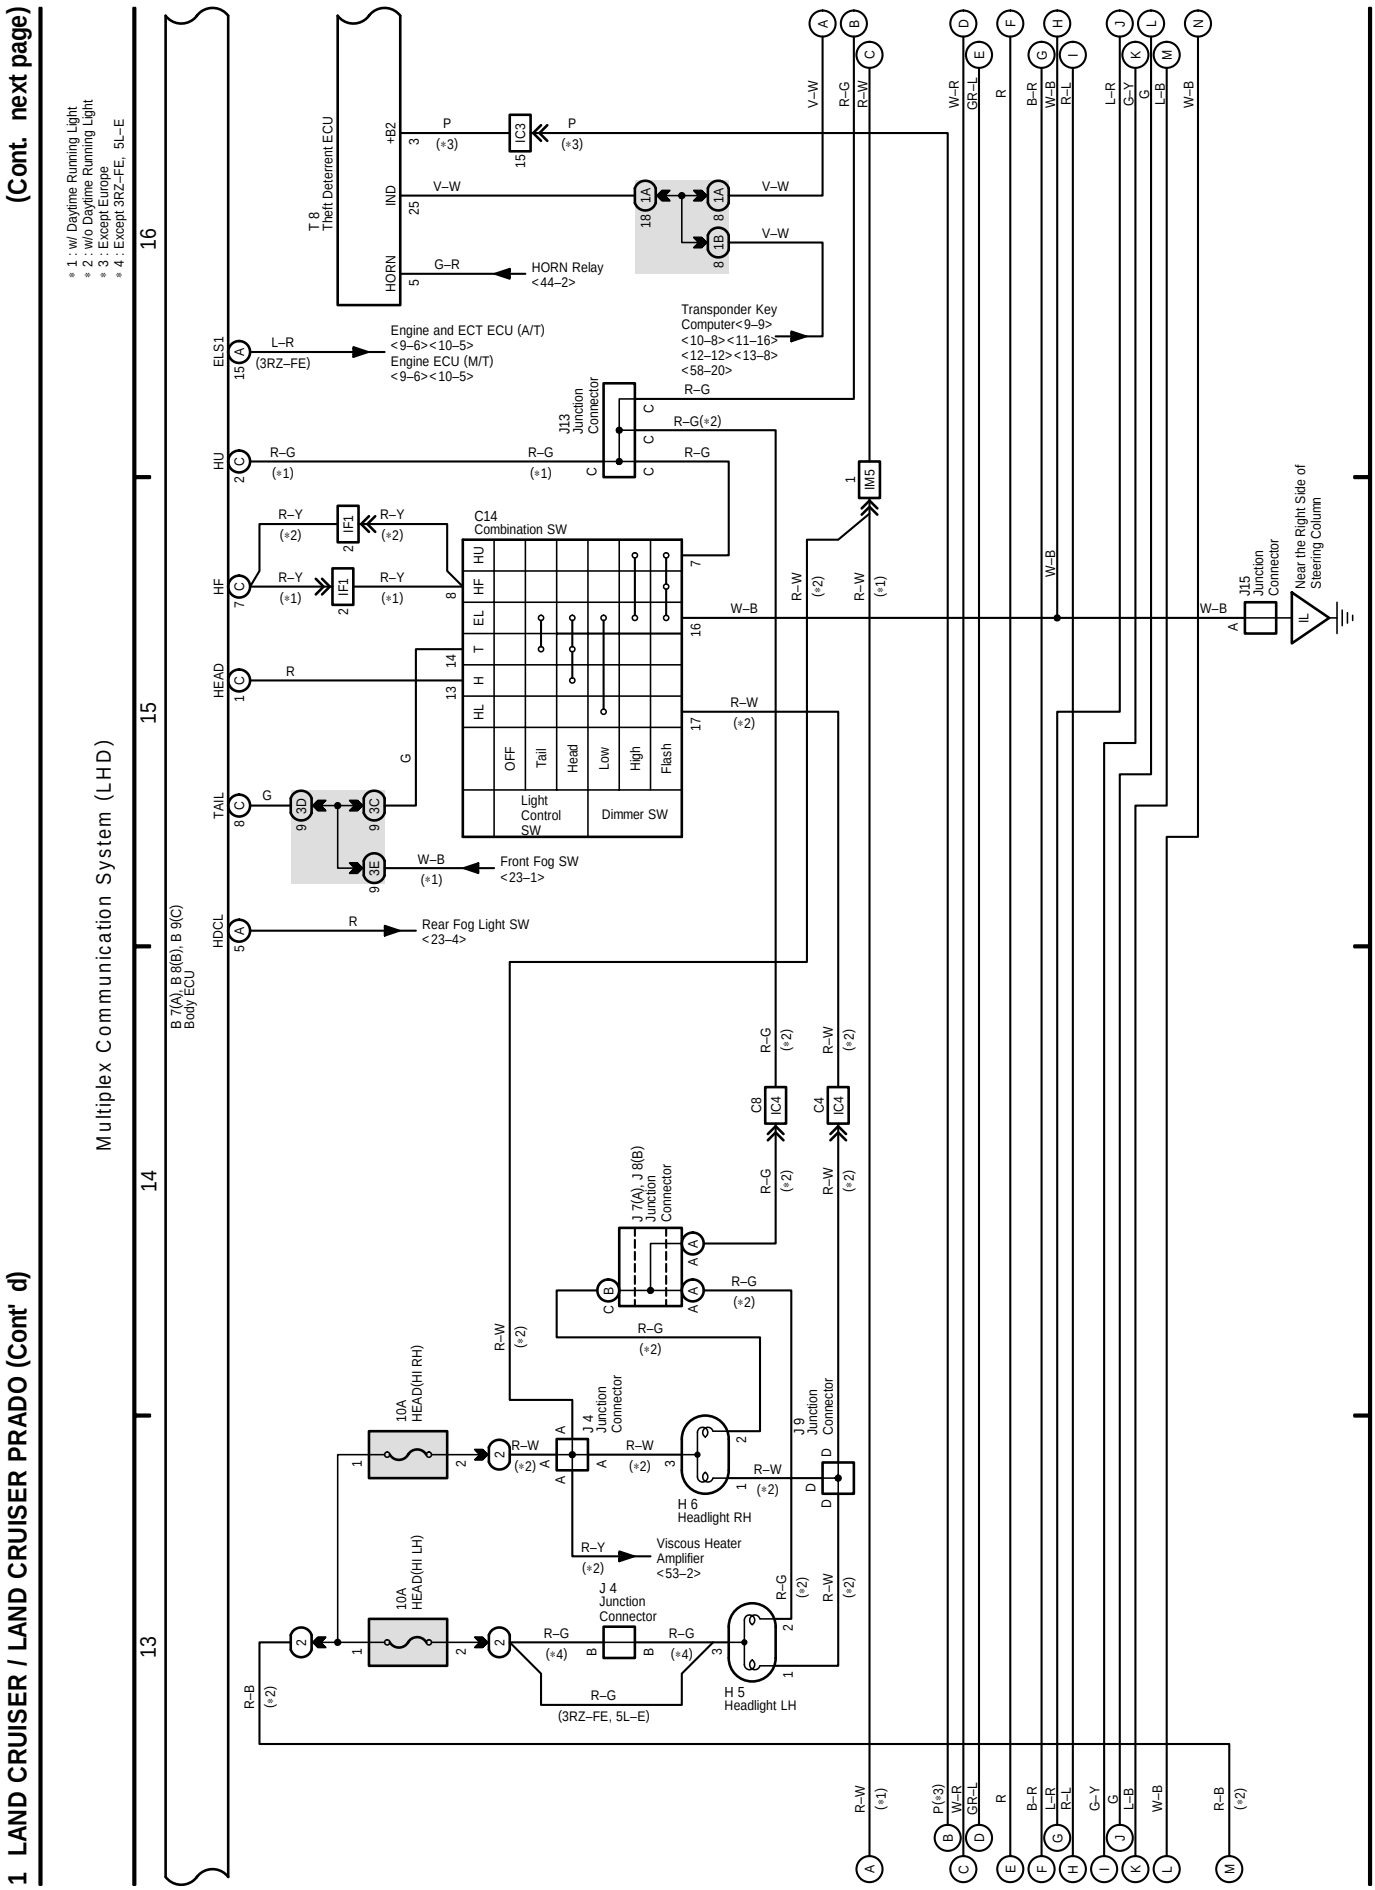
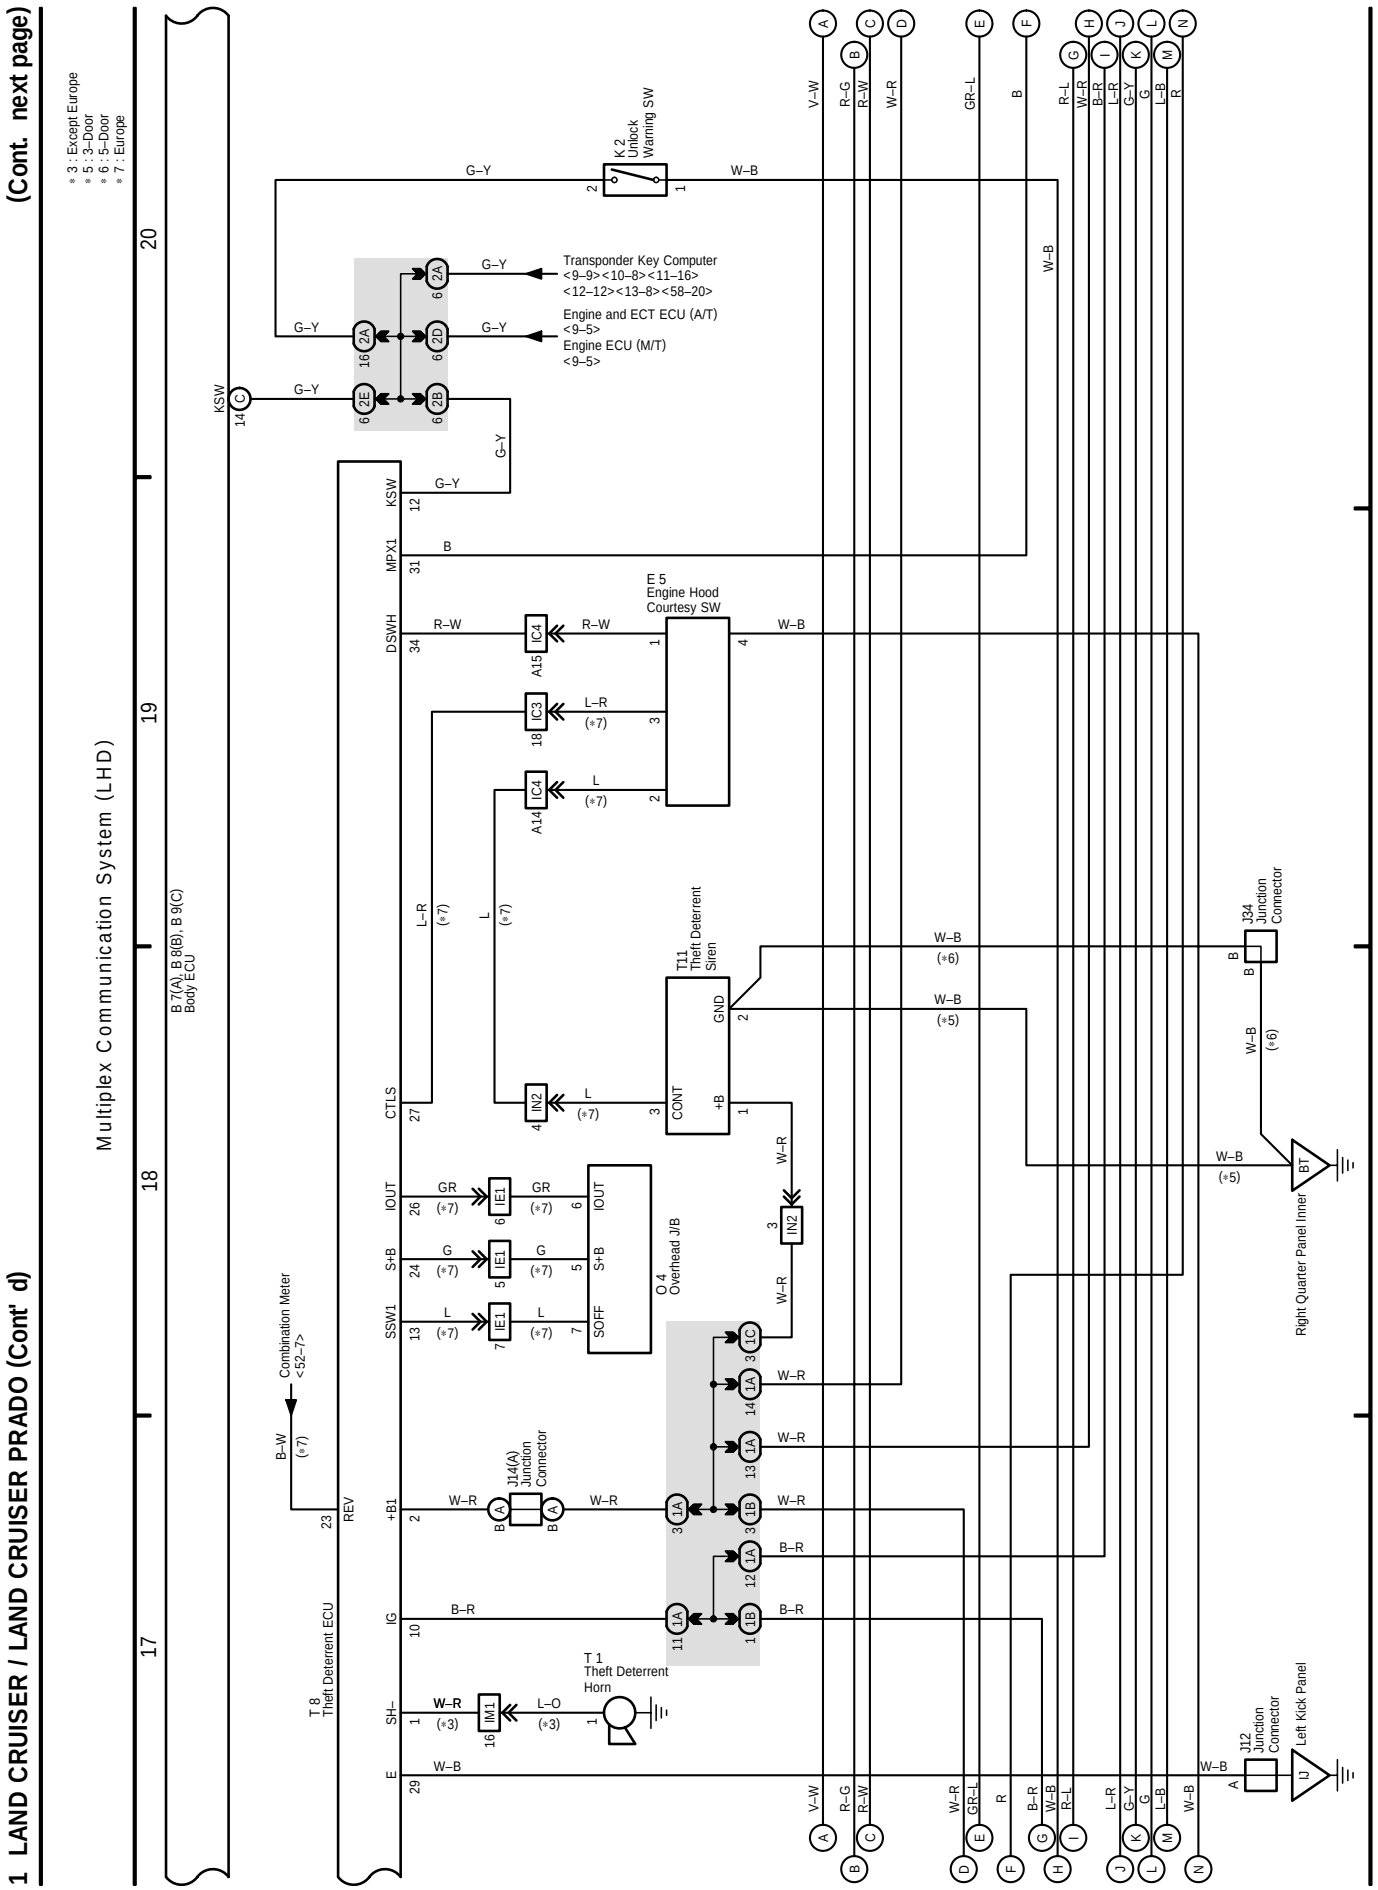

(Cont. next page)
1 LAND CRUISER / LAND CRUISER PRADO
Multiplex Communication System (LHD)
Power Source
B 7(A), B 8(B), B 9(C)
Body ECU
BECU
BDR1
ACC
7. 5A ACC
W–R
G–W
W–G
R–L
HEAD Relay
R–B(*2)
R–B
(*1)
25A DR/LCK
20A D FR P/W
10A DOME
10A ECU–B
SHORT PIN
Battery
7. 5A GAUGE
ST1
ST2
IG1
IG2
AM1
AM2
14 Ignition SW
10A ECU–B NO. 2
30A AM2
50A J/B
50A AM1
140A ALT (w/ PTC) 120A ALT (w/o PTC)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : Except Europe


1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
Multiplex Communication System (LHD)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : Except Europe
B 7(A), B 8(B), B 9(C)
Body ECU
IDL
TOUT
BCTY
ILE
GND2
GND1
PWS
TRLY
Taillight and Illumination System <20–2>
(3RZ–FE)
PANEL Relay <20–6>
(*1)
B10 Back Door Courtesy SW
J19 Junction Connector
I13 Ignition Key Cylinder Light
V15 Vanity Light RH
V14 Vanity Light LH
P 8 Personal Light
L 4 Luggage Compartment Light
I15 Interior Light
DOOR
OFF
ON
POWER Relay
30A POWER
20A P FR P/W
20A D RR P/W
20A P RR P/W
TAIL Relay
Taillight and Illumination System<20–2>
Moon Roof Control ECU and Motor<41–2>
Power Window (LHD w/o Jam Protection) System<38–1>
J12 Junction Connector
Left Kick Panel

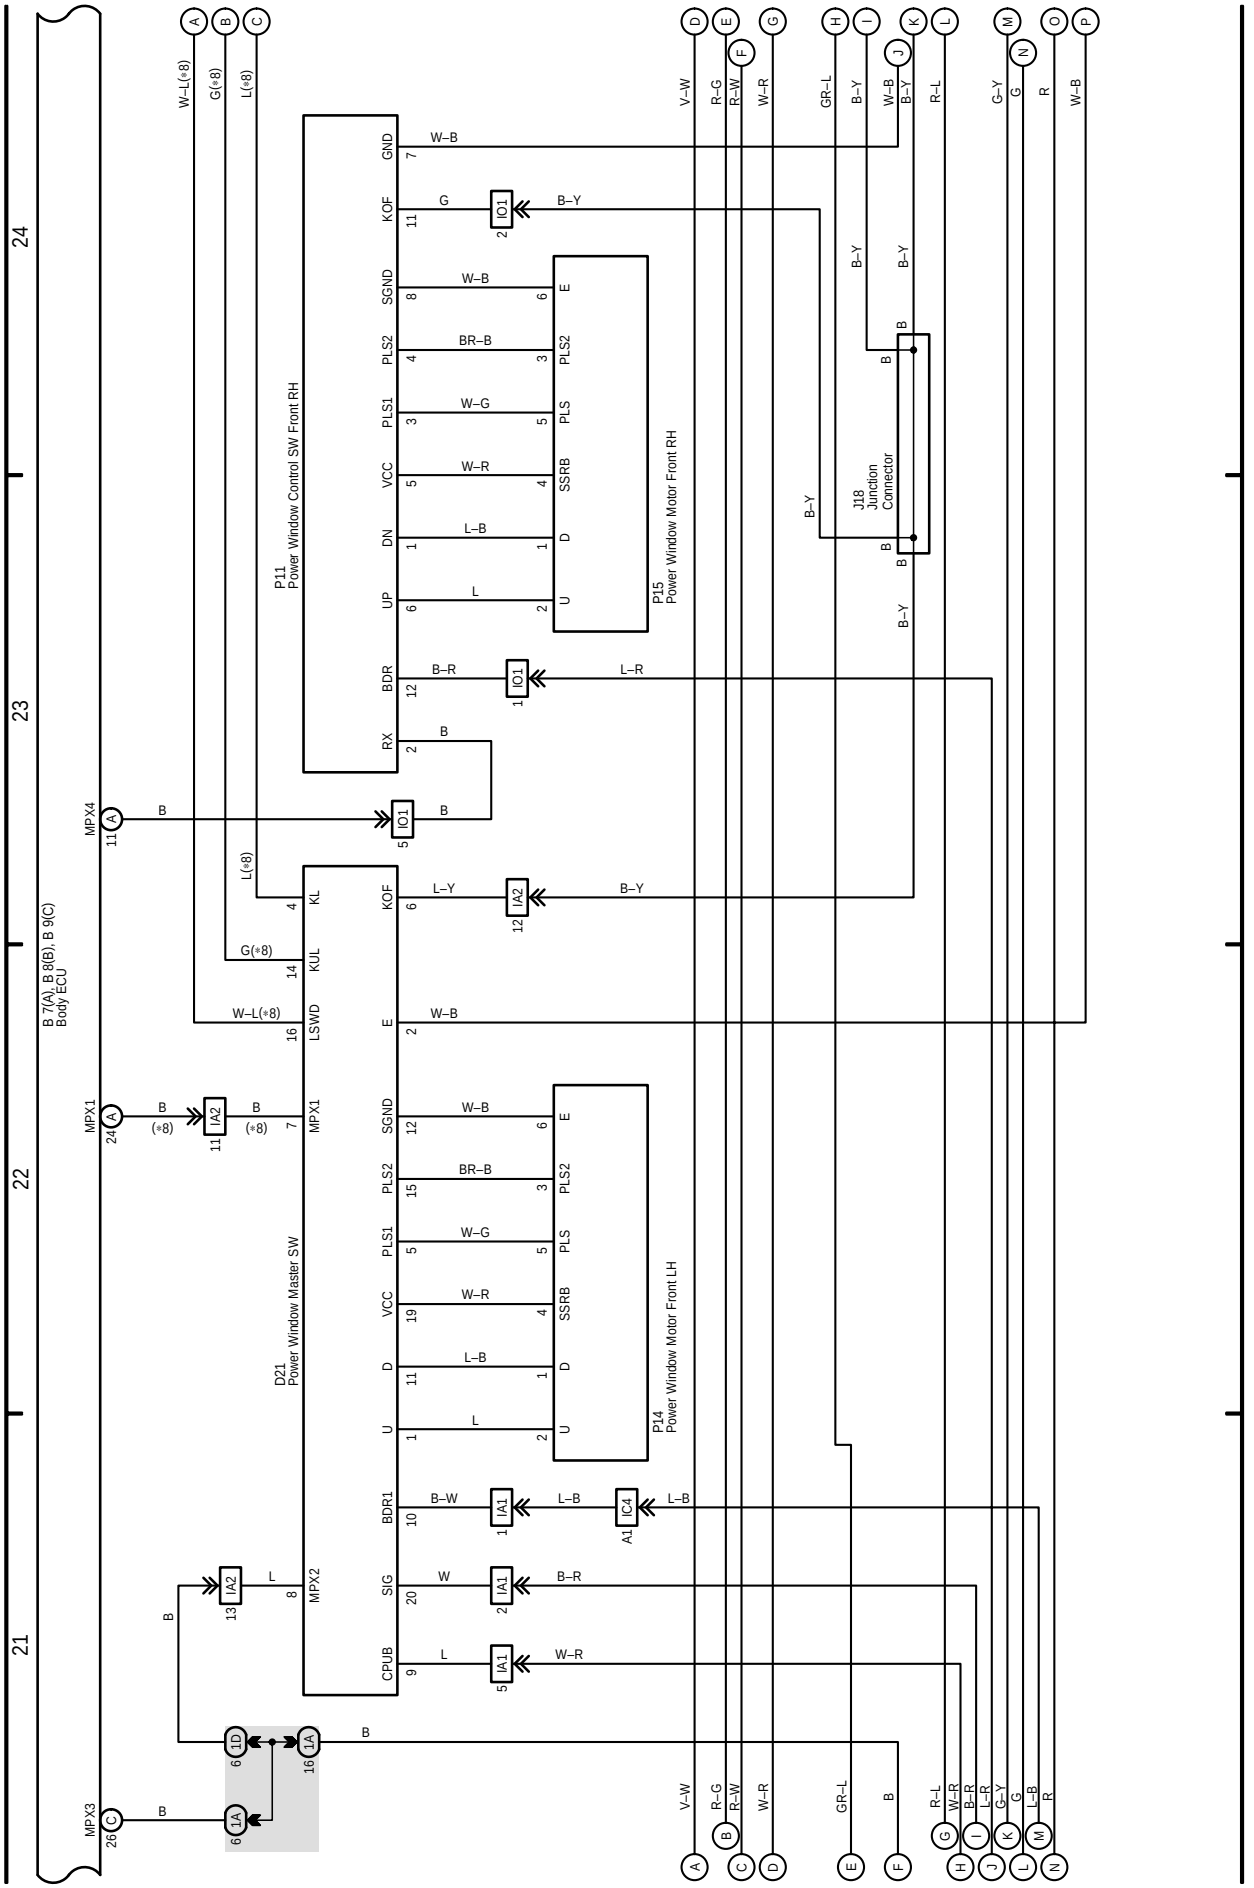

(Cont. next page)
1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Multiplex Communication System (LHD)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : Except Europe
B 7(A), B 8(B), B 9(C)
Body ECU
10A HEAD(HI RH)
10A HEAD(HI LH)
10A HEAD(LO RH)
10A HEAD(LO LH)
J 4 Junction Connector
H 6 Headlight RH
H 5 Headlight LH
Viscous Heater Amplifier <53–2>
DIMMER Relay
J 7(A), J 8(B) Junction Connector
Headlight Cleaner SW <27–3>
10A ECU–IG
10A IG1 NO. 2
D11 Door Courtesy Light Front LH
D12 Door Courtesy Light Front RH
D13 Door Courtesy Light Rear LH
D14 Door Courtesy Light Rear RH
Front Right Fender
Front Left Fender

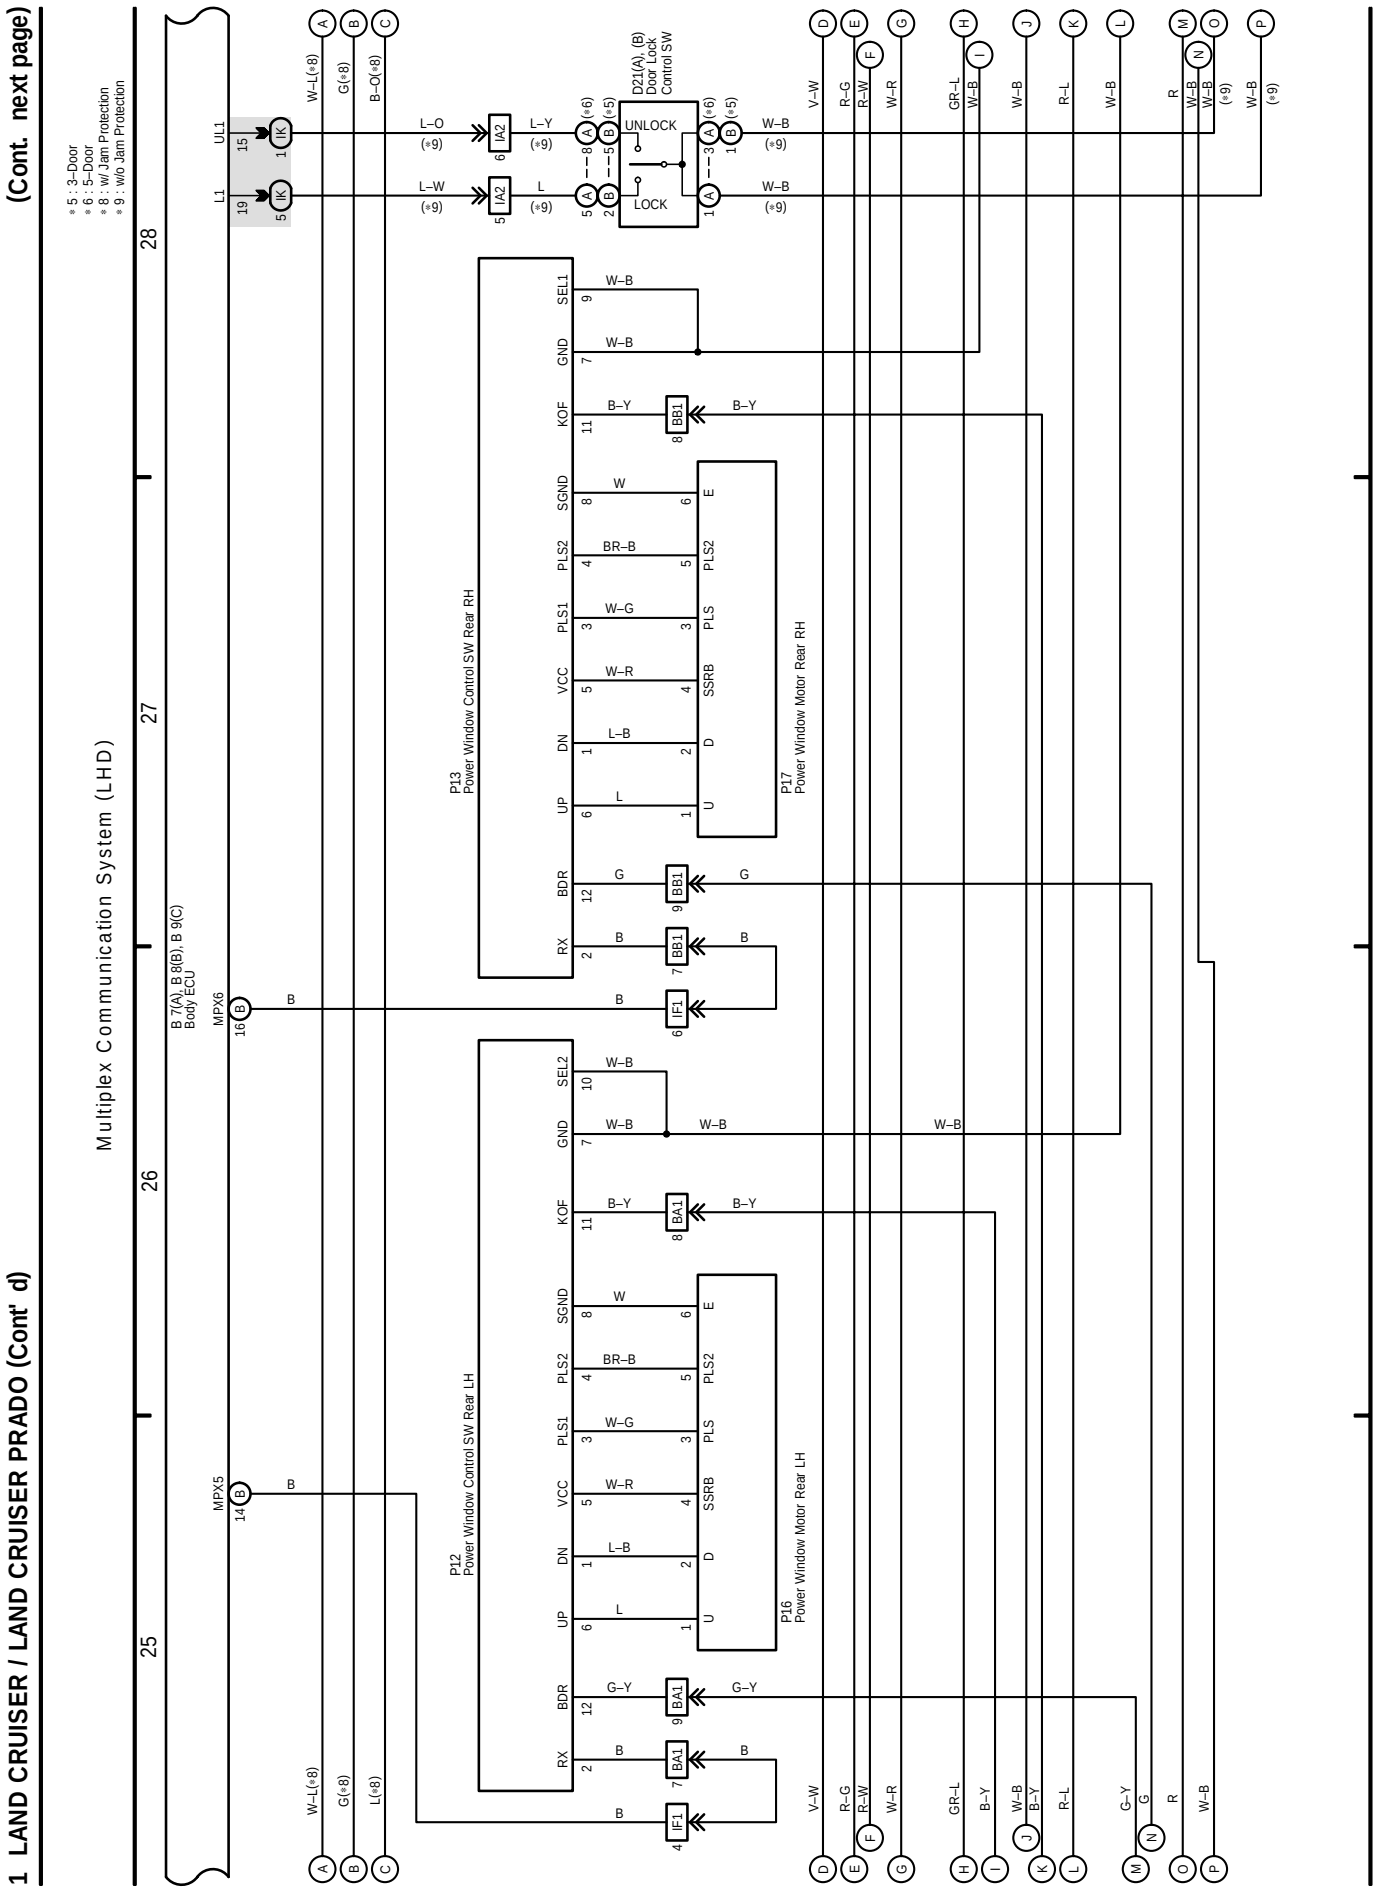

1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
Multiplex Communication System (LHD)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : Except Europe
* 4 : Except 3RZ–FE, 5L–E
T 8 Theft Deterrent ECU
+B2
IND
HORN
HORN Relay <44–2>
Transponder Key Computer<9–9> <10–8><11–16> <12–12><13–8> <58–20>
Engine and ECT ECU (A/T) <9–6><10–5>
Engine ECU (M/T) <9–6><10–5>
(3RZ–FE)
ELS1
HU
HF
HEAD
TAIL
HDCL
B 7(A), B 8(B), B 9(C) Body ECU
J13 Junction Connector
C14 Combination SW
Light Control SW
Dimmer SW
OFF
Tail
Head
Low
High
Flash
Front Fog SW <23–1>
Rear Fog Light SW <23–4>
J15 Junction Connector
Near the Right Side of Steering Column
IM5
IC3
IC4
C8
C4
J 7(A), J 8(B) Junction Connector
J 4 Junction Connector
J 9 Junction Connector
10A HEAD(HI RH)
10A HEAD(HI LH)
H 6 Headlight RH
H 5 Headlight LH
Viscous Heater Amplifier <53–2>
(3RZ–FE, 5L–E)
13
14
15
16


1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
* 3 : Except Europe
* 5 : 3–Door
* 6 : 5–Door
* 7 : Europe
Multiplex Communication System (LHD)
B 7(A), B 8(B), B 9(C)
Body ECU
K 2
Unlock
Warning SW
Transponder Key Computer
<9–9><10–8><11–16>
<12–12><13–8><58–20>
Engine and ECT ECU (A/T)
<9–5>
Engine ECU (M/T)
<9–5>
E 5
Engine Hood
Courtesy SW
T11
Theft Deterrent
Siren
O 4
Overhead J/B
J14(A)
Junction
Connector
Combination Meter
<52–7>
T 8
Theft Deterrent ECU
T 1
Theft Deterrent
Horn
J34
Junction
Connector
Right Quarter Panel Inner
J12
Junction
Connector
Left Kick Panel
KSW
MPX1
DSWH
CTLS
IOUT
S+B
SSW1
+B1
IG
SH–
E
REV
GND
CONT
+B
SOFF

1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

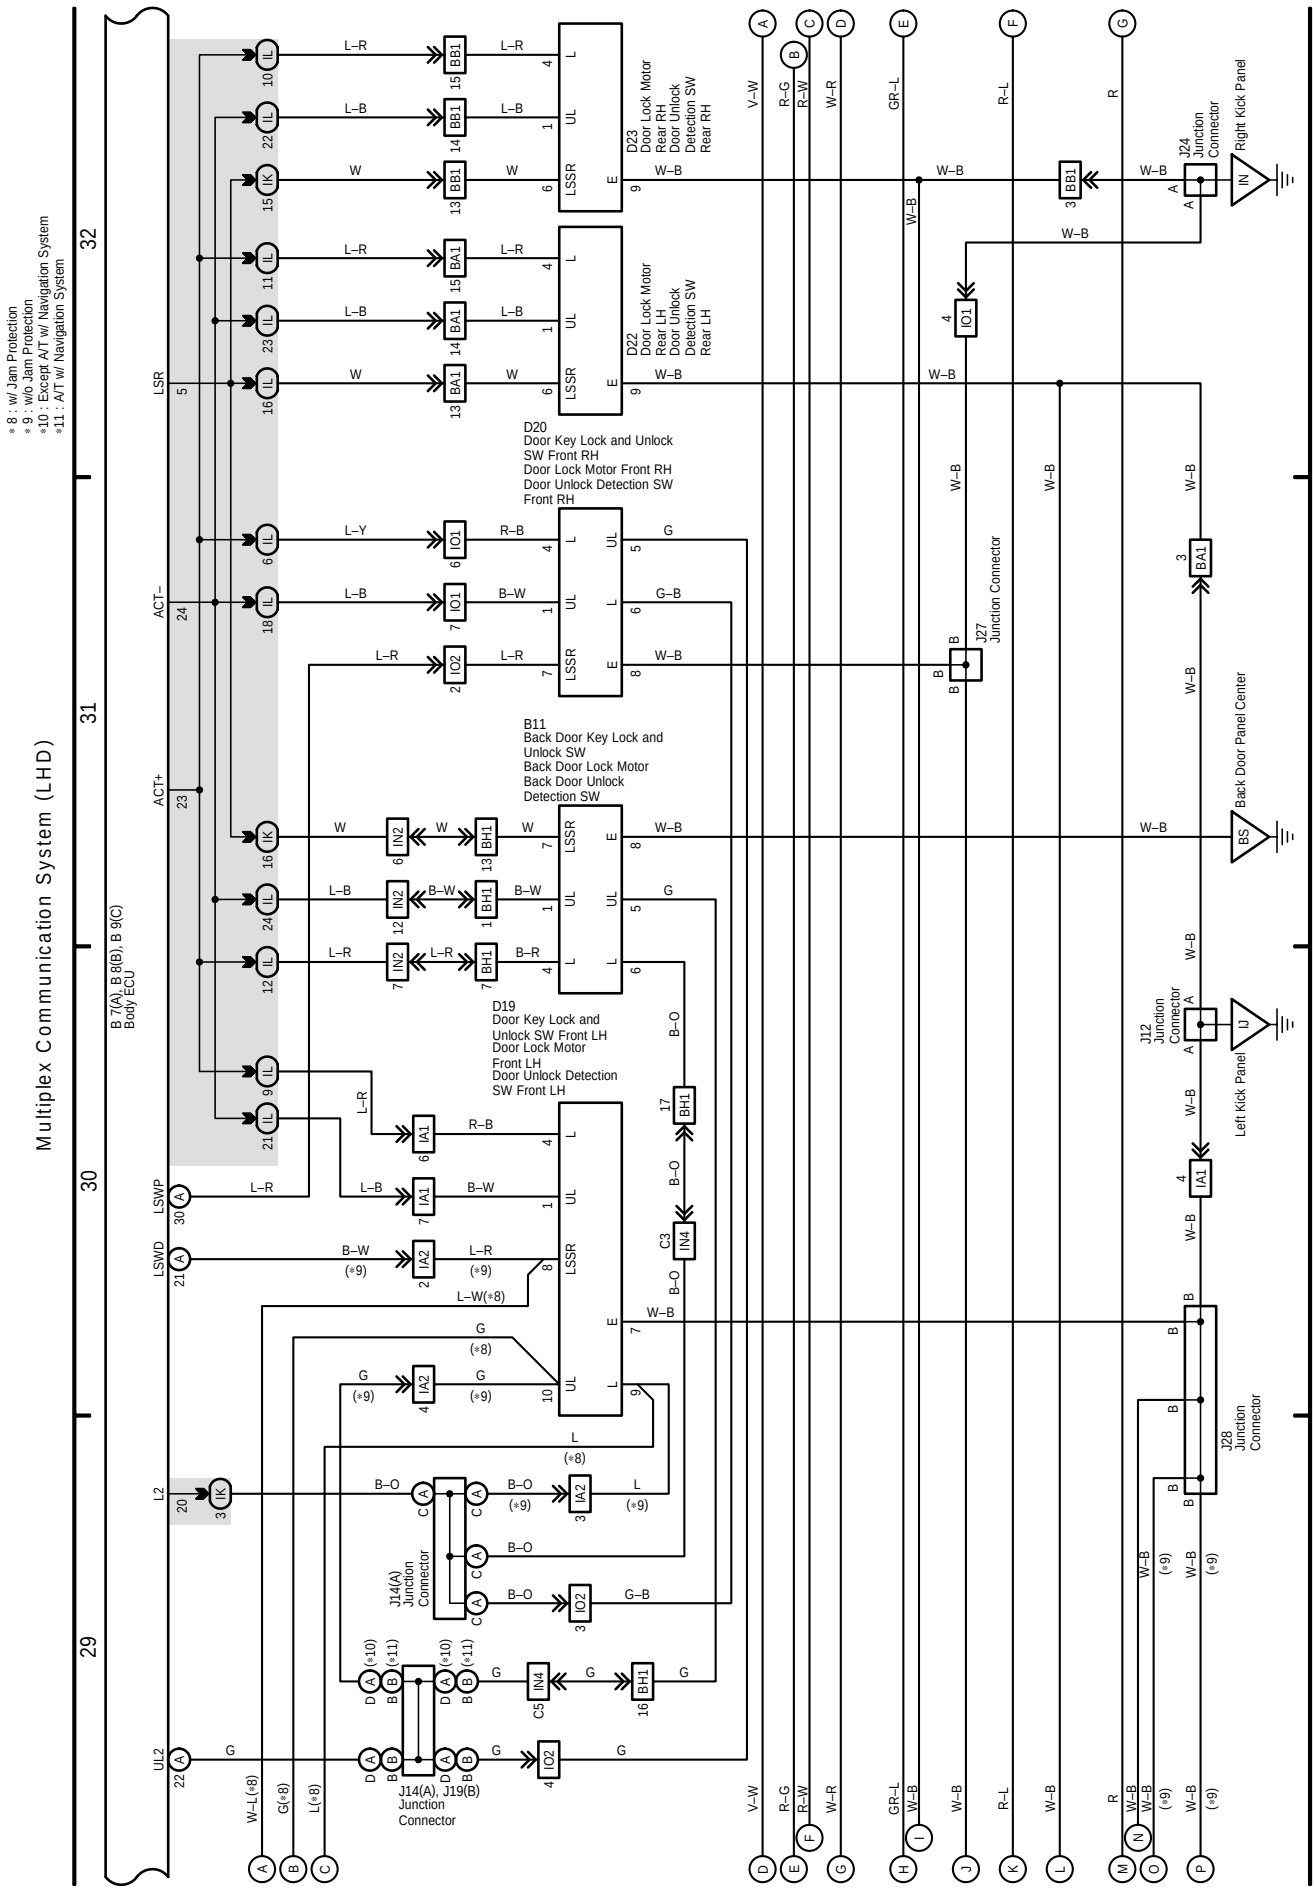
(Cont. next page)

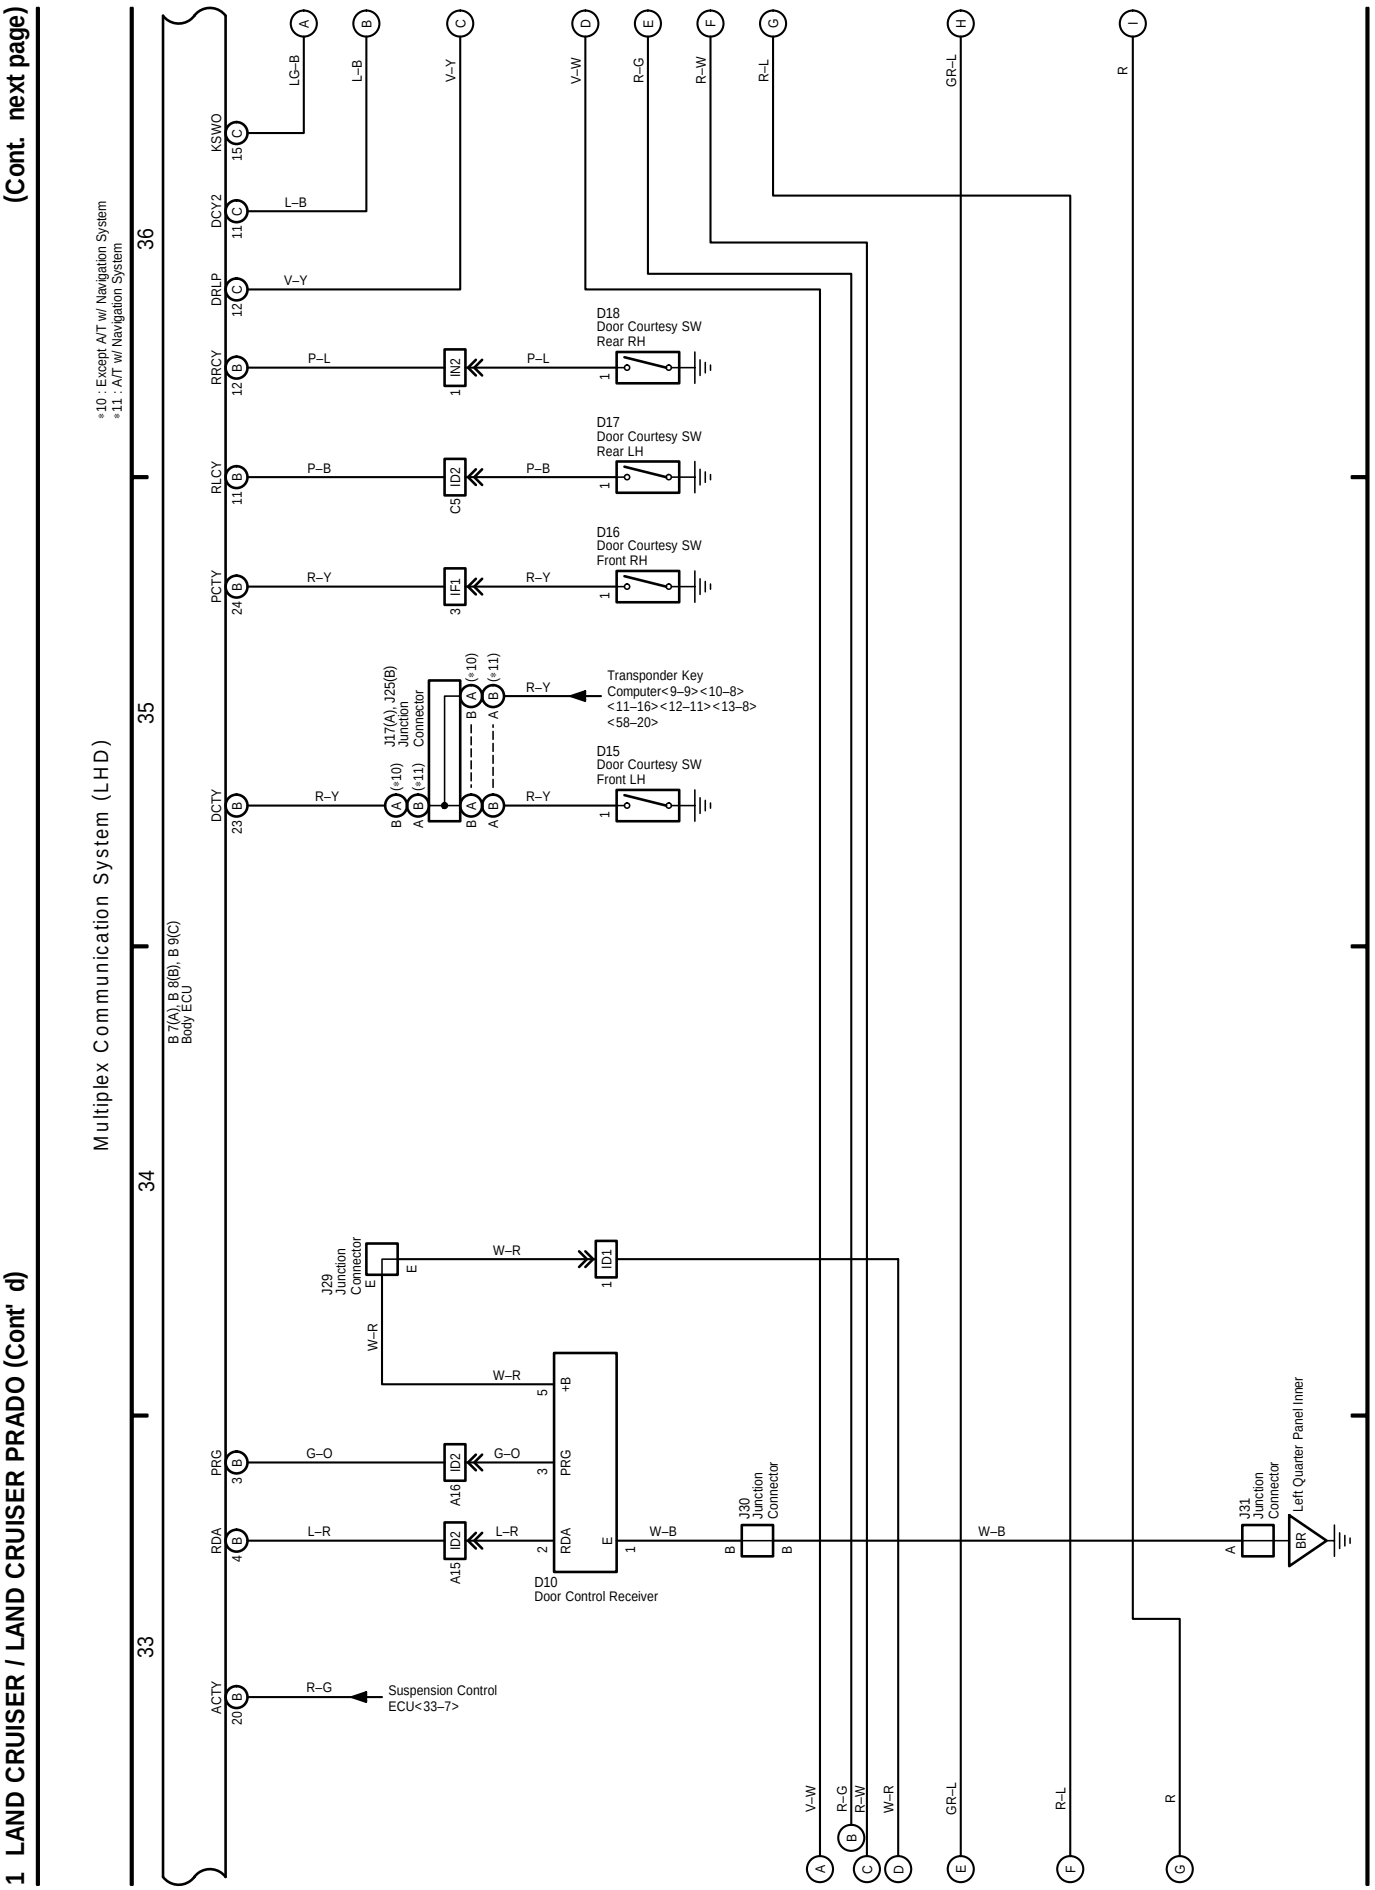



1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
* 5 : 3–Door
* 6 : 5–Door
* 8 : w/ Jam Protection
* 9 : w/o Jam Protection
Multiplex Communication System (LHD)
B 7(A), B 8(B), B 9(C)
Body ECU
MPX6
MPX5
UL1
L1
D21(A), (B)
Door Lock
Control SW
UNLOCK
LOCK
P13
Power Window Control SW Rear RH
P17
Power Window Motor Rear RH
P12
Power Window Control SW Rear LH
P16
Power Window Motor Rear LH
SEL1
SEL2
GND
KOF
SGND
PLS2
PLS1
VCC
DN
UP
BDR
RX
PLS
SSRB

1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

(Cont. next page)




1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
(Cont. next page)
Multiplex Communication System (LHD)
B 7(A), B 8(B), B 9(C)
Body ECU
*10 : Except A/T w/ Navigation System
*11 : A/T w/ Navigation System
KSWO
DCY2
DRLP
RRCY
RLCY
PCTY
DCTY
ACTY
PRG
RDA
D18
Door Courtesy SW
Rear RH
D17
Door Courtesy SW
Rear LH
D16
Door Courtesy SW
Front RH
D15
Door Courtesy SW
Front LH
J17(A), J25(B)
Junction
Connector
Transponder Key
Computer<9–9><10–8>
<11–16><12–11><13–8>
<58–20>
J29
Junction
Connector
J30
Junction
Connector
J31
Junction
Connector
Left Quarter Panel Inner
D10
Door Control Receiver
Suspension Control
ECU<33–7>
LG–B
L–B
V–Y
V–W
R–G
R–W
R–L
GR–L
R
P–L
P–B
R–Y
G–O
L–R
W–R
W–B

1 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

