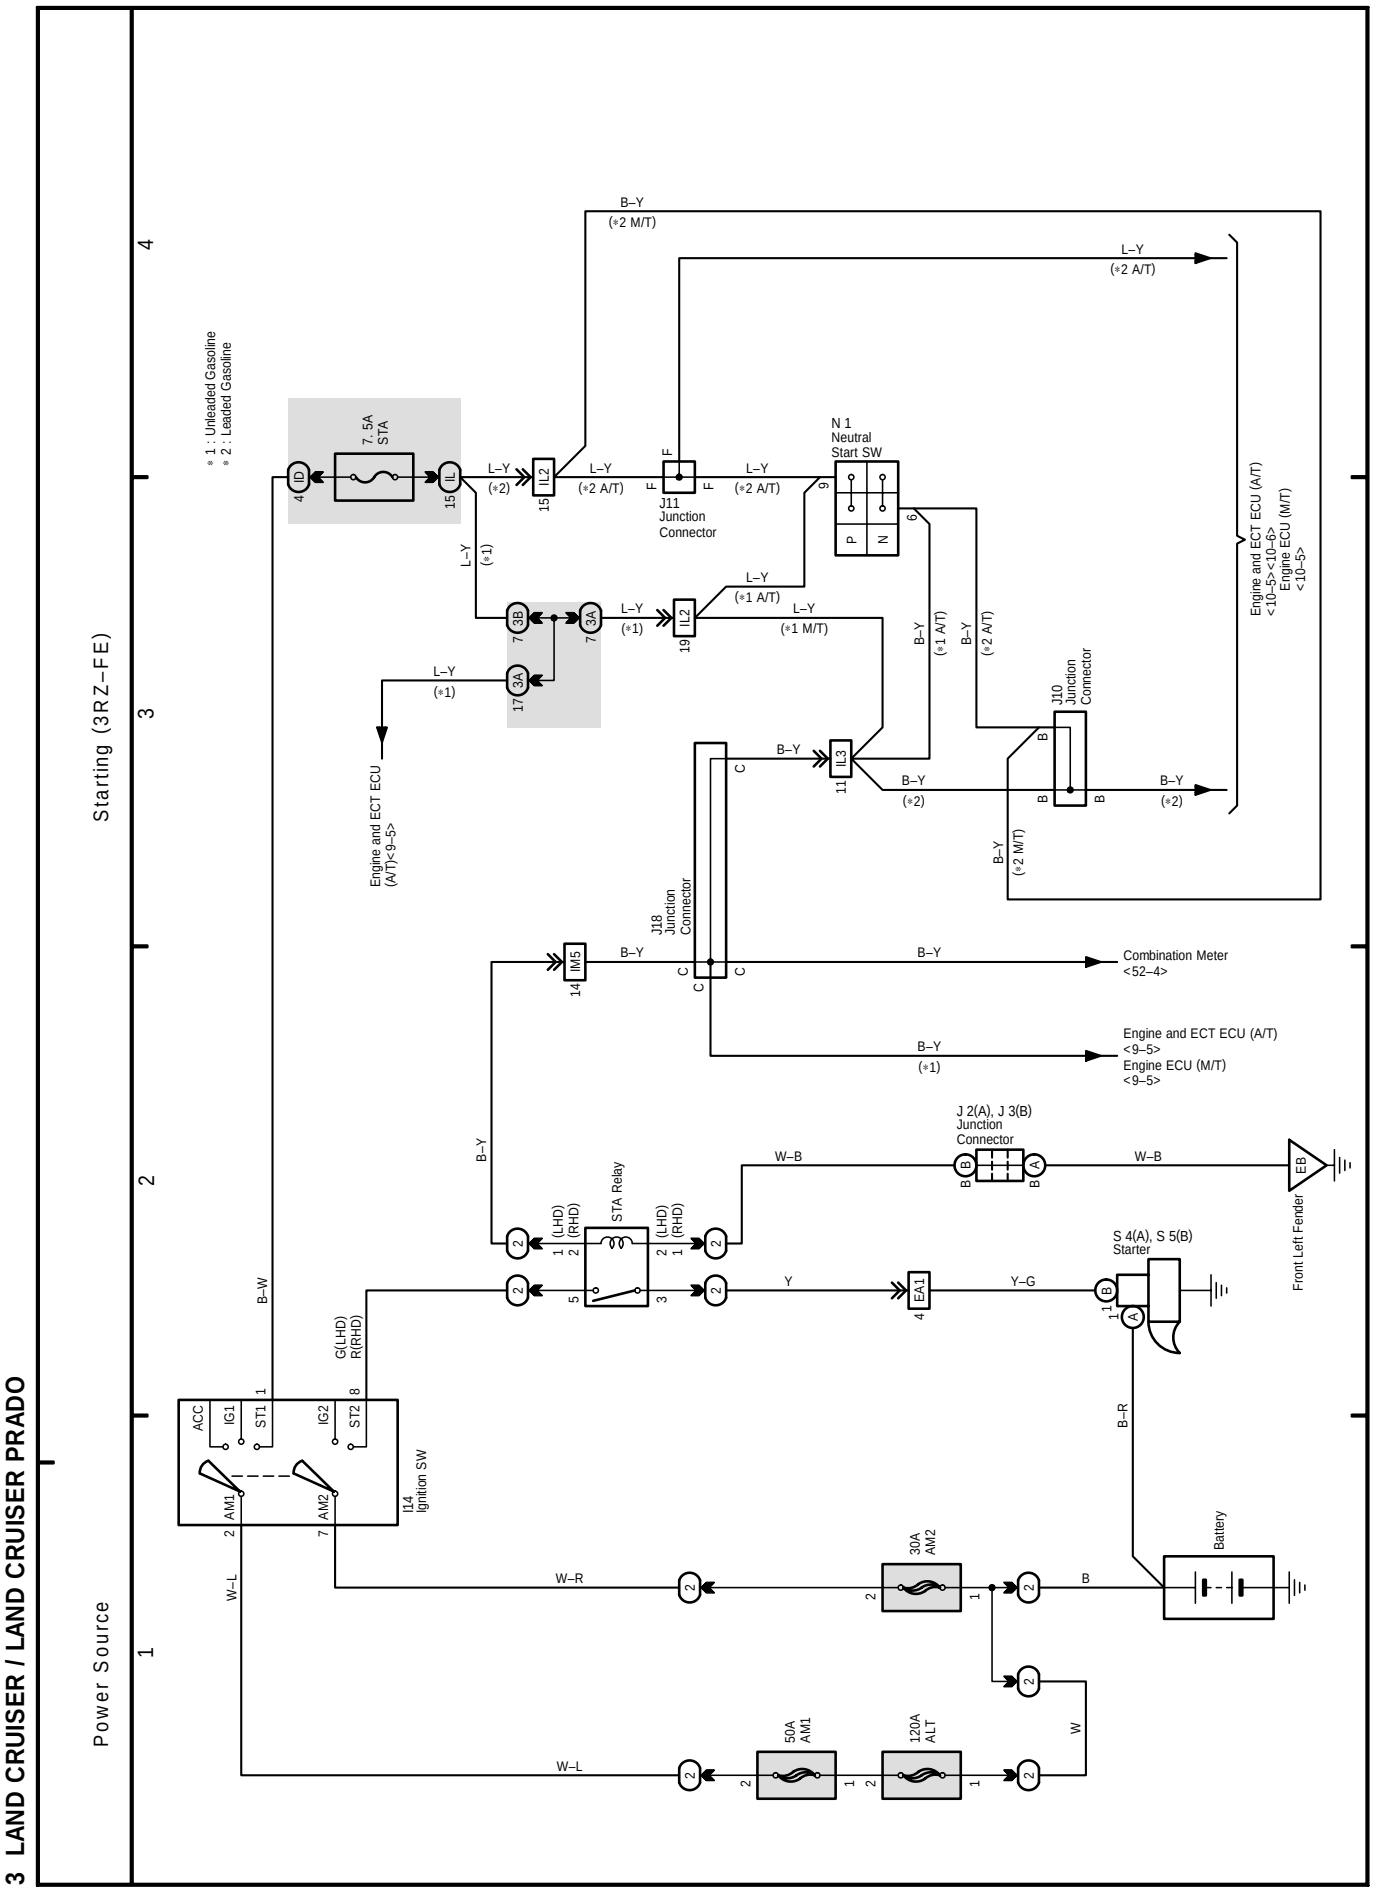

3 LAND CRUISER / LAND CRUISER PRADO
Power Source
Starting (3RZ–FE)
1
2
3
4
* 1 : Unleaded Gasoline
* 2 : Leaded Gasoline
7.5A STA
N 1 Neutral Start SW
J11 Junction Connector
J10 Junction Connector
J18 Junction Connector
J 2(A), J 3(B) Junction Connector
STA Relay
S 4(A), S 5(B) Starter
I14 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
30A AM2
50A AM1
120A ALT
Battery
Front Left Fender
Combination Meter <52–4>
Engine and ECT ECU (A/T) <9–5>
Engine ECU (M/T) <9–5>
Engine and ECT ECU (A/T)<10–5><10–6>
Engine ECU (M/T) <10–5>
Engine and ECT ECU (A/T)<9–5>
B–Y (*2 M/T)
L–Y (*2 A/T)
L–Y (*1)
L–Y (*1 A/T)
L–Y (*1 M/T)
B–Y (*1 A/T)
B–Y (*2 A/T)
B–Y (*2)
B–Y (*1)
W–B
Y
Y–G
B–R
W–R
W–L
W
B
G(LHD) R(RHD)