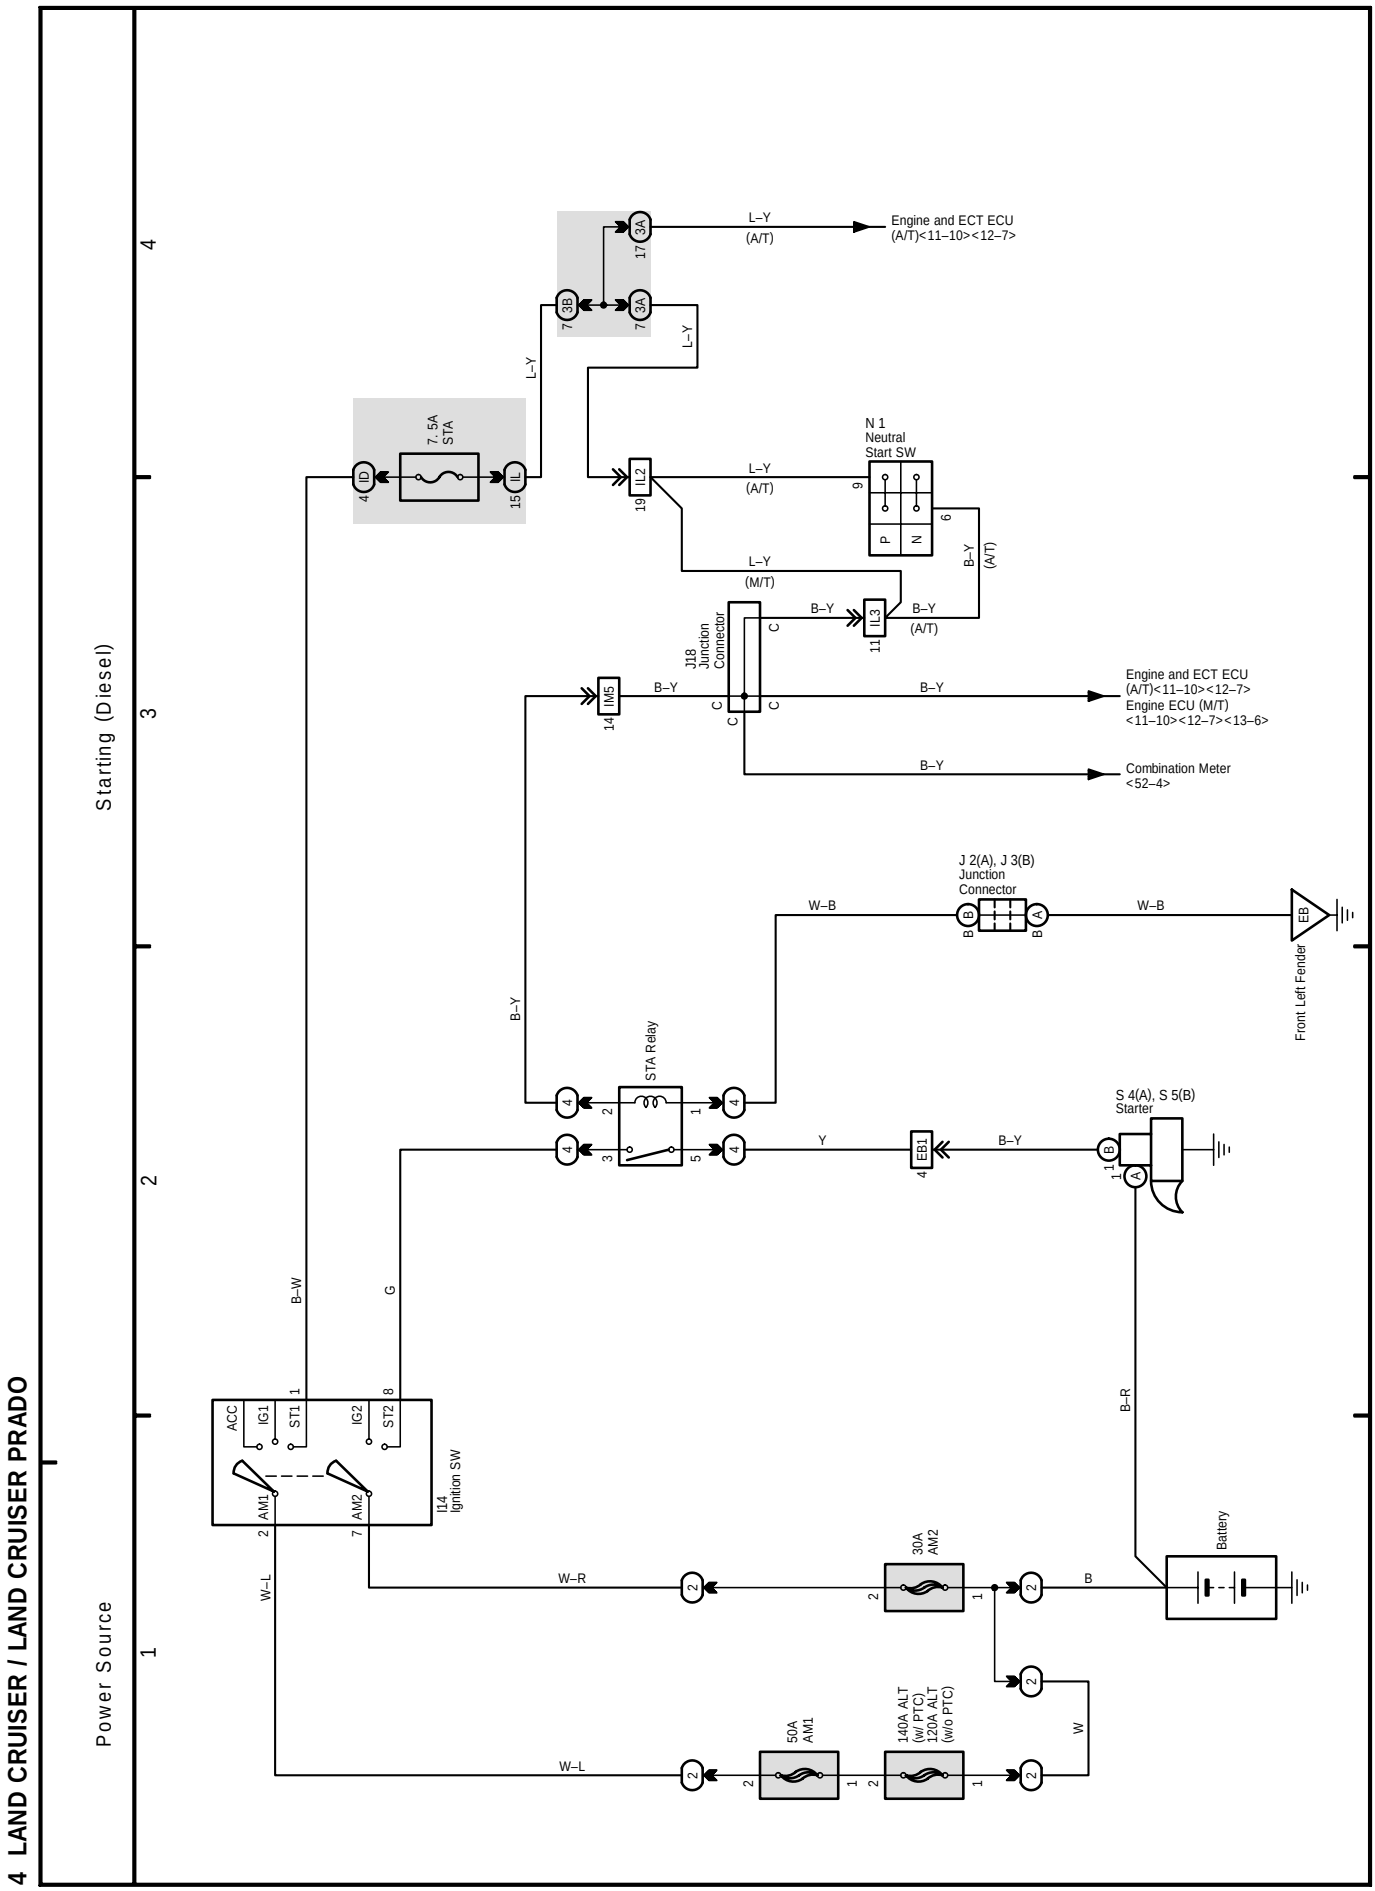

4 LAND CRUISER / LAND CRUISER PRADO
Power Source
Starting (Diesel)
1
2
3
4
Engine and ECT ECU
(A/T)<11–10><12–7>
L–Y
(A/T)
3A
17
3B
7
7. 5A
STA
4 ID
15 IL
IL2
19
N 1
Neutral
Start SW
P
N
9
6
B–Y
(A/T)
L–Y
(M/T)
B–Y
IL3
11
J18
Junction
Connector
C
IM5
14
Engine and ECT ECU
(A/T)<11–10><12–7>
Engine ECU (M/T)
<11–10><12–7><13–6>
Combination Meter
<52–4>
J 2(A), J 3(B)
Junction
Connector
W–B
B
A
EB
Front Left Fender
STA Relay
S 4(A), S 5(B)
Starter
EB1
Y
B–W
G
B–R
ACC
IG1
ST1
IG2
ST2
AM1
AM2
I14
Ignition SW
30A
AM2
Battery
W–R
W–L
B
W
50A
AM1
140A ALT
(w/ PTC)
120A ALT
(w/o PTC)